



INSTALLATION INSTRUCTIONS

Accessory

**SECURITY SYSTEM
P/N 08E50-S5T-100**

Application

2002-2005 CIVIC SI

Publications No.


All 27950

Issue Date


AUG 2004

PARTS LIST

Security unit

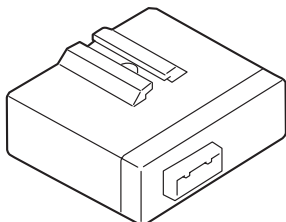

Window decal

 


LED




Push nut



 
Owner's Manual



Bracket

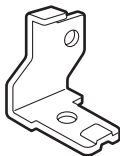

Wire harness

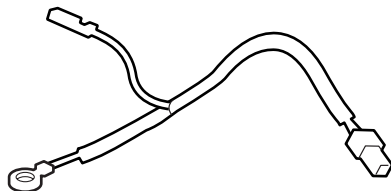


2-Pin connector (for LED)




Fuse, 2A



 
Fuse label



Cushion tape

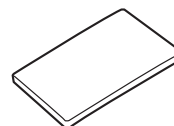

6 Wire ties

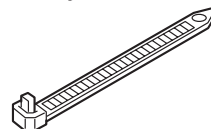

Ground bolt



TOOLS AND SUPPLIES REQUIRED

Small flat-tip screwdriver

#2 Phillips screwdriver

Eye protection (face shield, safety goggles, etc.)

Center punch

Drill

5.5 mm Drill bit

File

Felt-tip pen


Ratchet

10 mm Socket

Tape measure

Diagonal cutters

Illustration of the Security System Installed in the Vehicle

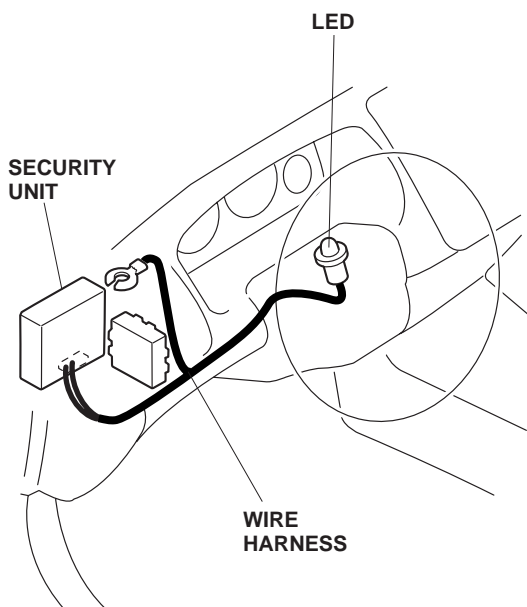


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


NOTE: SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the service manual before doing this installation.

1. Make sure you have the anti-theft code for the radio, then write down the radio station presets.
2. Disconnect the negative cable from the battery.


3. Remove the driver's dashboard lower cover. Turn the lock knob 90° counterclockwise. Gently pull down on the left side of the cover to release the two hooks, then pull down on the cover to release the three retaining tabs. Take care not to damage the retaining tabs.

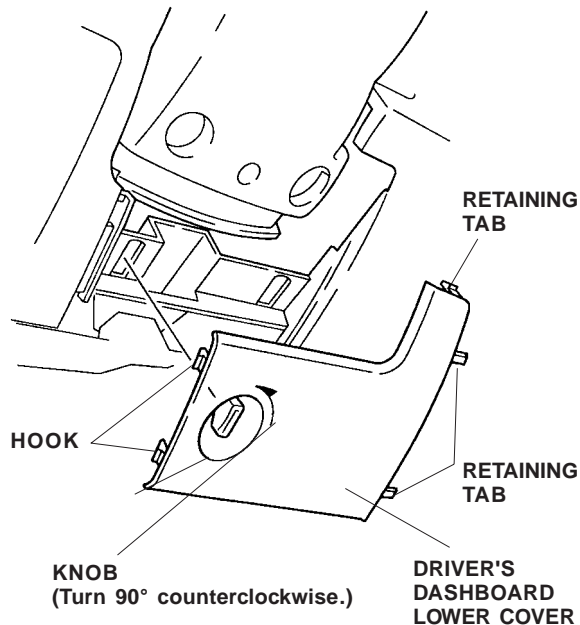


4. Remove the driver's dashboard under cover. Turn the lock knob 90° counterclockwise, and pull down on the rear of the cover to release the left clip. Pull the cover out toward you to release the remaining clip. Take care not to damage the clips.

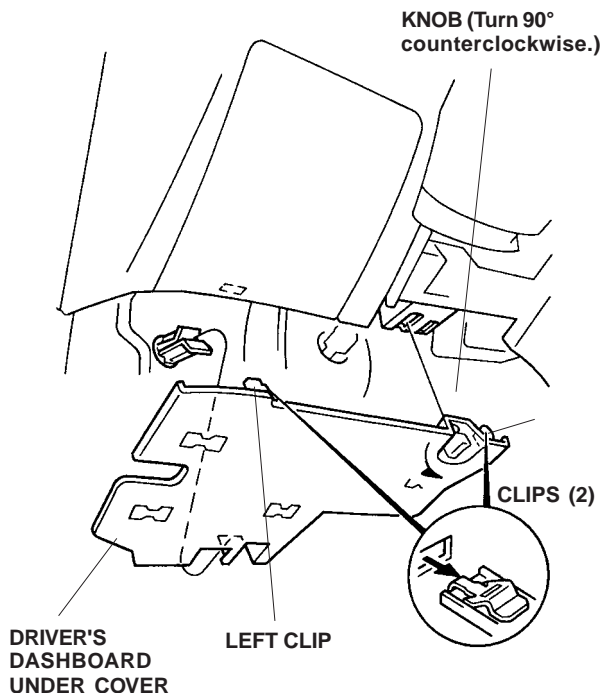


- Remove the two self-tapping screws that secure the top of the pocket; remove the pocket by removing the two clips, and one retaining tab from the bottom.

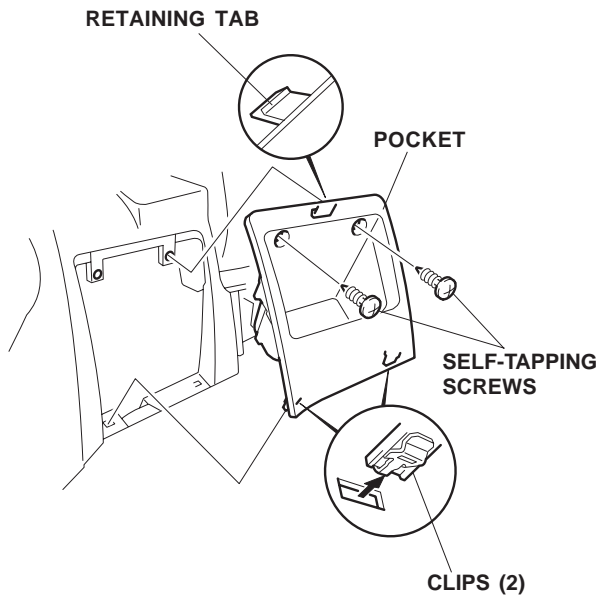


- Remove the upper and lower steering column covers (two self-tapping screws, one washer-screw, and six retaining tabs).

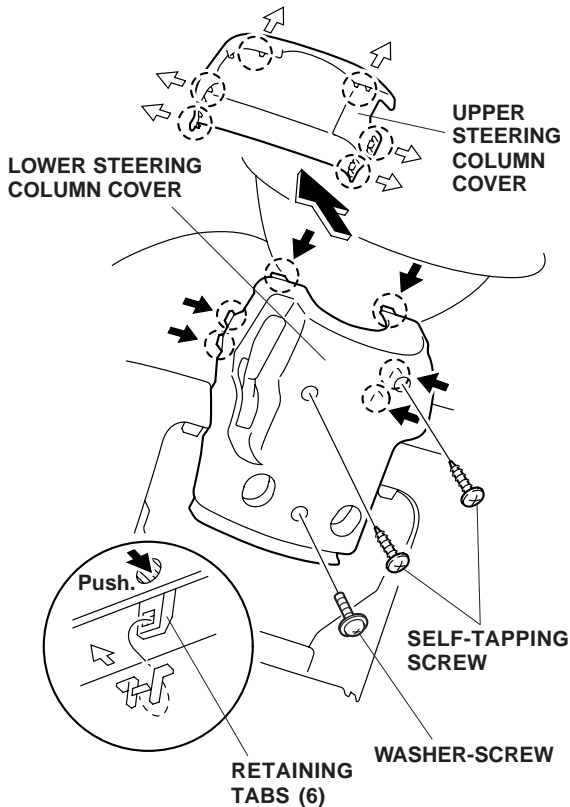

- Get the upper steering column cover that you removed in step 6. Use a tape measure and felt-tip pen to measure and mark the inside of the upper steering column cover. Drill a 5.5 mm hole at the mark. Do not drill through the raised area of the cover.

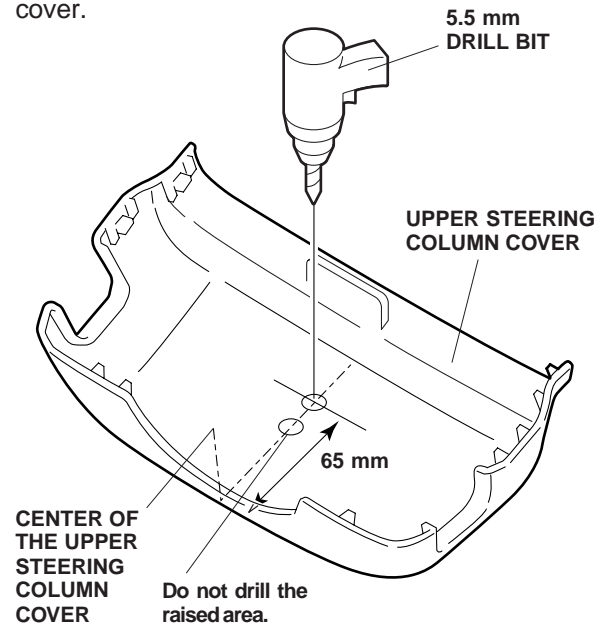


- Route the terminal ends of the LED through the hole you just drilled, and secure the LED with the push nut. Install the push nut securely.

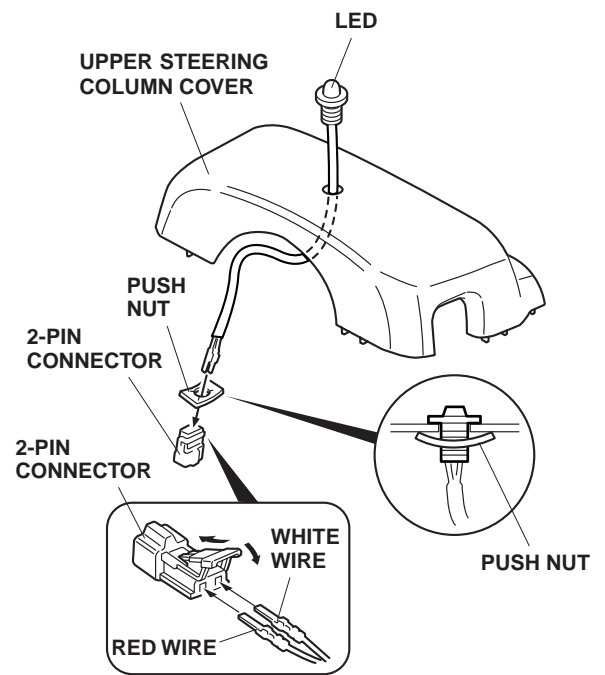


- Get the 2-pin connector included in the kit. Firmly push the LED terminals into the 2-pin connector, in the positions shown, until they click into position, then lower the lock.

10. Behind the steering column bracket, on the vehicle harness, locate the green 16-pin connector with the blue tape. Remove the tape to free the connector, and pull the 16-pin connector down.

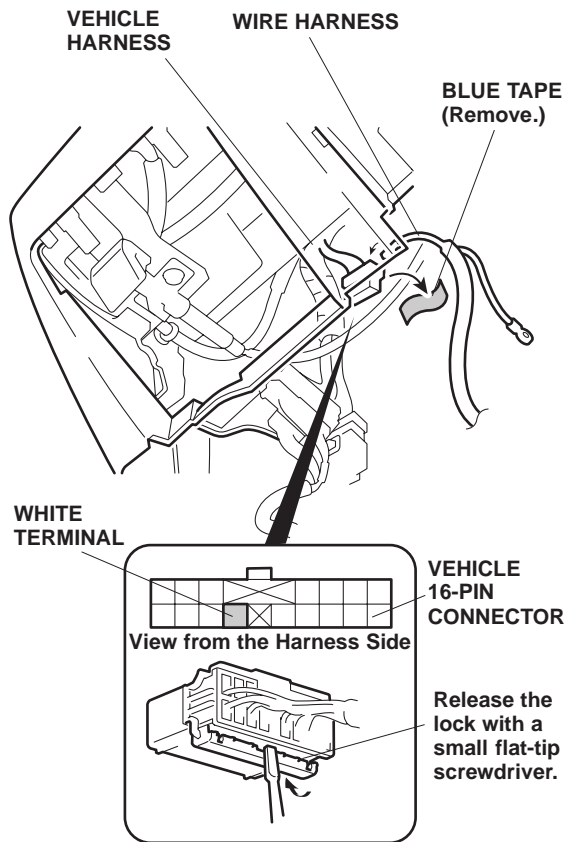


11. On the back of the 16-pin connector, use a small flat-tip screwdriver to release the lock. Insert the white terminal of the wire harness into the 16-pin connector at the location shown. Reattach the lock to the connector.


12. Install the bracket onto the security unit.

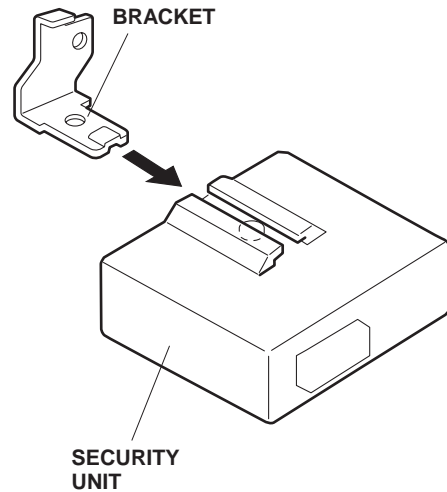


13. Remove the cruise control unit mounting bolt, and discard the bolt. Attach the security unit assembly, the cruise control unit, and the ground terminal of the security system harness to the steering column bracket with the ground bolt supplied. Plug the 16-pin connector into the security unit.

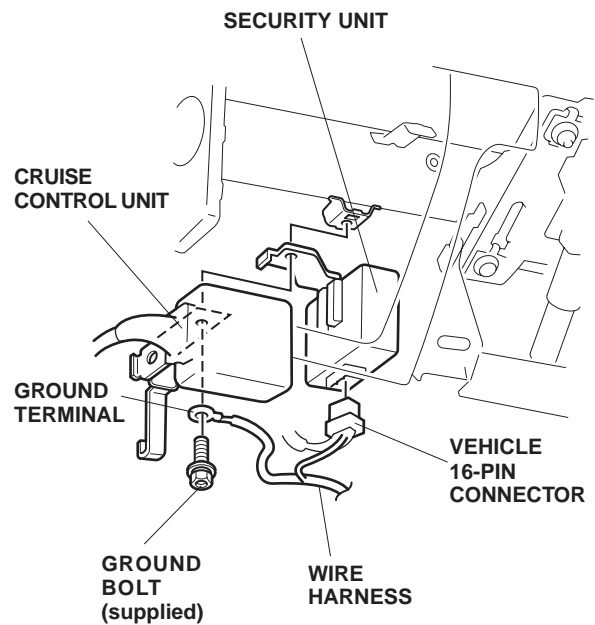


- Position the upper steering column cover above the steering column, and plug the 2-pin connector of the security system harness into the 2-pin connector from the LED harness. Wrap the cushion tape around the connector.

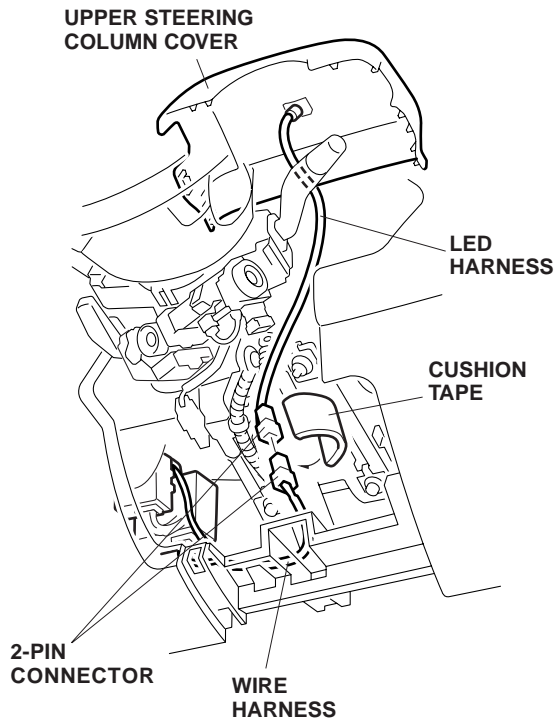

- Secure the LED harness to the vehicle harness with four wire ties in the areas shown. Trim the excess length from the wire ties.

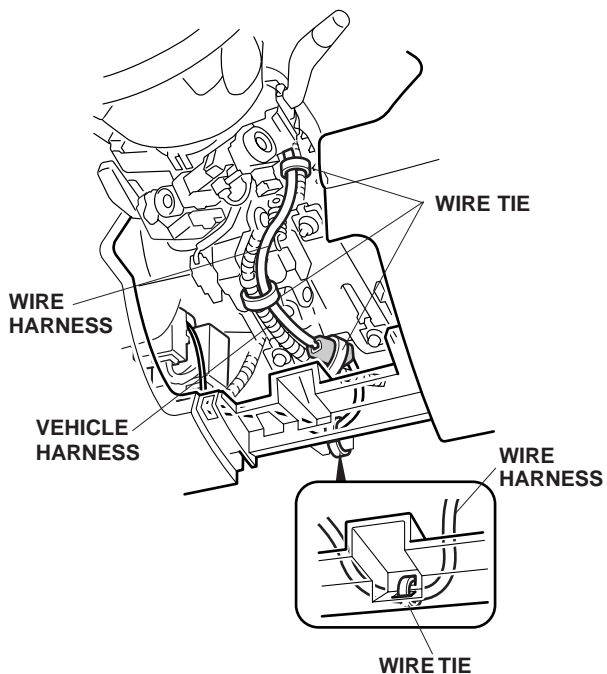


- Under the dash, secure the security system harness to the vehicle harness with two wire ties in the areas shown. Trim the excess length from the wire ties.

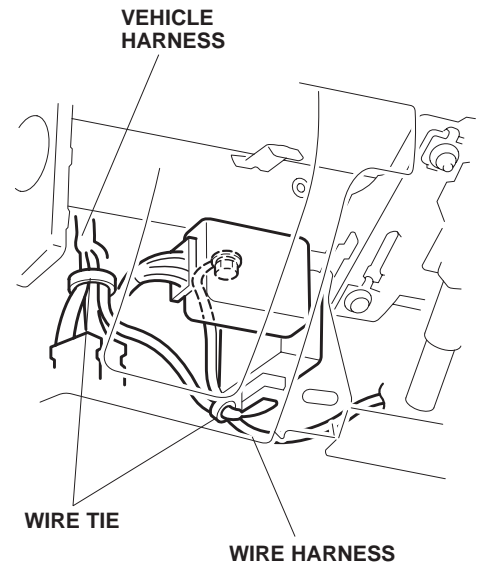


- Install the fuse (2A) provided into the No.15 slot of the fuse box.

NOTE: The No. 15 slot with the new 2-amp fuse controls the memory for the security system. In some vehicles, you may find a higher-amp fuse already installed in the No. 15 slot. That fuse serves no purpose for this vehicle; remove it.

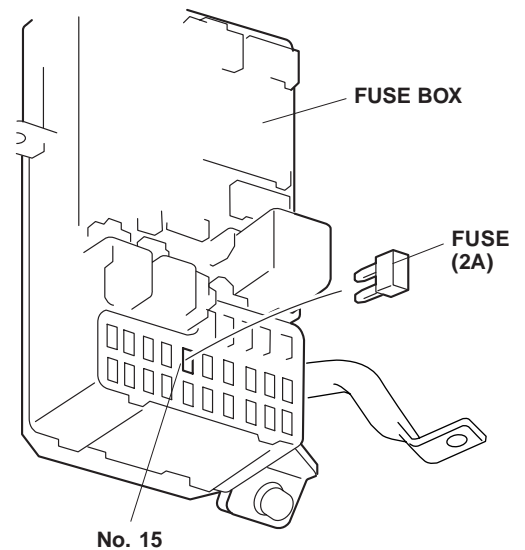

18. Attach the fuse label "OPTION FUSE (2A)" over the No. 15 on the back of the dashboard lower cover.

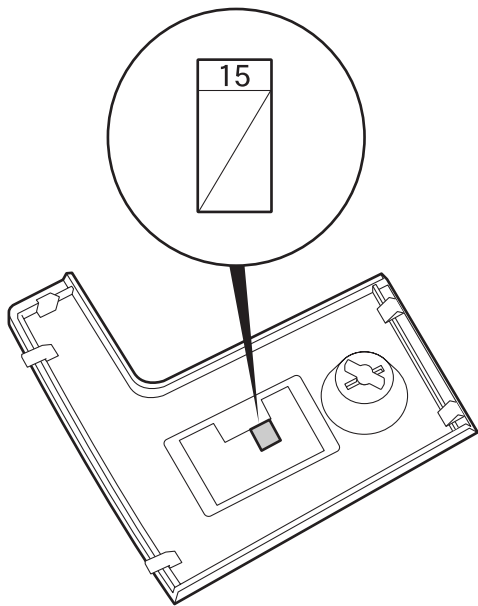

19. Apply the window decals to the inside lower rear corners of the door glass.
20. Check that all wire harnesses are routed properly and all connectors are plugged in.
21. Reinstall all removed parts.
22. Reconnect the negative cable to the battery.

23. Reset the clock, and reset the radio station presets.
24. Do the engine control module (ECM) idle learn procedure:

- Make sure all electrical items (A/C, audio, rear defogger, lights, etc.) are off.
- Start the engine, and hold it at 3,000 rpm with no load (in Neutral) until the radiator fan comes on.
- Let the engine idle for 5 minutes with the throttle fully closed.

NOTE: When the radiator fan comes on, do not include its running time in the 5 minutes.

25. Check the operation of the security system as described in the Owner's Manual supplied.