


Front Door Lower Trim Removal and Installation

Removal

1. Front Door Lower Trim - Remove

1. Remove the cap (A), then remove the screw.

Fastener Locations

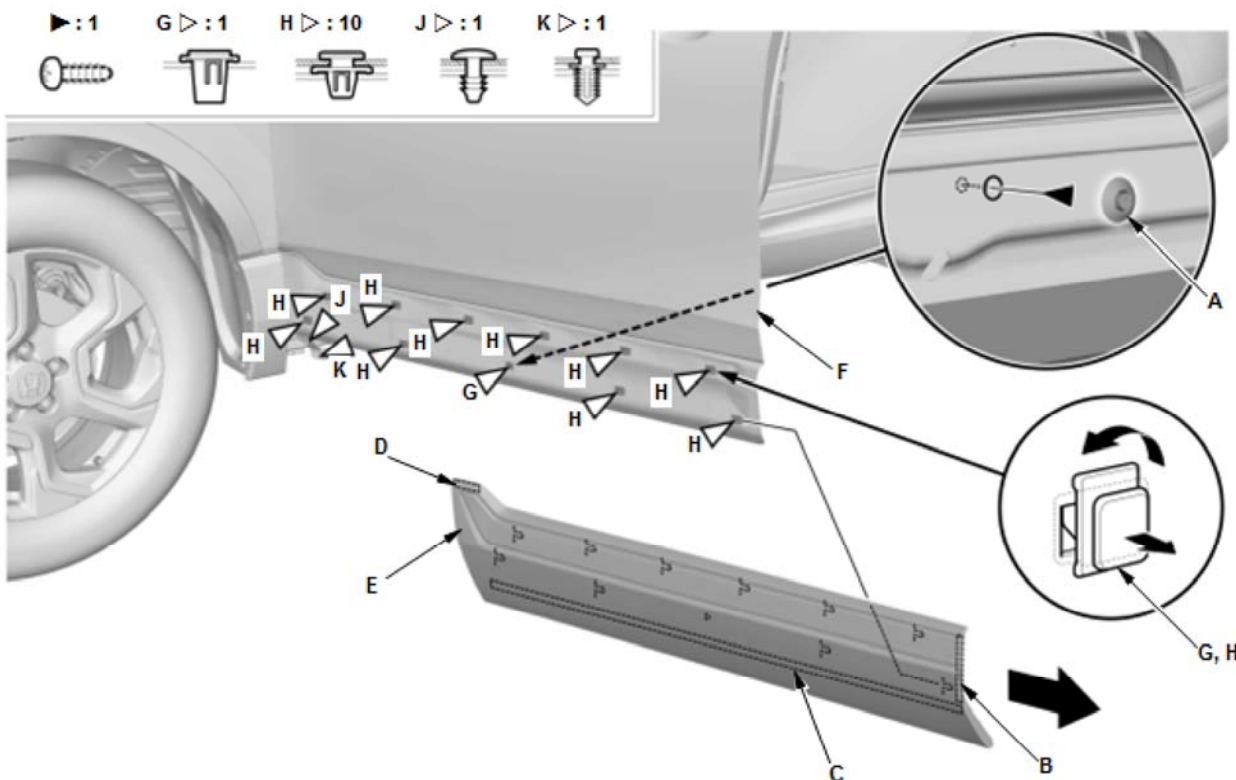

2. Cut the adhesive tape (B, C, D) along the edge of the door lower trim (E) with a utility knife while separating the trim from the door (F) with a trim tool.

NOTE: Apply protective tape around the cutting area.

3. Slide the door lower trim rearward and remove it.

NOTE: The clips (G, H) will stay in the door.


4. Remove the clips by turning.

2. Front Door Lower Seal - Remove

1. If necessary, remove the front door lower seal (A) with the clips and double-sided adhesive tape (B).

Fastener Locations

▷ : 6

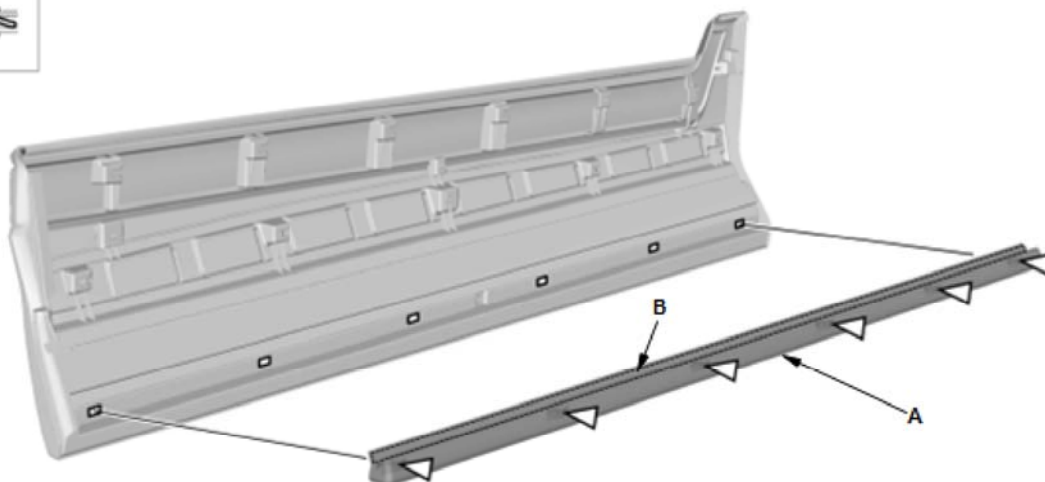

Installation


1. Front Door Lower Seal - Install

1. Install the front door lower seal (A).


NOTE: Apply adhesive primer to the areas where the new double-sided adhesive tape (B) will be applied.

Fastener Locations

▷ : 6

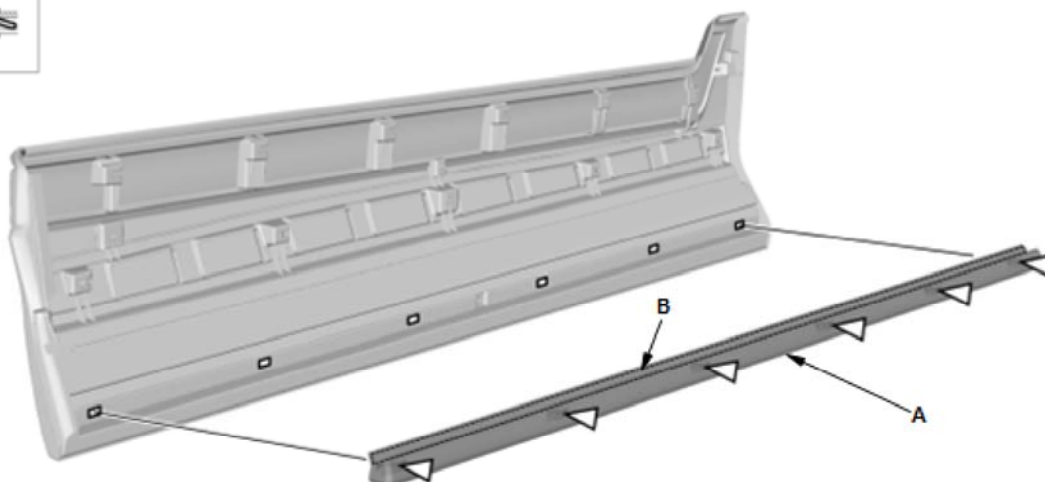

2. Front Door Lower Trim - Install

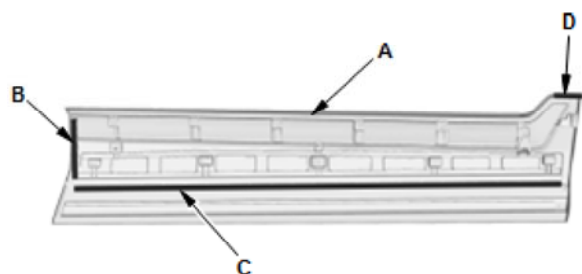

1. If you are reusing the original door lower trim (A), apply primer to the areas where new double-sided adhesive tapes (B, C, D) will be applied, then attach the new double-sided adhesive tapes to the trim as shown.

Double-sided adhesive tape (B)

Thickness 1.0 mm (0.039 in)
Width 8 mm (0.31 in)
Length 95 mm (3.74 in)

Double-sided adhesive tape (C)



Thickness 1.2 mm (0.047 in)
Width 8 mm (0.31 in)
Length 1000 mm (39.37 in)

Double-sided adhesive tape (D)

Thickness 1.0 mm (0.039 in)
Width 6 mm (0.24 in)
Length 50 mm (1.97 in)

2. Install the clips (A, B) on the door lower trim (C) or door (D).

Fastener Locations

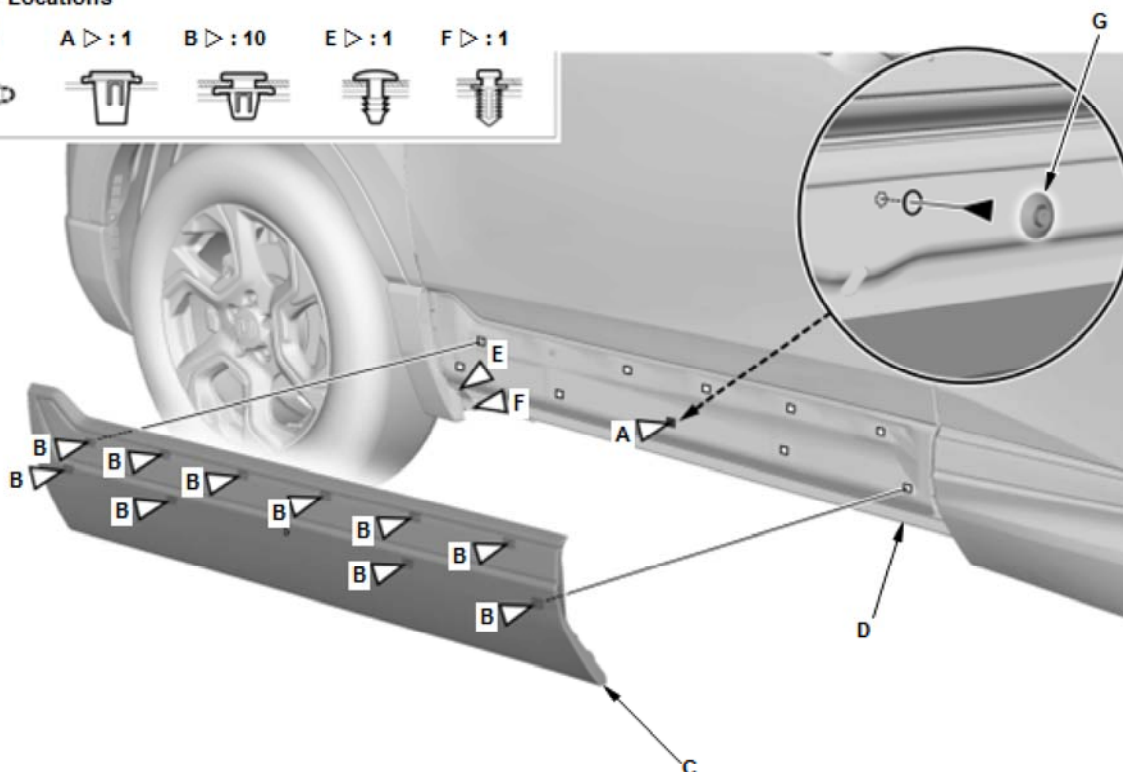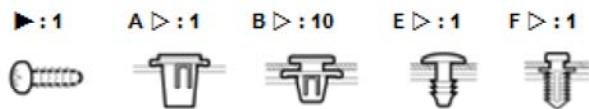

3. Install the door lower trim.

NOTE: Scrape off the remaining double-sided adhesive tape from the door, then clean the surface with a sponge dampened in isopropyl alcohol. After cleaning, keep oil, grease, and water from getting on the surface.

4. Install the screw and the clips (E, F) to the door lower trim.

5. Install the cap (G).


Rear Door Lower Trim Removal and Installation

Removal

1. Rear Door Lower Trim - Remove

1. Remove the cap (A), then remove the screw.

Fastener Locations

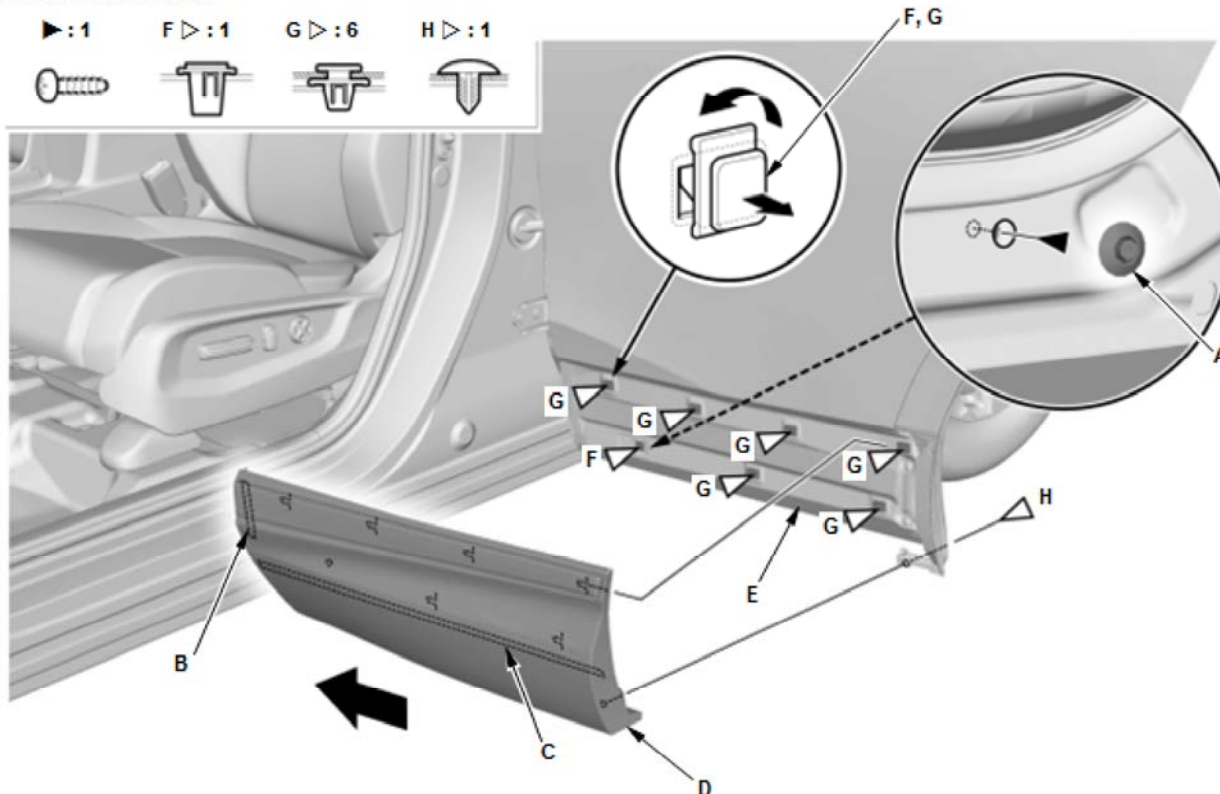

2. Cut the adhesive tape (B, C) along the edge of the door lower trim (D) with a utility knife while separating the trim from the door (E) with a trim tool.

NOTE: Apply protective tape around the cutting area.

3. Slide the door lower trim forward and remove it.


NOTE: The clips (F, G) will stay in the door.

4. Remove the clips by turning.

2. Rear Door Lower Seal - Remove

1. If necessary, remove the rear door lower seal (A) with the clips and double-sided adhesive tape (B).

Fastener Locations

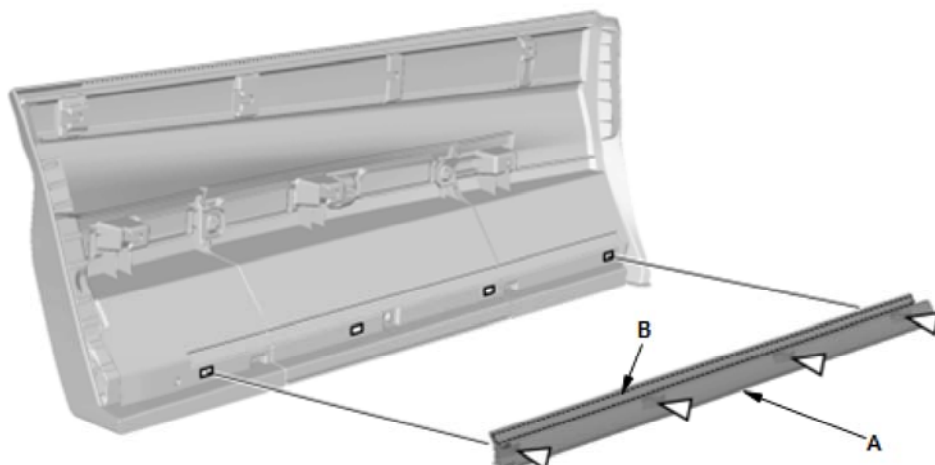


Installation

1. Rear Door Lower Seal - Install


1. Install the rear door lower seal (A).

NOTE: Apply adhesive primer to the areas where the new double-sided adhesive tape (B) will be applied.

Fastener Locations

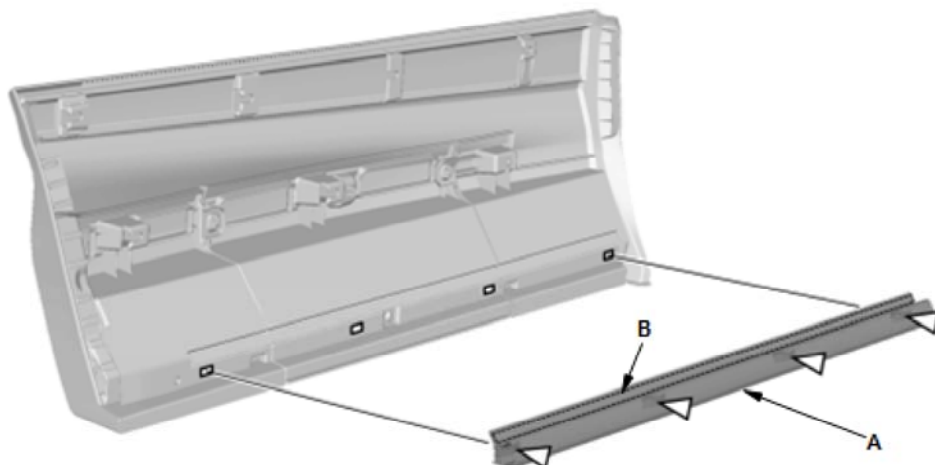

2. Rear Door Lower Trim - Install

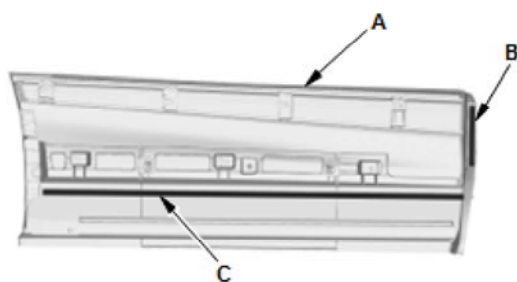

1. If you are reusing the original door lower trim (A), apply primer to the areas where new double-sided adhesive tapes (B, C) will be applied, then attach the new double-sided adhesive tapes to the trim as shown.

Double-sided adhesive tape (B)


Thickness 1.0 mm (0.039 in)
Width 8 mm (0.31 in)
Length 85 mm (3.35 in)

Double-sided adhesive tape (C)

Thickness 1.2 mm (0.047 in)
Width 8 mm (0.31 in)
Length 600 mm (23.62 in)

2. Install the clips (A, B) on the door lower trim (C) or door (D).

Fastener Locations

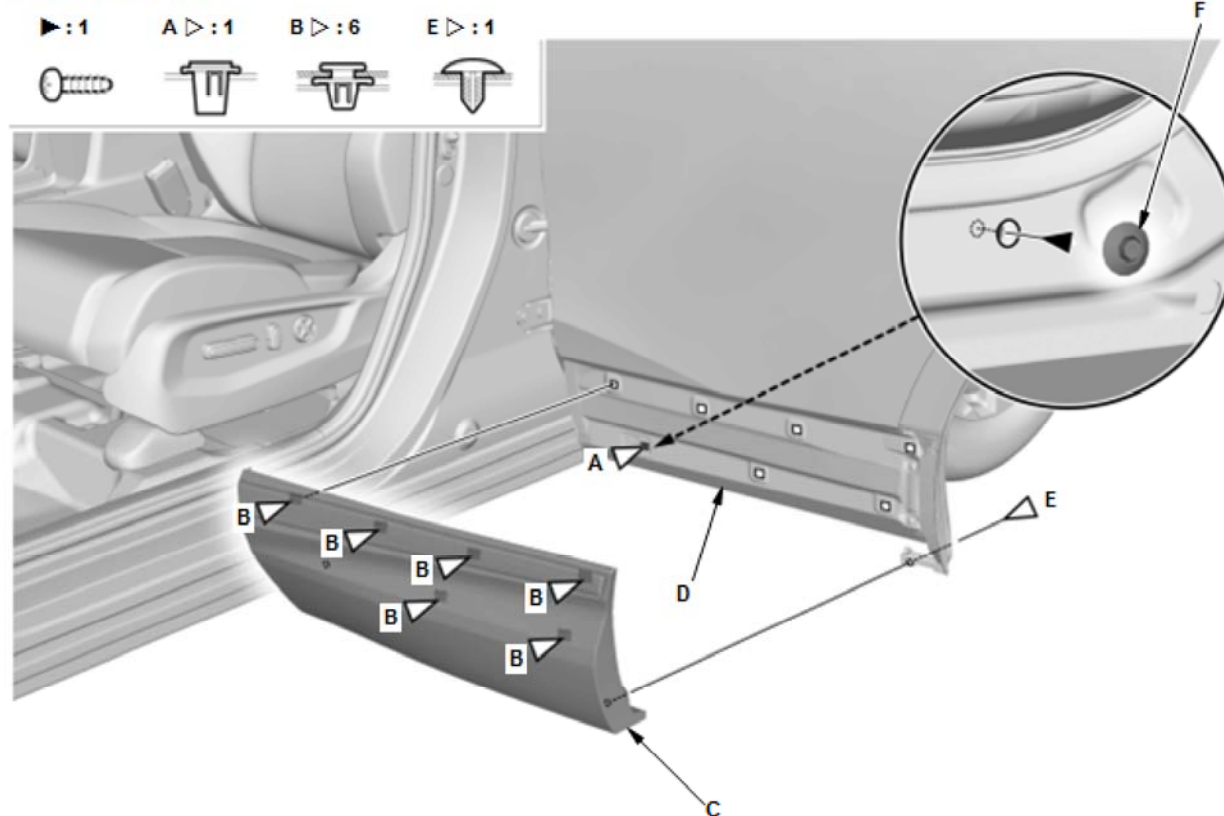

3. Install the door lower trim.

NOTE: Scrape off the remaining double-sided adhesive tape from the door, then clean the surface with a sponge dampened in isopropyl alcohol. After cleaning, keep oil, grease, and water from getting on the surface.

4. Install the screw and the clips (E) to the door lower trim.

5. Install the cap (F).

Front Bumper Removal and Installation

Removal/Installation

NOTE:  Where icon is shown, click for further information.

1


Fastener Locations


A ▶ : 2

B ▶ : 4

C ▶ : 9

D ▶ : 3

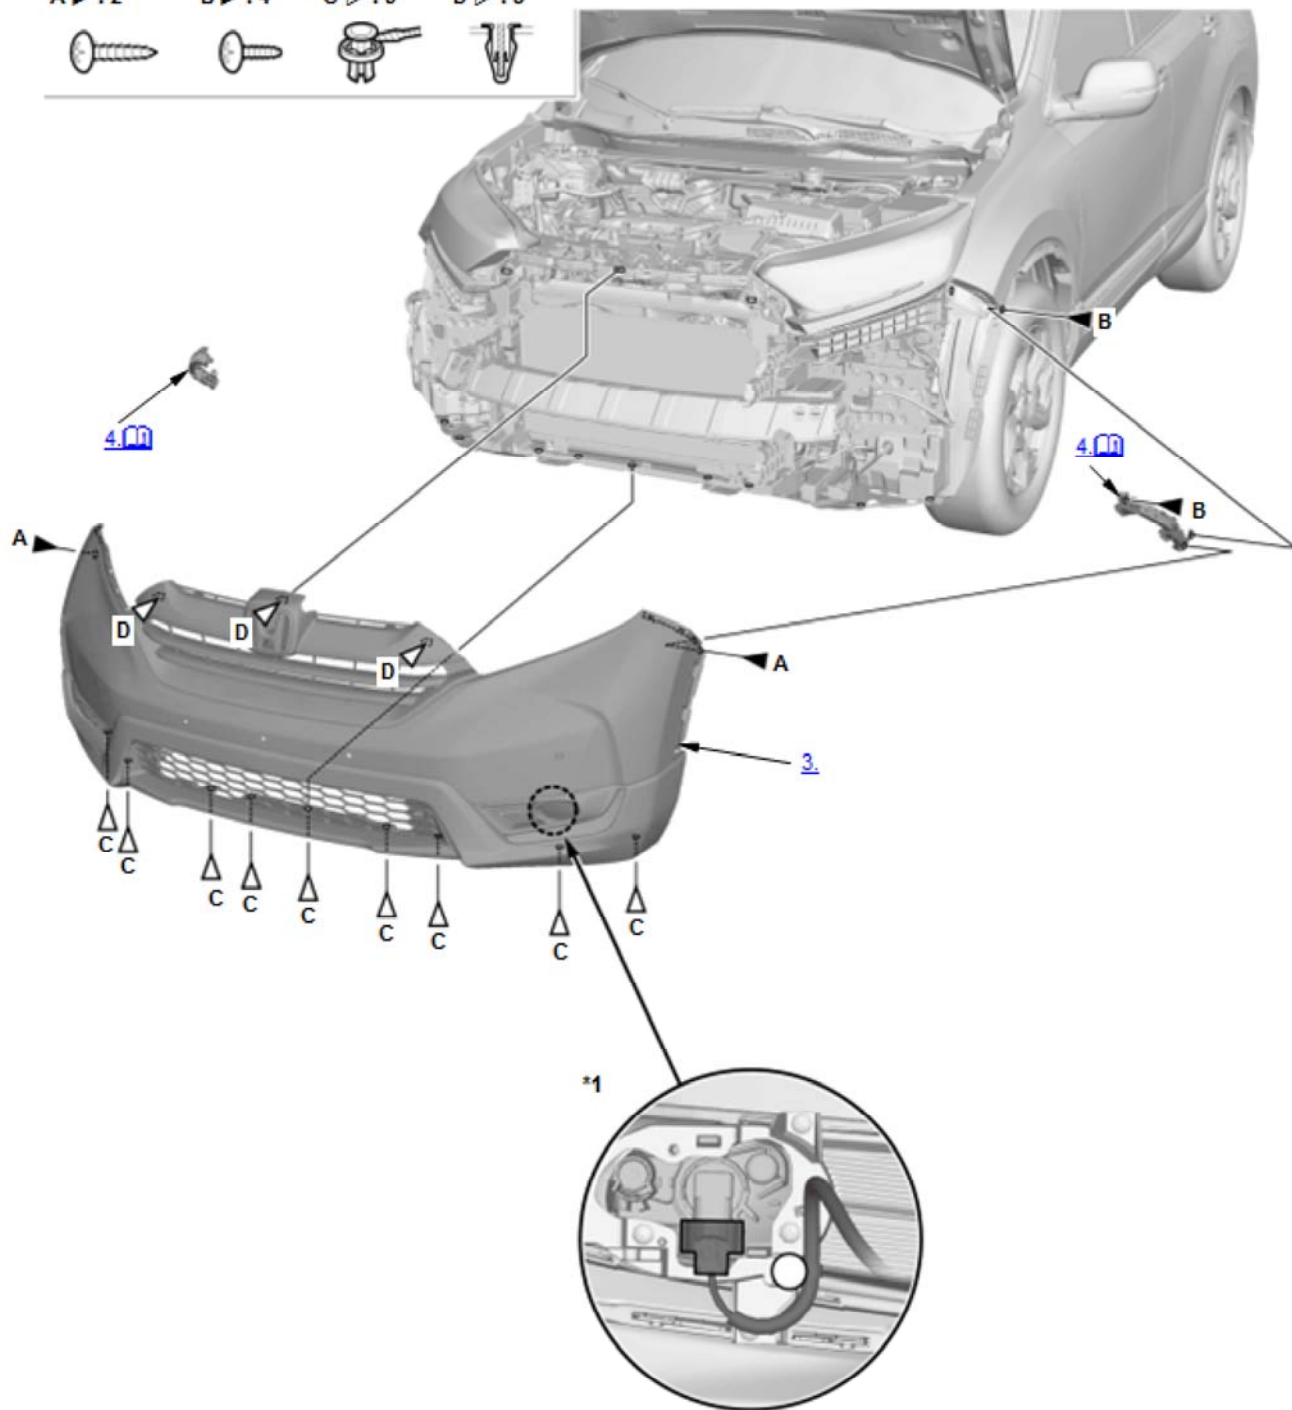

	Detailed information, notes, and precautions
*1	With front fog light

1. Front Bulkhead Cover - Remove

2. Front Wheel Arch Protector - Remove

3. Front Bumper - Remove

4. Front Bumper Side Spacers - Remove

1. If necessary, remove the front bumper side spacers.

5. All Removed Parts - Install

1. Install the parts in the reverse order of removal.



Front Bumper Disassembly and Reassembly

Exploded View

1

Fastener Locations

A ▷ : 2 B ▷ : 2

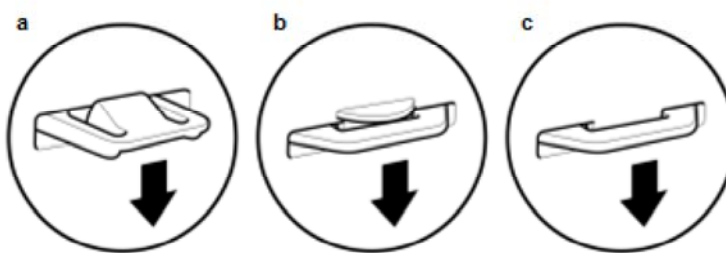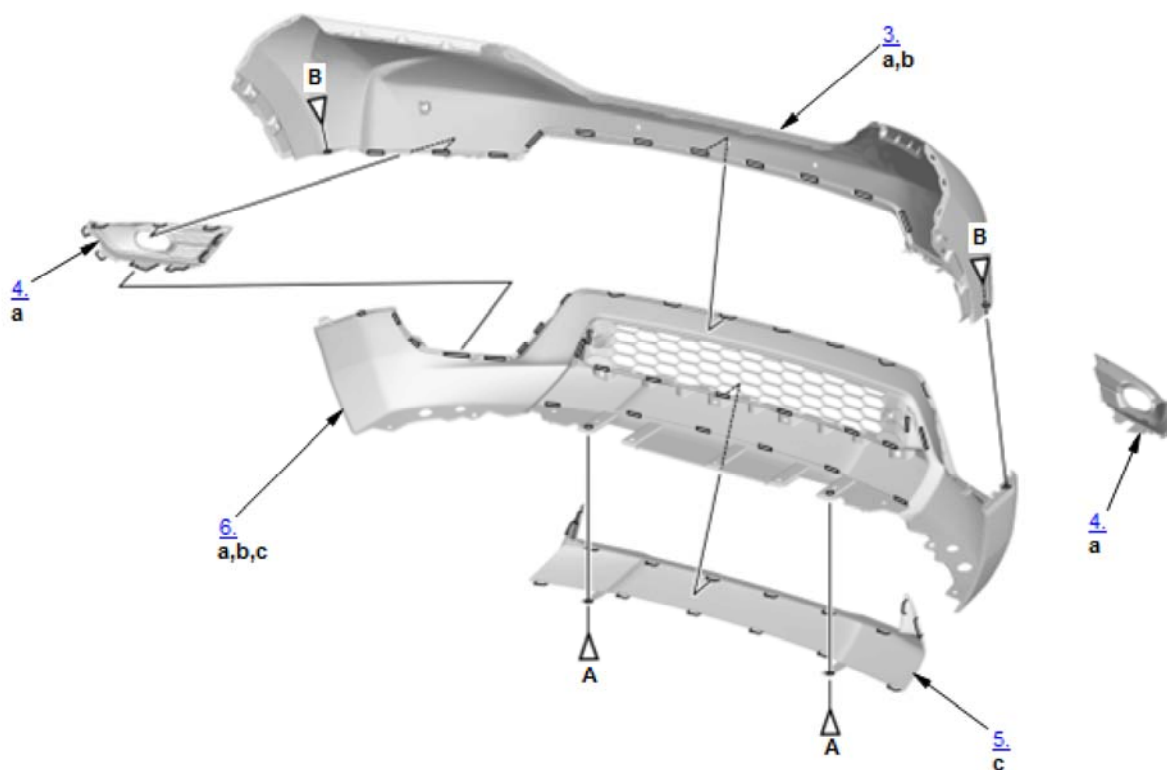

1. Front Bumper - Remove

2. Front Grille - Remove

3. Front Bumper Face - Remove

4. Front Bumper Fog Covers - Remove

5. Front Bumper Lower Trim - Remove

6. Front Bumper Lower Face - Remove

7. All Disassembled Parts - Reassemble

1. Reassemble the parts in the reverse order of disassembly.

Rear Bumper Disassembly and Reassembly


Exploded View

1

Fastener Locations

▶ : 4

▷ : 7

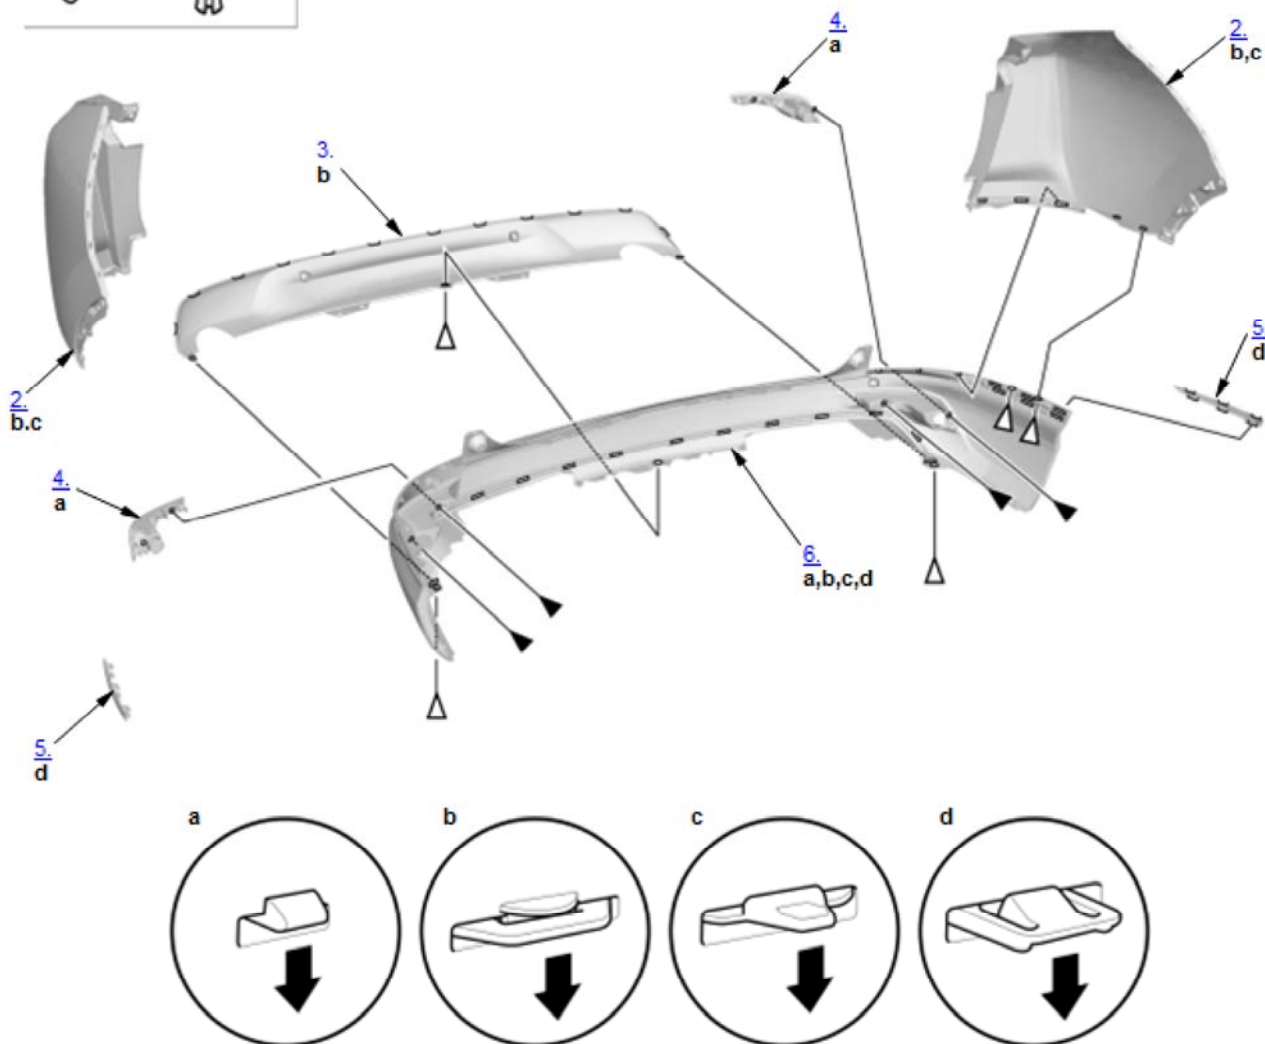

1. Rear Bumper - Remove

2. Rear Bumper Side Face - Remove

3. Rear Bumper Lower Trim - Remove

4. Rear Bumper Reflector - Remove

5. Rear Bumper Side Molding - Remove


6. Rear Bumper Lower Face - Remove

7. All Disassembled Parts - Reassemble

1. Reassemble the parts in the reverse order of disassembly.


 
Rear Bumper Removal and Installation



Removal/Installation

NOTE:  Where icon is shown, click for further information.

1

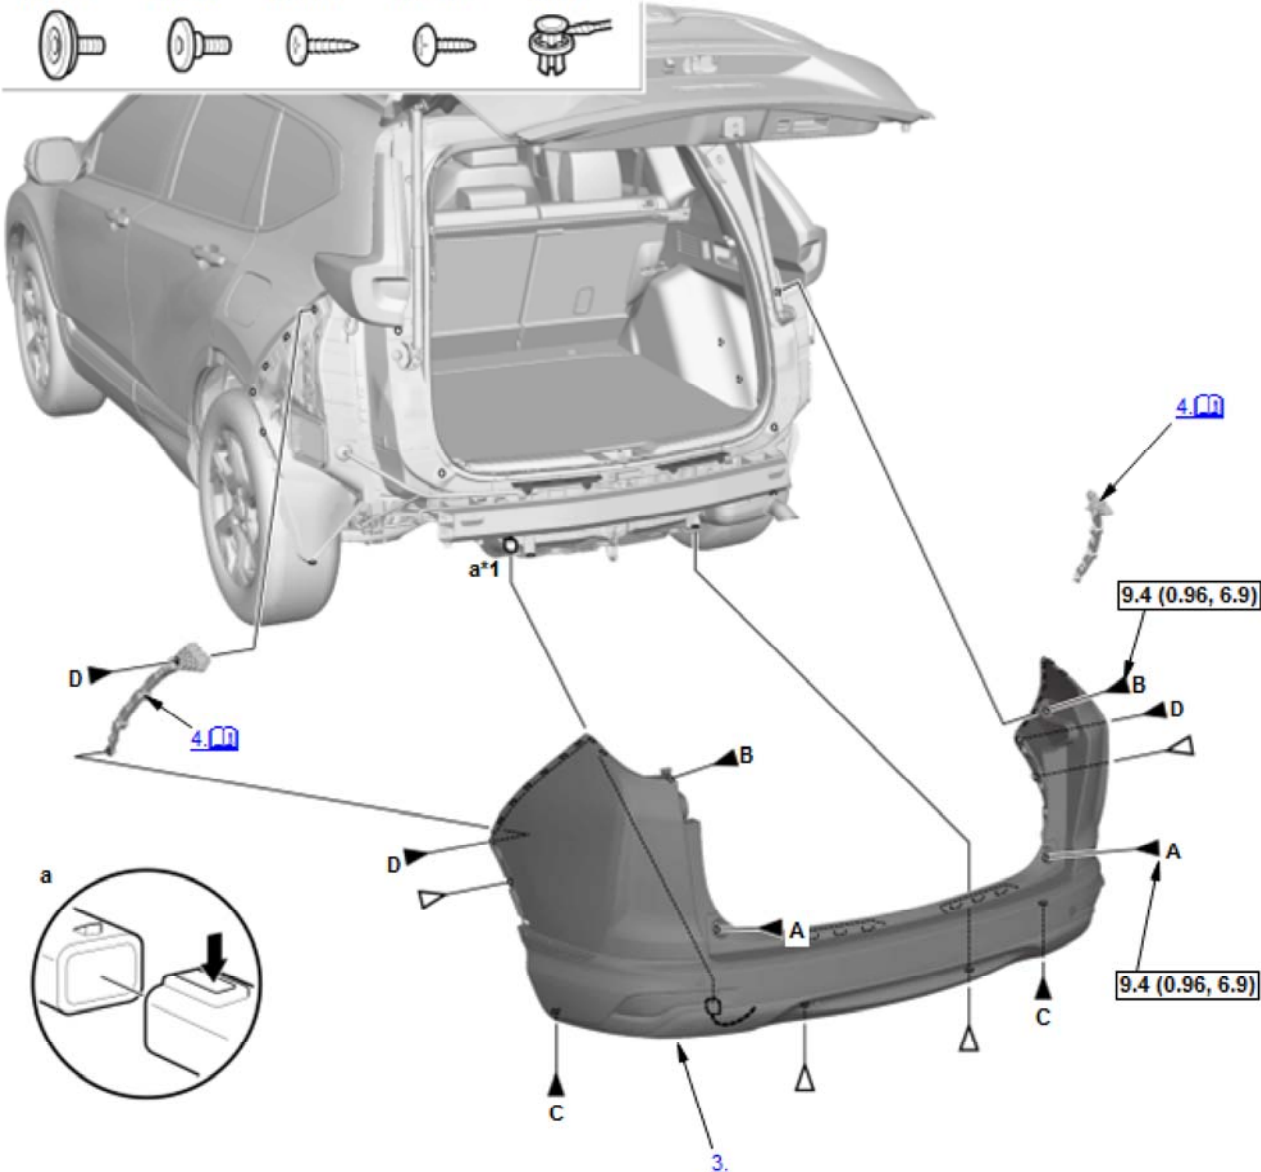Fastener Locations



	Detailed information, notes, and precautions
	Torque: N·m (kgf·m, lbf·ft)
*1	With hands free access power tailgate

1. Tailgate Weatherstrip - Remove

1. [Remove the tailgate weatherstrip as needed.](#)

2. Rear Wheel Arch Rear Protector - Remove

3. Rear Bumper - Remove

4. Rear Bumper Side Spacers - Remove

1. If necessary, remove the rear bumper side spacers.

5. All Removed Parts - Install

1. Install the parts in the reverse order of removal.