



HONDA INSTALLATION INSTRUCTIONS

Accessory
HEATED STEERING WHEEL


Application
2017 CR-V

Publications No.
VERSION 1
Issue Date
DEC 2016

PARTS LIST

Heated Steering Wheel Kit
P/N 08U97-TLA-100

Heater harness

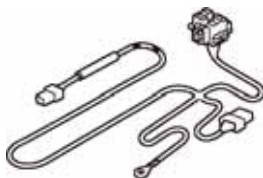

Steering wheel



Control unit



Cable reel



Cable reel cord



Relay



2 Self-tapping screws



Ground bolt



Steering wheel bolt




15 Wire ties



Information



Fuse label

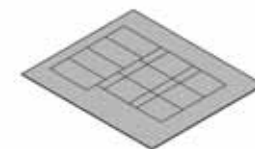

10A Fuse



Switch Kit
P/N 08U97-TLA-100A
(With adaptive cruise control)
P/N 08U97-TLA-100B
(Without adaptive cruise control)

HSW switch




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Punch (diameter of 5.5 mm)
10 mm Open end wrench
10 mm Hex bit
10 mm Socket
Ratchet
Torque wrench
Steering wheel puller
Isopropyl alcohol
Shop towel
Masking tape
Diagonal cutters
I-HDS with MVI or DST-i

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

Trim Tool Set (T/N SOJATP2014)

Illustration of the Heated Steering Wheel in the Vehicle

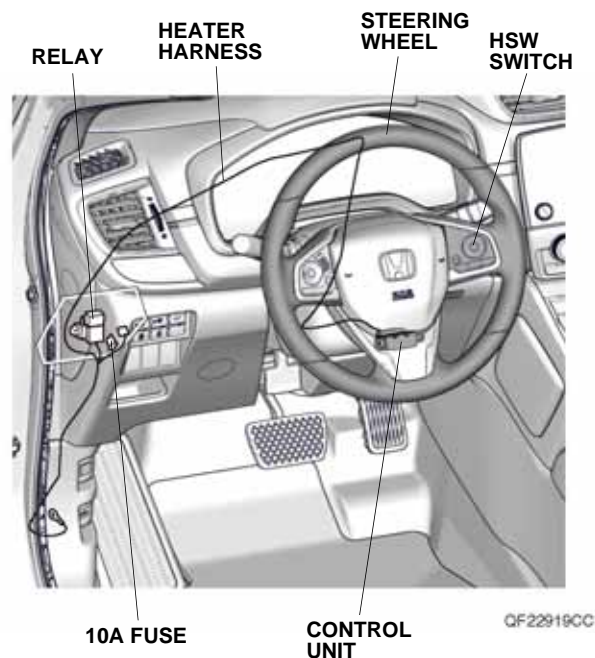


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- Observe all safety notes and precautions in the service information in addition to those in this installation instruction.
 - Be careful not to damage the vehicle.
 - After installing the steering wheel, you must line up the steering wheel spoke angle to the straight-ahead position by adjusting the front toe.
1. Turn the steering wheel so the front wheels are in the straight-ahead position.
 2. Disconnect the negative cable from the battery, and wait at least 3 minutes before you start to install the steering wheel.


3. Remove the driver's dashboard under cover and unplug the vehicle connector (if equipped).

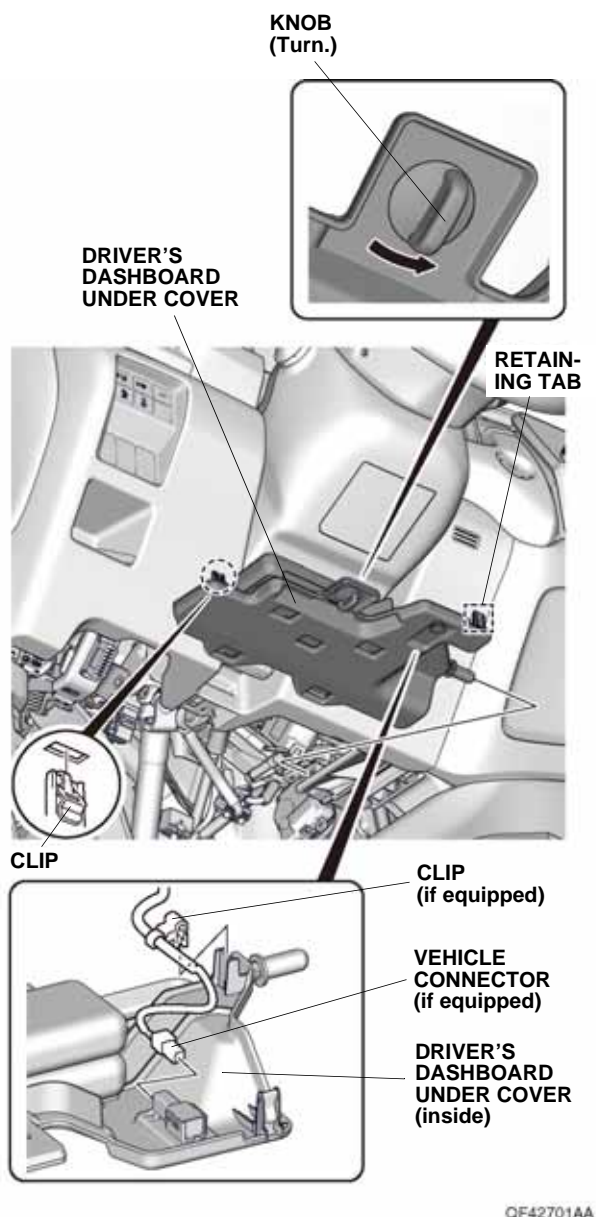


4. Remove the driver's dashboard lower cover and unplug the vehicle connectors.

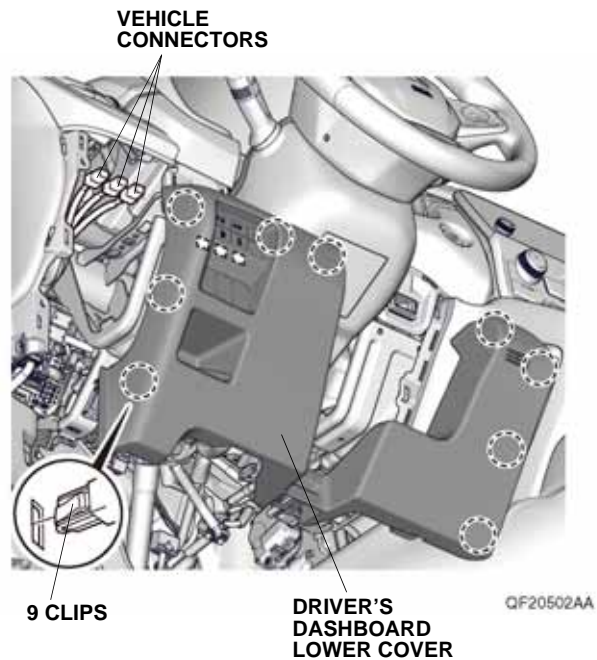


5. Remove the driver's door sill trim.

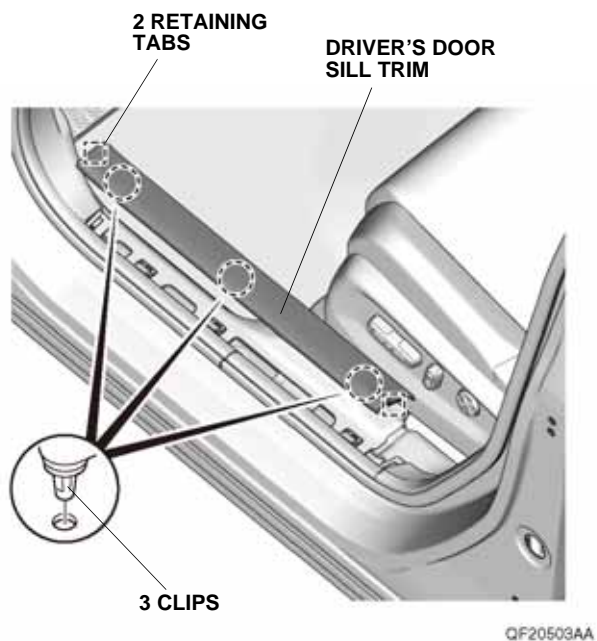

6. Pull away the door opening seal, and remove the driver's kick panel.

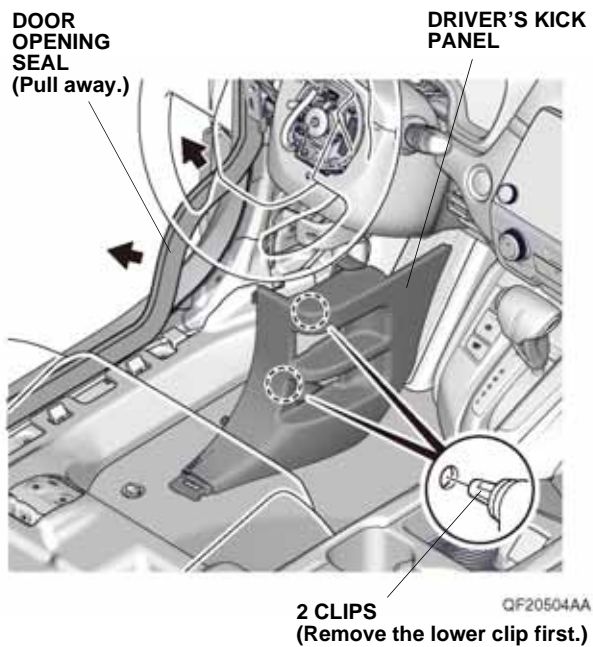


7. Lower and pull out the steering wheel as shown.

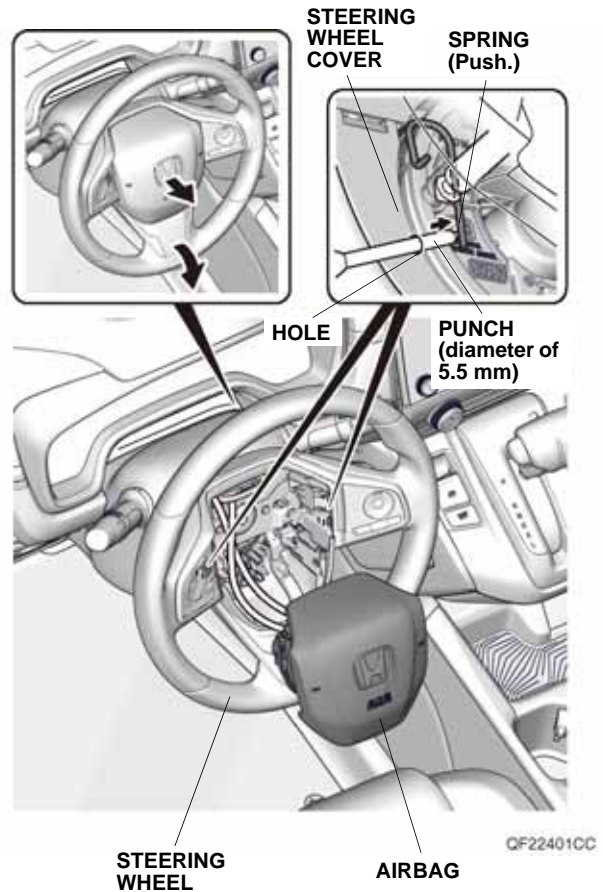


8. Insert a punch (diameter of 5.5 mm) through the left hole of the steering wheel cover, and push the spring to release the airbag. Repeat for the other side.

9. Unplug the cable reel 2-pin connector and the cable reel cord 2-pin connector by squeezing and pulling up on the locking tabs.
- NOTE: Be careful not to damage the connectors.

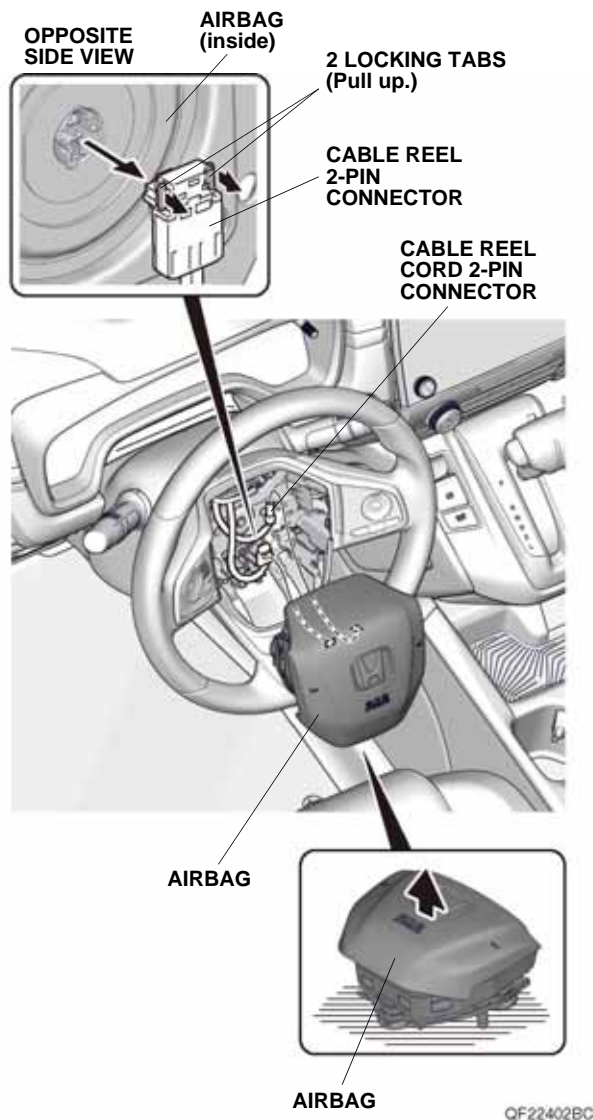


10. Remove the airbag. Do not drop the removed airbag or hit it on an object. Place the removed airbag in a safe place with the padded surface (top) facing up.

11. With the front wheels line up in the straight-ahead position, unplug the vehicle connector from the cable reel, and loosen the steering wheel bolt.

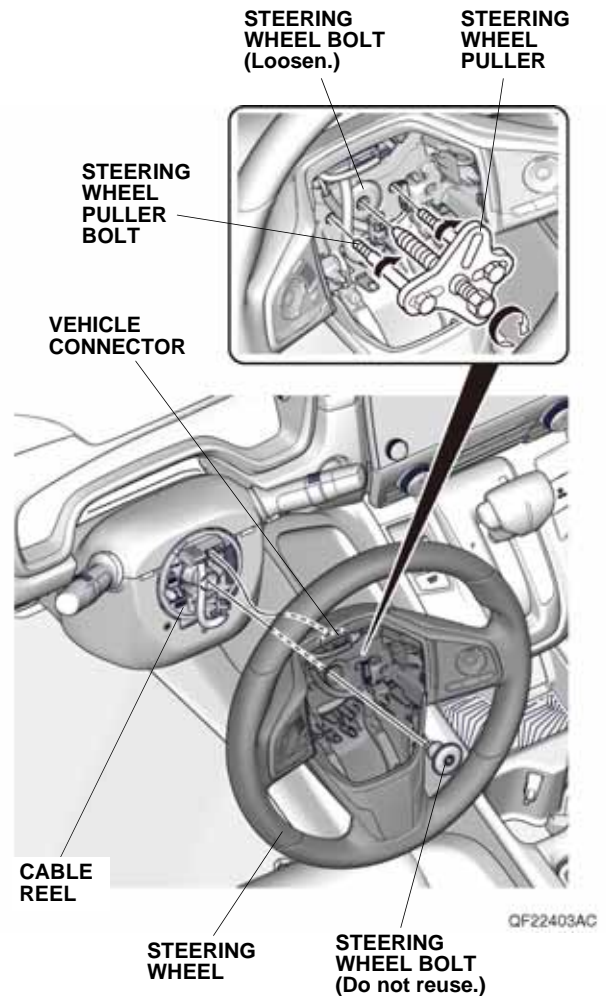


12. Using a steering wheel puller, release the steering wheel. Do not thread the steering wheel puller bolts in more than 5 mm (0.20 in.). When removing the steering wheel, take care not to move the front wheels.
13. Remove the steering wheel bolt, then remove the steering wheel.


14. Using a plastic trim tool, release two retaining tabs.

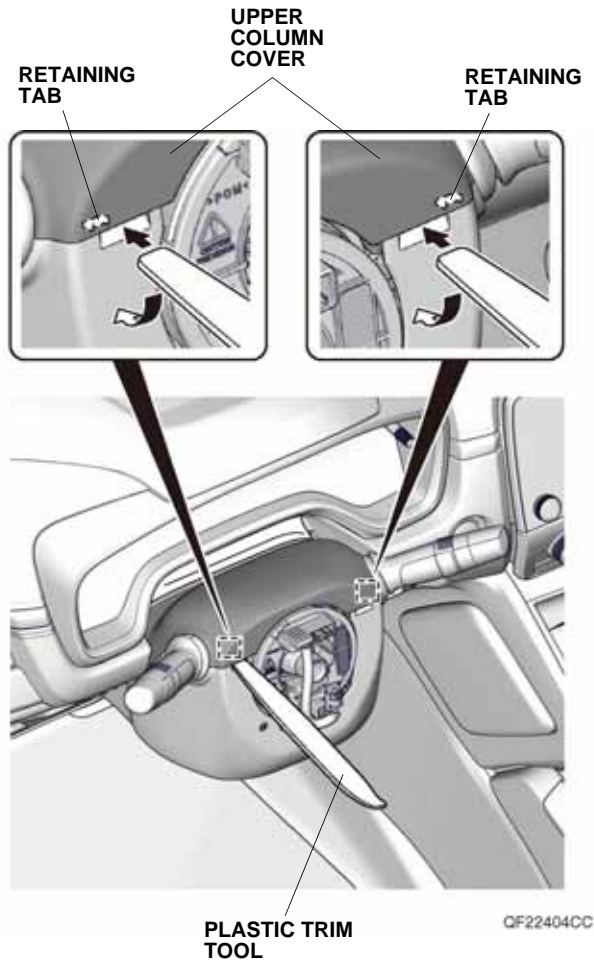


15. Remove the upper column cover.

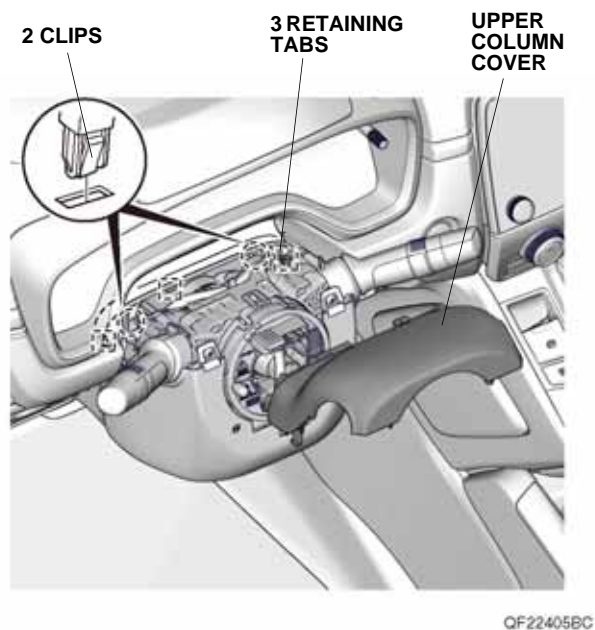


16. Apply masking tape to the instrument panel, combination light switch, and wiper switch as shown.

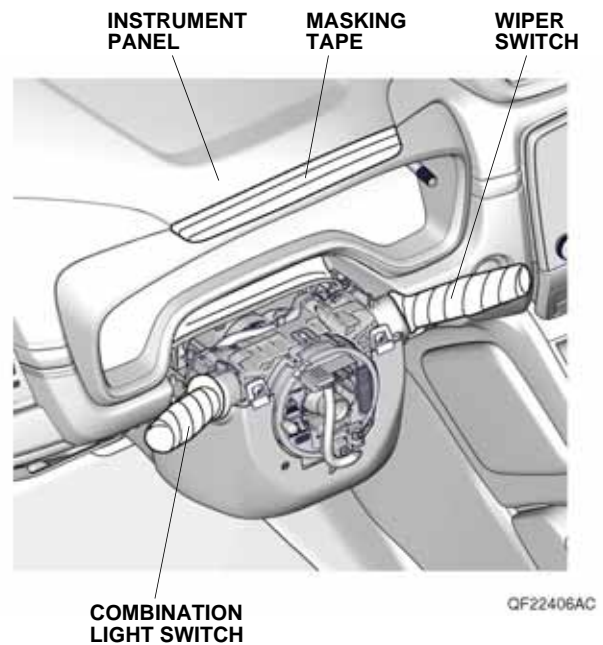


17. Remove the meter visor.

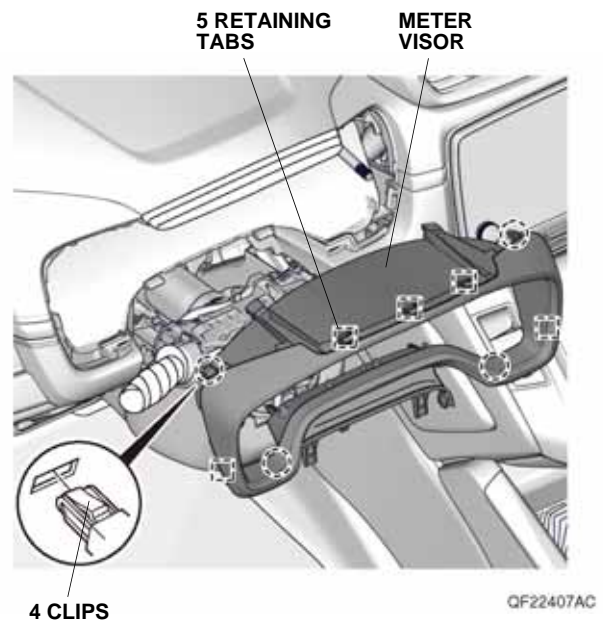


18. Remove the driver's lower ornament panel.

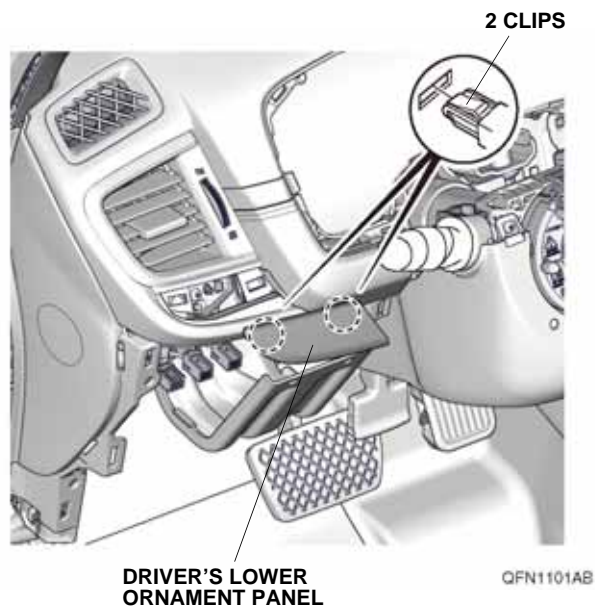


20. Remove the driver's dashboard outer panel.

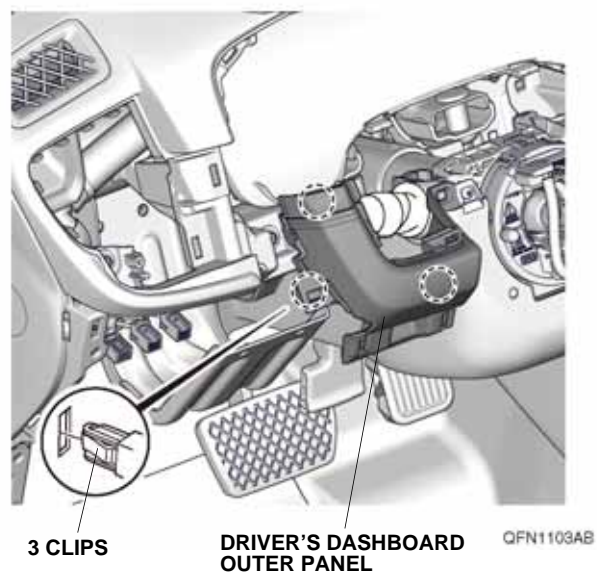


19. Remove the driver's outlet.

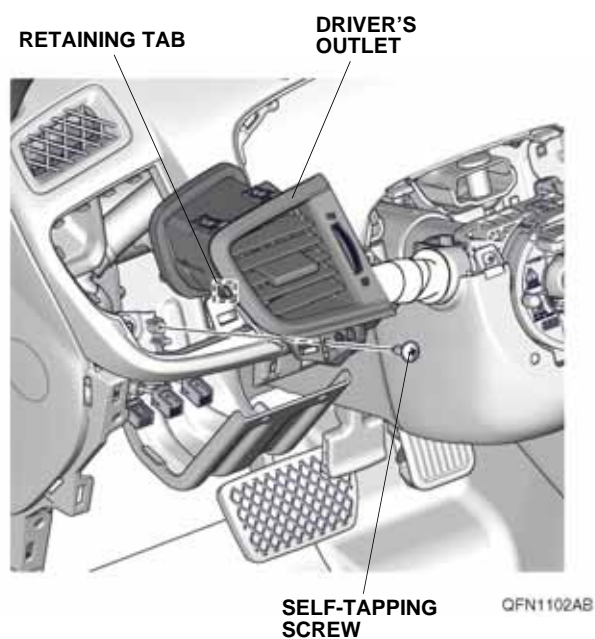


21. Apply masking tape as shown.

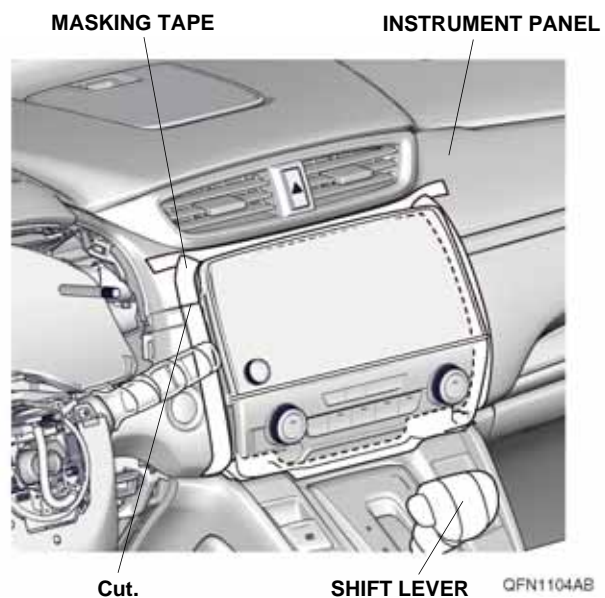


22. Remove the climate control unit and unplug the vehicle connector.

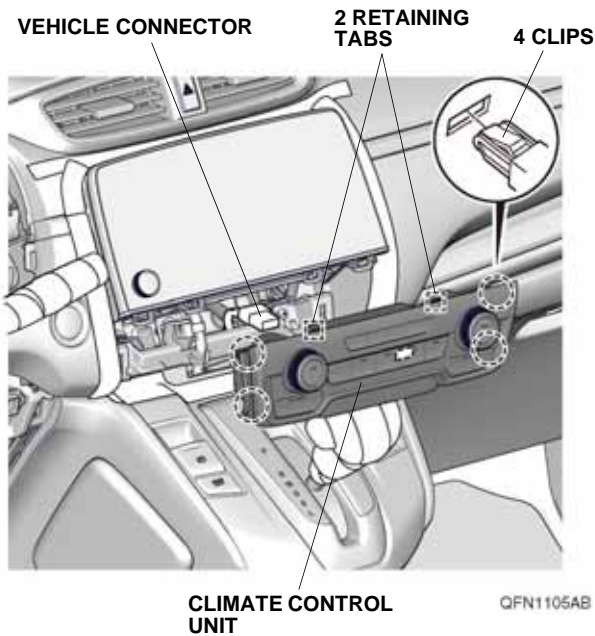


23. Release the audio unit.

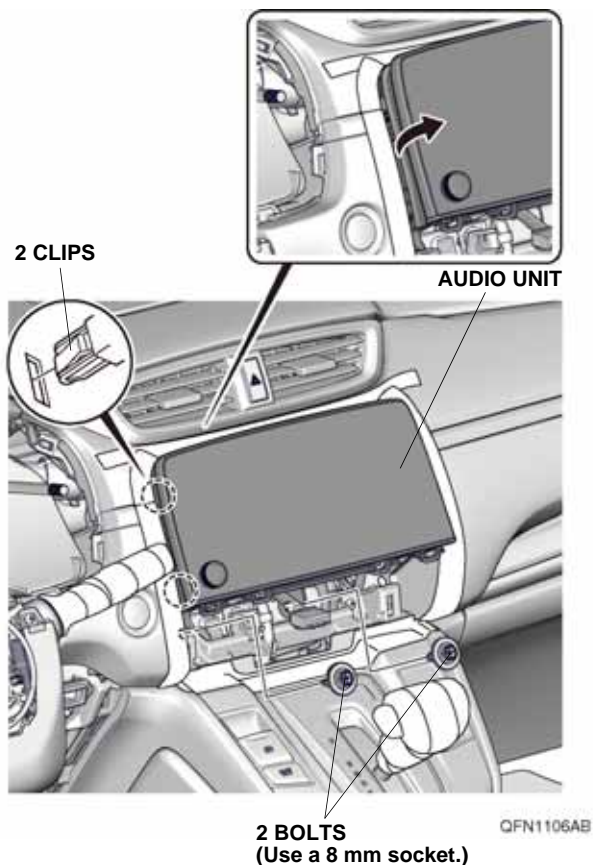


24. Remove the driver's dashboard inner panel and unplug the vehicle connectors.

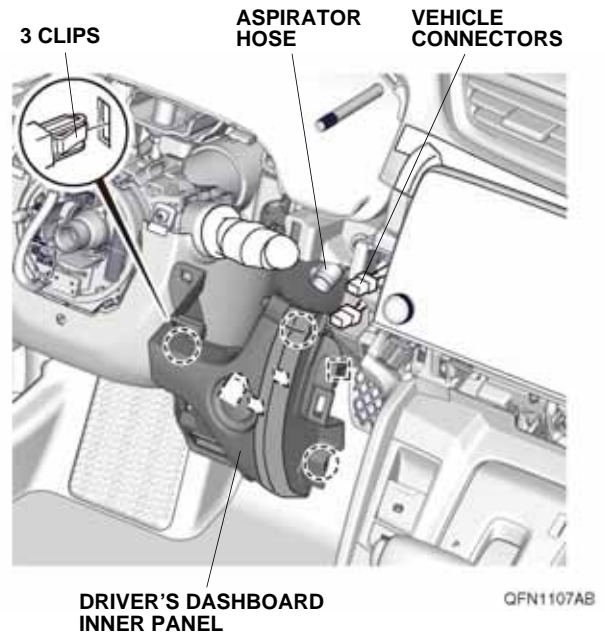


25. Remove the meter, and unplug the vehicle connectors.
NOTE: Place the meter with the dial window up.

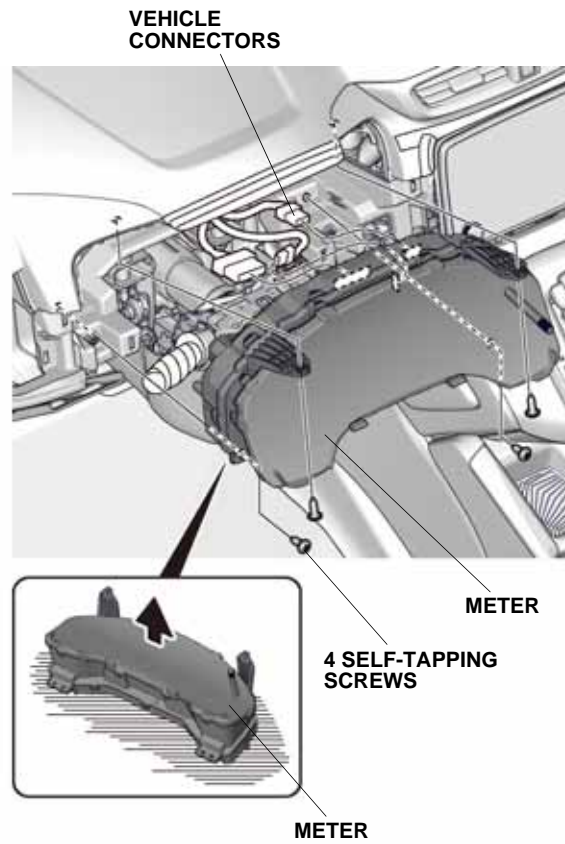


26. Remove the lower column cover.

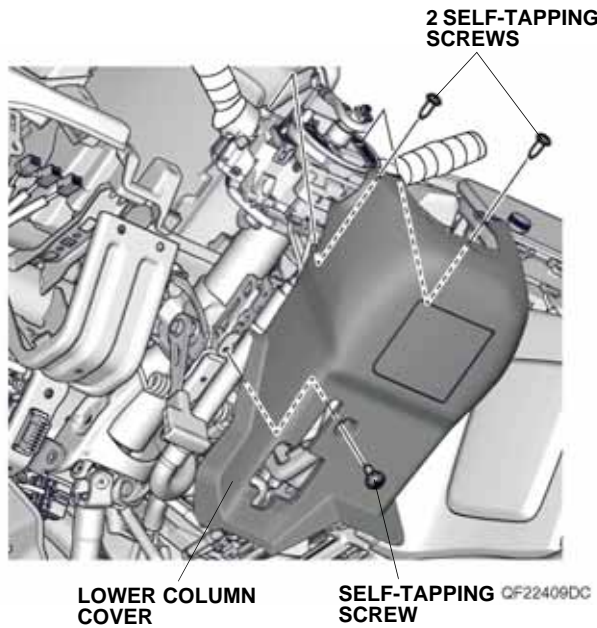


27. Remove the cable reel, and unplug the vehicle connectors.

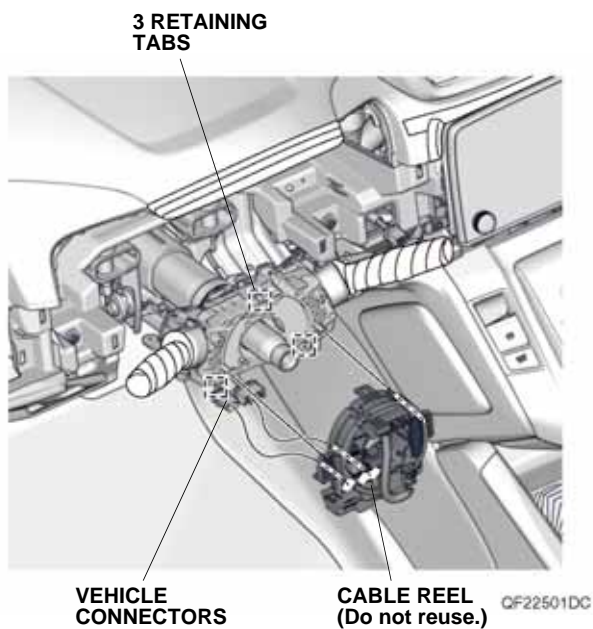


28. Remove the locking pin. Install the new cable reel with three retaining tabs, and plug the vehicle connectors into the new cable reel.

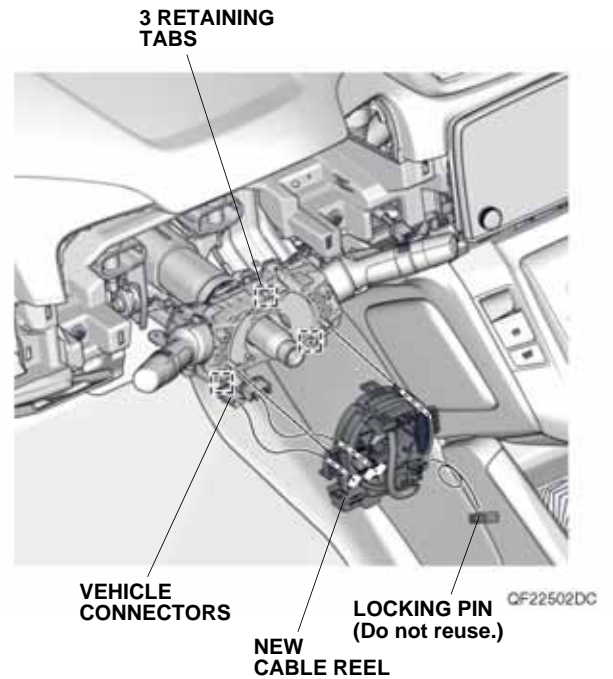


29. Plug the relay into the relay block on the heater harness.

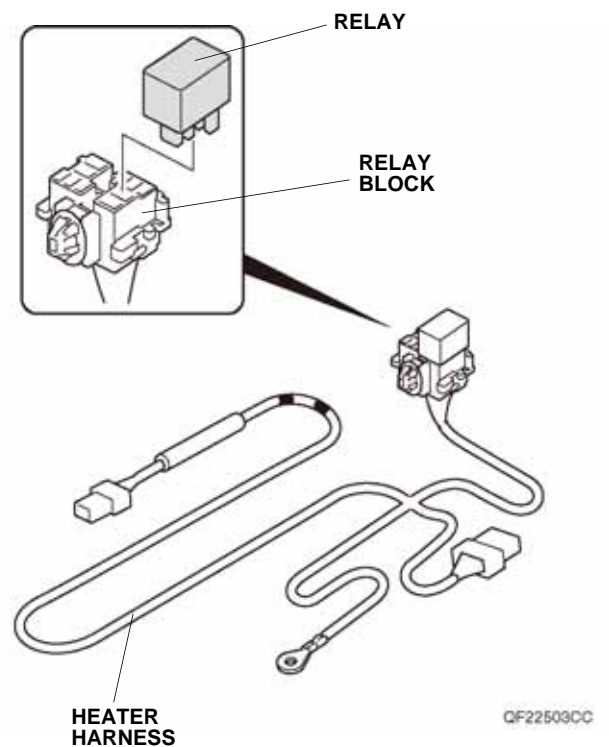


30. Attach the relay block on the heater harness to the vehicle panel.

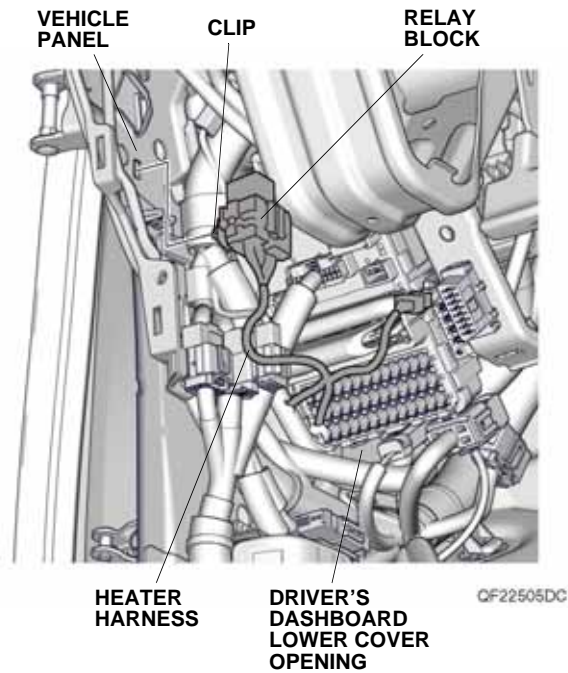


31. Plug the heater harness 4-pin connector into the fuse box.

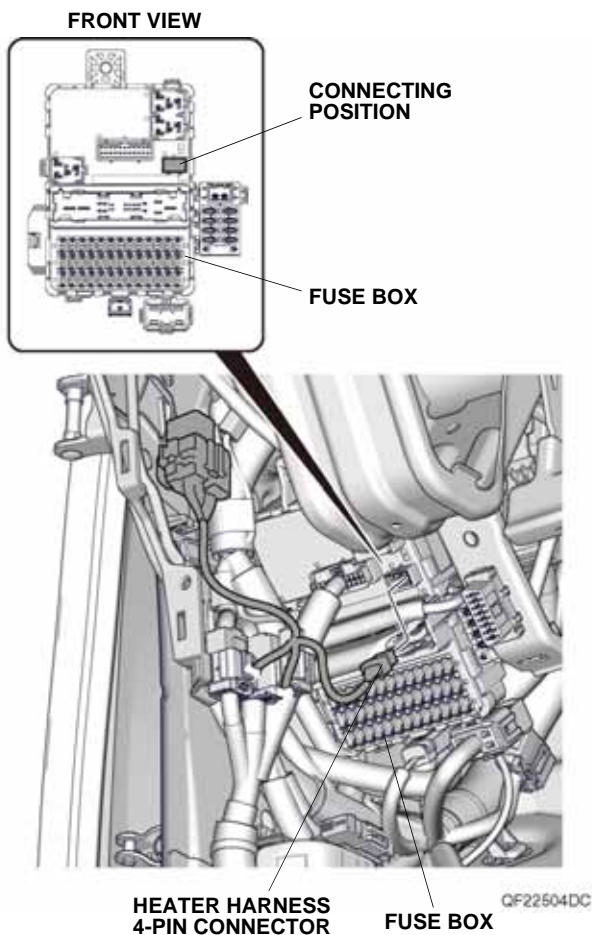


32. Remove the vehicle bolt. Route the heater harness as shown, and secure the heater harness ground terminal to the vehicle bracket with the ground bolt.

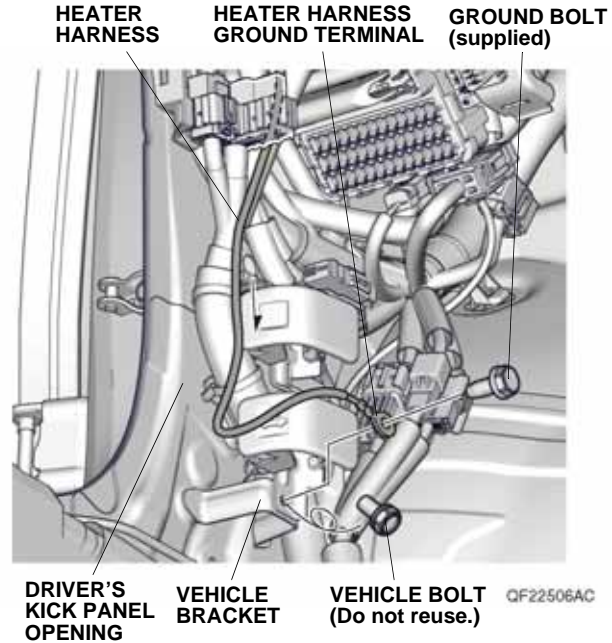


33. Secure the heater harness to the vehicle bracket and vehicle harness with three wire ties.

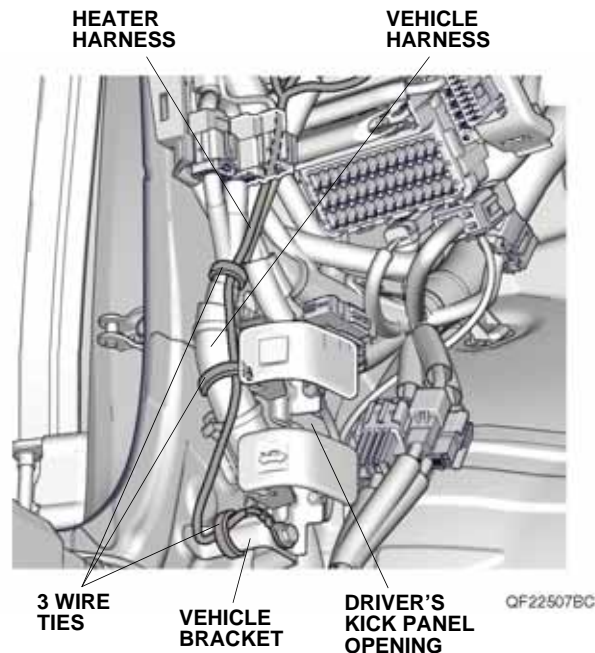



34. Route the heater harness along the vehicle harness, and secure it to the vehicle harness with two wire ties.

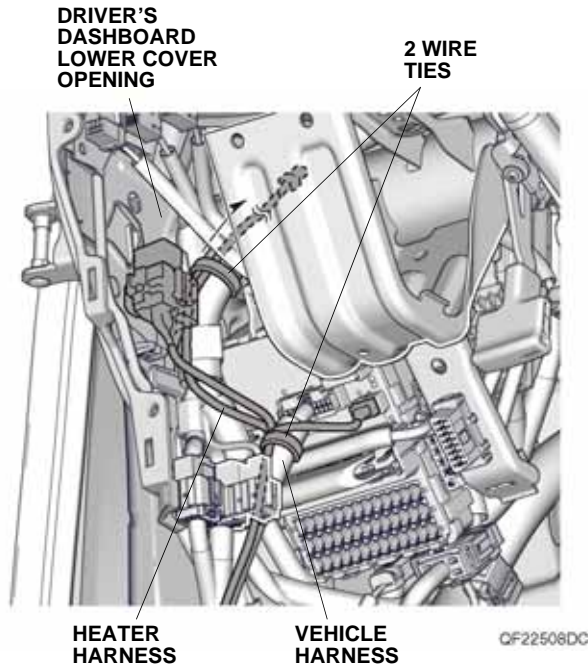


35. Route the heater harness along the vehicle harness, and secure it to the vehicle harness with two wire ties.

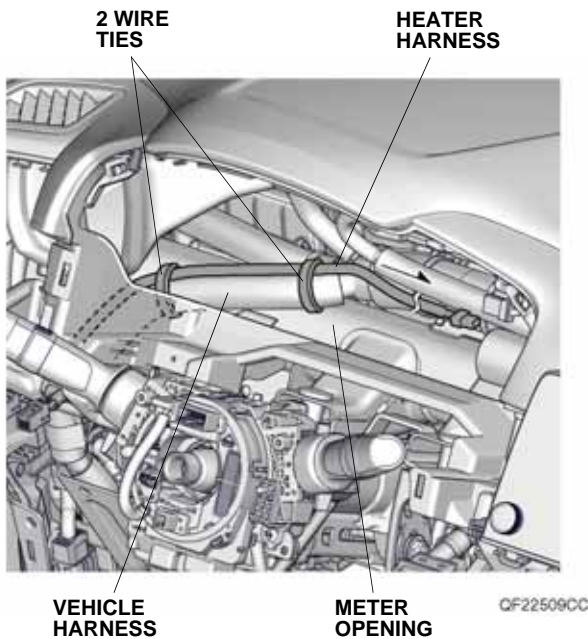

36. Route the heater harness along the driver's dashboard lower cover opening as shown.

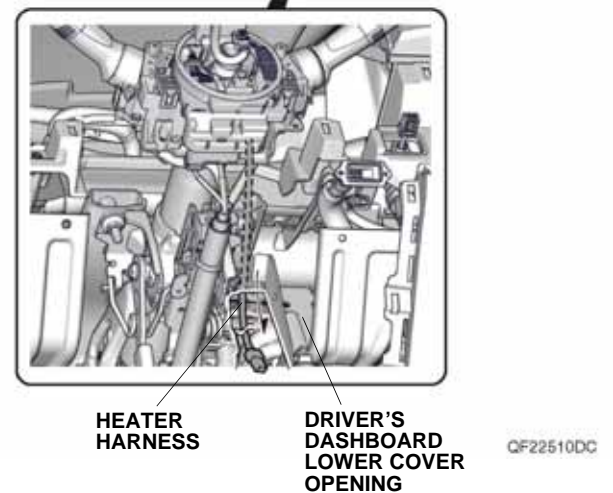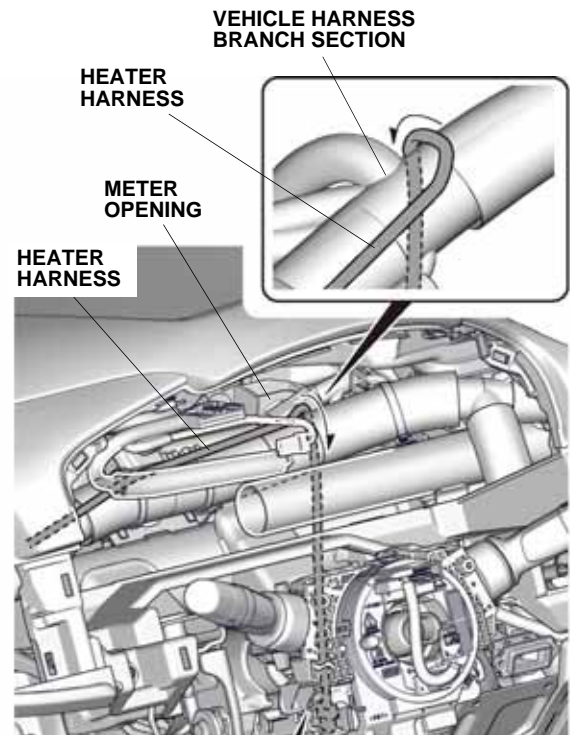


37. Route the heater harness along the vehicle harness, and secure it to the vehicle harness with two wire ties at the green tapes on the heater harness.

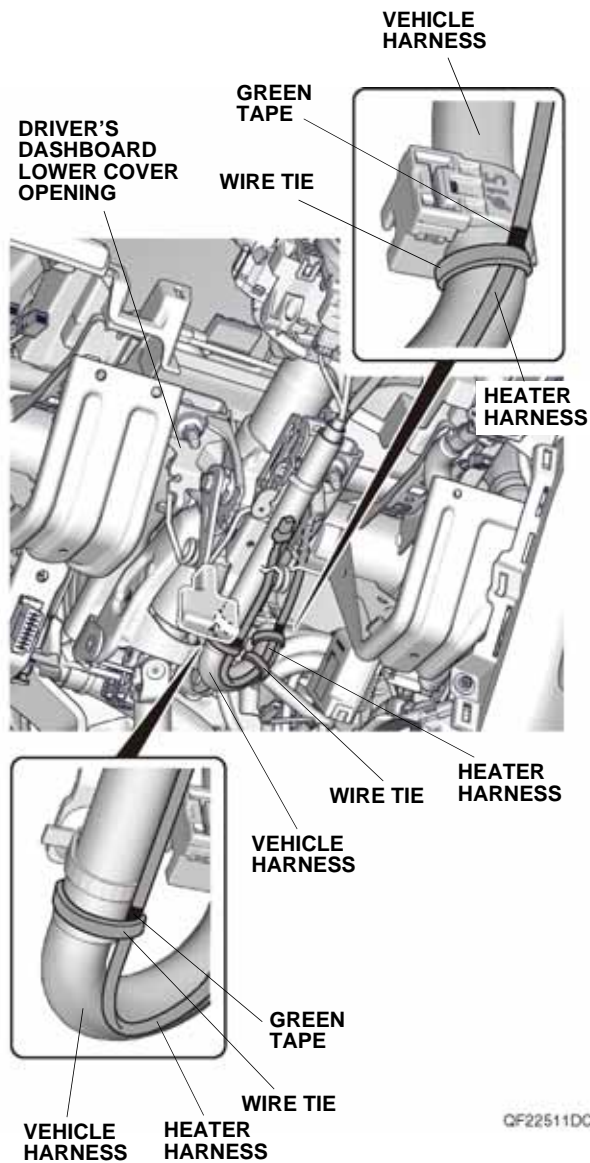


38. Secure the heater harness to the vehicle harness with one wire tie.


39. Secure the heater harness to the vehicle harness with three wire ties.

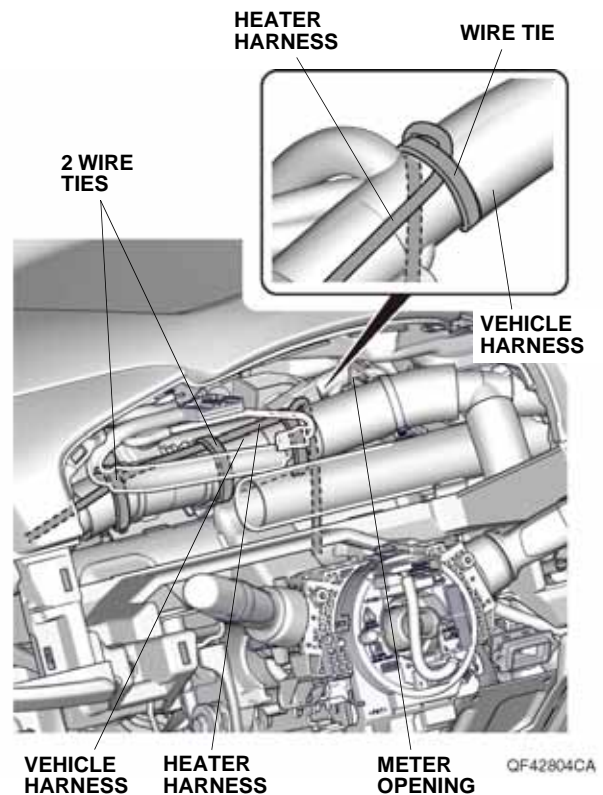


40. Secure the heater harness to the vehicle harnesses with two wire ties.

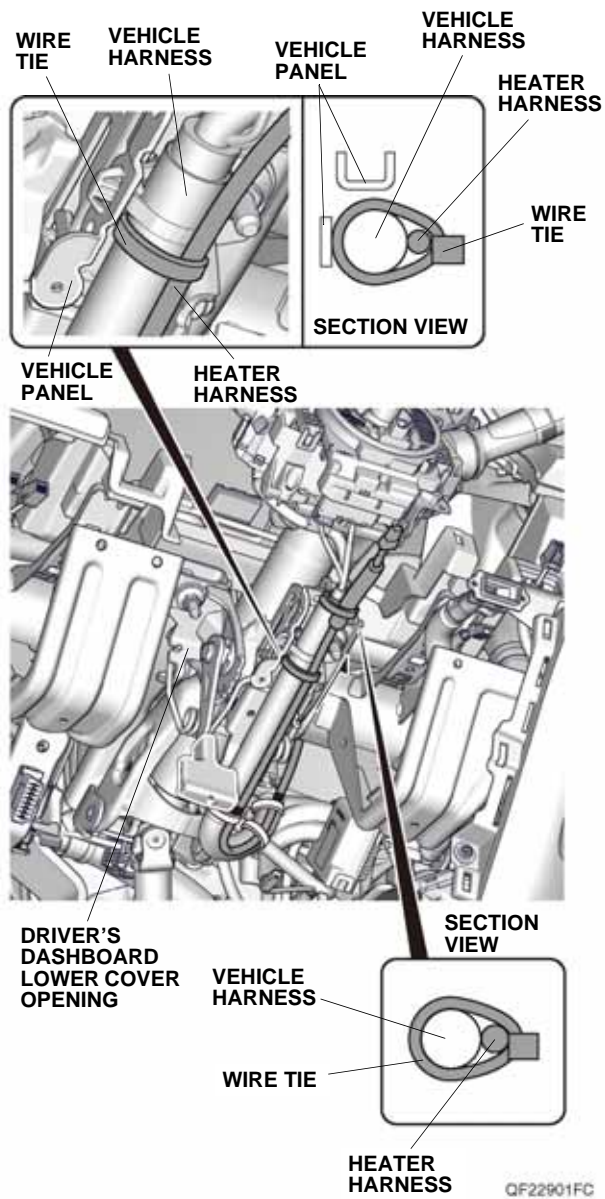


41. Plug the heater harness 2-pin connector into the new cable reel.

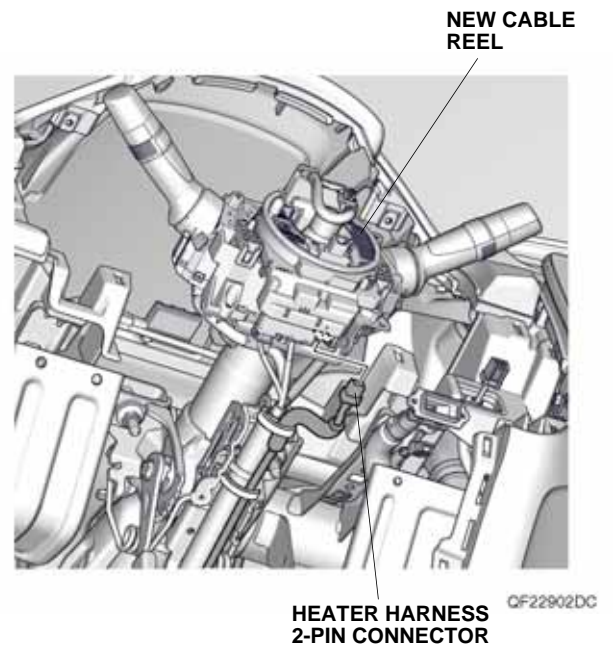


42. Remove the steering wheel trim.

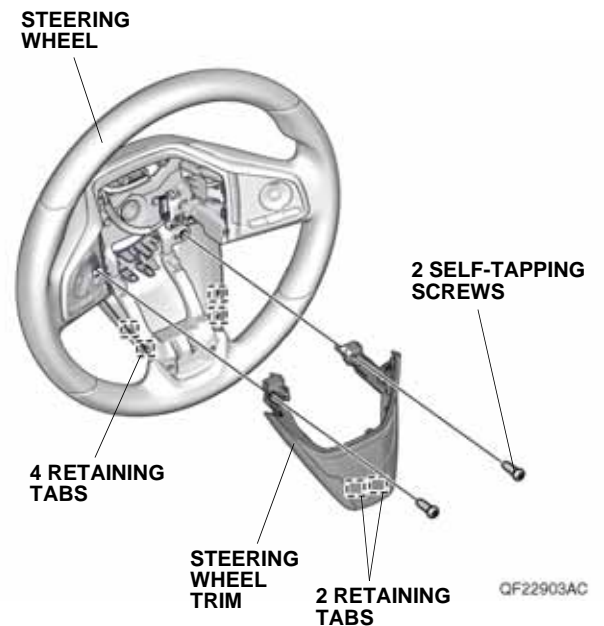


43. Remove the switch assembly, and unplug the vehicle connectors.

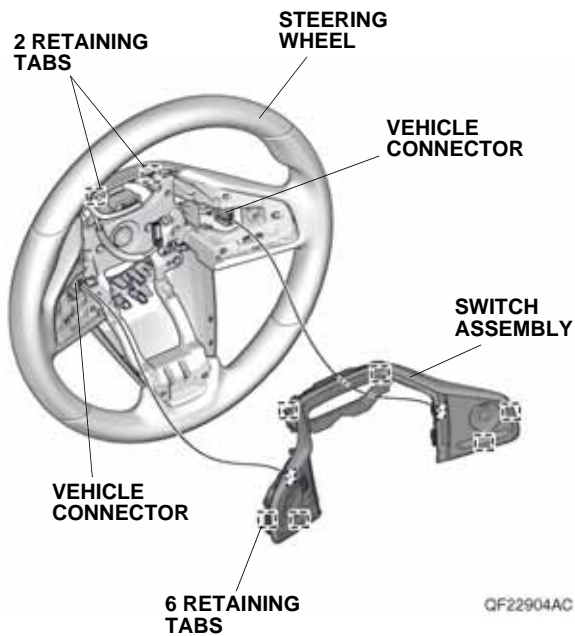


44. Remove the steering wheel cover.

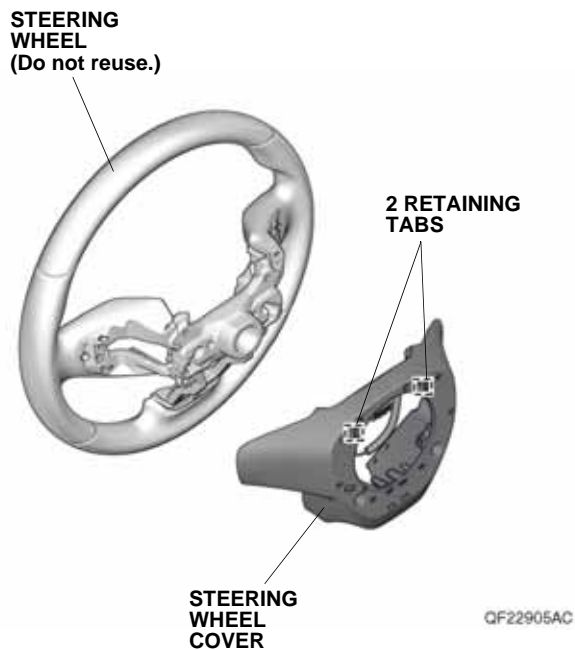


45. Remove the cable reel cord.

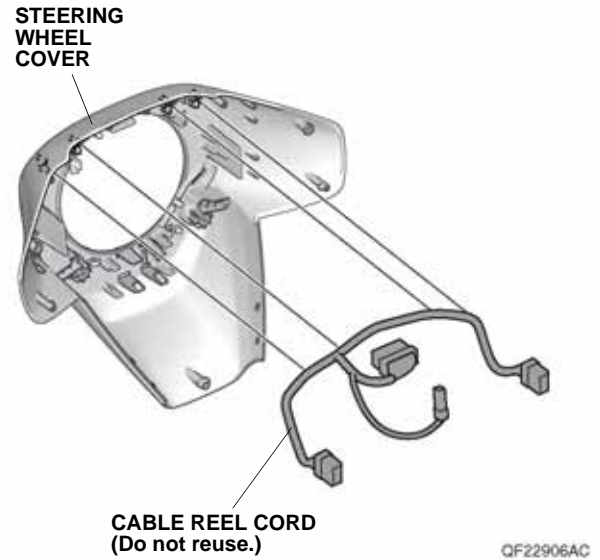


46. Install the new cable reel cord on the steering wheel cover.
NOTE: Make sure to check that the cable reel cord is secured properly.

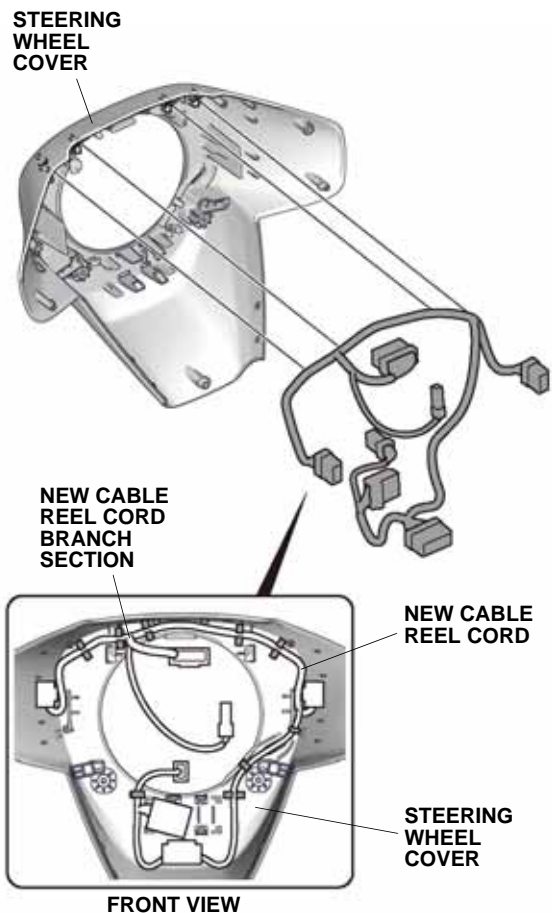


47. Plug the new cable reel cord 4-pin connector into the new steering wheel 4-pin connector, and install the steering wheel cover on the new steering wheel.

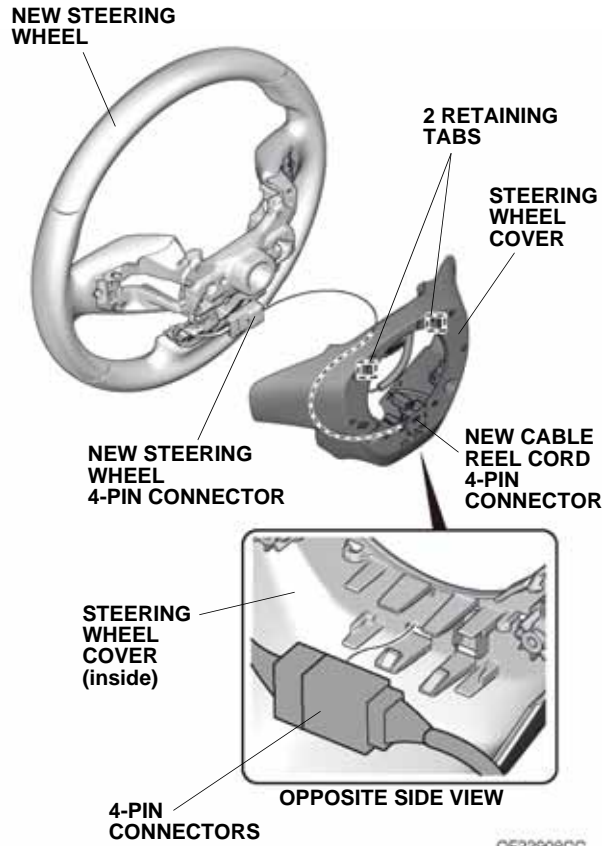


48. Remove the vehicle switch.

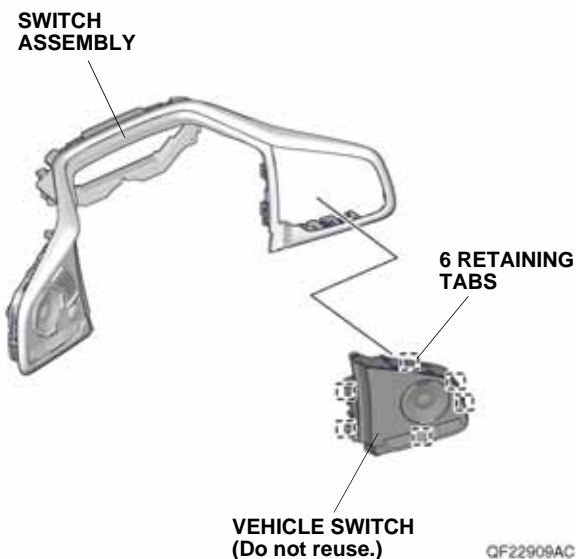


49. Install the HSW switch on the switch assembly.

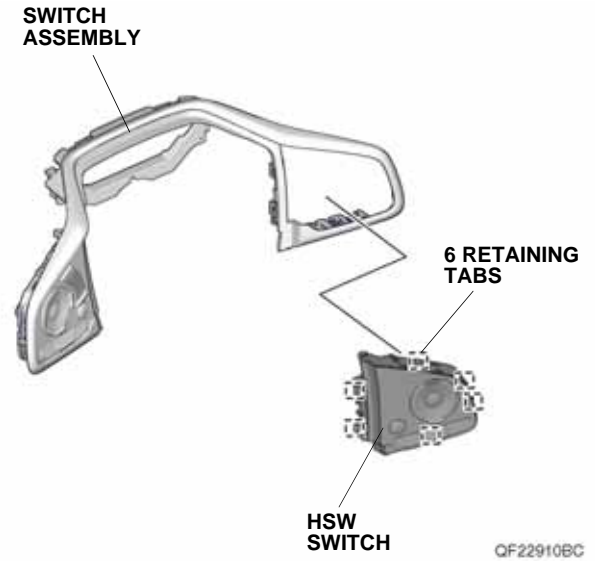


50. Plug two new cable reel cord 12-pin connectors into the switch assembly, and install the switch assembly on the new steering wheel.

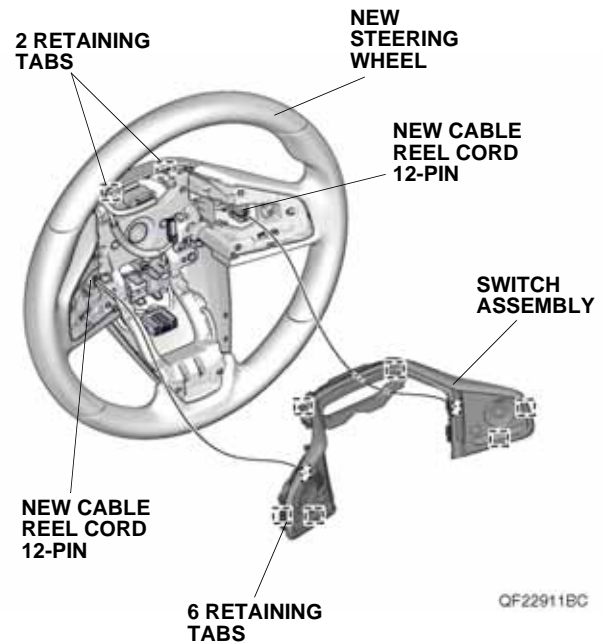


51. Install the control unit on the steering wheel trim.

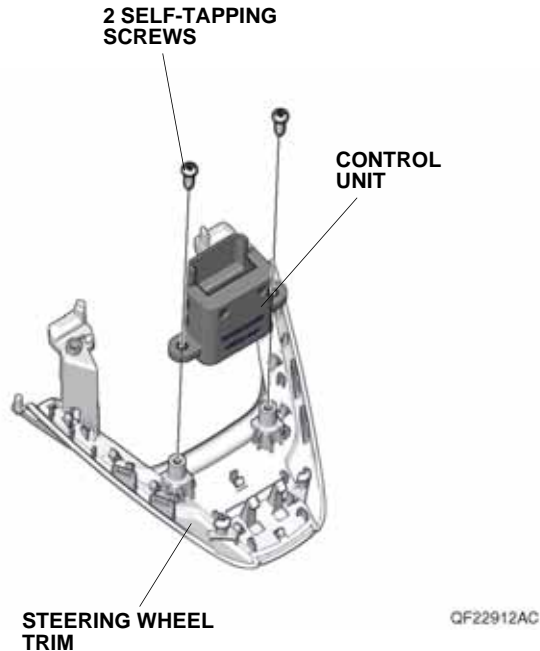

52. Plug the new cable reel cord 14-pin connector into the control unit, and install the steering wheel trim on the new steering wheel with two self-tapping screws removed in step 42.

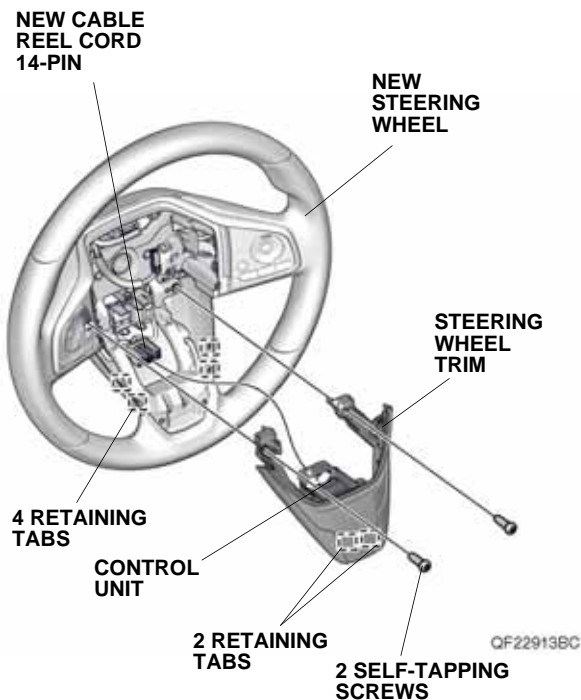


53. Install the meter, driver's dashboard inner panel, audio unit, climate control unit, driver's dashboard outer panel, driver's outlet, driver's lower ornament panel, and meter visor.

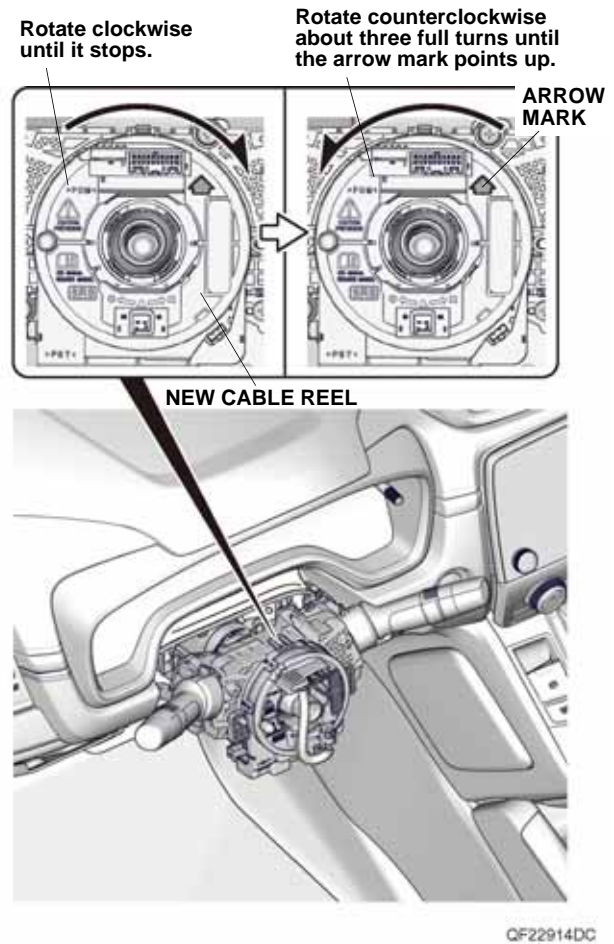


54. Before installing the new steering wheel, make sure the front wheels are still pointing straight-ahead. To confirm the cable reel is line up properly, rotate the cable reel clockwise until it stops, then rotate it counterclockwise about three full turns. The arrow mark on the cable reel label must point straight up.

55. Install the new steering wheel onto the steering column shaft in the straight-ahead position:
- Route the new cable reel 2-pin connector cord through the opening in the new steering wheel.
 - Plug the new cable reel cord 2-pin and 20-pin connectors into the new cable reel.
 - Check that the wire harnesses are not pinched.

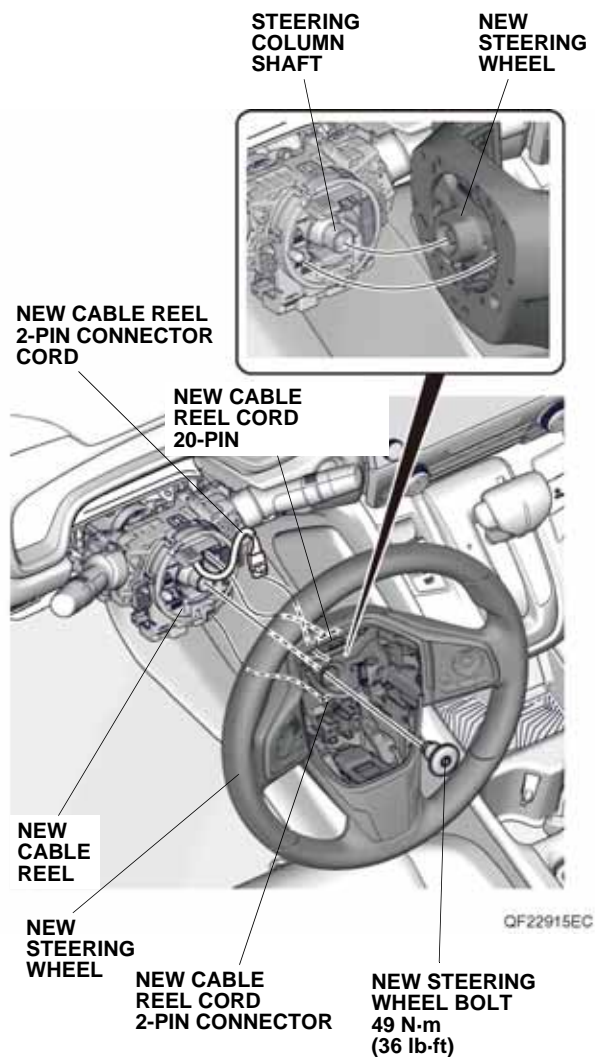

56. Install the new steering wheel bolt. Torque the new steering wheel bolt to 49 N·m (36 lb·ft). Tighten to the specified torque within 5 minutes.


57. Plug the new cable reel cord 2-pin connector and the new cable reel 2-pin connector into the air bag, and install the airbag on the new steering wheel.

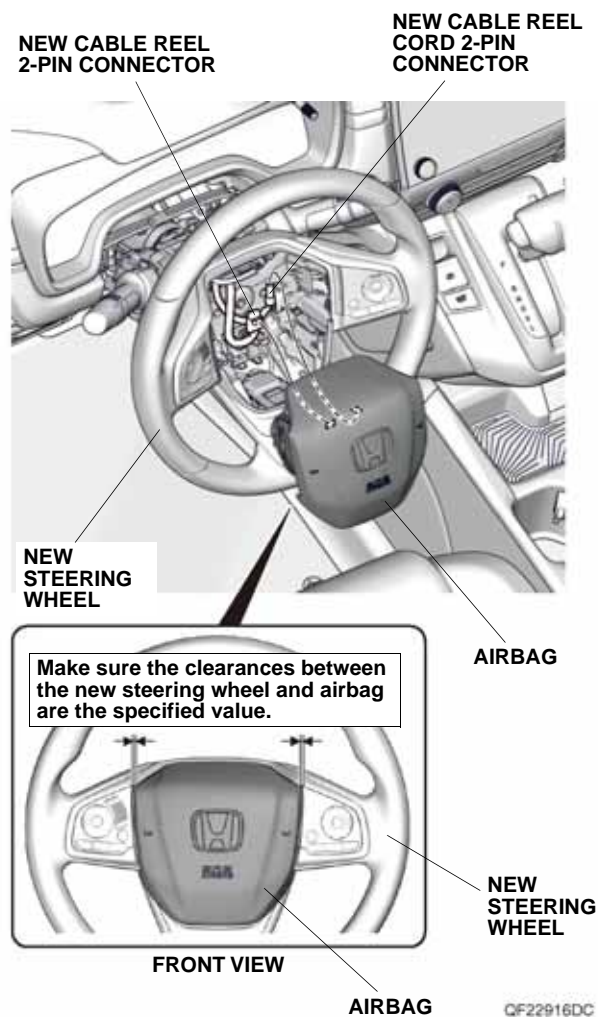

58. Check clearance around the heater harness while moving the new steering wheel up and down, back and forth.

NOTE: Adjust the heater harness if necessary.



HEATER HARNESS
(Do not stretch.)

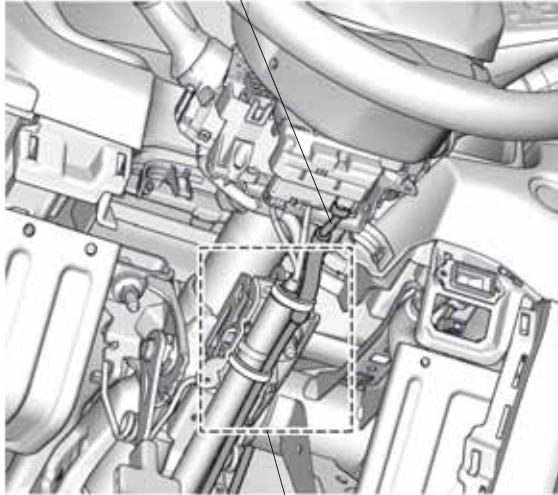

Make sure the heater harness does not interfere with the vehicle.

QF42702CA

59. Remove the vehicle 20A fuse, and install the new 10A fuse to the same slot.

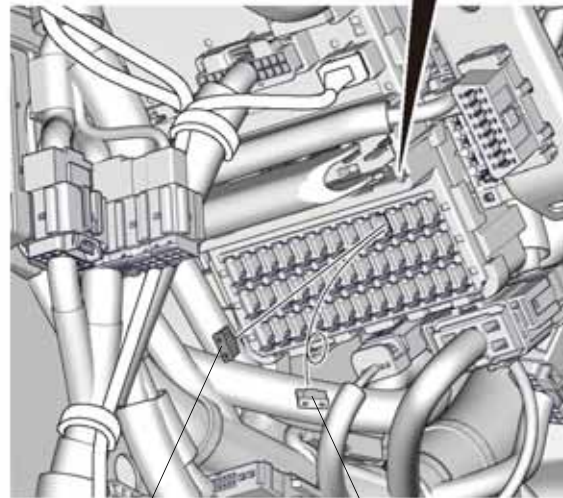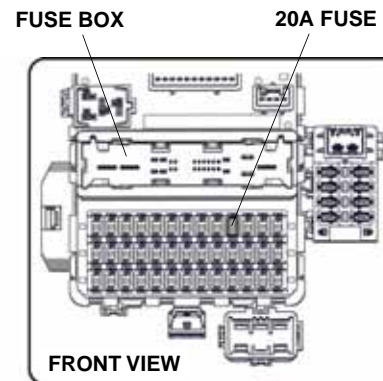


NEW 10A FUSE


VEHICLE
20A FUSE
(Do not reuse.)

QF22917AC


60. Using isopropyl alcohol on a shop towel, thoroughly clean the fuse label where the fuse label will attach. Attach the fuse label (10A HEATED STEERING) to the fuse label on the lower column cover as shown.

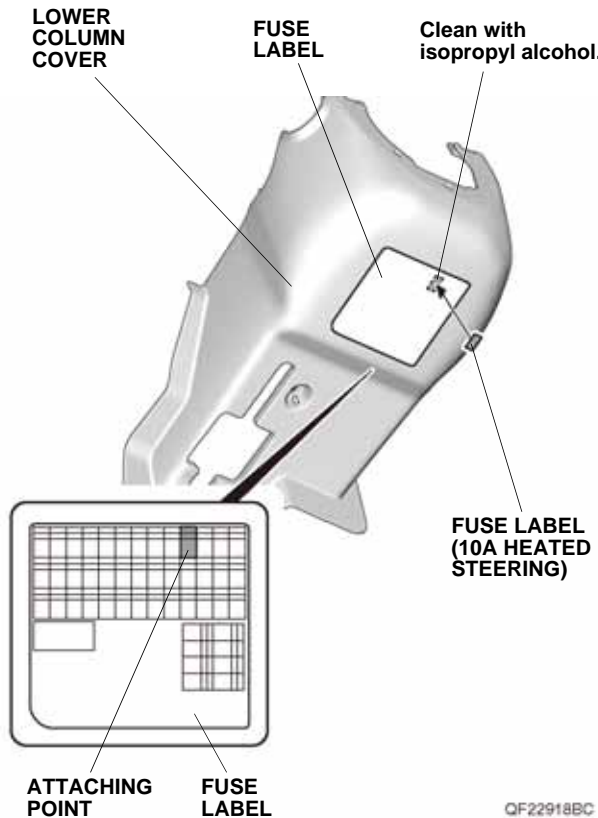


61. Install the lower column cover.

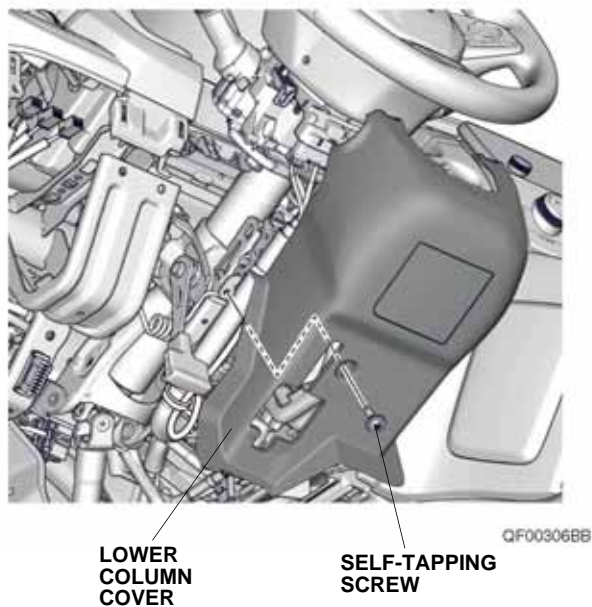

62. Connect the negative cable to the battery, then turn the engine switch to ON. Turn the steering wheel 90° clockwise. Secure the lower column cover.

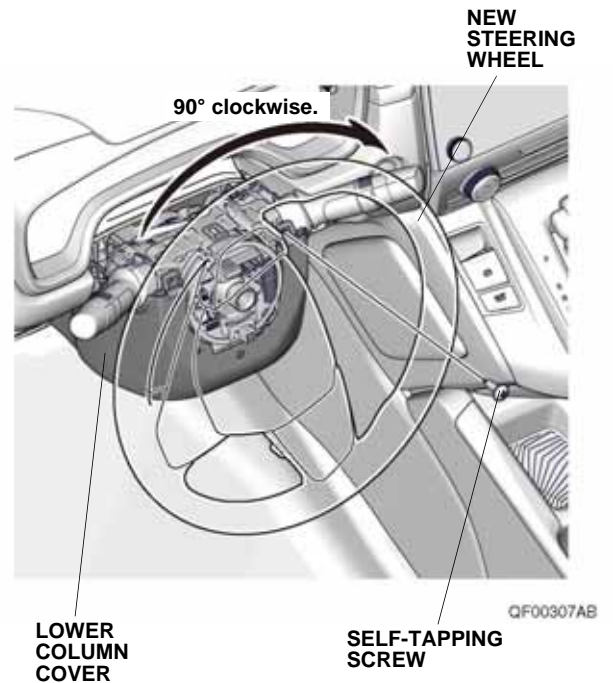

63. Turn the steering wheel 180° counterclockwise. Secure the lower column cover.

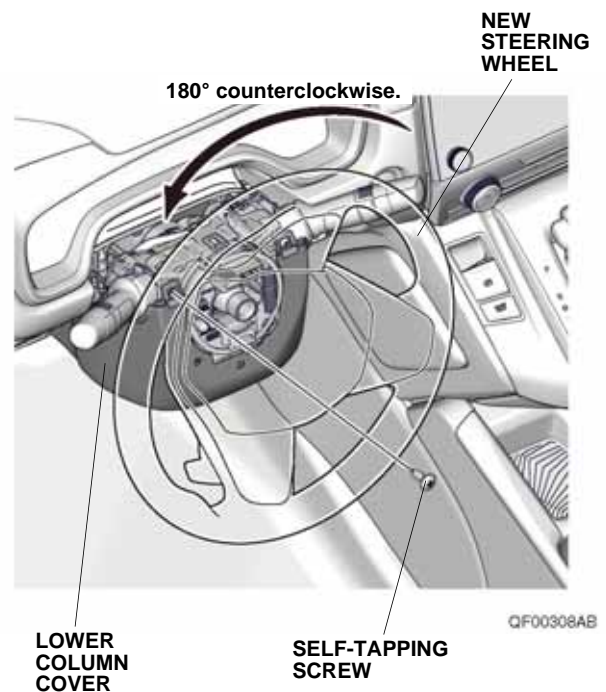

64. Turn the engine switch to OFF, then disconnect the negative cable from the battery.
65. Check that all wire harnesses are routed properly and all connectors are plugged in.
66. Install all removed parts.
67. Connect the negative cable to the battery.
68. Connect the HDS, and clear the DTCs.
69. Inspect the following items. If any abnormality is found, perform troubleshooting as described in the service information.
 - Turn the engine switch to ON. The SRS indicator should come on for about 6 seconds and then go off.
 - Make sure the horn and steering wheel switches work properly.
70. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
71. Set the clock on vehicles without navigation.
72. If necessary, restore the systems back to normal operation as described in the service information.
73. Make sure the new steering wheel is in the straight-ahead position with the front wheels. If the spoke angle of the new steering wheel is not in the straight-ahead position with the front wheels, adjust the front toe as described in the service information.
74. Do the VSA sensor neutral position memorization as described in the service information.

Check the Operation of the Heated Steering Wheel

75. Check that the heated steering wheel works as described in the Accessory User's Information Manual supplied with the heated steering wheel kit.