



HONDA INSTALLATION INSTRUCTIONS

Accessory
HEATED STEERING WHEEL

Application
2022 ODYSSEY

Publications No.
VERSION 1
Issue Date
JAN 2021

PARTS LIST

Heated Steering Wheel Kit
P/N 08U97-THR-101A

Steering wheel




Control unit




2 Self-tapping screws



Cable reel

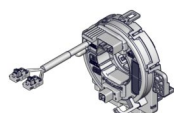


Cable reel cord

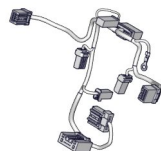


2 TORX bolts




Information manual

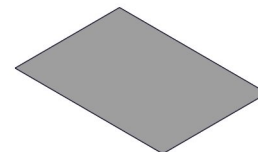

10A Fuse
(May not be used)

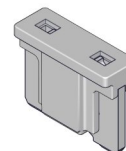

Steering wheel bolt

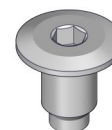

Switch Kit
P/N 08U97-THR-100D
P/N 08U97-THR-100E

HSW switch




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
10 mm Open end wrench
10 mm Hex wrench
Ratchet
T-30 TORX bit
Torque wrench
Steering wheel puller
Shop towel
Masking tape
i-HDS

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Heated Steering Wheel in the Vehicle

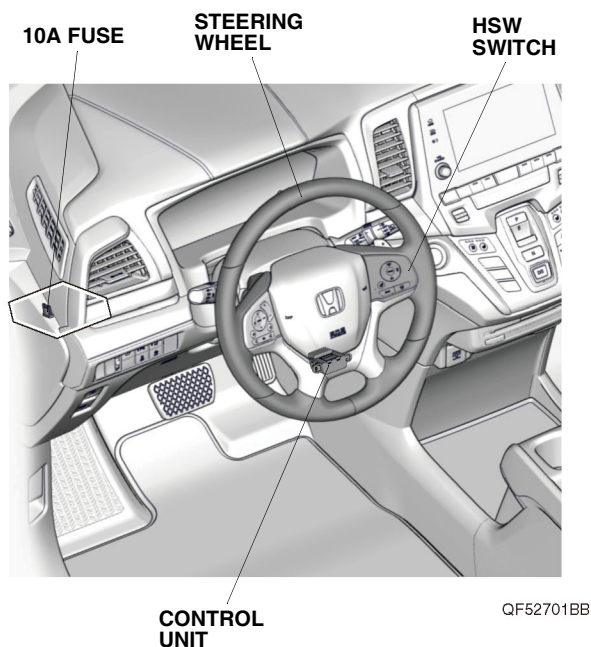


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- Observe all safety notes and precautions in the service information in addition to those in this Installation Instruction.
 - Be careful not to damage the vehicle.
 - After installing the steering wheel, you must line up the steering wheel spoke angle to the straight-ahead position by adjusting the front toe.
1. Turn the steering wheel so the front wheels are in the straight-ahead position.
 2. Disconnect the negative cable from the battery:
 - Wrap a shop towel around the hood latch lever.

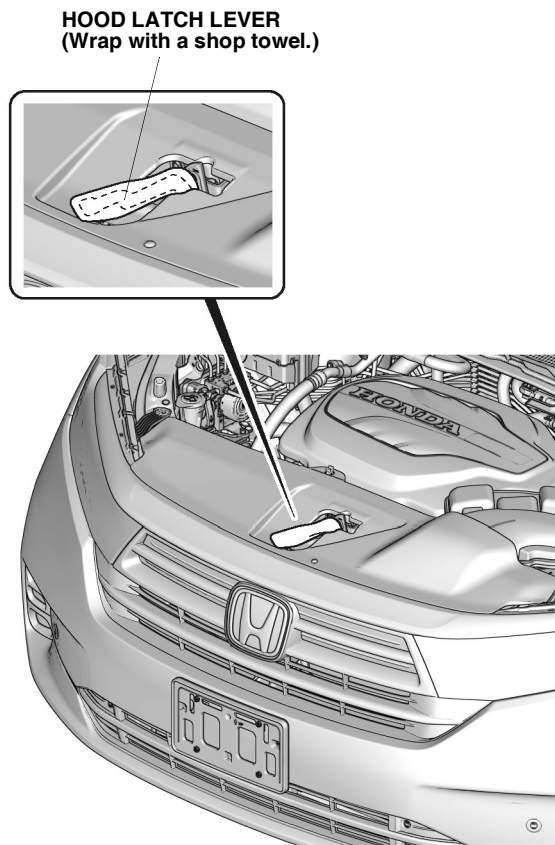


- Remove the front bulkhead cover.

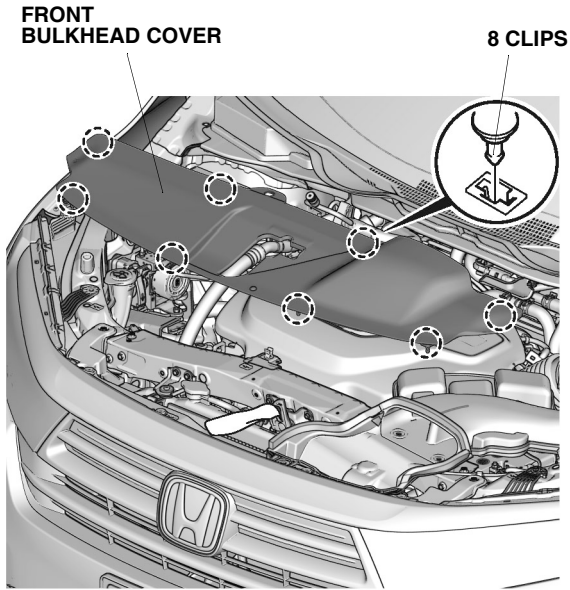


QJ92003AB

- Remove the intake air tube.
- Disconnect the negative cable from the battery, and wait at least 3 minutes before you start to install the steering wheel.

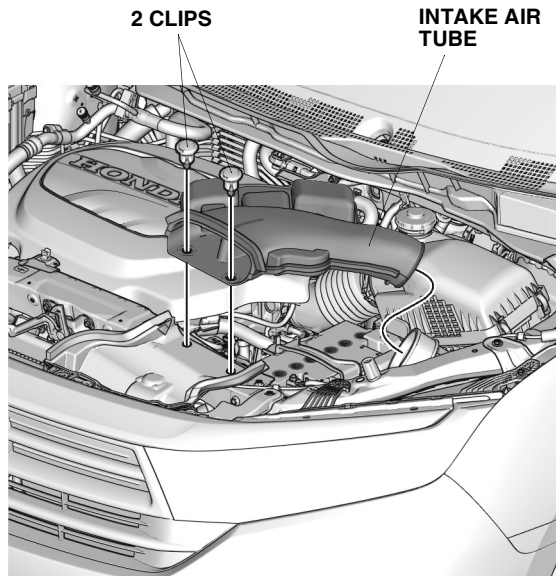


QJ92004AB

3. Pull away the door opening seal, and remove the driver's dashboard side lid.

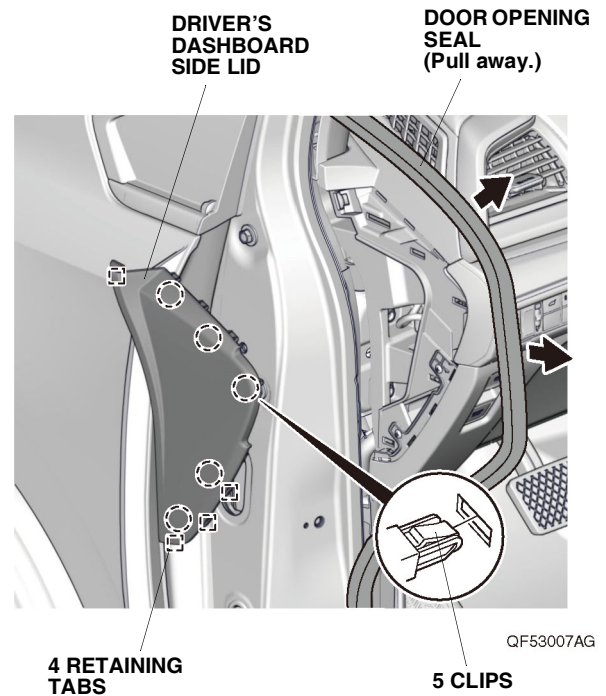


QF53007AG


4. Remove the driver's dashboard lower cover, and unplug the vehicle connectors.

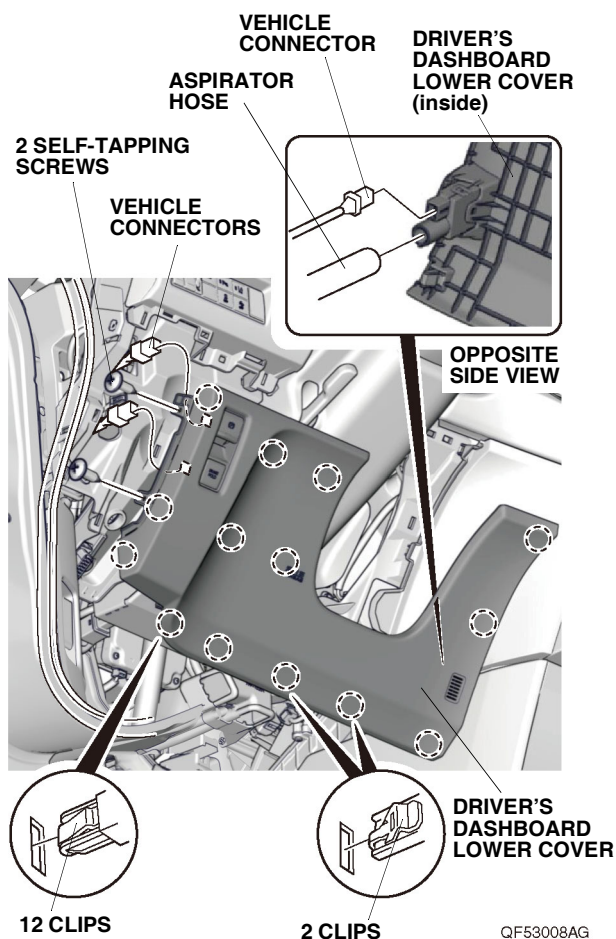

5. Lower and pull out the steering wheel as shown, and remove the two TORX bolts.

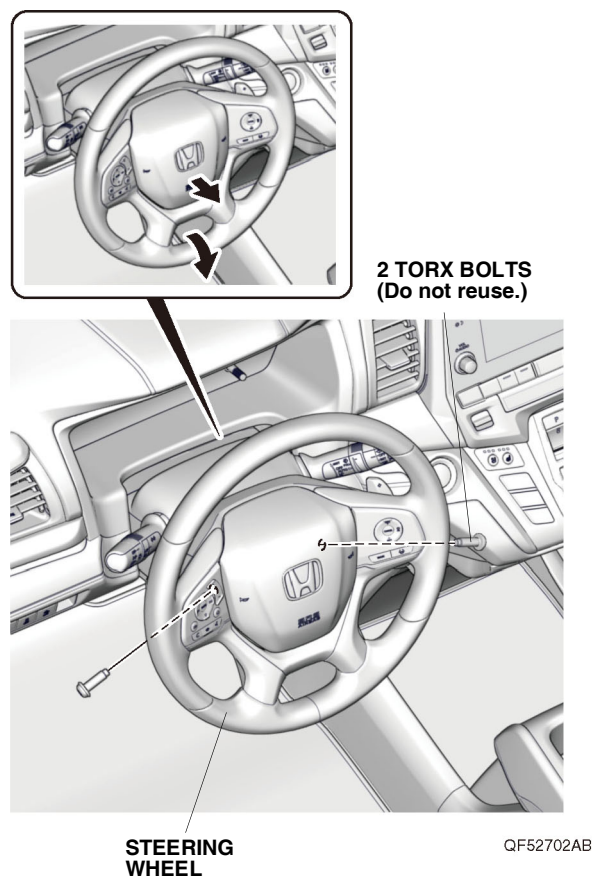


6. Unplug the vehicle connectors.
NOTE: Be careful not to damage the vehicle connectors.

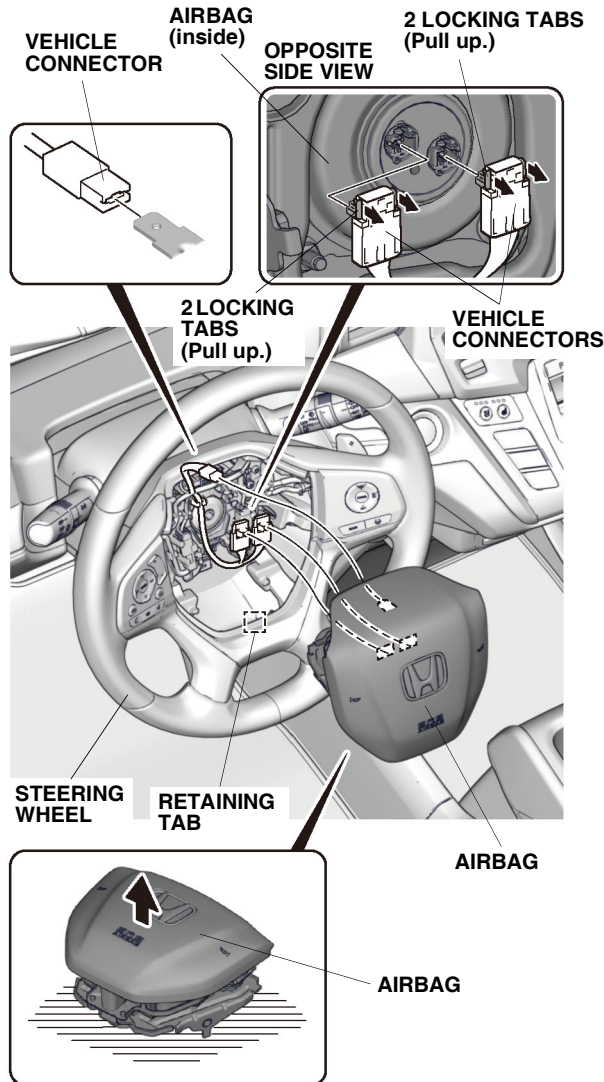

QF52703AB


7. Remove the airbag.
NOTE:
- Do not drop the removed airbag or hit it on an object.
 - Place the removed airbag on a safe place with the pad surface (top) facing upward.

8. With the front wheels line up in the straight-ahead position, unplug the vehicle connector, and loosen the steering wheel bolt.

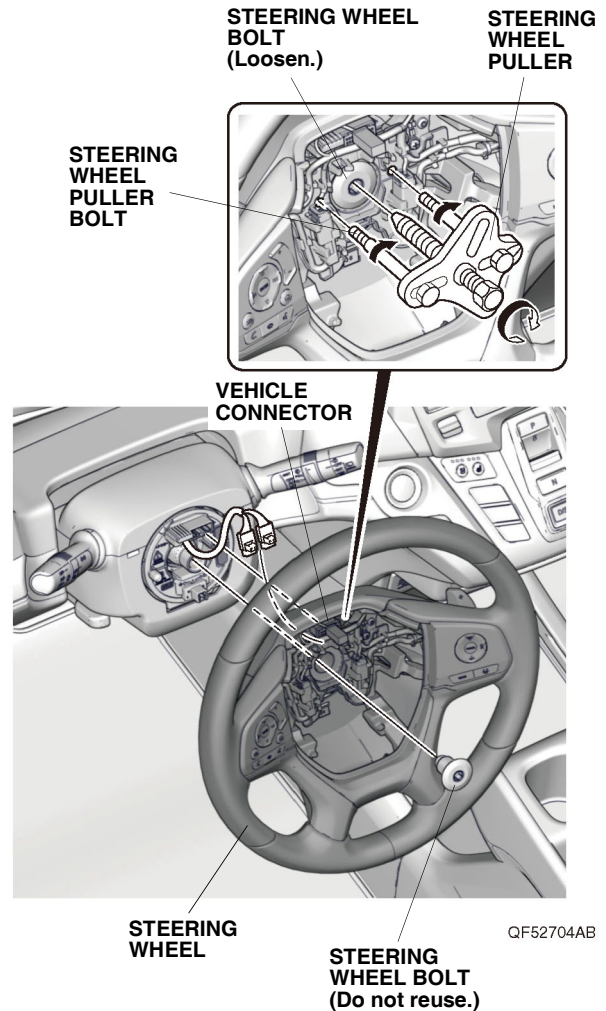


9. Using a steering wheel puller, release the steering wheel.
NOTE: Do not thread the steering wheel puller bolts in more than 5 mm (0.20 in.).
10. Remove the steering wheel bolt, then remove the steering wheel.
NOTE: When removing the steering wheel, do not turn it.

11. Apply masking tape to the upper column cover as shown.

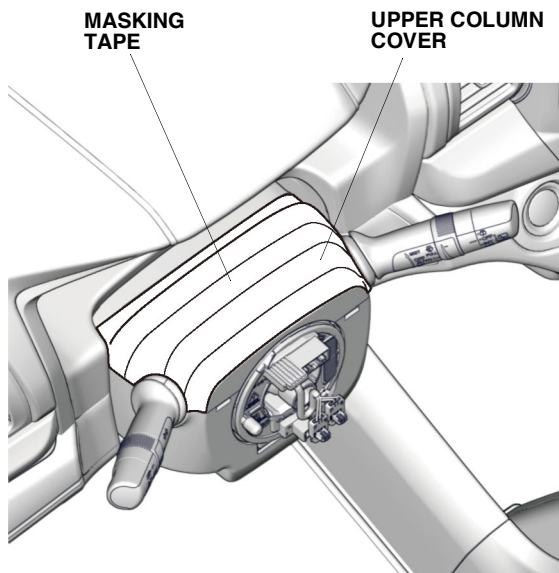


QF52705AB

12. Using a plastic trim tool, release the two retaining tabs.

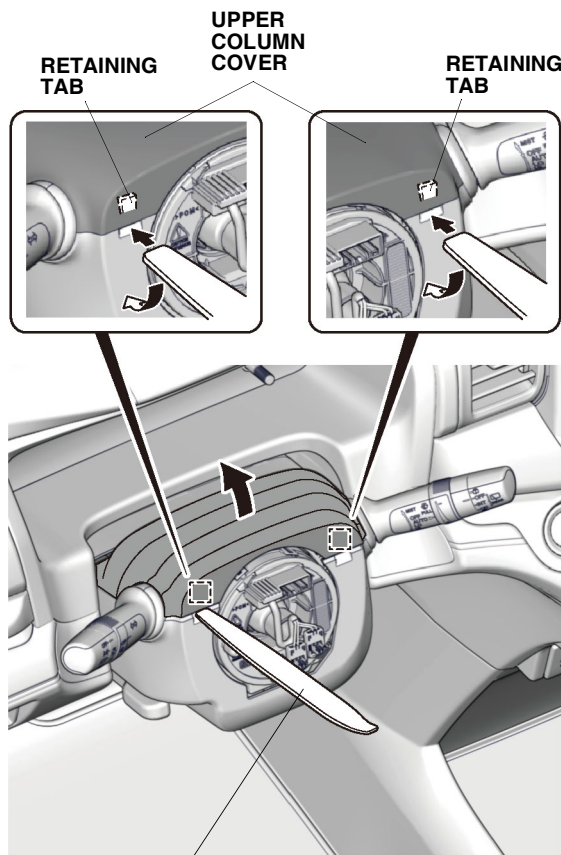

QF52706AB


13. Release the upper column cover, and secure it to the dashboard with masking tape.

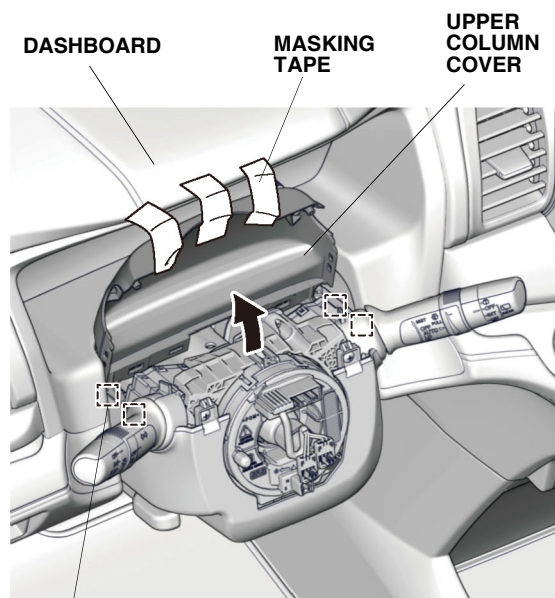

4 RETAINING TABS

QF52707AB

14. Remove the two self-tapping screws from the lower column cover.

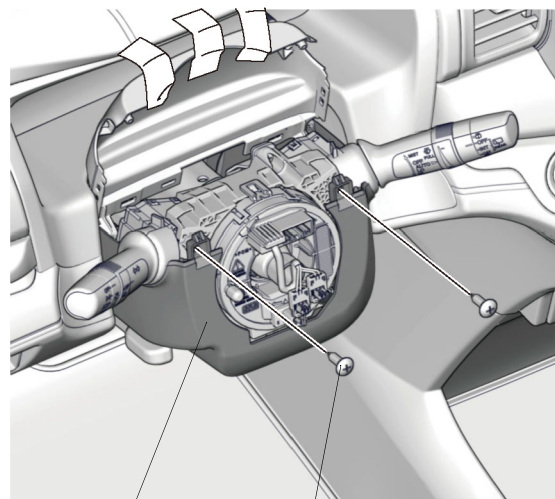


LOWER COLUMN COVER


2 SELF-TAPPING SCREWS

QF52708AB


15. Remove the lower column cover.

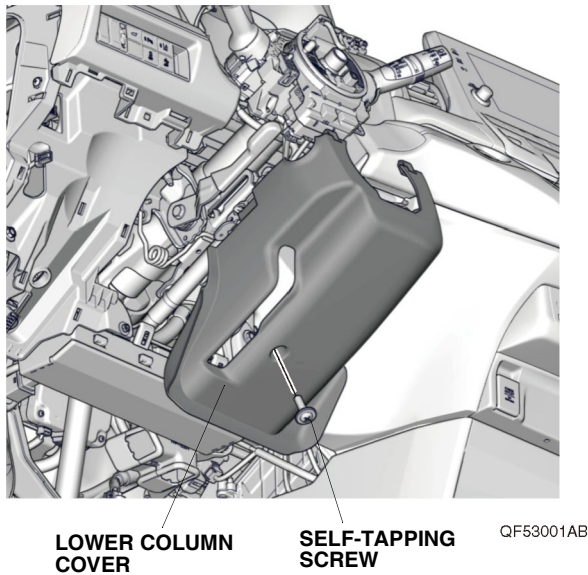


16. Unplug the vehicle connectors from the cable reel.

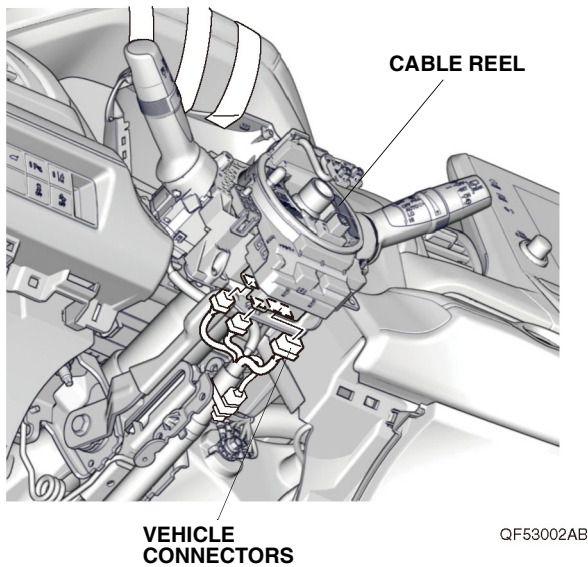


17. To prevent the cable reel from turning, apply masking tape to the cable reel. Remove the cable reel.

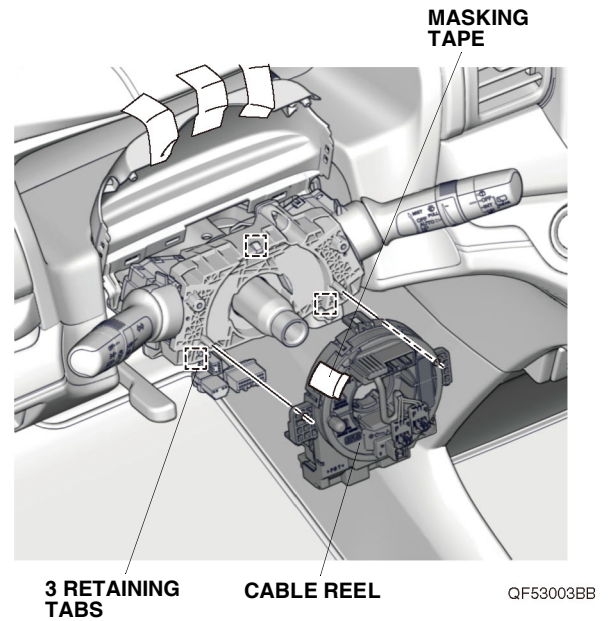

18. Remove the masking tape. Remove the steering angle sensor.
- NOTE: Make sure the steering angle sensor alignment tab is in the six o'clock position before disassembling.

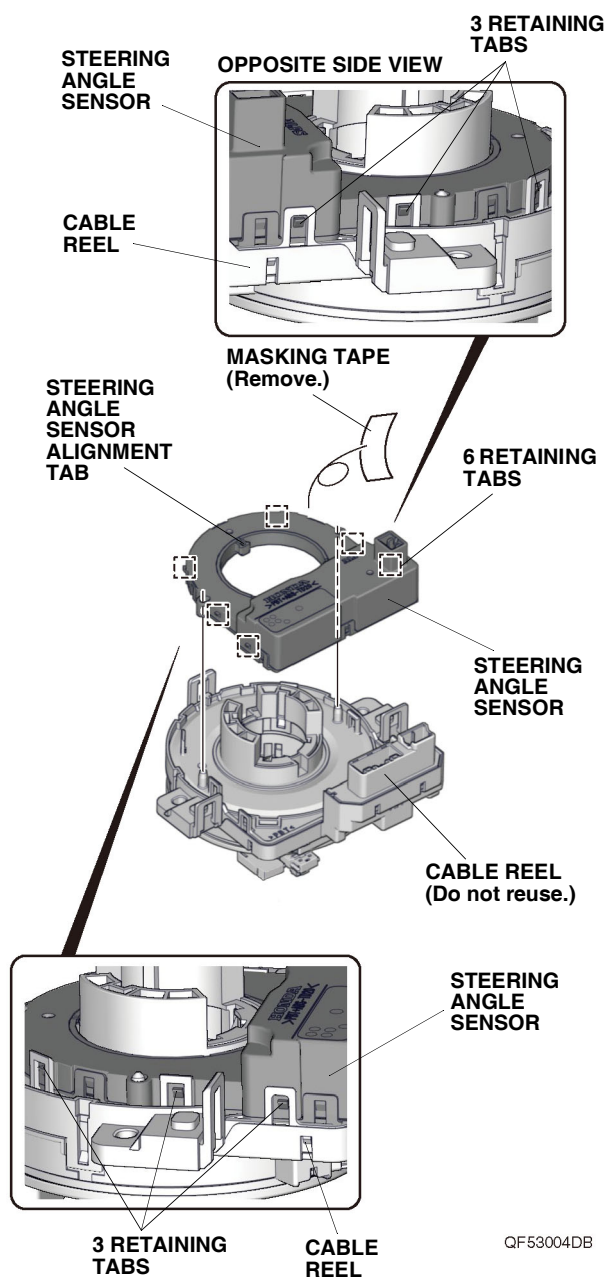


19. Install the steering angle sensor to the new cable reel.
- NOTE: Make sure the steering angle sensor alignment tab remains in the six o'clock position at all times.

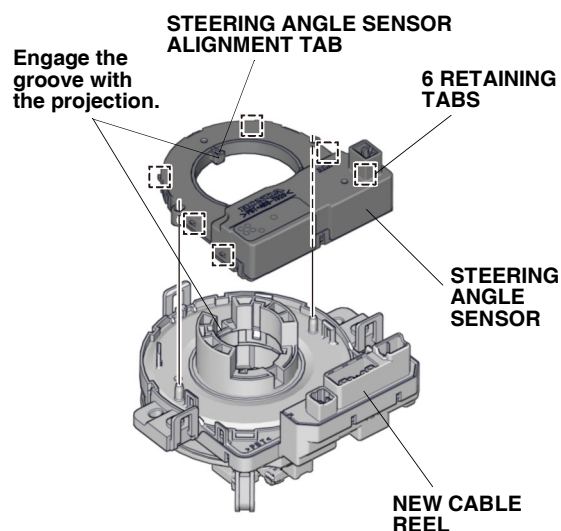


QF53005AB


20. Remove the tape to free the vehicle 2-pin connector, and remove the dummy connector.

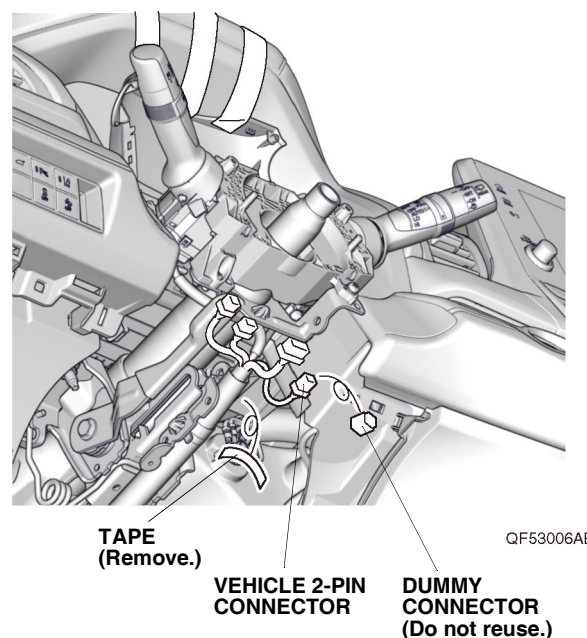


21. Install the new cable reel.

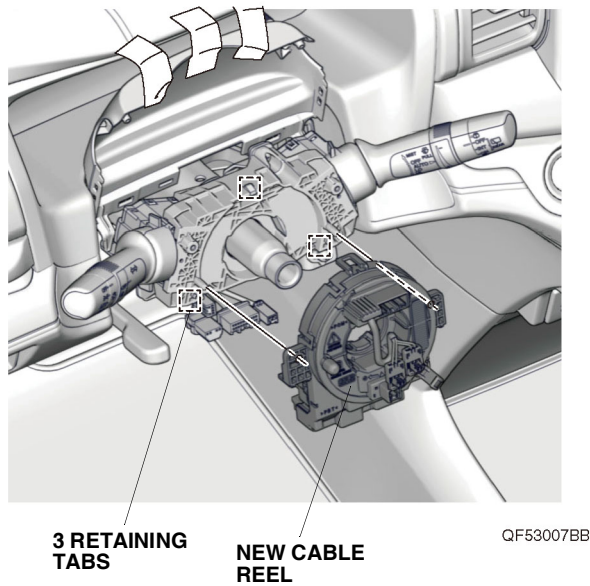


22. Plug the vehicle connectors into the new cable reel, and remove the locking pin.

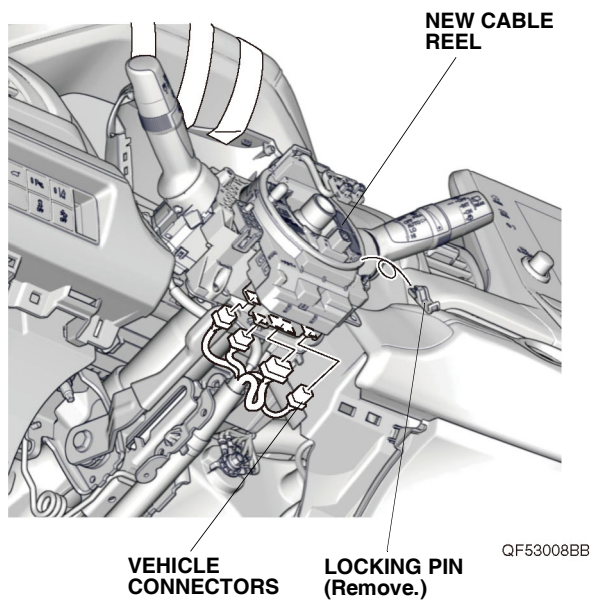


23. Remove the steering wheel cover.

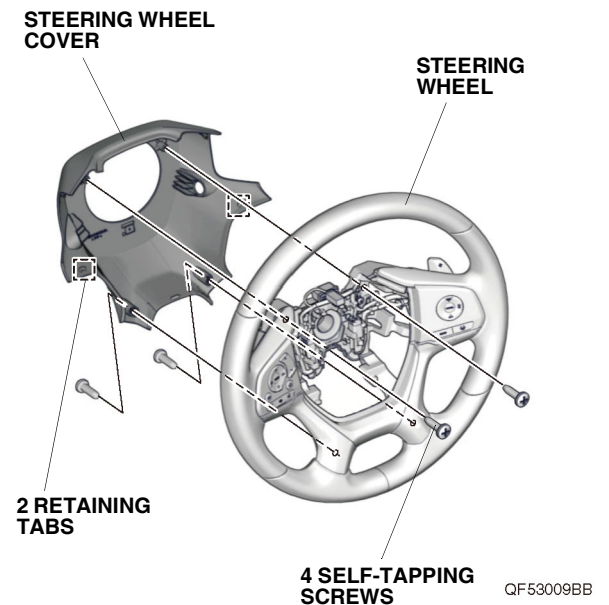


24. Remove the left and right paddle shifters, and unplug the vehicle connectors.

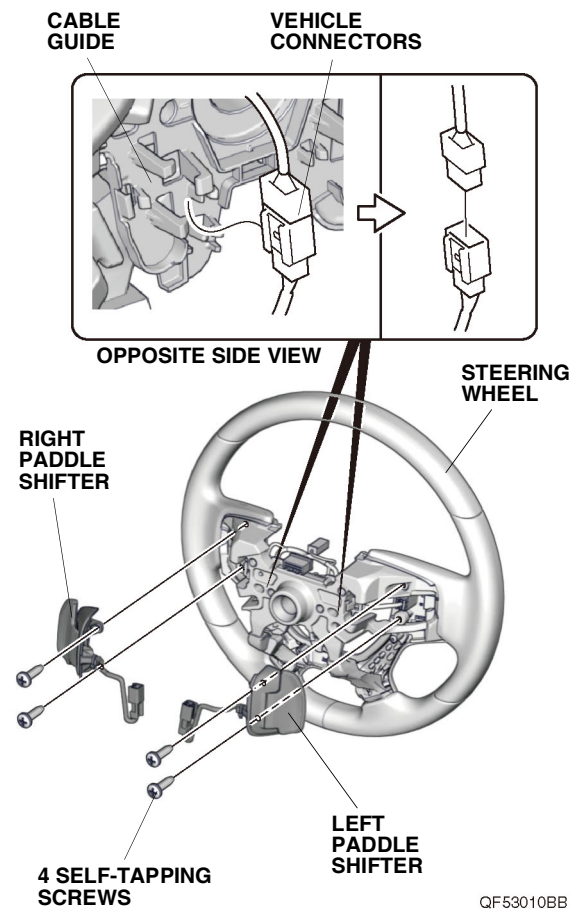


25. Remove the center spoke trim.

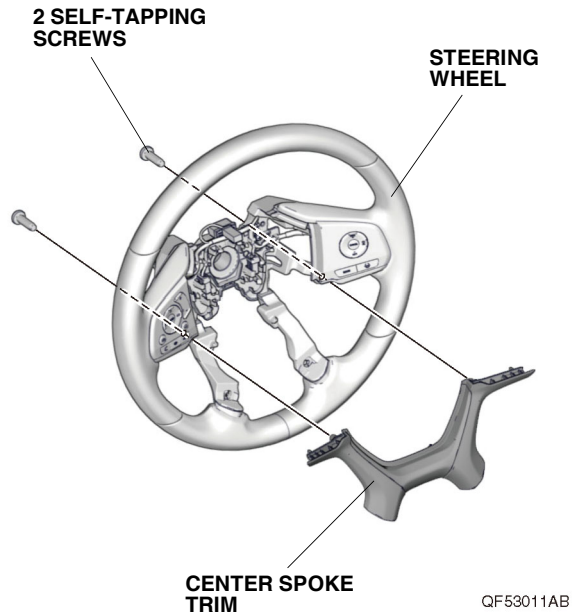


26. Remove the left and right vehicle switches, and unplug the vehicle connectors.

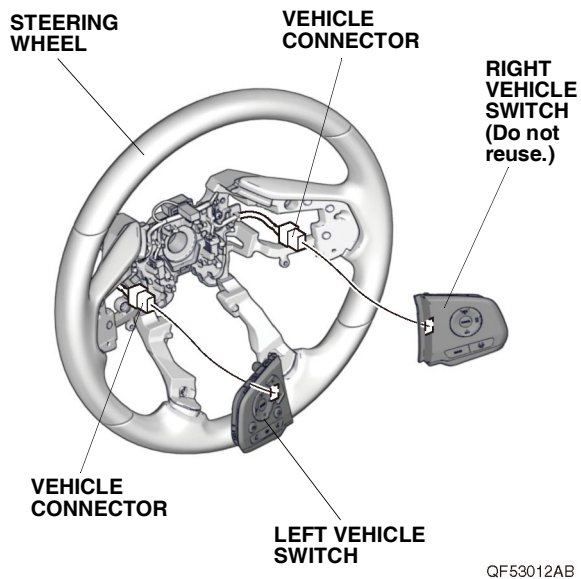


27. Remove the cable reel cord.

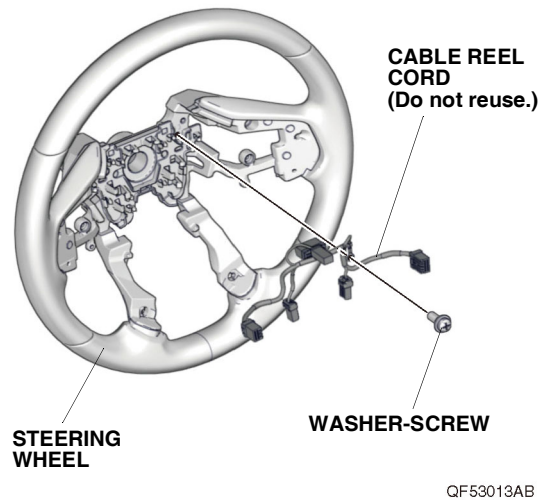


28. Remove the cable guide.

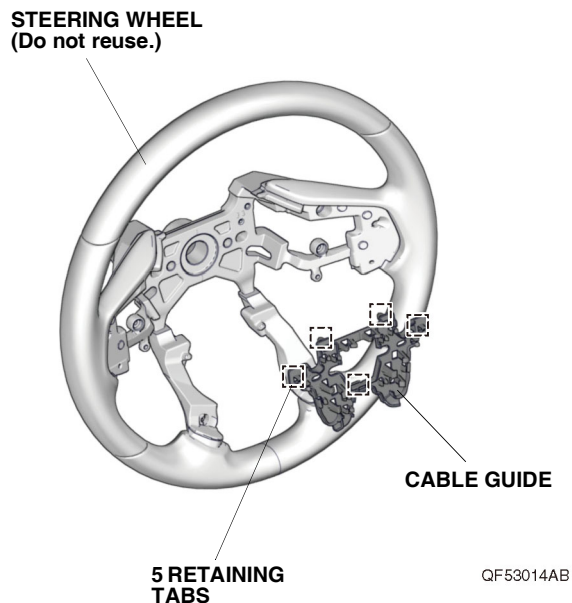


29. Install the cable guide on the new steering wheel with five retaining tabs.

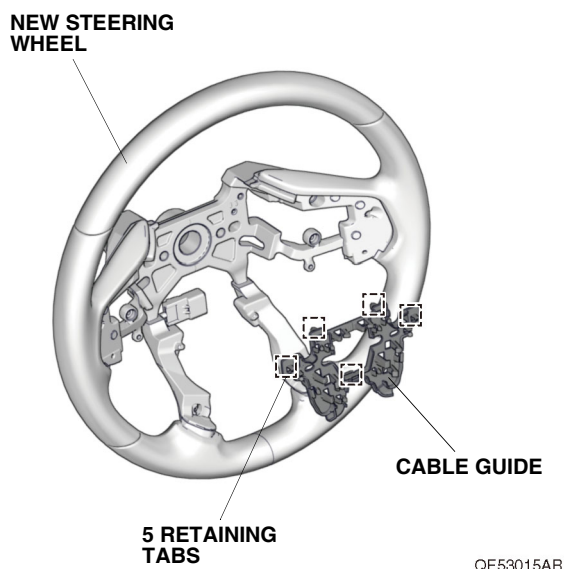


30. Install the new cable reel cord to the cable guide with the washer-screw removed in step 27. Plug the new cable reel cord 4-pin connector into the new steering wheel 4-pin connector, and secure the new cable reel cord to the cable guide.

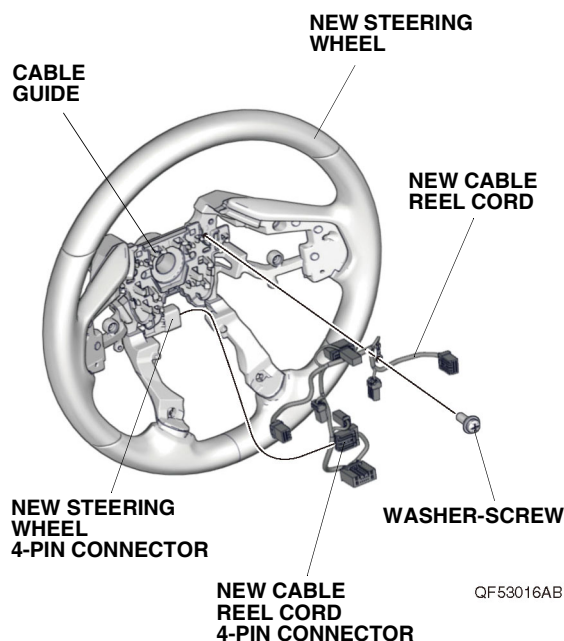


31. Plug the new cable reel cord 12-pin connector into the HSW switch, and install the HSW switch on the new steering wheel. Plug the new cable reel cord 10-pin connector into the left vehicle switch, and install the left vehicle switch on the new steering wheel.

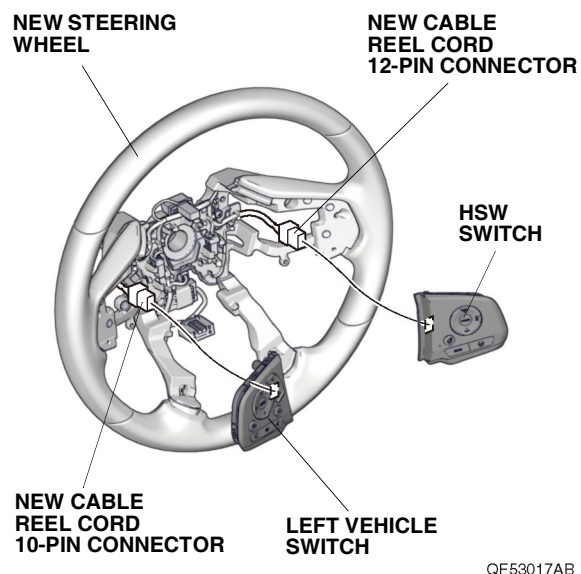


32. Install the control unit on the center spoke trim with two self-tapping screws.

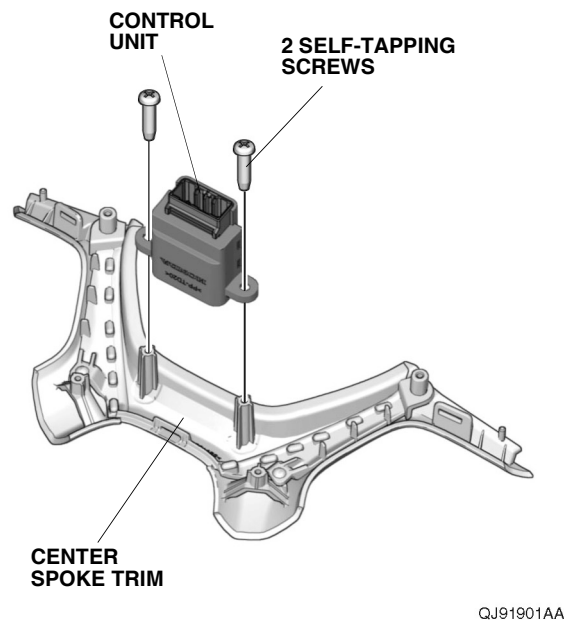


33. Plug the new cable reel cord 14-pin connector into the control unit, and install the center spoke trim to the new steering wheel with the two self-tapping screws removed in step 25.

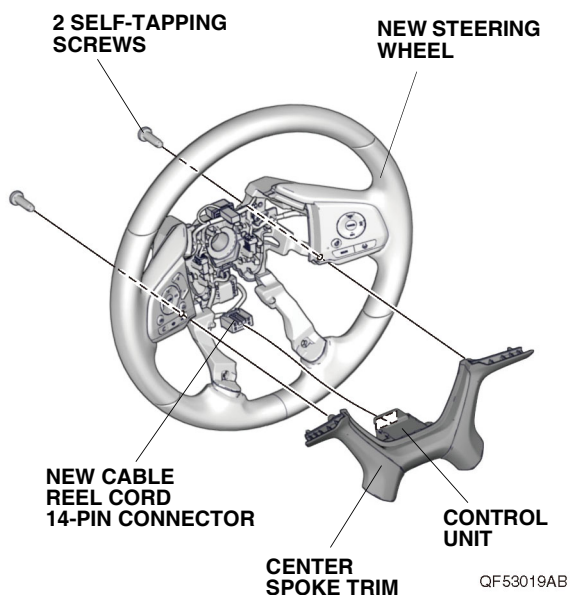


34. Install the left and right paddle shifters with the four self-tapping screws removed in step 24. Plug the two new cable reel cord 4-pin connectors into the two paddle shifter 4-pin connectors, and secure the two 4-pin connectors into the cable guide.

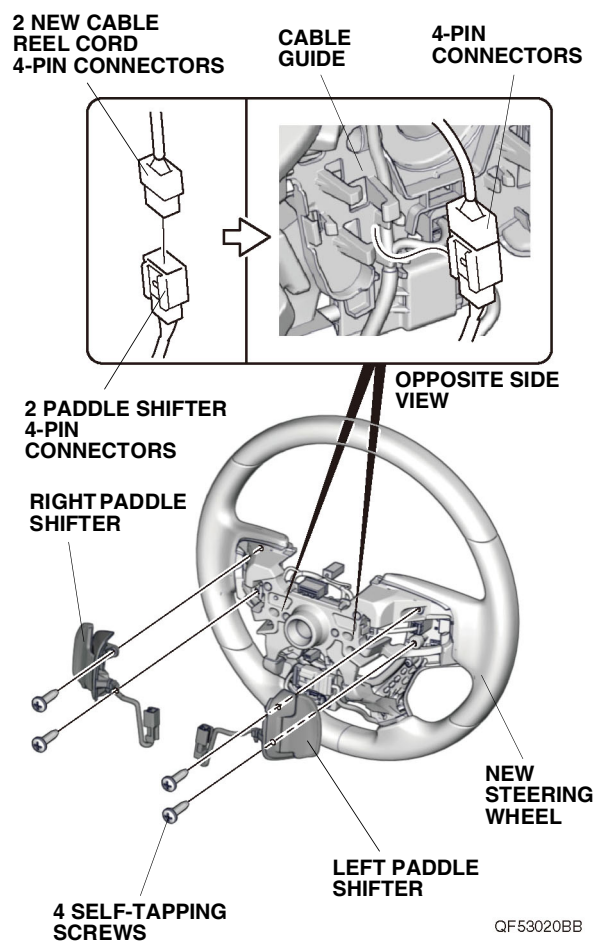

35. Install the steering wheel cover on the new steering wheel with the four self-tapping screws removed in step 23 and two retaining tabs.

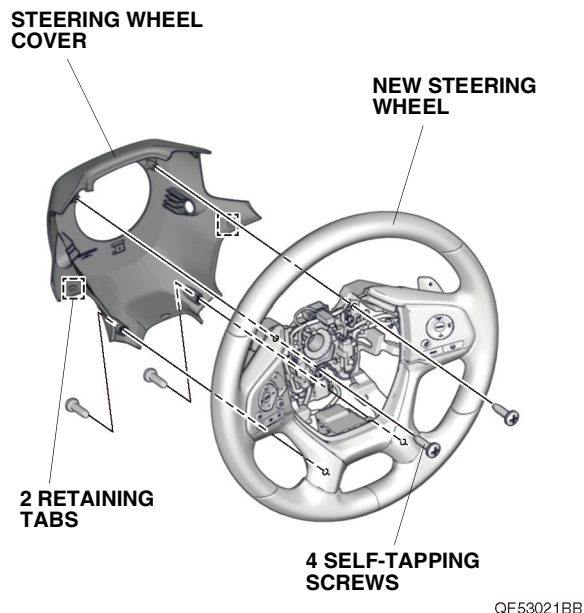


36. Install the lower column cover and upper column cover.

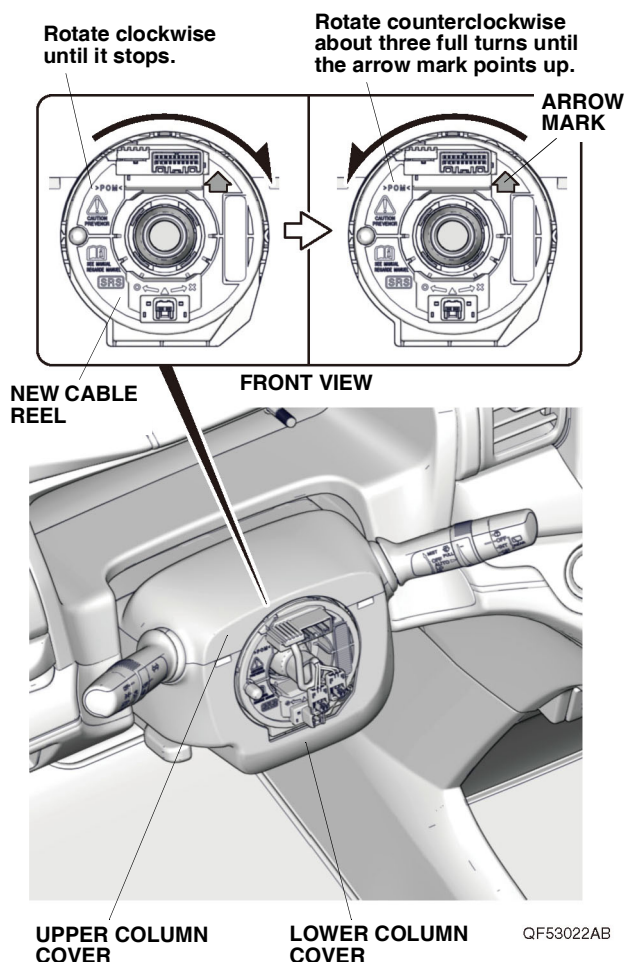


37. Before installing the new steering wheel, make sure the front wheels are still pointing straight-ahead. To confirm the cable reel is lined up properly, rotate the new cable reel clockwise until it stops, then rotate it counterclockwise about three full turns. The arrow mark on the new cable reel label must point straight up.

38. Install the new steering wheel on the steering column shaft in the straight-ahead position:
- Route the new cable reel 2-pin connectors cord through the opening in the new steering wheel. Route the new cable reel 2-pin connectors cord under the new cable reel cord, and secure it to the cable guide.
 - Plug the new cable reel cord 20-pin and 2-pin connectors into the new cable reel.
 - Check that the wire harnesses are not pinched.


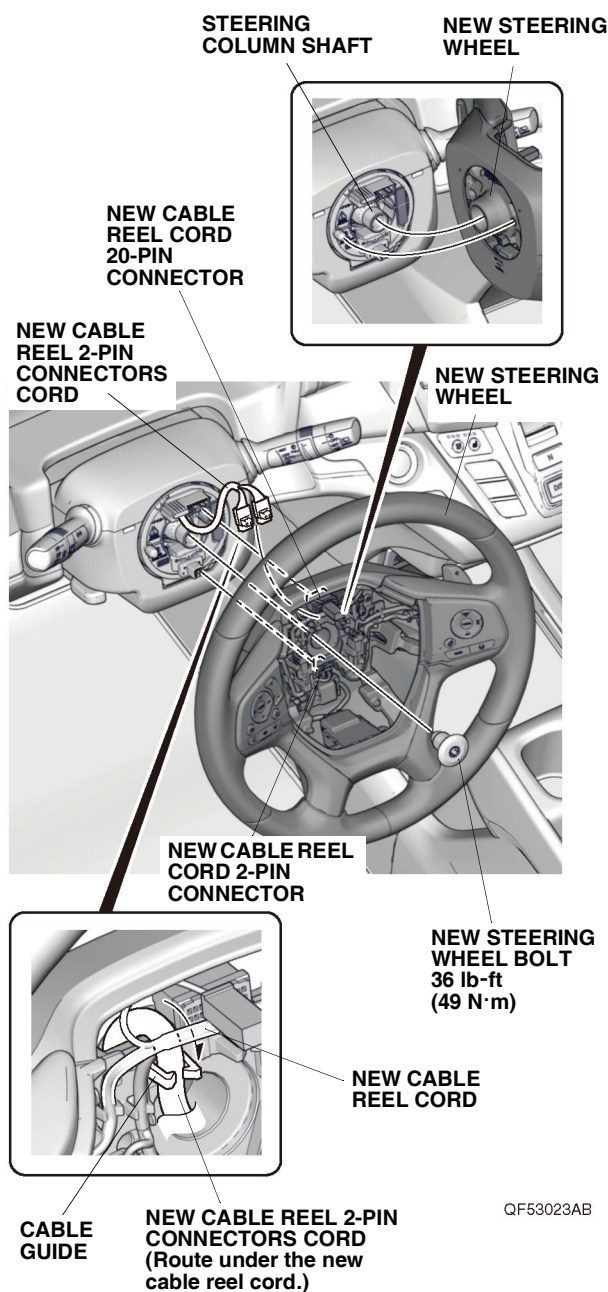


39. Install the new steering wheel bolt. Torque the new steering wheel bolt to 36 lb-ft (49 N·m). Tighten at the specified torque within 5 minutes.

40. Install the airbag to the new steering wheel with the supplied TORX bolts, and plug in the two new cable reel 2-pin connectors and one new cable reel cord 1-pin connector.
- Alternately tighten the right and left TORX bolts so that the gaps on the right and left sides between the airbag and the switches are even. Torque the new TORX bolts to 5.1-9 lb-ft (6.9-11.8 N·m).
 - New TORX bolts are coated with non-hardening thread lock sealant, so they cannot be reused. When installing the new steering wheel, be sure to replace the new TORX bolts with the ones included in this kit.

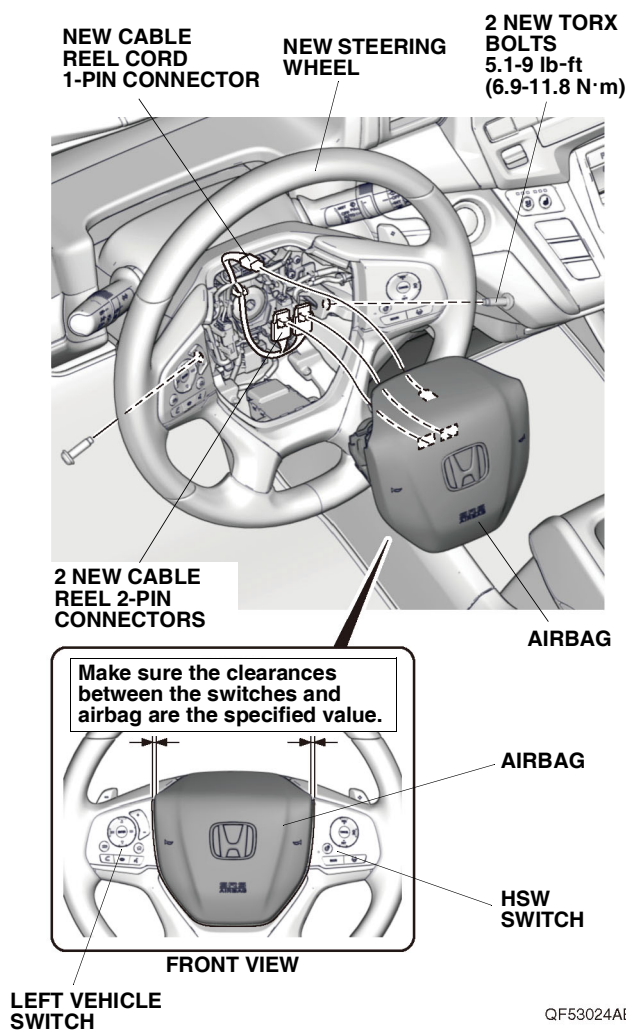

41. Locate the fuse box and plug the 10A fuse into the slot shown.
NOTE: If the 10A fuse is already installed, do not install the fuse.

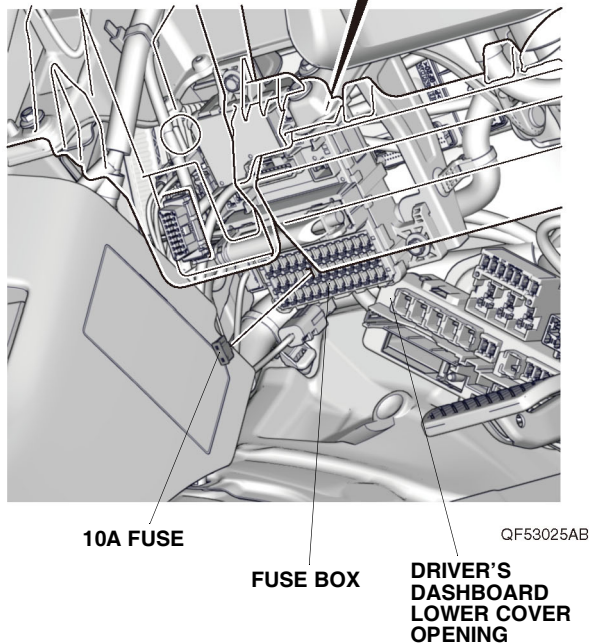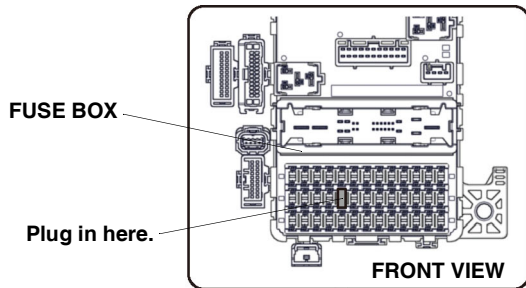

42. Check that all wire harnesses are routed properly and all connectors are plugged in.
43. Install all removed parts except for the front bulkhead cover and the intake air tube.
44. Connect the negative cable to the battery.
45. Install the front bulkhead cover and the intake air tube.
46. Connect the i-HDS, and clear the DTCs.
47. Inspect the following items. If any abnormality is found, perform troubleshooting as described in the service information.
- Press the ENGINE START/STOP BUTTON to the ON mode: the SRS indicator should come on for about 6 seconds and then go off.
 - Make sure the horn and steering wheel switches work properly.
48. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
49. Set the clock on vehicles without navigation.
50. If necessary, restore the systems back to normal operation as described in the service information.
51. Make sure the steering wheel is in the straight-ahead position with the front wheels. If the spoke angle of the new steering wheel is not in the straight-ahead position with the front wheels, adjust the front toe as described in the service information.
52. Do the VSA sensor neutral position memorization as described in the service information.

Check the Operation of the Heated Steering Wheel

53. Check that the heated steering wheel works as described in the Owner's Manual of the vehicle.