

Supplemental Information for Using 19" Honda Accessory Alloy Wheels

This information is intended for customers who purchased 19" genuine Honda Accessory Alloy Wheels to replace 17" standard wheels on their Accord.

Using wheels that are larger than the standard size requires different tire sizes, air pressures, snow tires, and tire chains than those indicated in the owner's manual.

Be sure to follow these guidelines, attach these pages in the vehicle Owner's Guide, and explain that the vehicle has larger tires to a new owner if you sell your vehicle.

This information is unique to using 19" Honda Accessory Alloy Wheels. Please follow all other instructions and warnings in your vehicle Owner's Manual.

Tire Size

Be sure to use only the following tire size:

245/35R19 93Y

Recommended Tire Pressures

Recommended cold air pressures are:

| <i>Tire Size</i> | <i>Cold Tire Pressure</i> | |
|------------------|--|--|
| | <i>Front</i> | <i>Rear</i> |
| 245/35R19 93Y | 38 psi (260 kPa, 2.6 kgf/cm ²) | 38 psi (260 kPa, 2.6 kgf/cm ²) |

For convenience, air pressure information is also given on a special label on the driver's door jamb.

Snow Tires

If you mount snow tires on 19" Honda Accessory Alloy Wheels, make sure they are radial tires of the same size and load range as the required size.

Tire Chains

Mount tire chains on your tires when required by driving conditions or local laws. Install them on the front tires.

Because your vehicle has limited tire clearance, we strongly recommend using this Security Chain Company tire chain:

SCC "SC-Cable" SC-1036

This tire chain is available at many auto supply stores. To find a local store that carries the chain, call SCC at 1-503-656-5400 or go online to www.scc-chain.com. When you install the chains, follow the manufacturer's instructions, and mount them as tightly as you can. Drive slowly with the chains installed.

If you ever hear the chains contacting the body or chassis, stop and investigate. If the chains have loosened, retighten them. Make sure they do not contact the brake lines or suspension.

Remove the chains as soon as you begin driving on cleared roads.

⚠ WARNING

- Using the wrong chains, or not properly installing chains, can damage the brake lines and cause a crash in which you can be seriously injured or killed.
- Follow all instructions in this owner's manual regarding the selection and use of tire chains.
- Traction devices that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body and wheels. Stop driving if they are hitting any part of the vehicle.

TPMS

(Tire Pressure Monitoring System)

The accessory wheels use a different air pressure setting from the original wheels. The low air pressure warning was adjusted for the accessory wheel pressure. If the original wheels are installed, the tire pressure monitoring system must be adjusted by the Dealer.

The tire pressure monitoring system can only be adjusted using special equipment. Please contact your Dealer when changing wheels.

Wheel Cleaning

Clean the wheels as you would clean any painted surfaces of the vehicle. Use only products made for car washing to clean the wheels. Do not use chrome cleaners or harsh chemicals that can damage the surface finish.

Service History Page for Honda Accessory Alloy Wheels

The vehicle TPMS settings must be adjusted each time the wheel size is changed. Adjusting TPMS requires special equipment and can only be performed by your authorized Honda dealer. Attach in this page in the vehicle's Owner's Guide with Supplemental Information.

The TPMS is set as follows:

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | Date | |

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | Date | |

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | Date | |

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | Date | |

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | Date | |

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | | Date |

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | | Date |

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | | Date |

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | | Date |

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | | Date |

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | | Date |

| | | | |
|-----------|---------------------|------------|-------------|
| _____ | FR : _____ | RR : _____ | _____ |
| Tire size | Tire Pressure (psi) | | HDS version |

| | | | |
|-------------|----------------------|-------|-------|
| _____ | _____ | _____ | _____ |
| Dealer name | Technician Signature | | Date |

Important Information to Dealer:

- Install one tire pressure label to the door jamb according to the installation instructions.
- You will need to adjust the vehicle's TPMS settings for the 19" wheels. See installation instructions for details.
- Attach the supplemental Owner's guide page furnished with the kit to the last page marked "Tire Information" in the "Maintenance" section in the vehicle Owner's Guide.

Attach this supplemental page to the last page marked "Tire Information" in the "Maintenance" section in the vehicle Owner's Guide.

