



HONDA INSTALLATION INSTRUCTIONS

Accessory

FOG LIGHTS
P/N 08V31-T3L-100B

Application

2014 ACCORD LX-S
2-DOOR

Publications No.


All 50720

Issue Date


AUG 2013

PARTS LIST


Left fog light

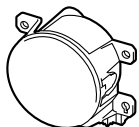


Right fog light

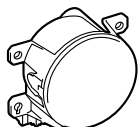

Left fog light cover

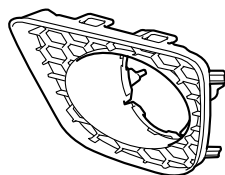

Right fog light cover

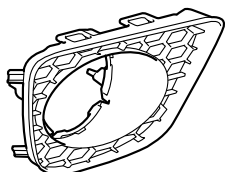

Left trim




Right trim




4 Self-tapping screws, 5 x 14 mm




Fog light harness

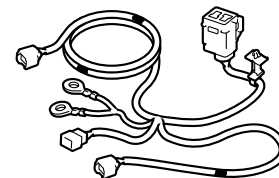


Relay bracket

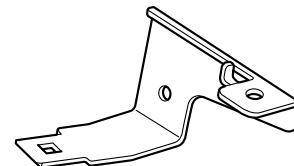

Light switch

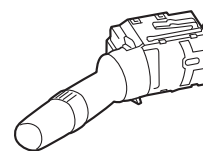

Relay

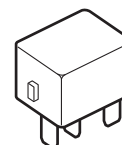


15A fuse




2 Self-tapping screws, 5 x 20 mm




4 Wire ties

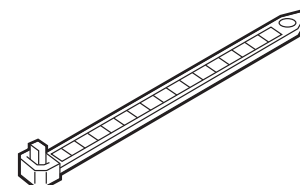


4 Aluminum tapes

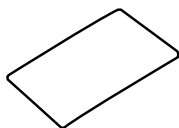

Washer-bolt

 

Cover

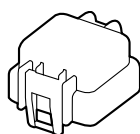

2 Spring nuts




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
 Flat-tip screwdriver
 Ratchet
 10 mm Socket
 10 mm Open end wrench
 Diagonal cutters
 Isopropyl alcohol
 Shop towel
 Scissors
 Masking tape
 Blanket

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)


Illustration of the Fog Lights on the Vehicle

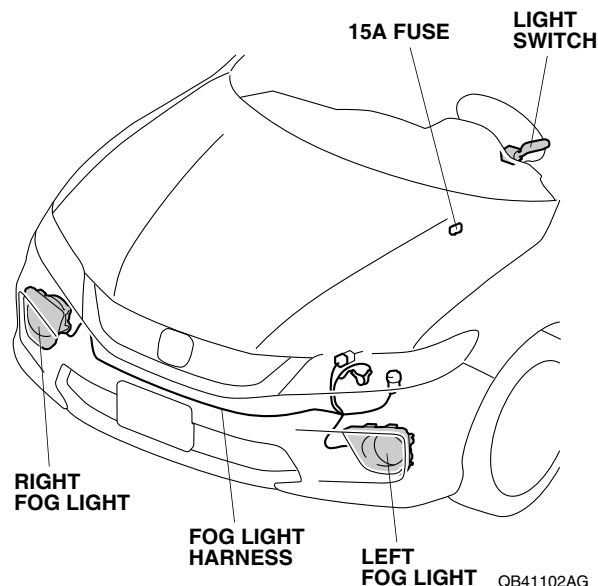


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery.
2. Turn the steering wheel 90° clockwise. Using a plastic trim tool, release the retaining tab.

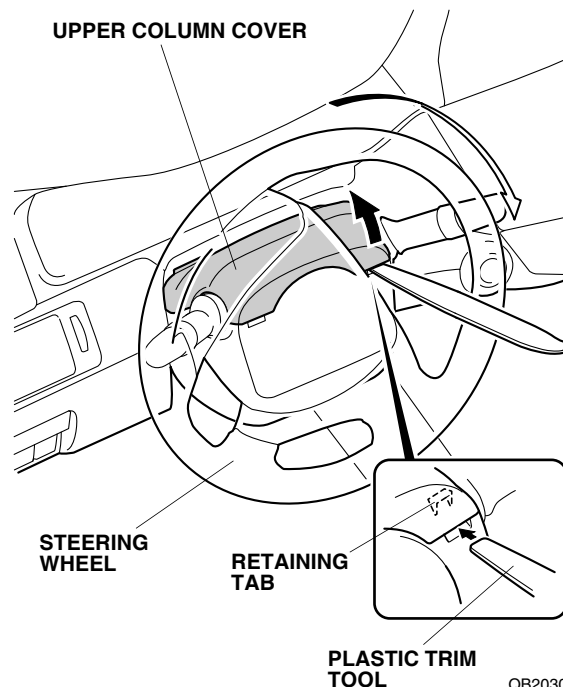


3. Turn the steering wheel 180° counterclockwise. Using a plastic trim tool, release the retaining tab.

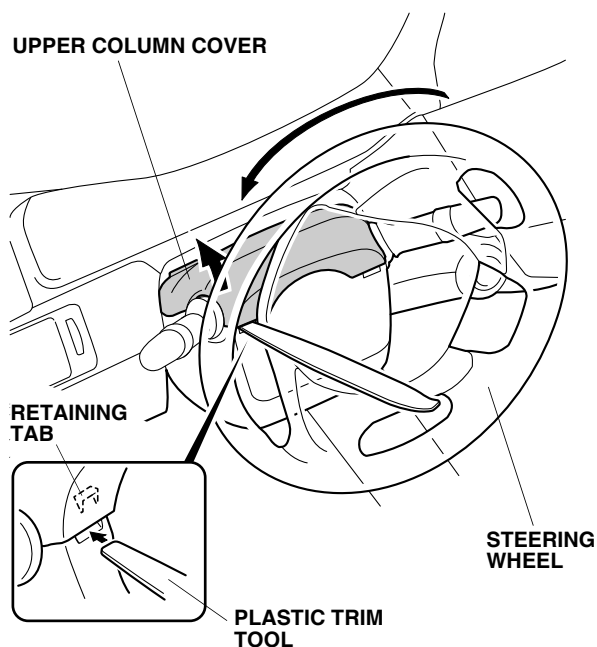


QB20303AG

4. Lower the tilt lever, and release the upper column cover (two retaining tabs and two hooks).

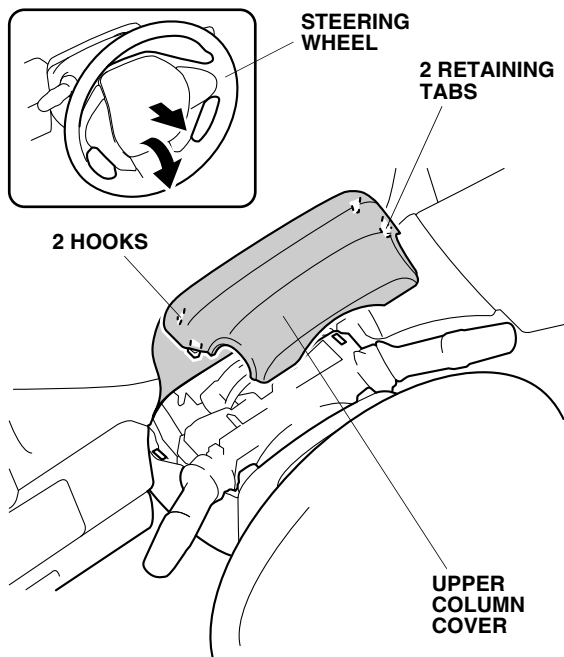


QB51801AG

5. Remove one self-tapping screw from the lower column cover.

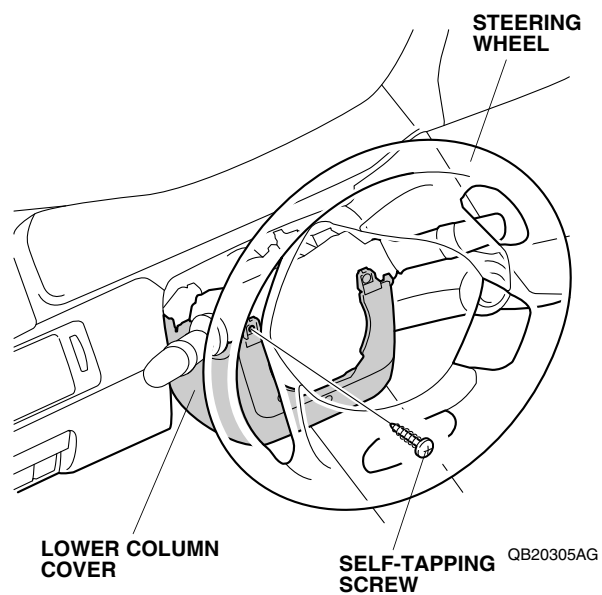


QB20305AG

6. Turn the steering wheel 180° clockwise, and remove the other one self-tapping screw from the lower column cover.

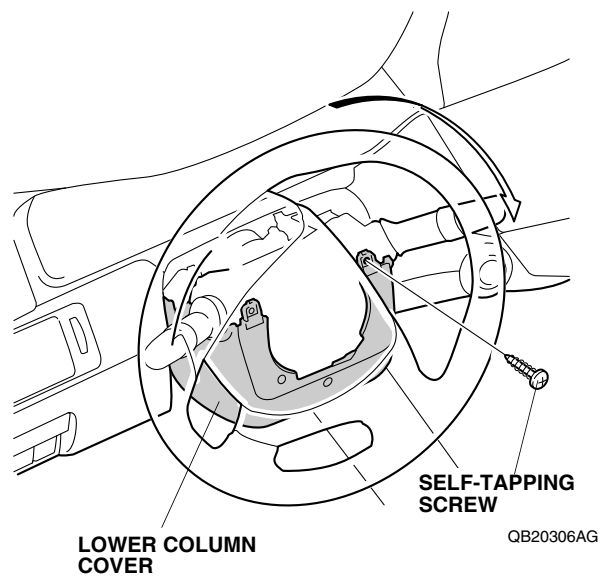


QB20306AG

7. Remove the lower column cover (one self-tapping screw).

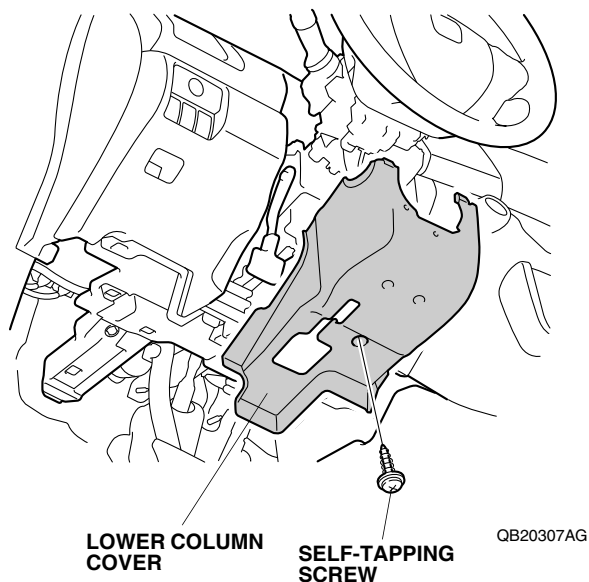


8. Unplug the vehicle connector from the light switch.

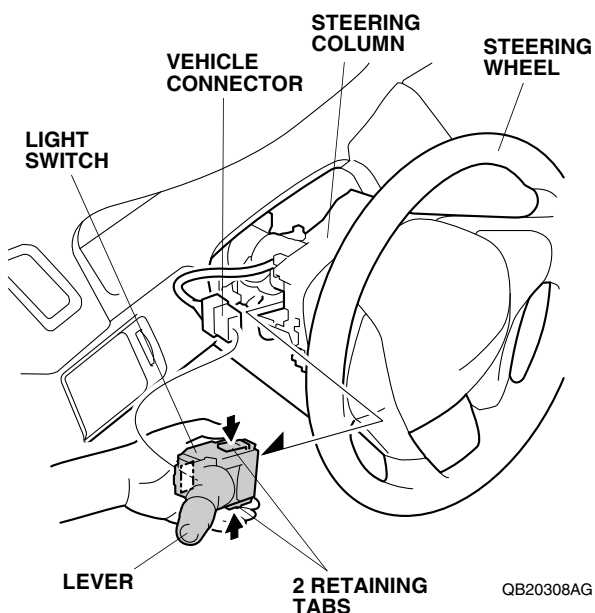


9. Push in on the two retaining tabs, slide the light switch out, and remove it from the steering column. Do not pull on the lever.


10. Install the new light switch to the steering column. Make sure both retaining tabs are locked in place. Do not push on the lever.

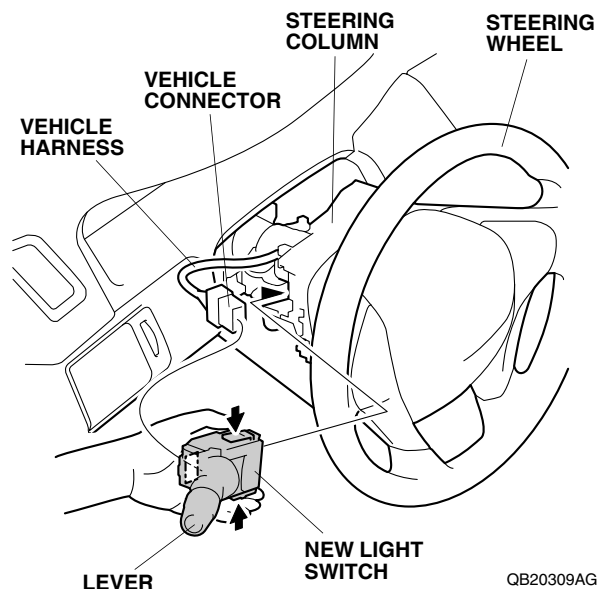

11. Plug the vehicle connector into the new light switch. Make sure the vehicle harness is not being stretched.
12. Attach masking tape to the front bumper, headlights and front fenders as shown.

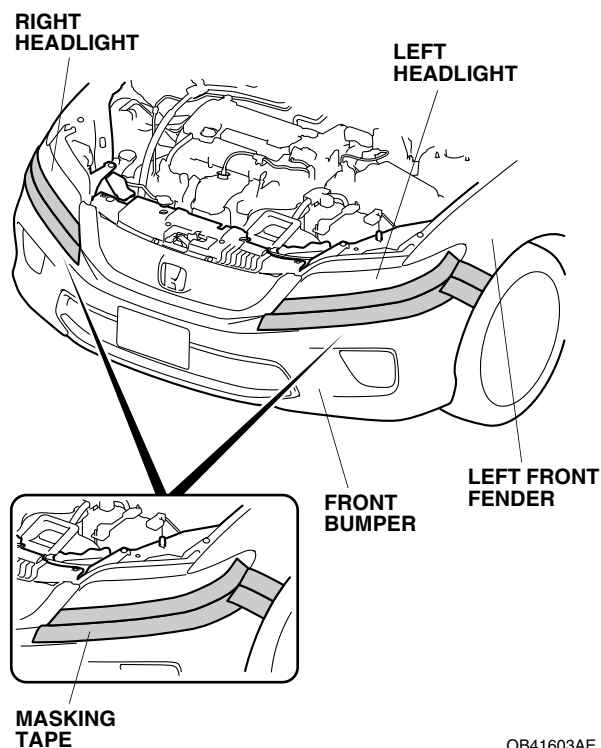


13. Remove the front grille cover (four clips).

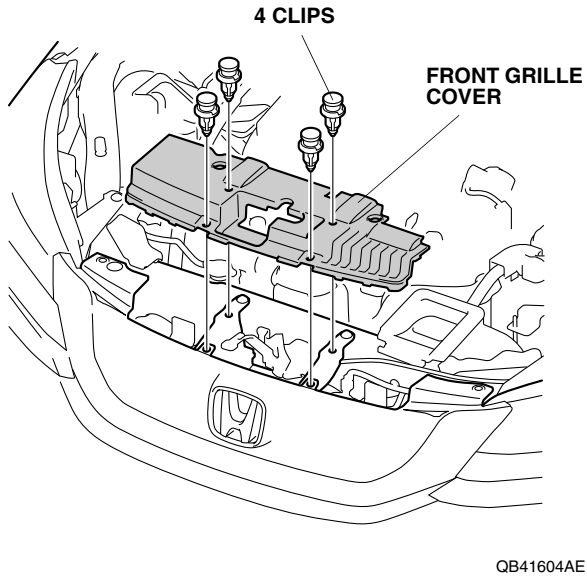


14. Remove the front bumper.


- Remove the two self-tapping screws and ten clips.

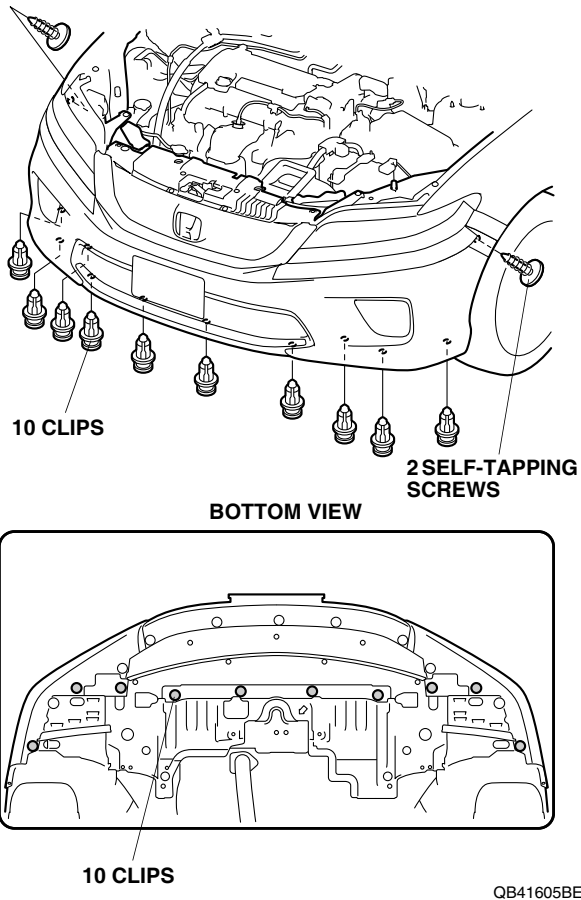


- Release the four retaining tabs on each side.

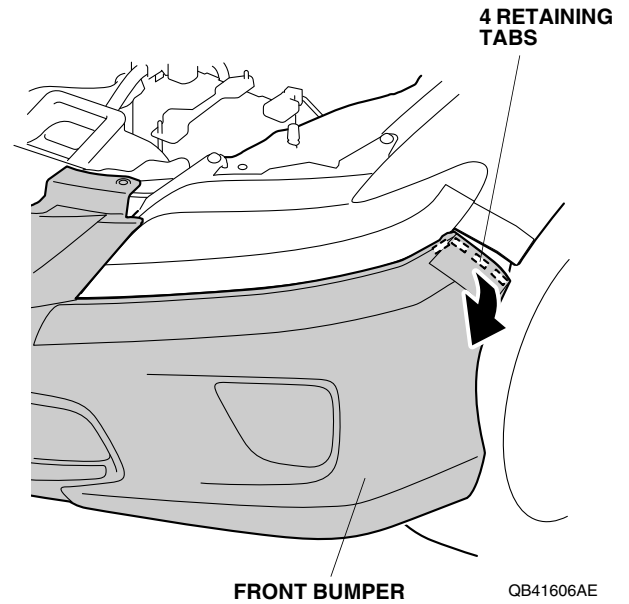


- Release the four retaining tabs on each side.

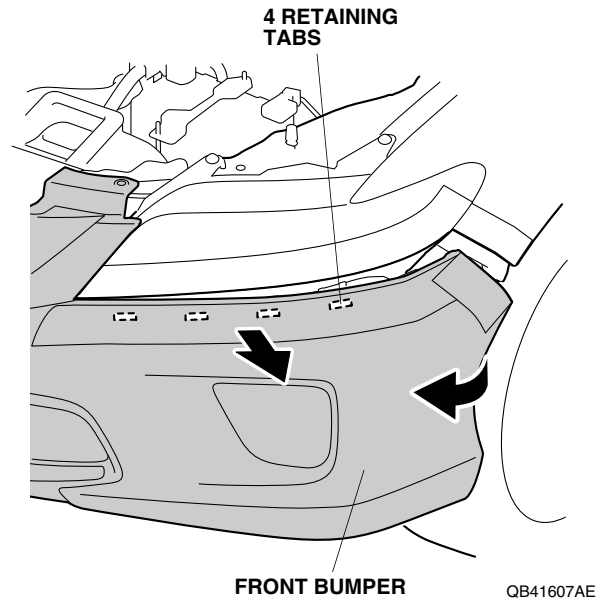


- Remove the two clips. With the help of an assistant, remove the front bumper.

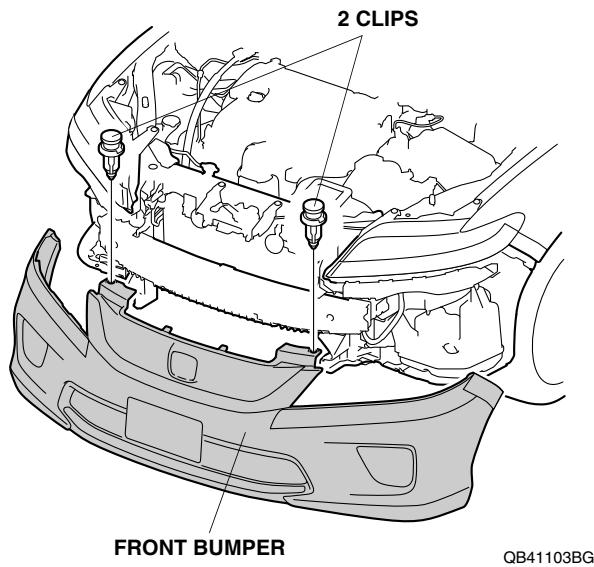


- Place the front bumper on a blanket.
15. Remove the left cover from the front bumper (four retaining tabs and two hooks).

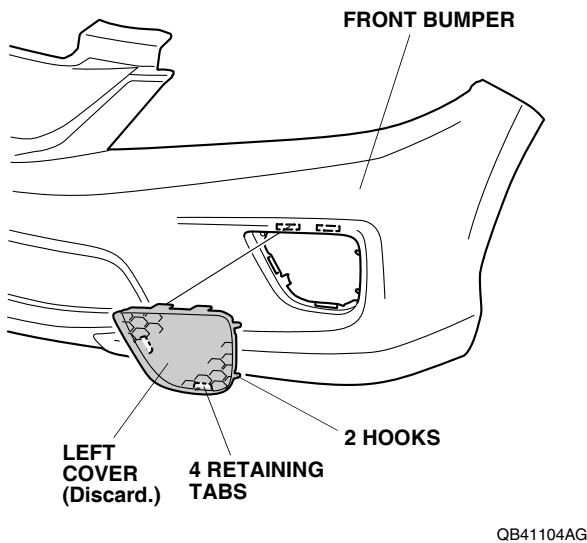


16. Install the left trim to the left fog light cover with four retaining tabs.

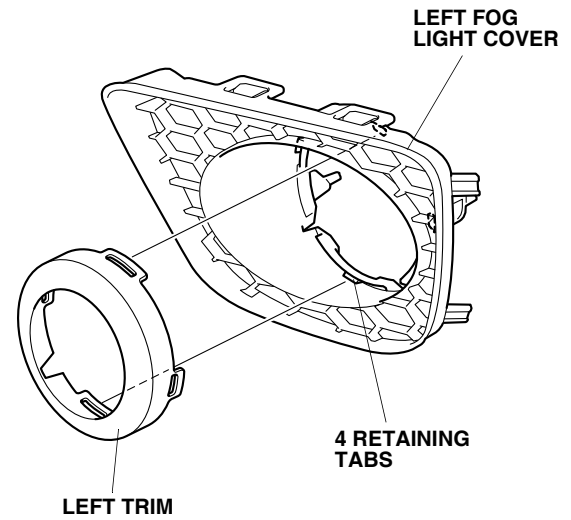


17. Install the left fog light to the left fog light cover using the two 5 x 14 mm self-tapping screws.

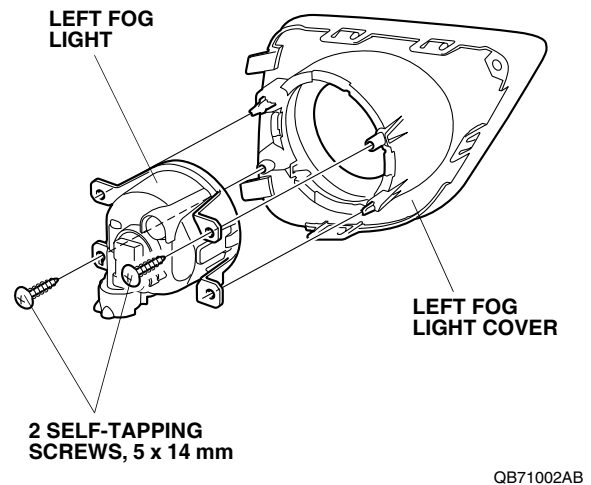

18. Install a spring nut to the front bumper.

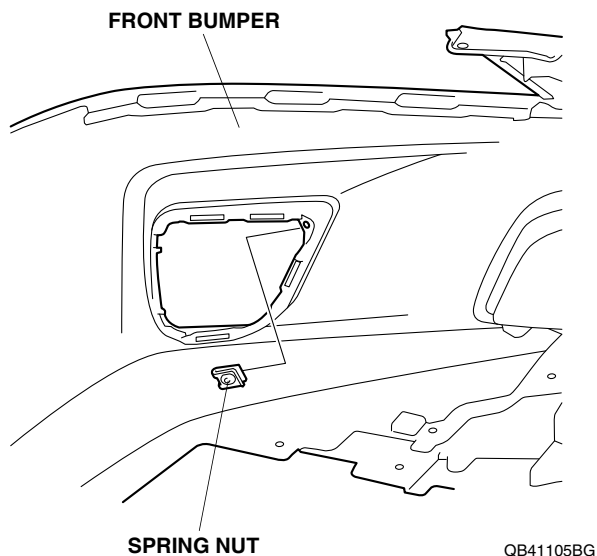


19. Install the left fog light to the front bumper with two hooks, four retaining tabs and one 5 x 20 mm self-tapping screw.

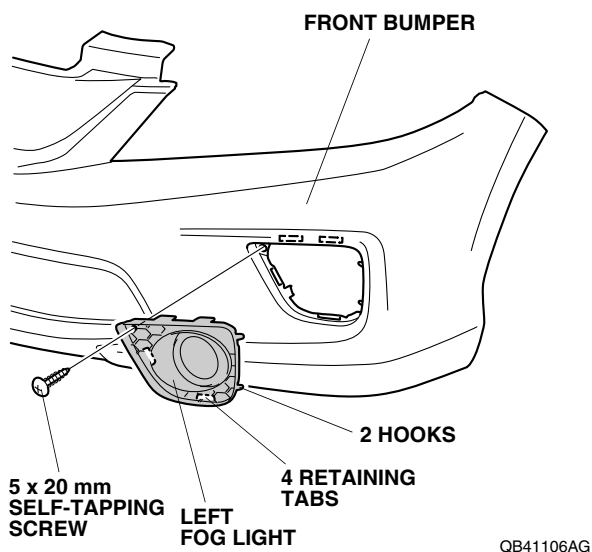


20. Repeat steps 15 through 19 to install the right fog light.

21. Plug the relay into the relay block on the fog light harness.

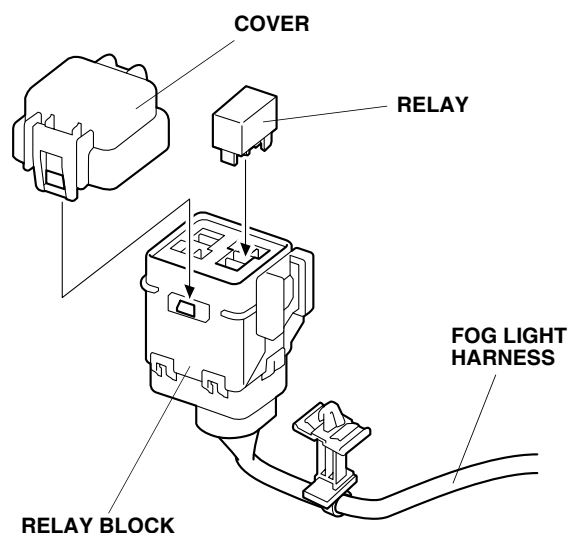


22. Install the cover onto the relay block.
23. Install the relay bracket to the relay block on the fog light harness. Make sure the relay bracket is installed in the correct position.

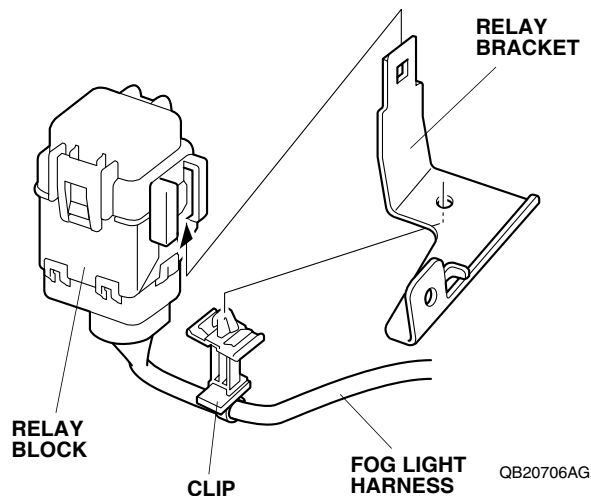


24. Secure the clip from the fog light harness to the relay bracket.

25. Install the relay bracket to the vehicle panel using the washer-bolt supplied.

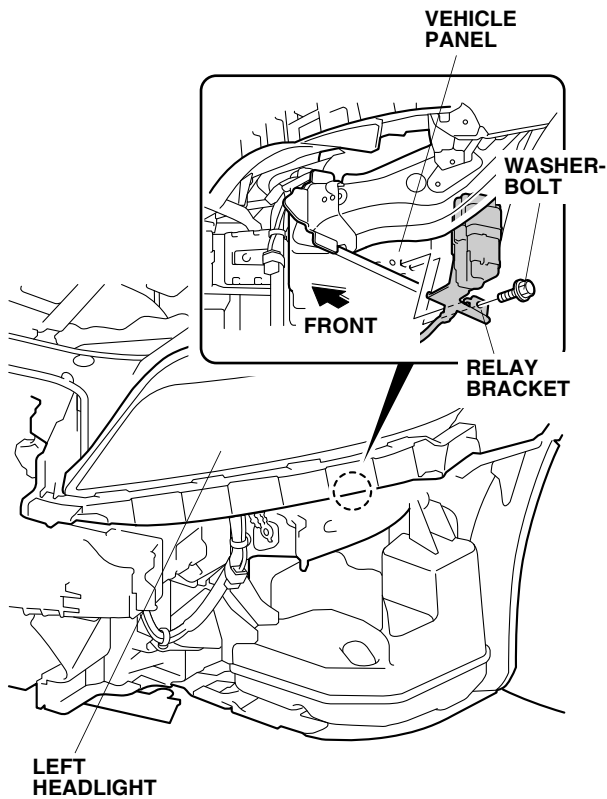

QB71003AB


26. Route the fog light harness as shown. Remove the vehicle ground bolt, and secure the fog light harness ground terminals A and B to the vehicle ground terminal. Reinstall the vehicle ground bolt.

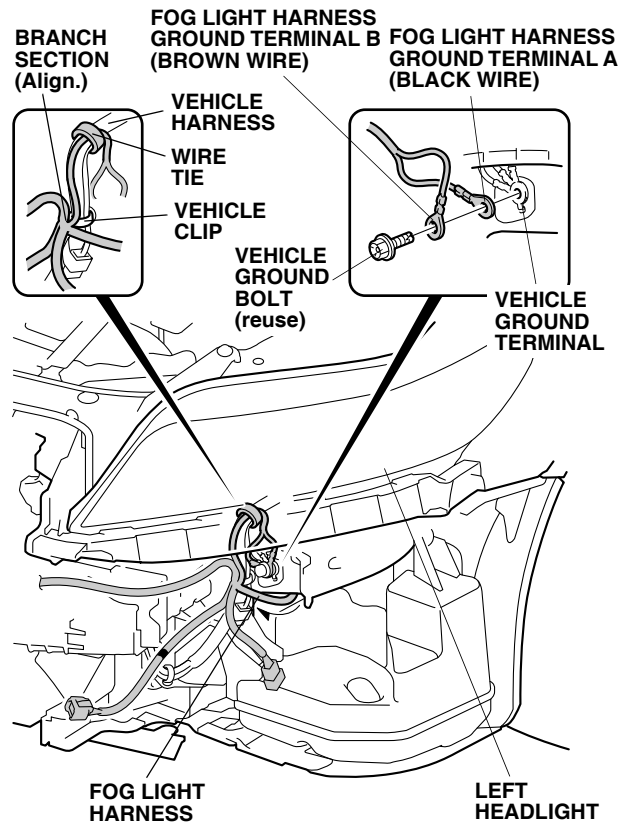


QB71004AB

27. Secure the fog light harness to the vehicle harness with one wire tie at the location shown.


28. Locate the vehicle 2-pin connector taped to the vehicle harness. Remove the tape to free the vehicle 2-pin connector.

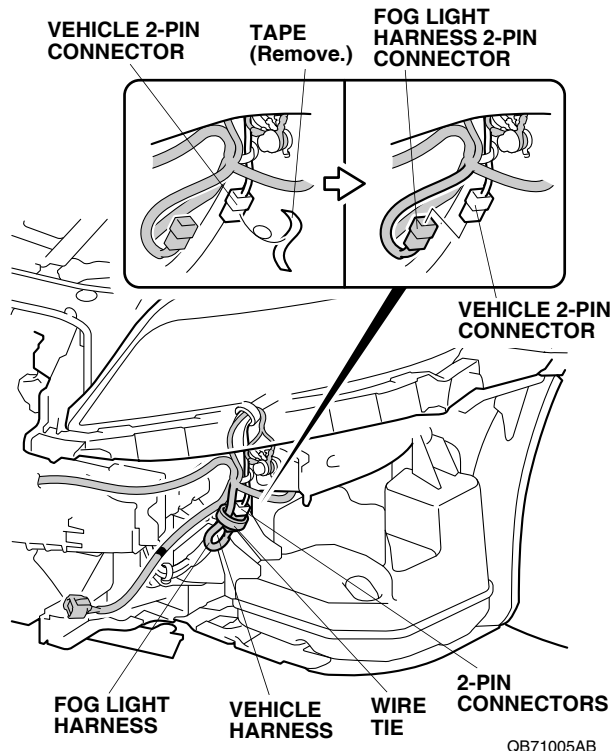


29. Plug the vehicle 2-pin connector into the fog light harness 2-pin connector, and secure the 2-pin connectors and the fog light harness to the vehicle harness with one wire tie.
30. Align the green tape on the fog light harness with the vehicle clip, and secure the fog light harness to the vehicle harness with one wire tie.

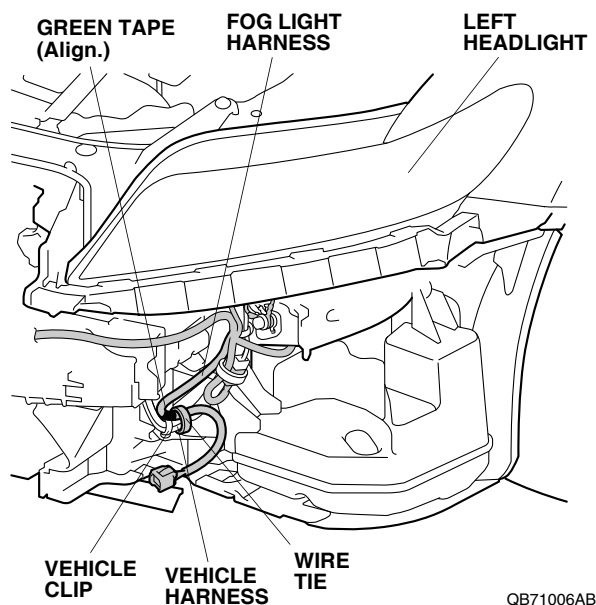


31. Route the fog light harness along the bumper beam.

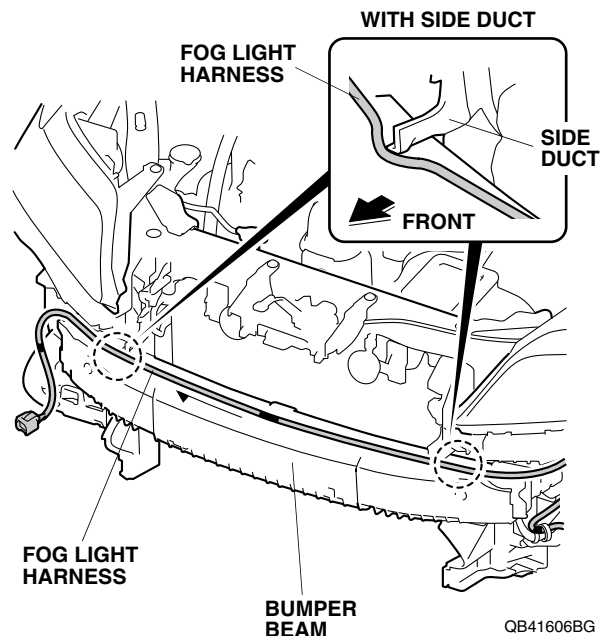

32. Align the green tape on the fog light harness with the vehicle clip, and secure the fog light harness to the vehicle harness with one wire tie.

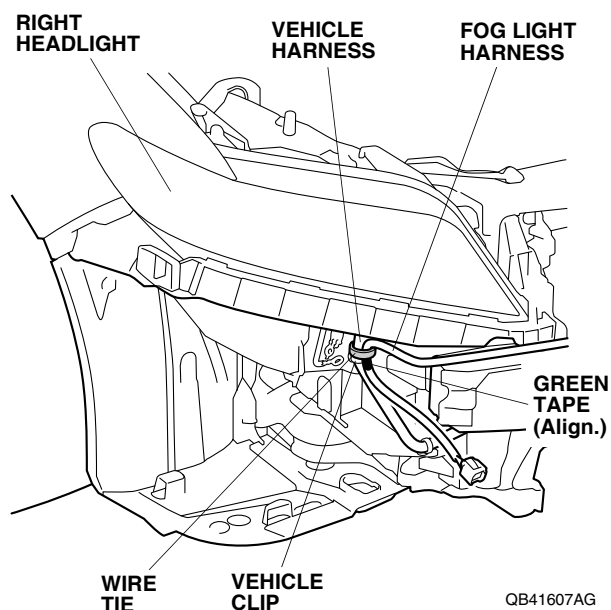


33. Using isopropyl alcohol on a shop towel, thoroughly clean the bumper beam where the aluminum tapes will attach.

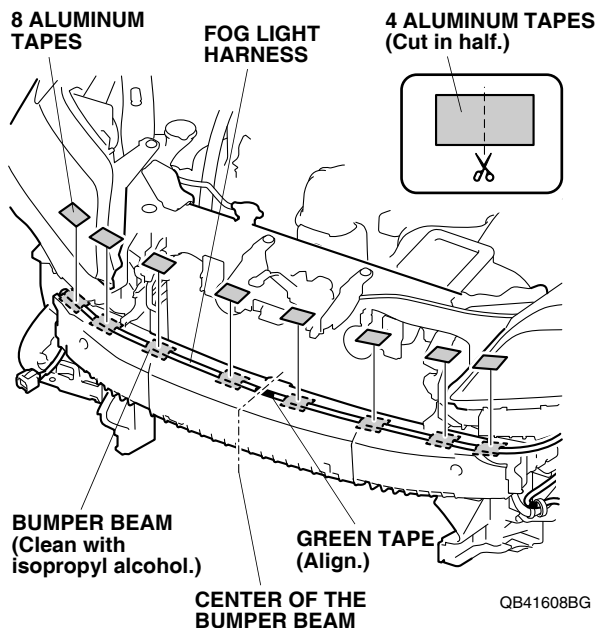


34. Using scissors, cut four aluminum tapes in half.
 35. Align the green tape on the fog light harness with the center of the bumper beam, and secure the fog light harness to the bumper beam with eight pieces of aluminum tape.


36. With the help of an assistant, bring the front bumper close to the vehicle. Plug the two fog light harness 2-pin connectors into the left fog light and right fog light, and reinstall the front bumper.

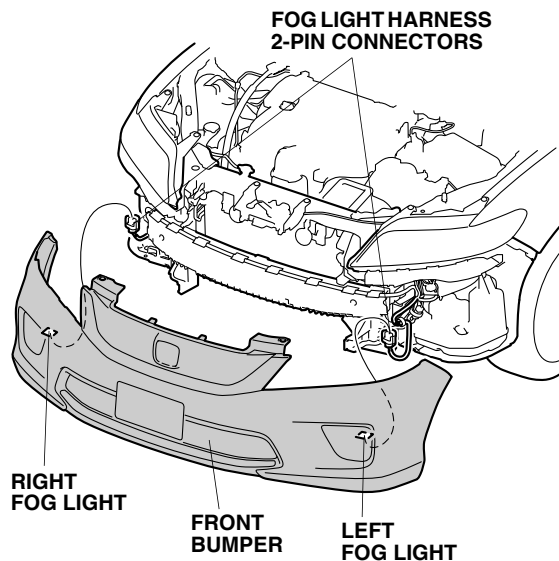

37. Under the hood, remove the underhood fuse relay box cover (three retaining tabs).

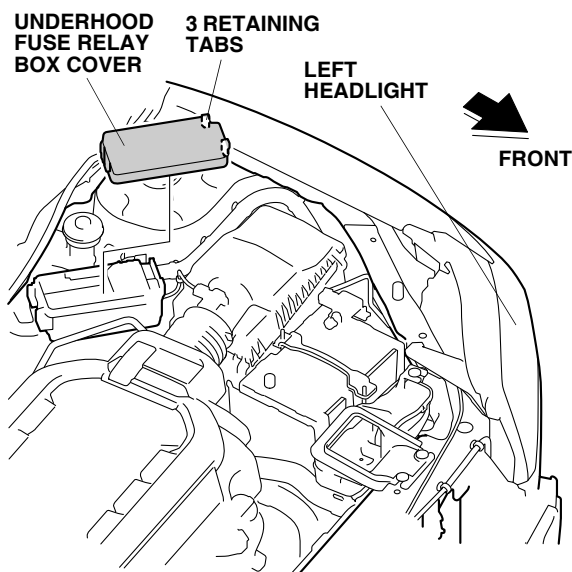

38. Plug the 15A fuse into the underhood fuse relay box.

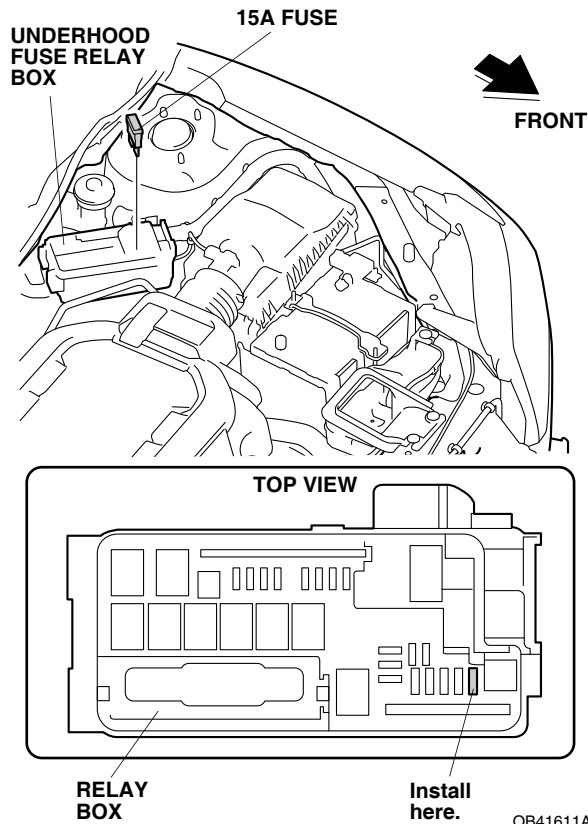

39. Check that all wire harnesses are routed properly and all connectors are plugged in.
40. Reinstall all removed parts.
41. Reconnect the negative cable to the battery.
42. Press and hold the radio power button for two seconds to restore the radio and navi (if equipped) system functions.
43. Reset the clock on vehicle without navigation.

USE AND CARE

How to Operate the Fog Lights

- Turn the headlight switch to the AUTO or “D” position (headlights on low beam).
- Turn on the fog light switch (indicator is on).
- If the fog lights do not turn on, check the fuse and all the connectors, including the ground cable.


		HEADLIGHT SWITCH			
	FOG LIGHT SWITCH	OFF		AUTO/D	
				Low	High
	FOG LIGHT SWITCH	OFF	-	-	-
		ON	-	ON	-

922602AG


NOTE: The fog light lenses may cloud when the outside temperature is cold; this is normal and should go away in warm weather.

How to Aim the Fog Lights

- To adjust, turn the aim adjustment screw in or out until the correct aim is obtained.
- Adjust the aim according to local laws and regulations.

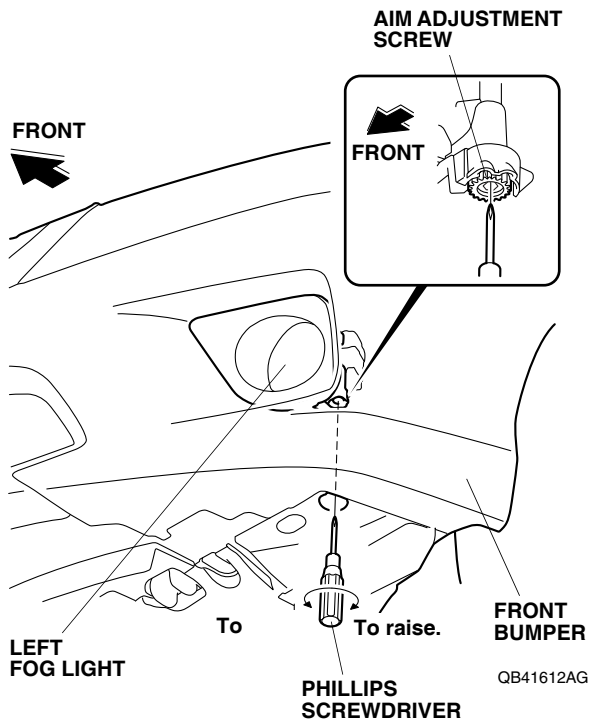


2. Remove the bulb from the fog light as shown.

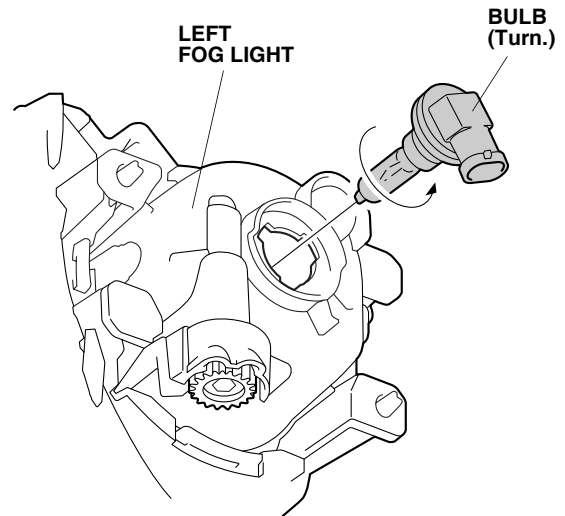

BULB REPLACEMENT



1. Remove the fog light (one self-tapping screw, four retaining tabs, two hooks and unplug the connector).

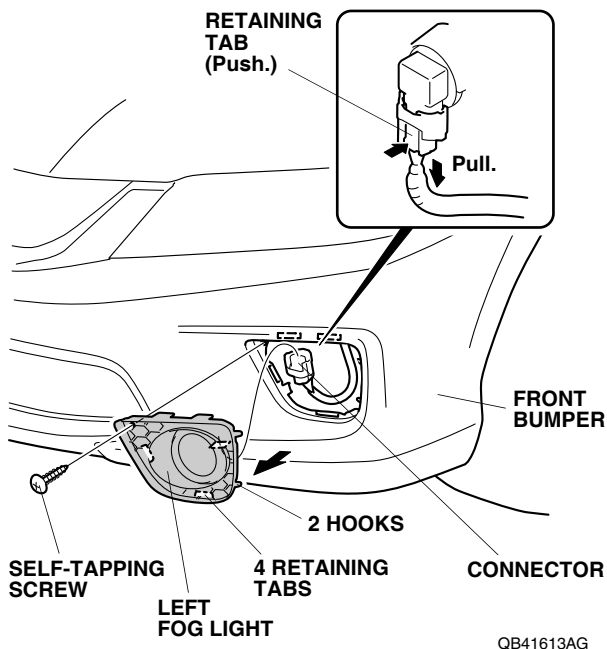

3. Install the new bulb to the fog light.
 - Use only a Genuine Honda halogen light bulb of specified wattage.


Rating: 12V 35W H8 Halogen Light Bulb
P/N 33165-TL0-003

- Do not touch the bulb. Oily or greasy substances on the bulb can shorten its service life due to the heat produced when the bulb is turned on. If the bulb is accidentally touched, wipe it clean with a soft cloth that has been dampened with denatured alcohol or a mild detergent solution.
- When installing the new bulb, align the cutout on the fog light with the tab on the new bulb and turn the new bulb clockwise until it locks. If the bulb is not properly align the fog light may annoy oncoming drivers.

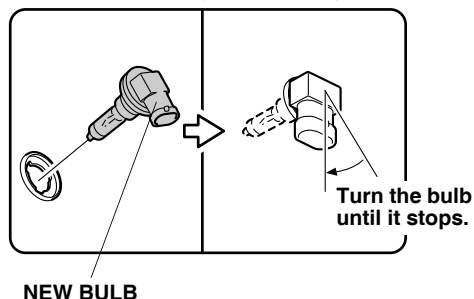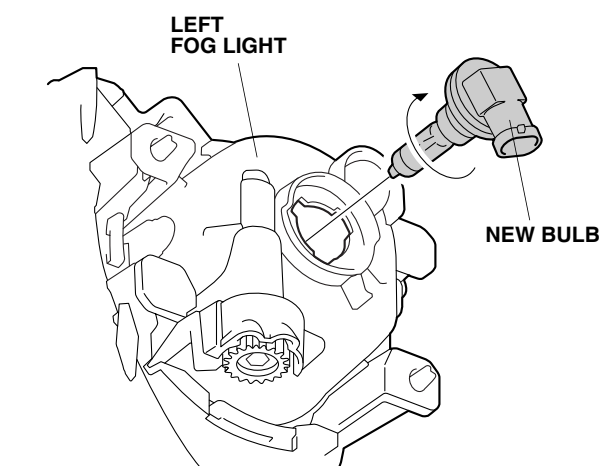

QB41615AG

4. Reinstall the fog light assembly.
 - Check that the wire harness is not pinched.
 - Be sure to tighten the self-tapping screws securely.
 - Reinstall the trim.

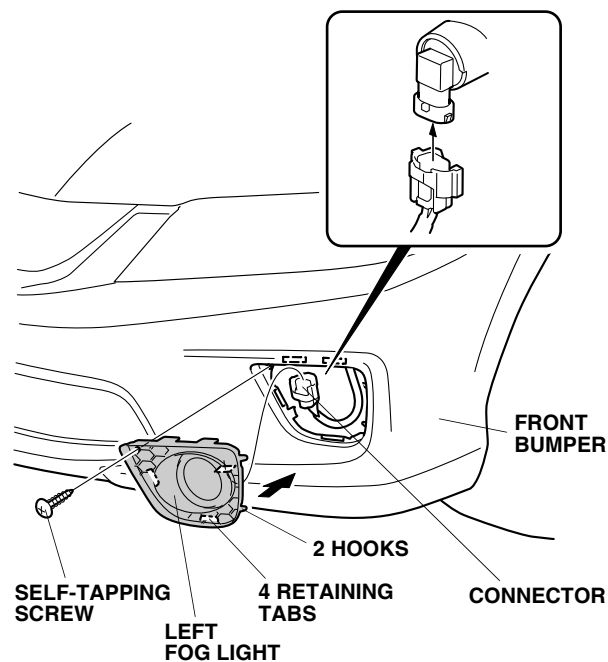

QB41616AG

5. Check the operation of the fog light; re-adjust the aim if necessary.