



INSTALLATION INSTRUCTIONS

Accessory
FOG LIGHTS

 
Application
2016 ACCORD
2-DOOR

Publications No.
VERSION 1
Issue Date
AUG 2015

PARTS LIST

Fog Light Attachment Kit
P/N 08V31-T3L-100C


Left fog light




Right fog light




Fog light harness

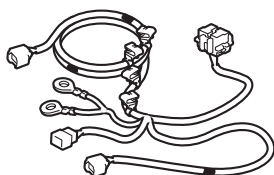

Light switch

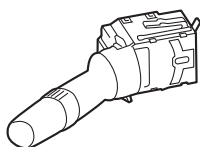


Relay

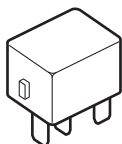

10 A Fuse




4 Wire ties

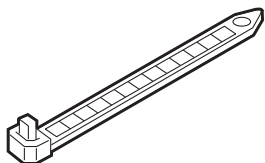


Narrow wire tie
(May not be used)

4 Aluminum tapes

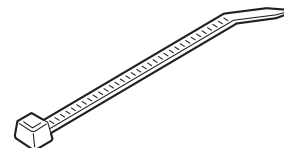


Urethane tape

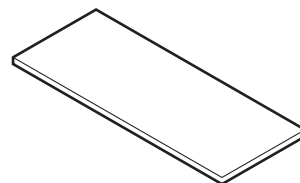


Relay Box Kit
P/N 08V31-T2A-1E0


Case

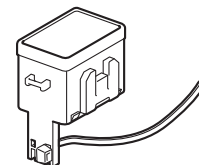


Lower cover

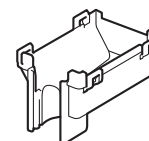

Upper cover

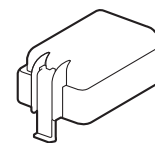

Relay bracket

 

Flange bolt




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Ratchet
10 mm Socket
10 mm Open end wrench
Diagonal cutters
Isopropyl alcohol
Shop towel
Masking tape
Blanket
Universal joint

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)


Illustration of the Fog Lights on the Vehicle

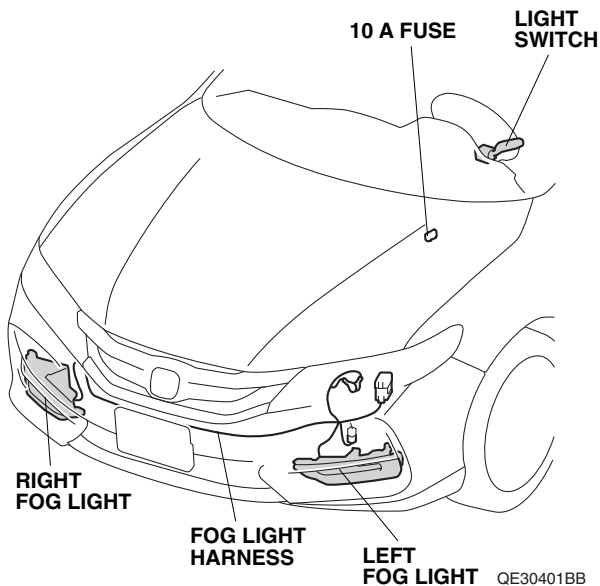

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery.
2. Turn the steering wheel 90° clockwise. Using a plastic trim tool, release the retaining tab.

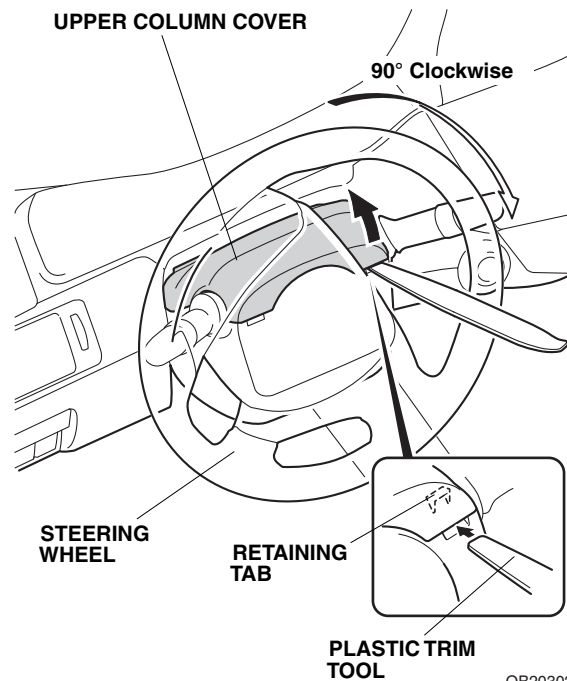


QB20302AG

- Turn the steering wheel 180° counterclockwise. Using a plastic trim tool, release the retaining tab.

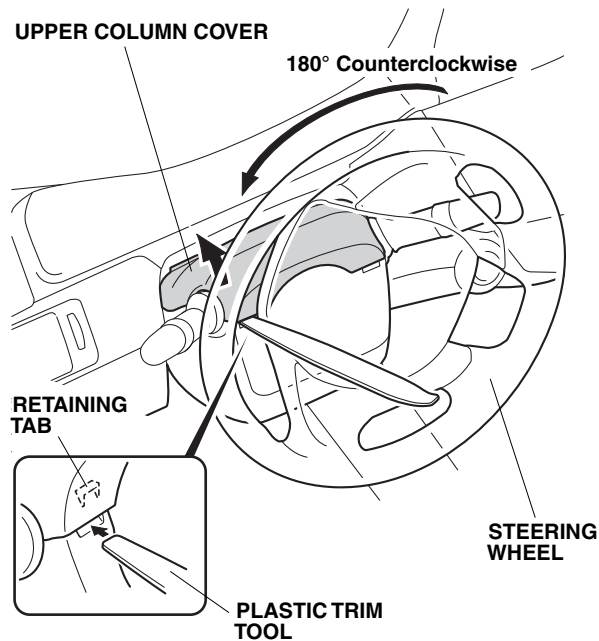


QB20303AG

- Lower the tilt lever, and release the upper column cover.

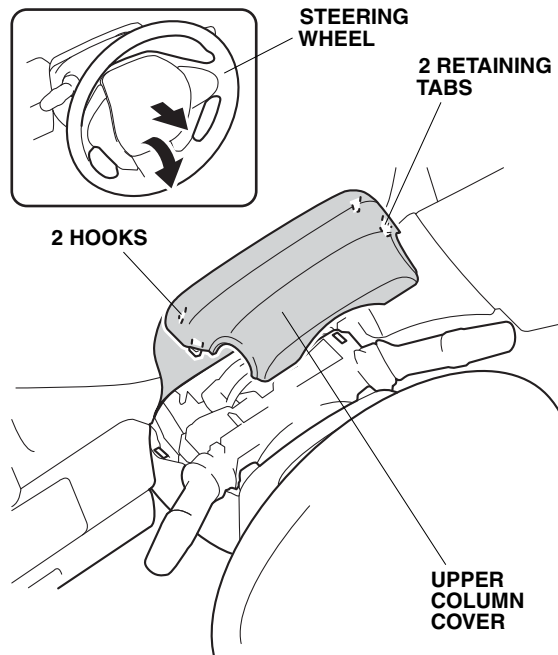


QB51801AG

- Remove the self-tapping screw from the lower column cover.

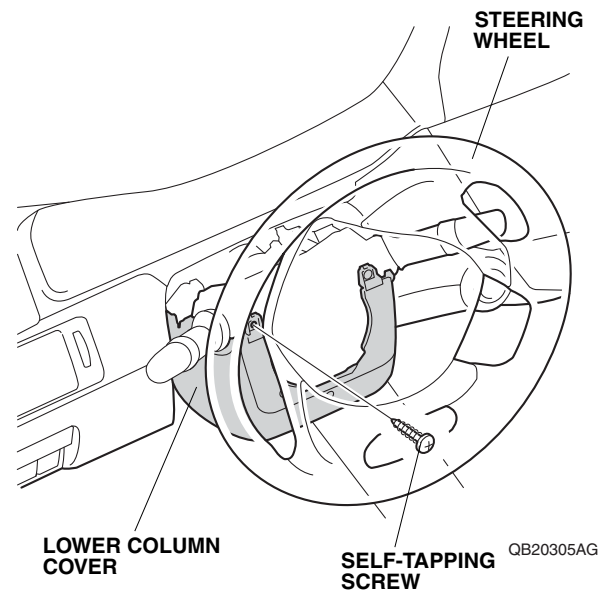


QB20305AG

- Turn the steering wheel 180° clockwise, and remove the other self-tapping screw from the lower column cover.

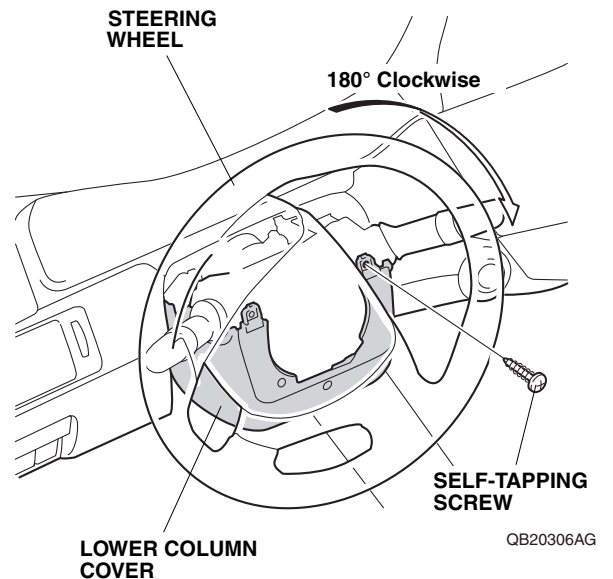


QB20306AG


7. Remove the lower column cover.

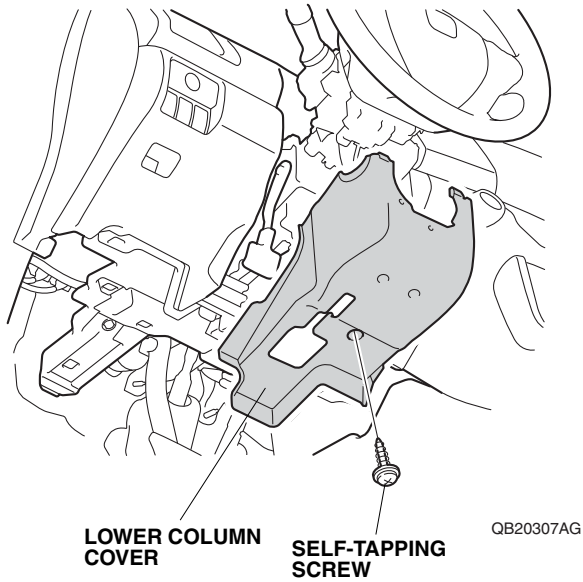


8. Unplug the vehicle connector from the light switch.

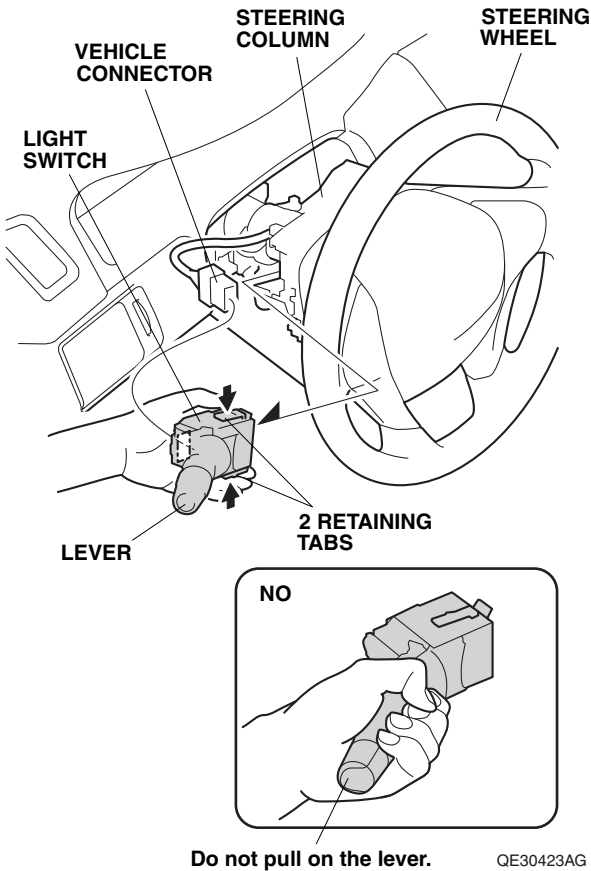


9. Push in on the two retaining tabs, slide the light switch out, and remove it from the steering column.
NOTE: Do not pull on the lever.
10. Install the new light switch on the steering column.
Make sure both retaining tabs are locked in place.
NOTE: Do not push on the lever.

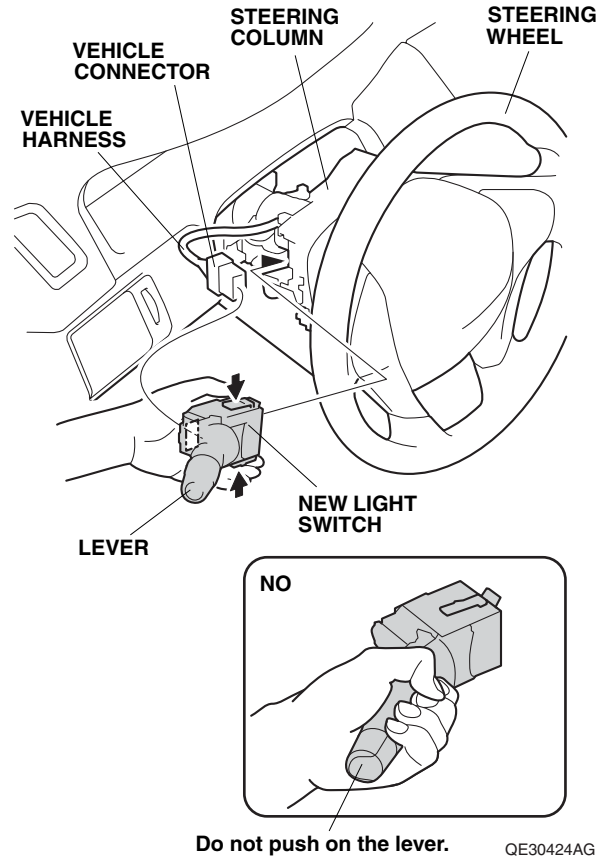



11. Plug the vehicle connector into the new light switch. Make sure the vehicle harness is not being stretched.
12. Attach masking tape to the front bumper, headlights, and front fenders as shown.

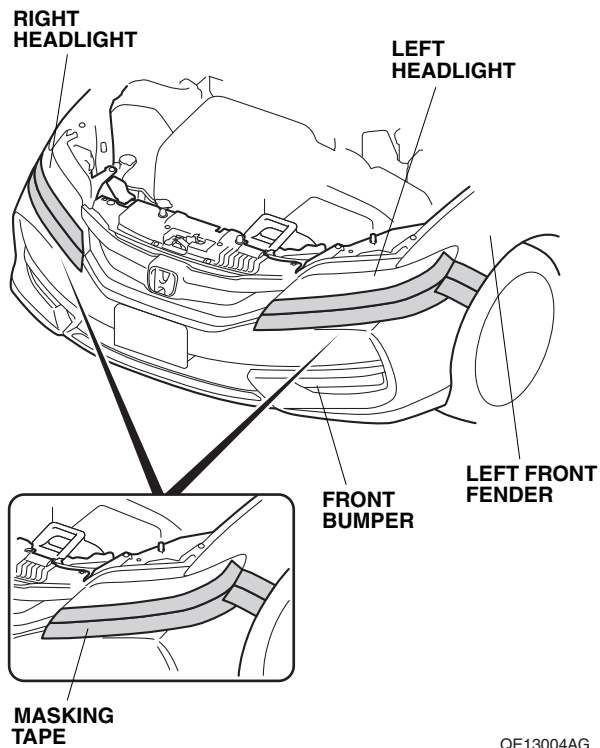


13. Remove the front grille cover.

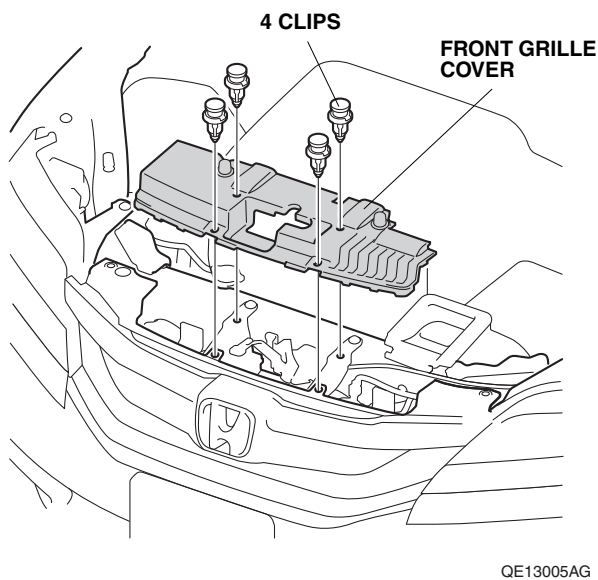


14. Remove the front bumper.
 - Remove the four self-tapping screws and 10 clips.

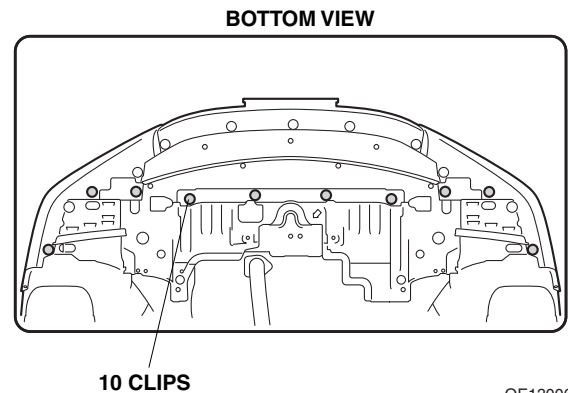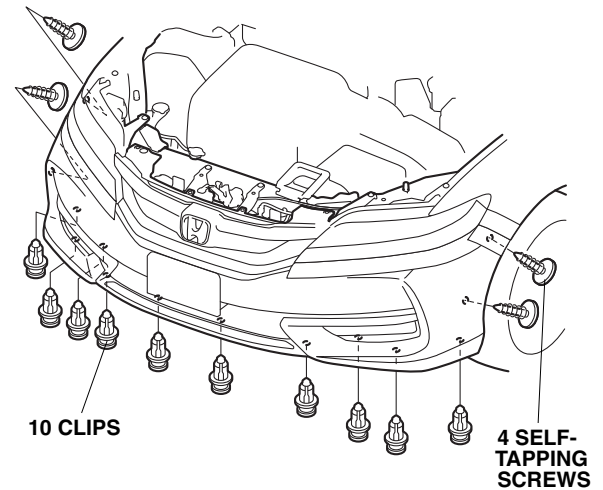


- Release the four retaining tabs on each side.

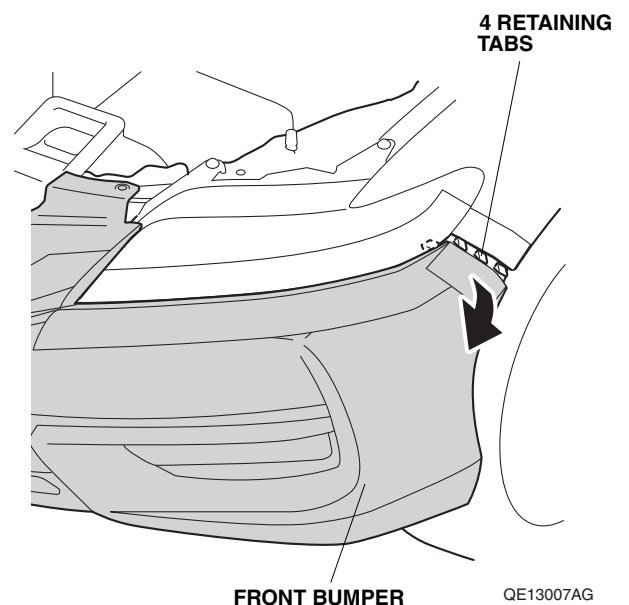


- Release the four retaining tabs on each side.

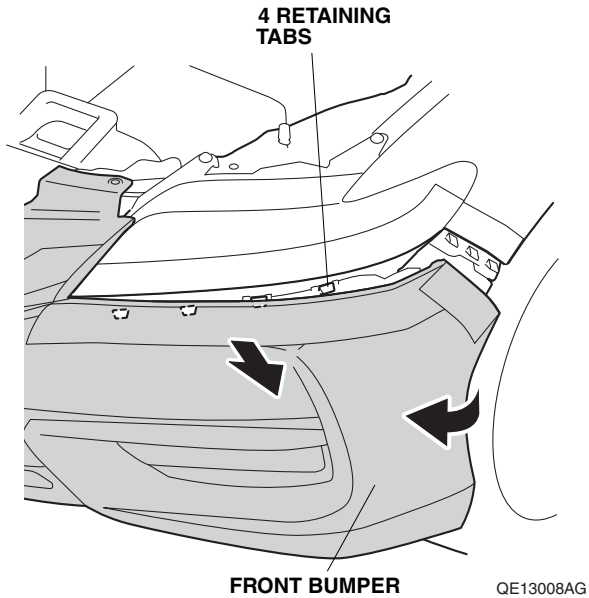

- Remove the two clips.
- With the help of an assistant, remove the front bumper.
- Place the front bumper on a blanket.

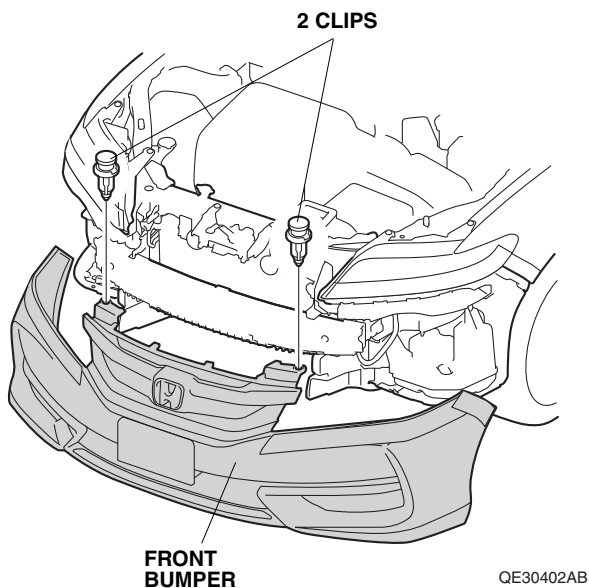


15. Remove the front bumper absorber.

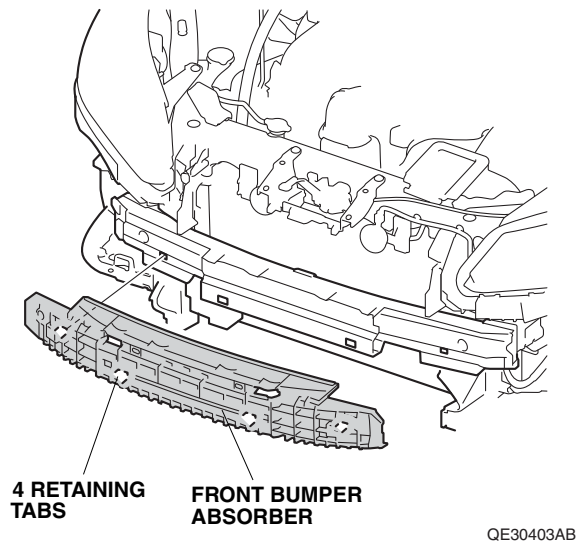

If the vehicle is equipped with LKAS and/or LED daytime running lights, continue with step 16; otherwise, go to step 19.


With LKAS and/or LED daytime running lights

16. Disconnect the positive cable from the battery.

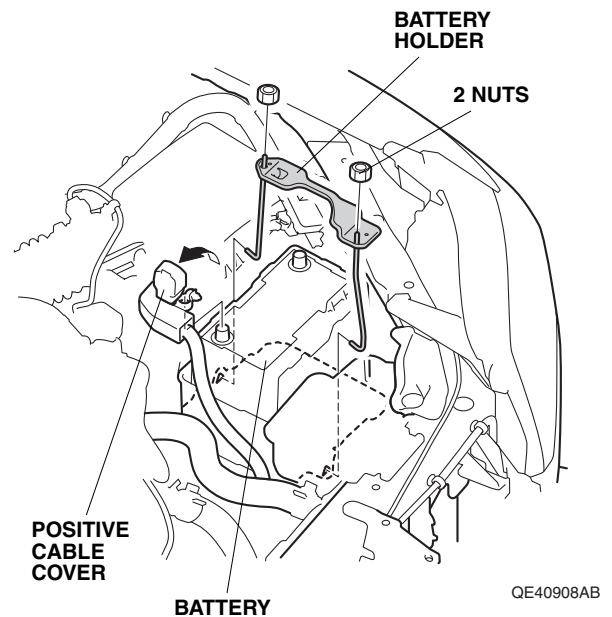


17. Remove the battery holder.

18. Remove the battery cover, battery, and battery tray.

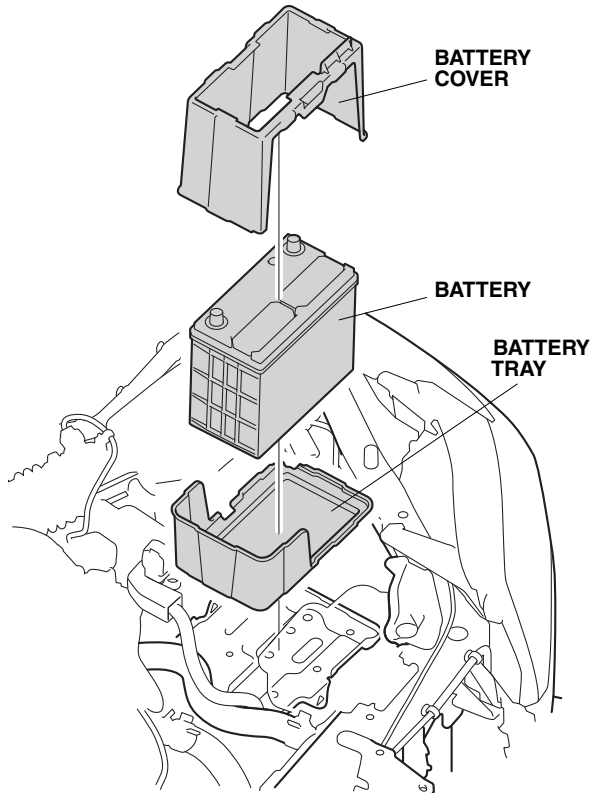


QE40909AB

19. Remove and discard the left cover from the front bumper.

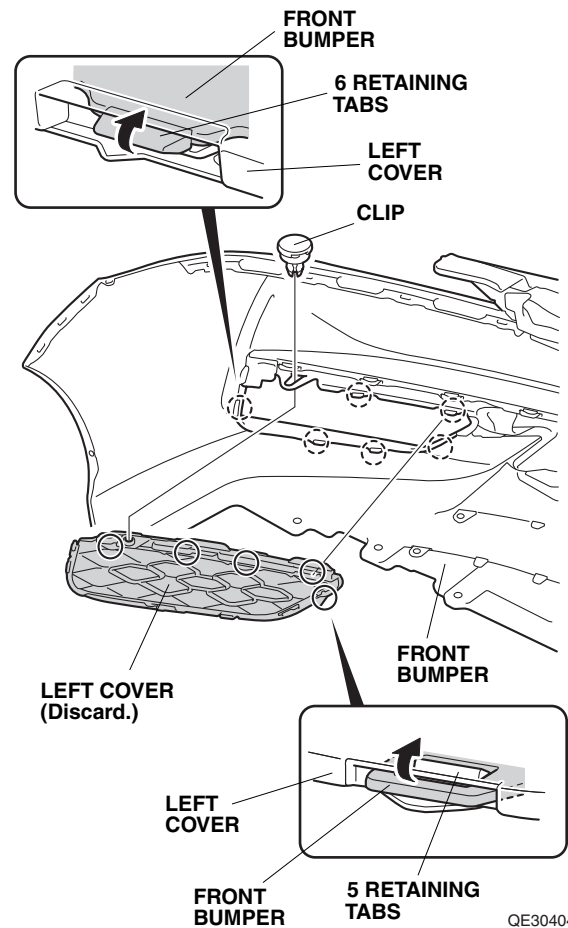

QE30404BB

20. Install the left fog light to the front bumper with eleven retaining tabs and the clip that was removed in step 19.

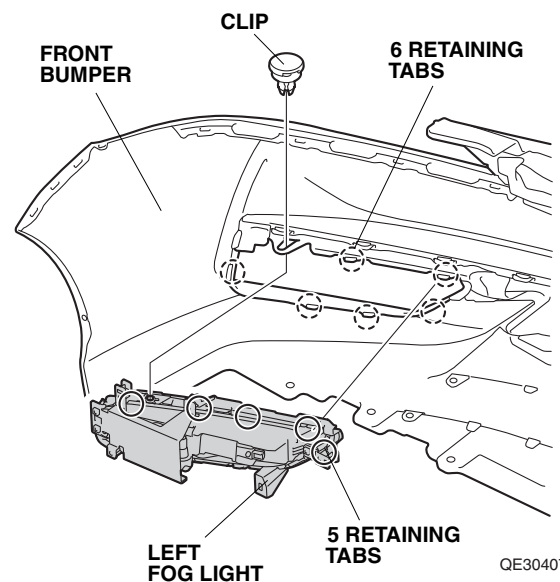


QE30407AB

21. Repeat steps 19 and 20 to install the right fog light.


If the vehicle is equipped with LKAS and/or LED daytime running lights, continue with step 22; otherwise, go to step 34.

With LKAS and/or LED daytime running lights


22. Remove the vehicle relay box from the vehicle bracket.

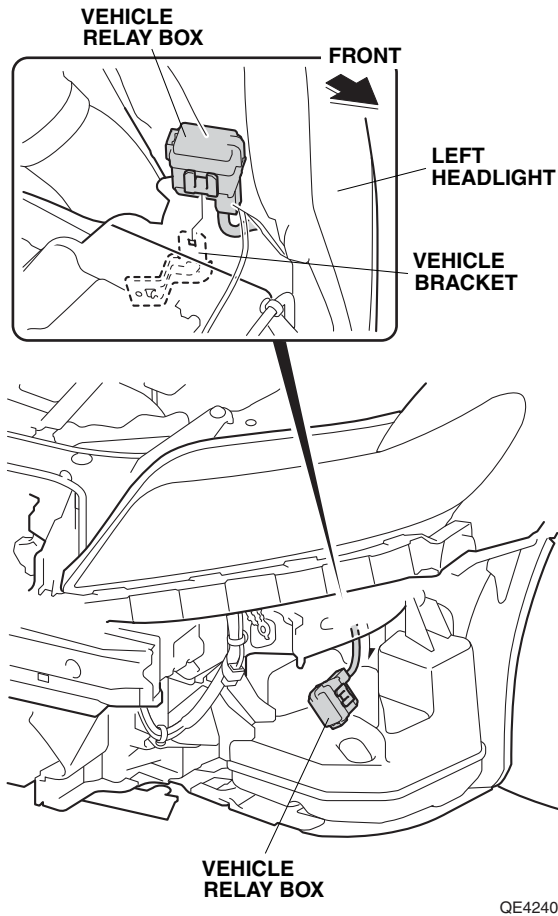


23. Remove the lower cover.

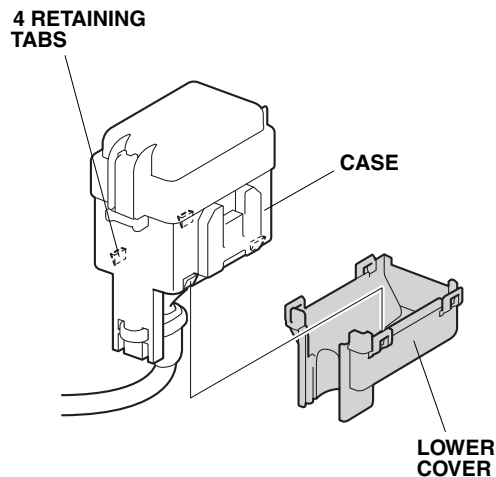

24. Remove the wire tie and urethane tape.
NOTE: Be careful not to damage the vehicle harness.

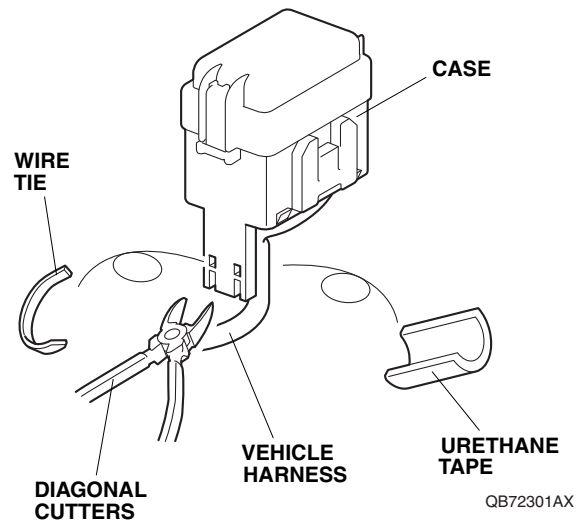


25. Remove the upper cover.

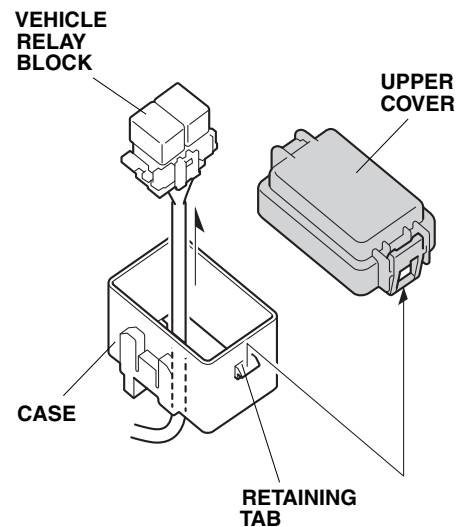

26. Release the vehicle relay block.


27. Plug the relay into the relay block on the fog light harness.

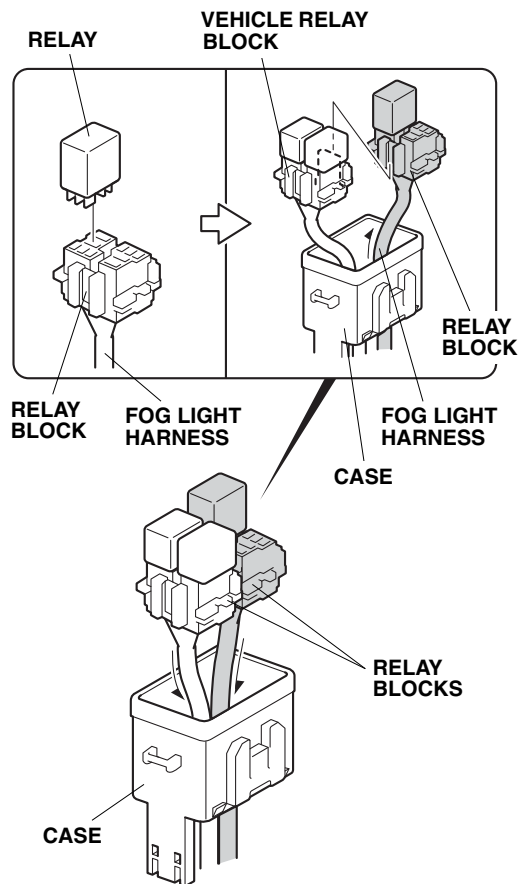

QE40903AG

28. Route the fog light harness through the case, and secure the relay block to the vehicle relay block.
 29. Install the relay blocks to the case.
 30. Install the upper cover.

31. Wrap the urethane tape around the vehicle harness and fog light harness as shown, and secure the vehicle harness and fog light harness to the case with one narrow wire tie.

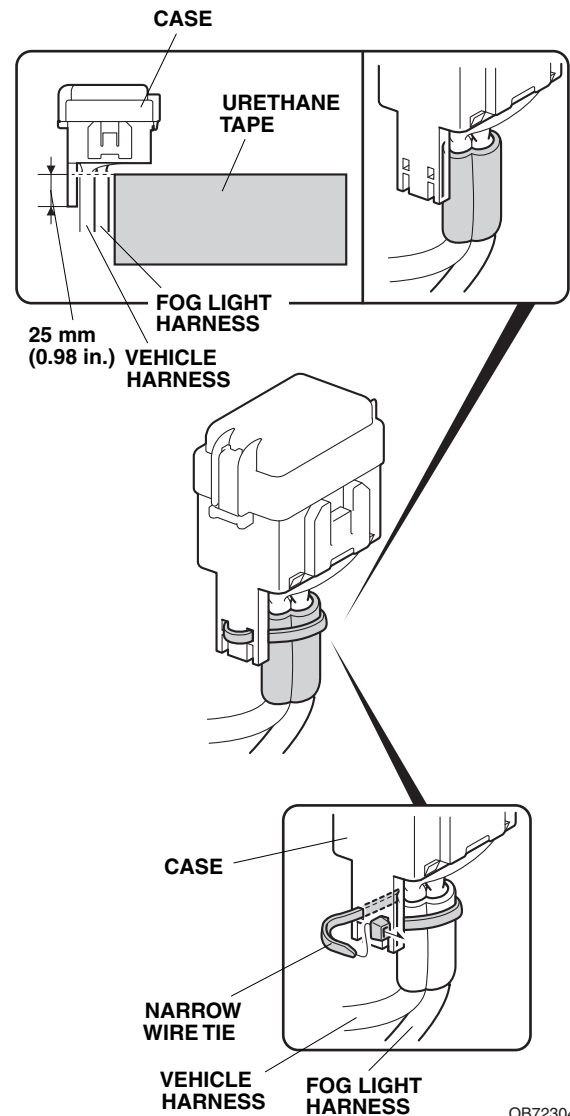


QB72304BX

32. Install the lower cover.
 33. Install the vehicle relay box. Go to step 41.

Without LKAS and/or LED daytime running lights


34. Plug the relay into the relay block on the fog light harness.

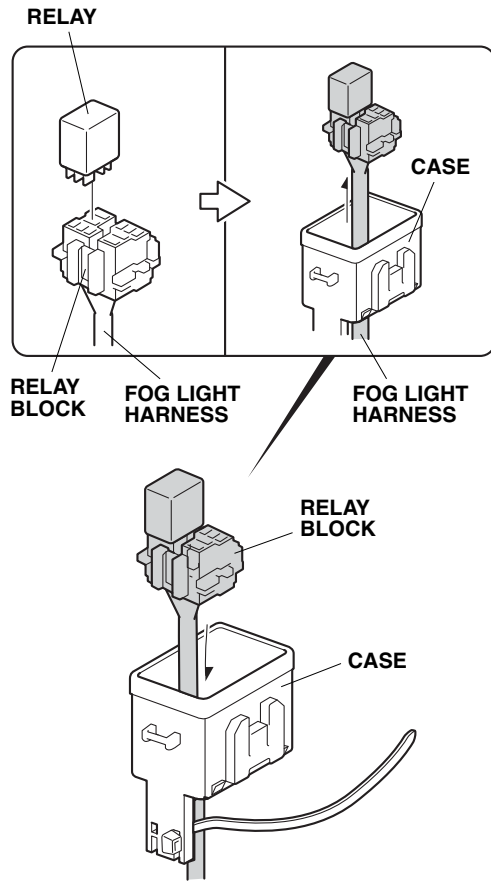

QE40904AG


35. Route the fog light harness through the case, and install the relay block in the case.

36. Install the upper cover on the case.

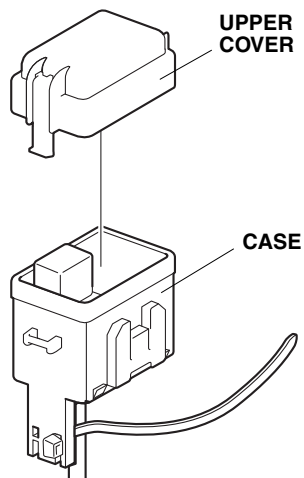


QE40905AG

37. Wrap the urethane tape around the fog light harness as shown, and secure the fog light harness to the case with one narrow wire tie already attached.

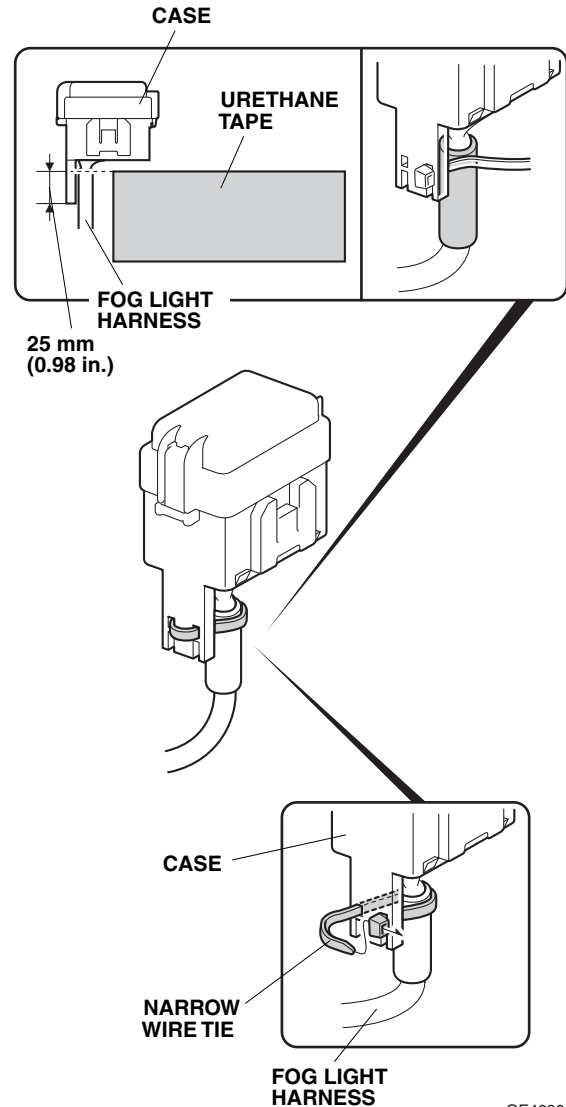


QE40906AG

38. Install the lower cover on the case.

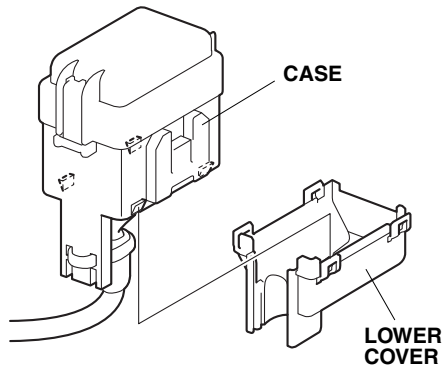


QE40907AG

39. Install the relay bracket to the vehicle panel with one flange bolt.

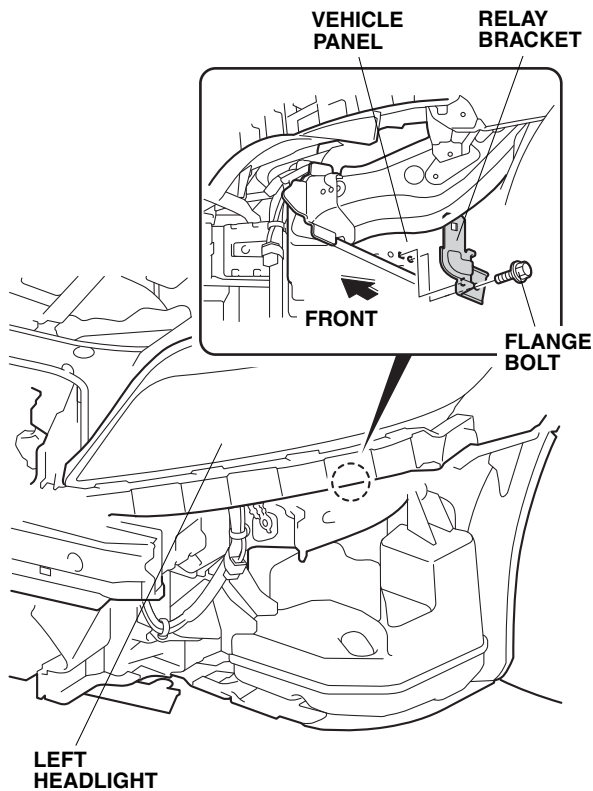


QE30408CB

40. Install the case to the relay bracket.

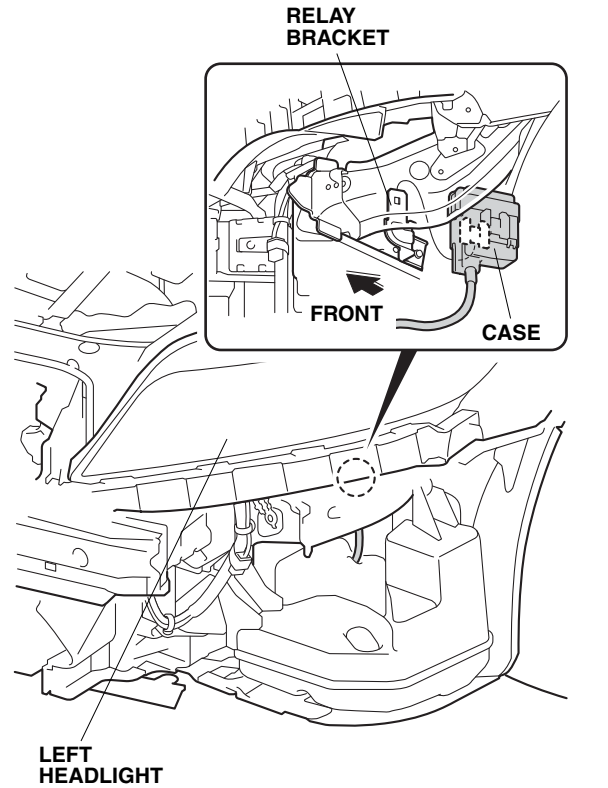


QE70706AA

41. Route the fog light harness as shown. Remove the vehicle ground bolt, and secure the fog light harness ground terminals A and B to the vehicle ground terminal. Install the vehicle ground bolt.

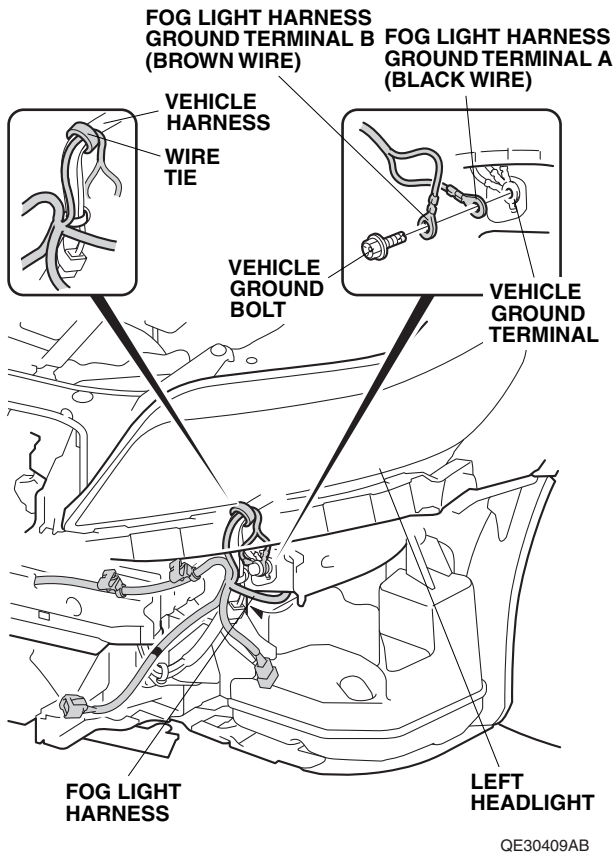


42. Secure the fog light harness to the vehicle harness with one wire tie.


43. Locate the vehicle 2-pin connector taped to the vehicle harness. Remove the tape to free the vehicle 2-pin connector.

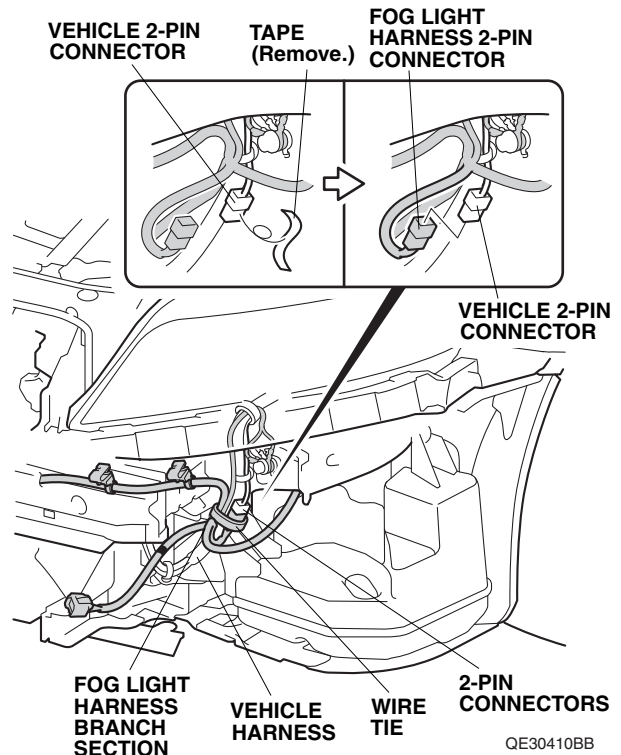


44. Plug the vehicle 2-pin connector into the fog light harness 2-pin connector, and secure the 2-pin connectors and the fog light harness to the vehicle harness with one wire tie.
45. Align the green tape on the fog light harness with the vehicle clip, and secure the fog light harness to the vehicle harness with one wire tie.

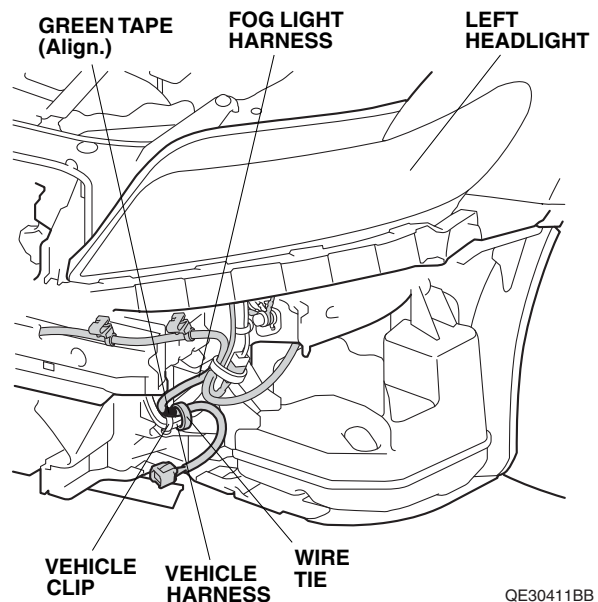


46. Secure the fog light harness to the left corner upper beam with two clips on the fog light harness.

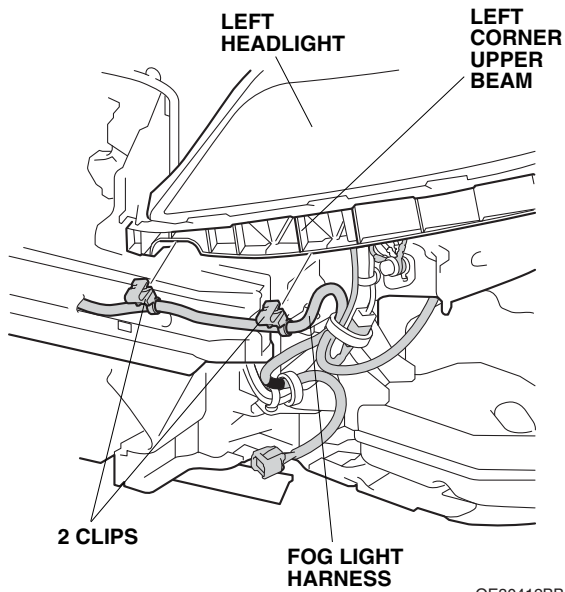


47. Route the fog light harness along the front bumper beam.

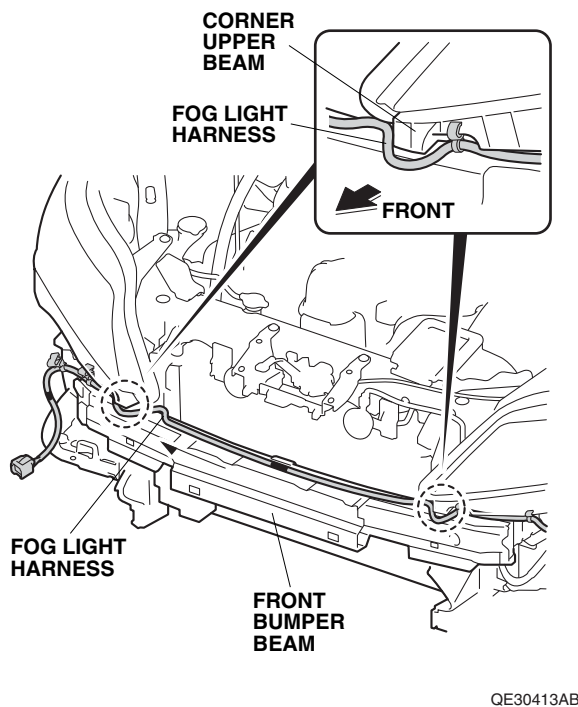


48. Align the green tape on the fog light harness with the vehicle clip, and secure the fog light harness to the vehicle harness with one wire tie.

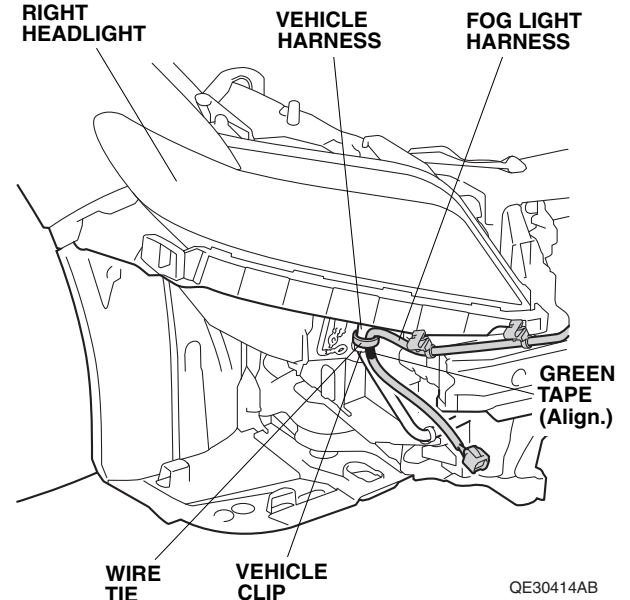

49. Secure the fog light harness to the right corner upper beam with the two clips on the fog light harness.

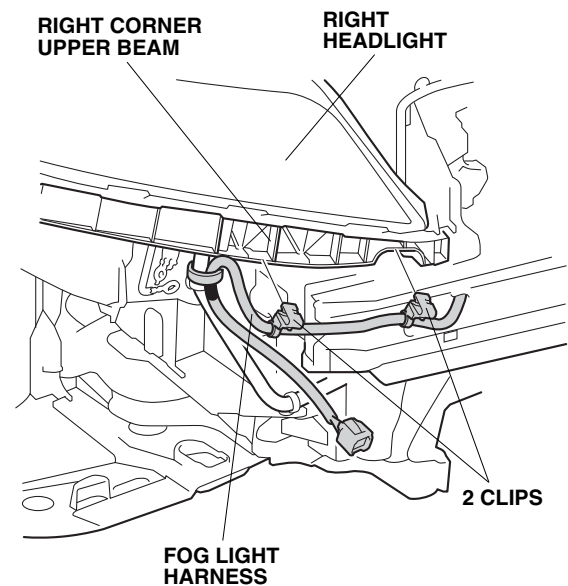


50. Using isopropyl alcohol on a shop towel, thoroughly clean the front bumper beam where the aluminum tape will attach.

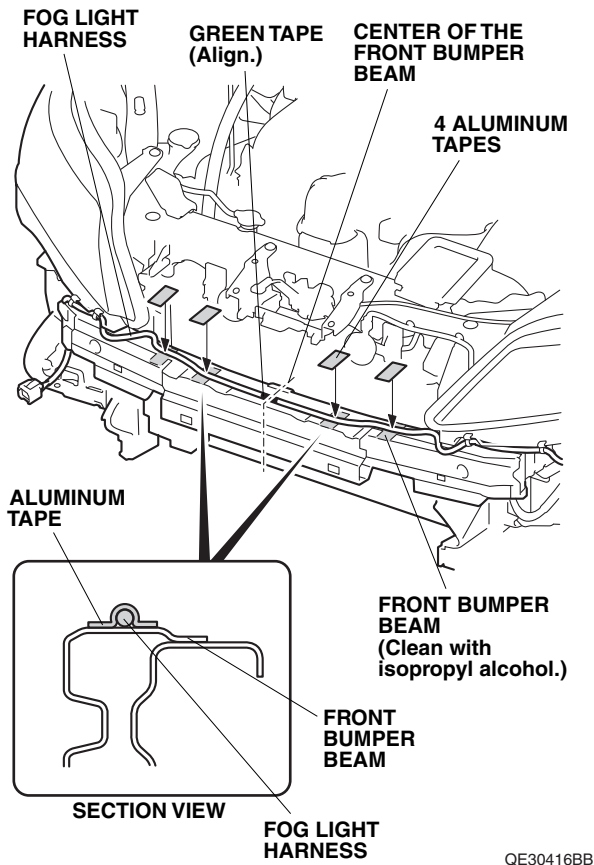


51. Align the green tape on the fog light harness with the center of the front bumper beam, and secure the fog light harness to the front bumper beam with four aluminum tapes.

52. Install the front bumper absorber.

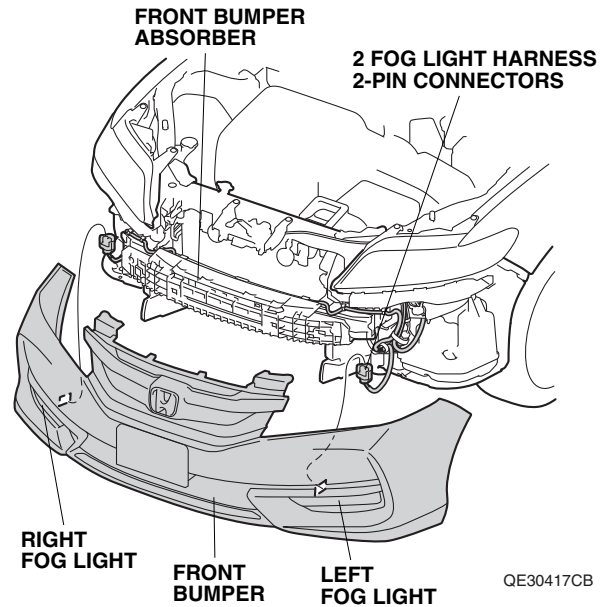


53. With the help of an assistant, bring the front bumper close to the vehicle. Plug the two fog light harness 2-pin connectors into the left fog light and right fog light, then install the front bumper.

54. Under the hood, remove the under-hood fuse/relay box cover.

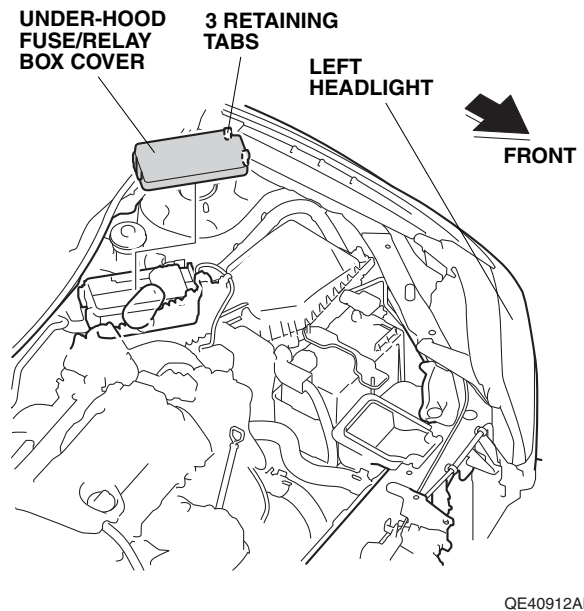


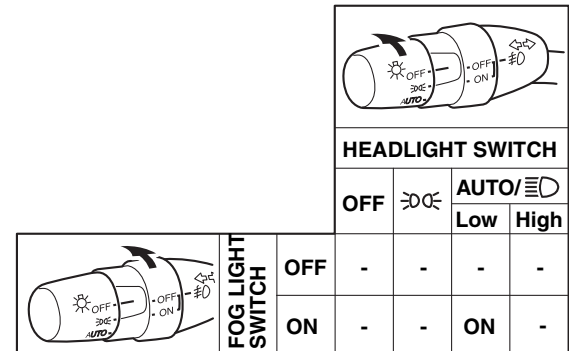
55. Plug the 10 A fuse into the under-hood fuse/relay box.

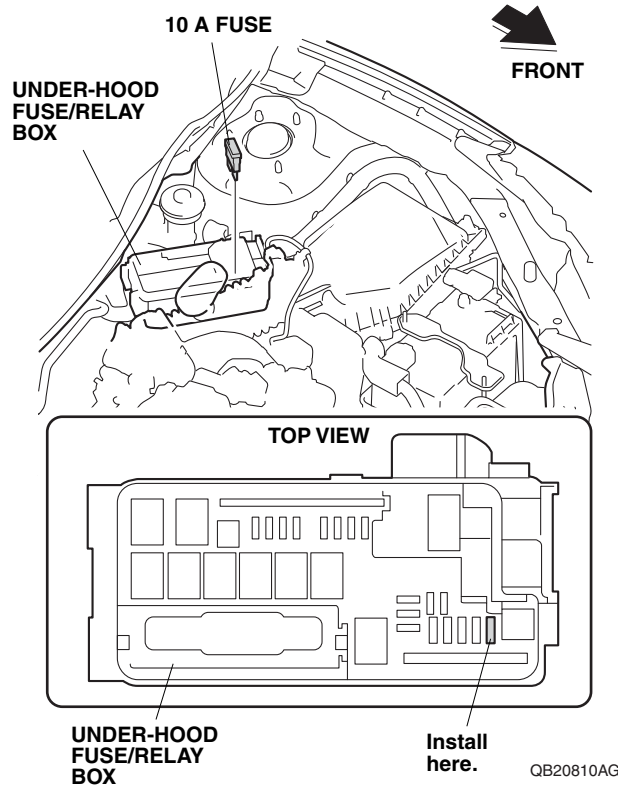

56. Check that all wire harnesses are routed properly and all connectors are plugged in.
57. Install all removed parts.
58. Connect the negative cable to the battery.
59. Press and hold the audio unit power button for two seconds to restore the audio and navi (if equipped) system functions.
60. Reset the clock (on vehicles without navigation).

Check the Operation of the Fog Lights

61. Turn the headlight switch to the AUTO or  position (headlights on low beam).
62. Turn on the fog light switch (indicator is on).
63. If the fog lights do not turn on, check the fuse and all the connectors, including the ground cable.




922602AG

NOTE: The fog light lenses may cloud when the outside temperature is cold; this is normal and should go away in warm weather.

How to Aim the Fog Lights

64. Adjust the fog light aim by turning the adjustment screw in or out until the correct aim is obtained. Adjust the aim according to local laws and regulations.

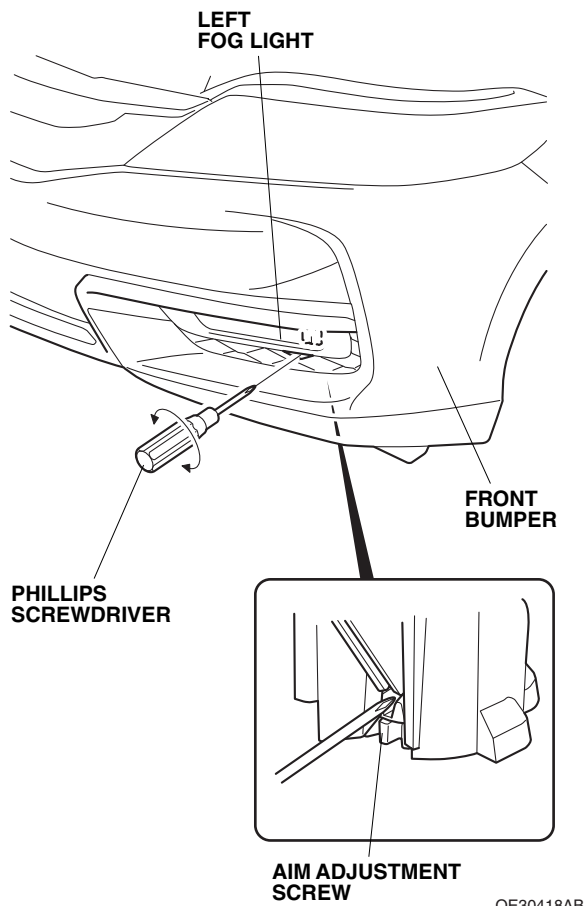

LED REPLACEMENT

The fog light (LED) is a part of the fog light assembly, and it cannot be replaced by itself.