<u>www.collegehillshonda.com</u>

INSTALLATION INSTRUCTIONS

Accessory

CARGO COVER P/N 08U35-T7A-100 Application

2019 HR-V

Publications No. VERSION 1

Issue Date
JUL 2018

PARTS LIST

Cargo cover



Left base



Right base



14 Self-tapping screws, 4 x 10 mm



2 Self-tapping screws, 3 x 12 mm



2 Washers



2 Pins



2 Clips



Accessory User's Information Manual



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

10 mm Open end wrench

Pushpin

Awl

Drill

3 mm, 6 mm, 7 mm, and 8 mm Drill bits

Eye protection (face shield, safety goggles, etc.)

File

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Cargo Cover in the Vehicle




INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE: Be careful not to damage the body paint finish.

- 1. Disconnect the negative cable from the battery.
- 2. Pull away the door opening seal. Remove the right rear door sill trim.

RIGHT REAR DOOR SILL TRIM

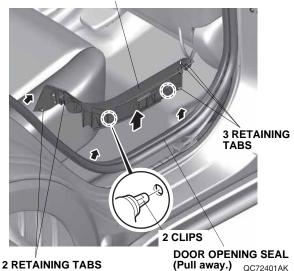


3. Pull away the door opening seal. Remove the left rear door sill trim.




4. Pull the knobs and fold each rear seat-back forward.




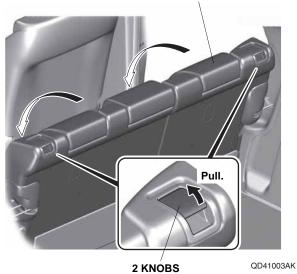

5. Using a plastic trim tool, pry open the two screw covers. Remove the two tie-down hooks.

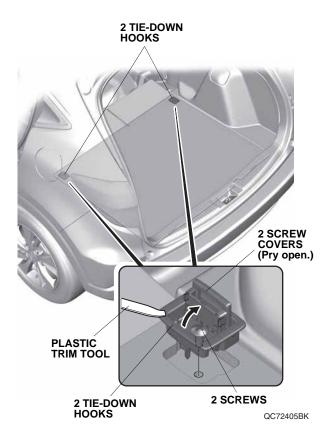


6. Remove the cargo floor lid.

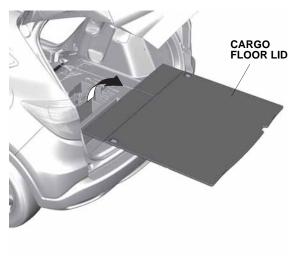

QC72406AK


7. Remove the tool box.

NOTE: Follow the same procedure for all tool boxes.

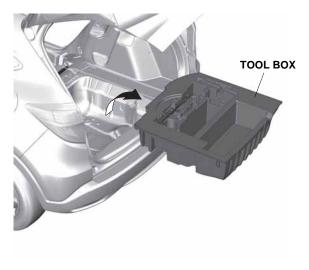


QC72407AK

8. Pull away the weatherstrip. Remove the rear trim panel.

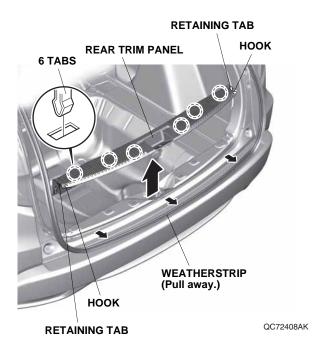


Pull away the weatherstrip and door opening seal.
 Remove the left rear side trim panel, and unplug the vehicle connector (if equipped).

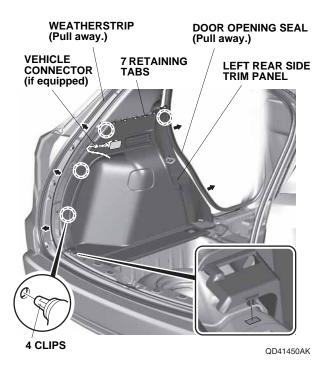


10. Pull away the weatherstrip and door opening seal. Remove the right rear side trim panel.




11. Using a plastic trim tool, pry up the tailgate upper trim panel. Remove the tailgate upper trim panel.

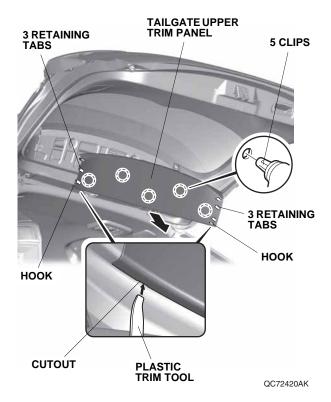

12. Remove the left and right tailgate side trim panels.

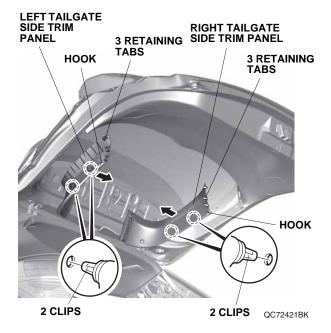


13. Using an awl, pierce the center of the seven round ribs on the right cargo side trim panel as shown. NOTE: Make sure to pierce the right cargo side trim panel parallel to the rib. Do not damage the rib.

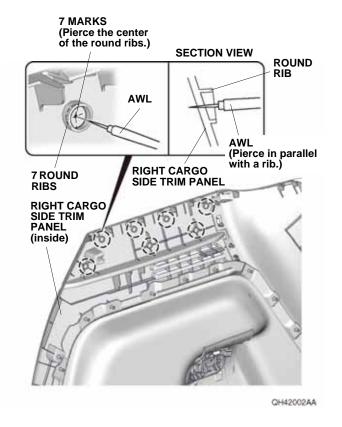


14. While wearing eye protection, drill the seven pierced marks on the right cargo side trim panel to 8 mm. First, drill with a 3 mm drill bit, then with a 6 mm drill bit, and finish with an 8 mm drill bit. Remove any burrs.


NOTE: Make sure to drill the right cargo side trim panel parallel to the rib.

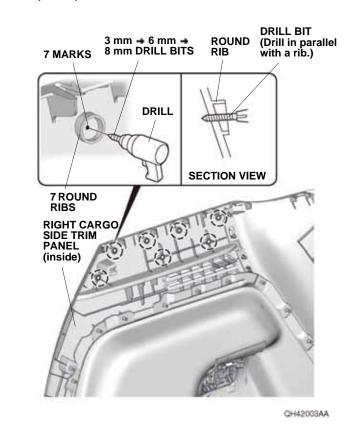


15. Install the right base to the right cargo side trim panel with seven 4 x 10 mm self-tapping screws.

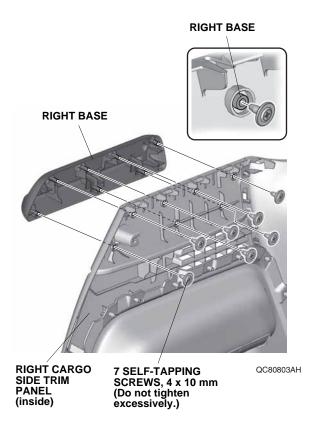


16. Install the clip to the right cargo side trim panel as shown.

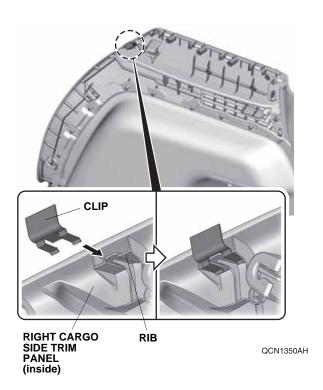


17. Using a pushpin, pierce the center of the scribe mark on the right tailgate side trim panel as shown.

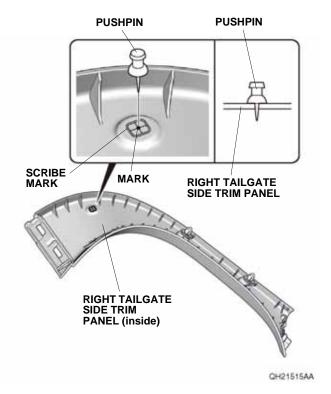


18. While wearing eye protection, drill the pierced mark on the right tailgate side trim panel to 7 mm. First, drill with a 3 mm drill bit, then finish with a 7 mm drill bit. Remove any burrs.

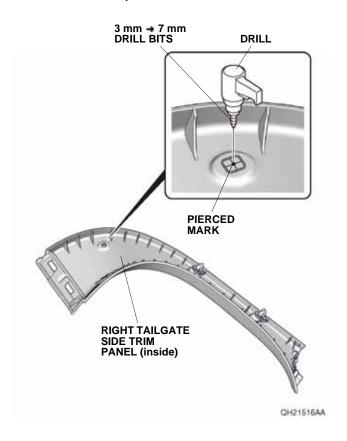

19. Install the pin to the right tailgate side trim panel with one washer and one 3 x 12 mm self-tapping screw.

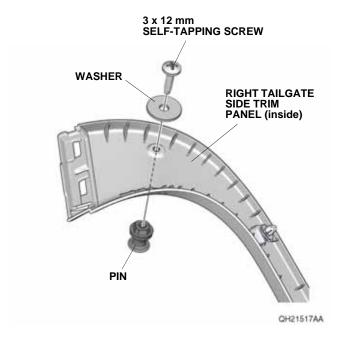

- 20. Repeat steps 13 through 19 on the left side of the vehicle.
- 21. Install all removed parts.

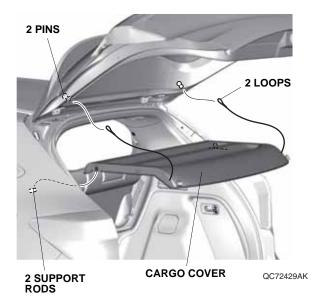

22. Install the cargo cover to the two support rods and hook the two loops to the two pins.

- 23. Check that all wire harnesses are routed properly and all connectors are plugged in.
- 24. Connect the negative cable to the battery.
- 25. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
- 26. Set the clock on vehicles without navigation.
- 27. If necessary, restore the systems back to normal operation as described in the service information.