




HEATED STEERING WHEEL	2026 PASSPORT MODEL SERIES	Publications No. VERSION 1
-----------------------	-------------------------------	-------------------------------

GENERAL VIEW

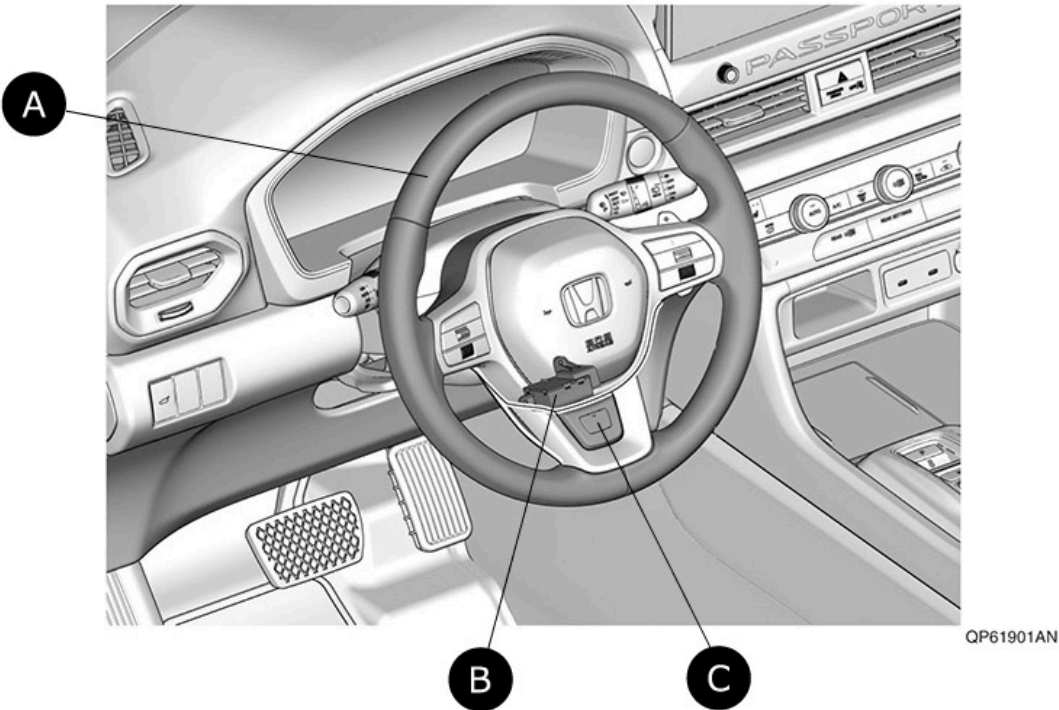

A	STEERING WHEEL
B	CONTROL UNIT
C	SWITCH

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

#### DANGER

You will be killed or seriously hurt if you do not follow the instructions.

#### WARNING

You can be killed or seriously hurt if you do not follow the instructions.

#### CAUTION

You can be hurt if you do not follow the instructions.

#### NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

#### NOTE

Gives helpful information or instructions to be followed when installing this product.













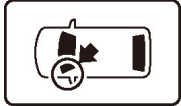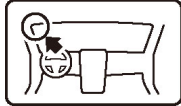



Indicates a prohibited action.



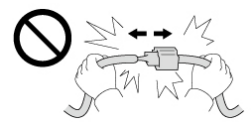
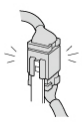
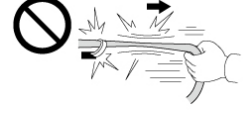



## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)
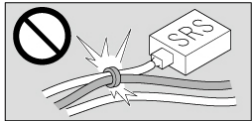
## Wire Harness Routing Precaution

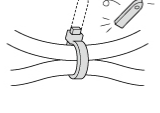	Do not secure the accessory harness to the SRS harness. (except for instruction cases.)		Push the connectors and terminals together until they lock.
	Do not pull the harness to unplug the connectors.		Install removed connectors in their original location.
	Do not pull the harness.		Secure the accessory harness as shown.
	Do not pinch the harness.		Cut off the excess wire tie.

## Safety: General




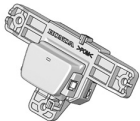





 
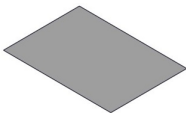
- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

## Safety: Electric Parts

Always disconnect the negative cable from the battery before beginning work.

## PARTS LIST

### Heated Steering Wheel Kit (P/N 08U97-3BM-100)

Parts	Parts name	QTY	Remarks
	Steering wheel	1	
	Steering wheel cover	1	
	Switch trim	1	
	Switch	1	
	Control unit	1	
	Cable reel	1	
	Cable reel cord	1	
	Self-tapping screw	9	
	Washer-screw	5	
	Steering wheel bolt	1	
	Information	1	

## REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- Phillips screwdriver
- 10 mm Hex wrench
- Ratchet
- Torque wrench
- i-HDS
- Punch (diameter of 5.5 mm)
- Masking tape
- Ruler
- Steering wheel puller

The following tools are available through the Honda Tool and Equipment Program:



- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

## INSTALLATION

### ■ Disconnecting the Battery Cable

#### ● Resonator

- 1 Remove the resonator.

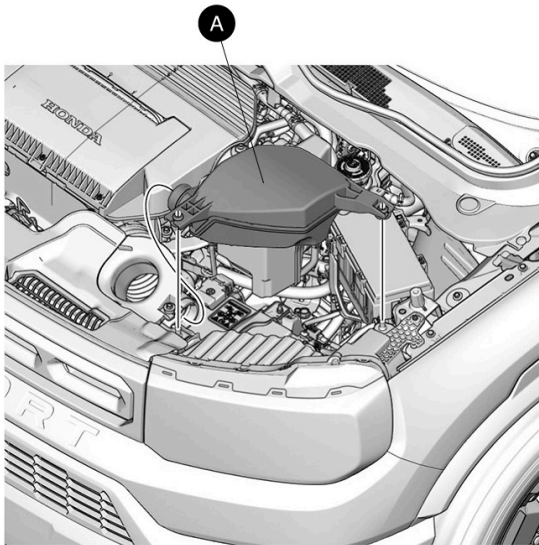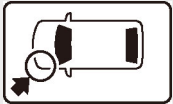

QP62602AB




A	RESONATOR
---	-----------

● Negative Cable

2 Disconnect the negative cable from the battery.

 NOTE

Follow the “12 Volt Battery Terminal Disconnection and Reconnection” described in the service information since the work differs depending on the vehicle.

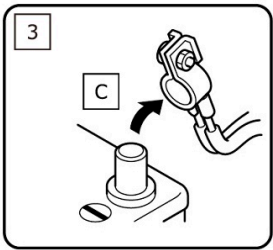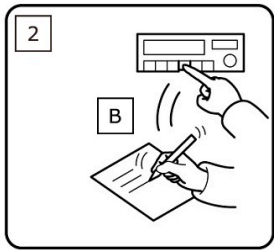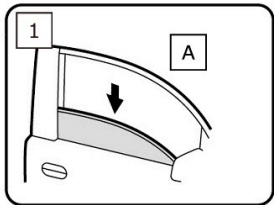



QCD0502BM

A	Lower.
B	Record.
C	Disconnect.

## Removing the Vehicle Parts

### Airbag

- 3 Adjust the tilt of the steering column to its lowest position. Then bring the telescope position to all the way out.

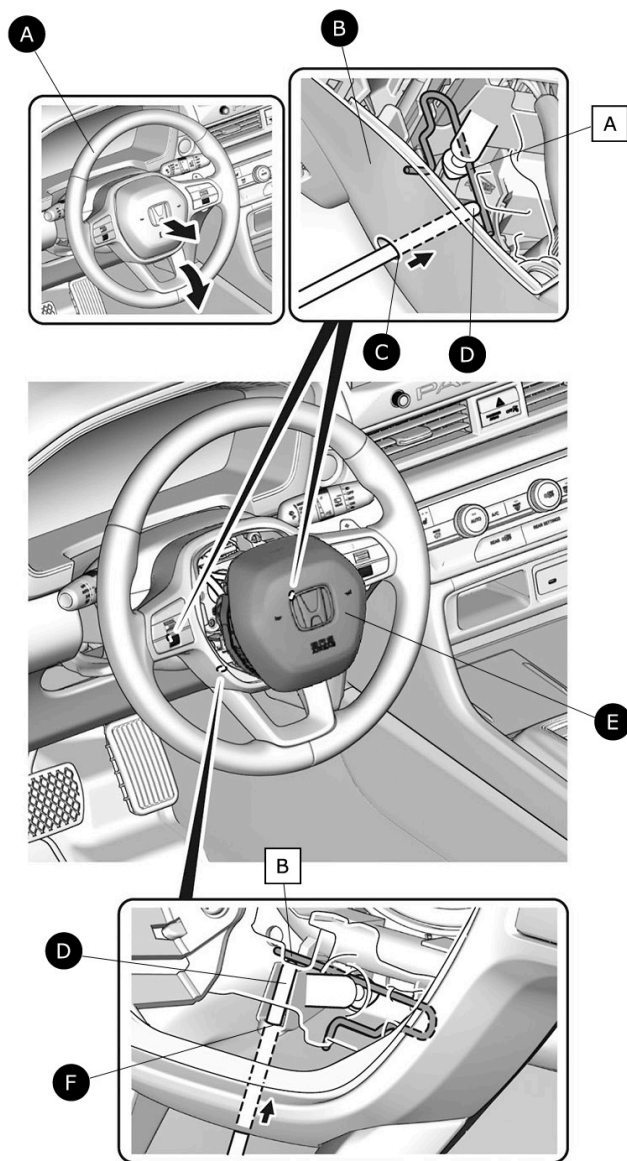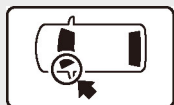

QP61902AN


A	STEERING WHEEL
B	STEERING WHEEL COVER
A	SPRING (Push.)(2)
C	HOLE(2)
D	PUNCH (diameter of 5.5 mm)
E	AIRBAG
B	SPRING (Push.)
F	HOLE

- 4 Release the airbag.

5 Remove the airbag.

 NOTICE

- Do not drop the removed airbag or hit it on an object.
- Place the removed airbag in a safe place with the padded surface (top) facing upward.

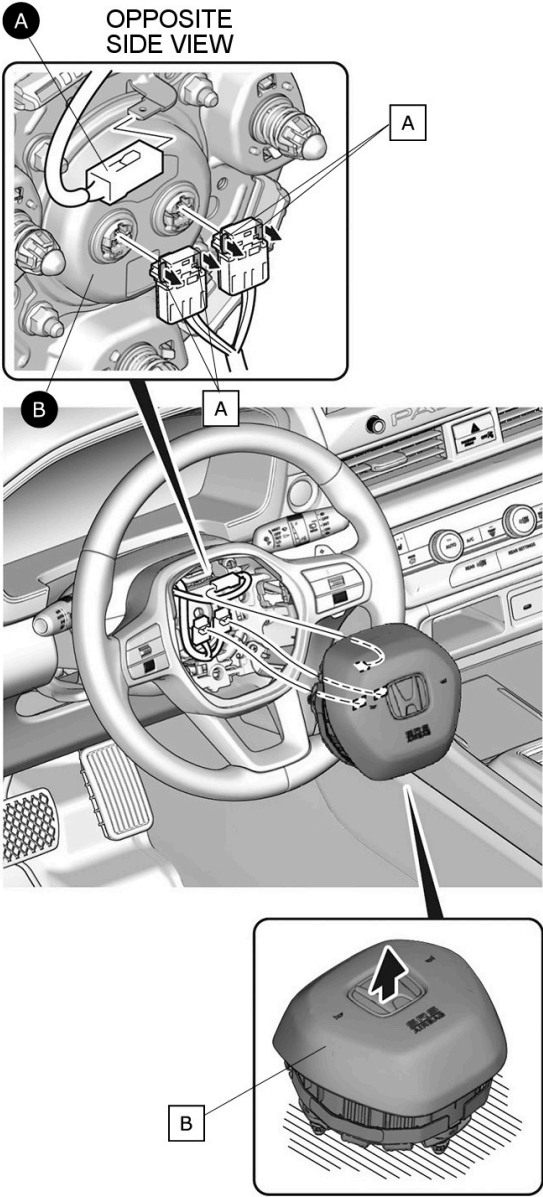


A	VEHICLE CONNECTORS
B	AIRBAG (inside)
A	LOCKING TAB (Pull up.)(2)
B	PADDED SURFACE (Facing upward.)

QP61903AN

● Steering Wheel

6 Unplug the vehicle connector.

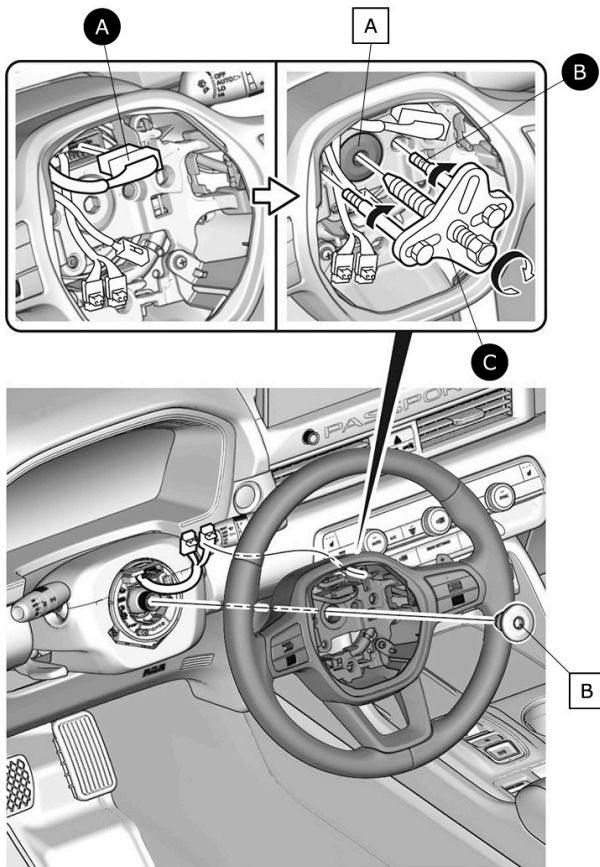

QP61904AN

A	VEHICLE CONNECTOR
A	STEERING WHEEL BOLT (Loosen.)
B	STEERING WHEEL PULLER BOLTS
C	STEERING WHEEL PULLER
B	STEERING WHEEL BOLT (Do not reuse.)

7 Loosen the steering wheel bolt.

8 Isolate the steering wheel and column shaft.

NOTICE

If you thread the steering wheel puller bolts into the wheel hole more than 5 threads, the bolts will hit the cable reel and damage it. To prevent this, install a pair of jam nuts 5 threads up on each puller bolt.

- 9 Confirm that the front wheels are aligned straight-ahead, and use a steering wheel puller to remove the steering wheel.

 **NOTE**


Remove the old sealant from the threads in the steering column shaft.

● **Steering Column Upper Cover**

- 10 Attach masking tape to protect the vehicle.

 **NOTE**

To prevent damage, do not remove the masking tape until after the parts are installed.

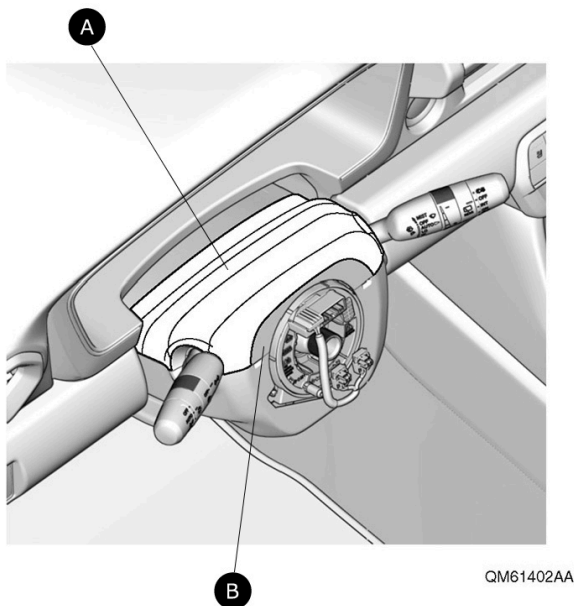


A	MASKING TAPE
B	STEERING COLUMN UPPER COVER


## 11 Release the steering column upper cover.

### NOTE

Work in the order shown.

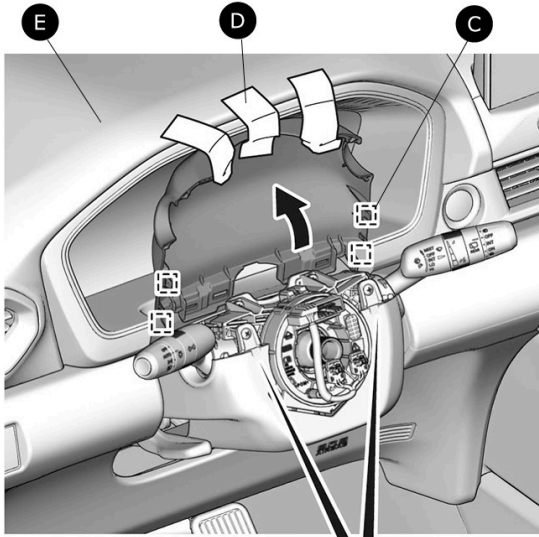


A	SLOT(2)
B	PLASTIC TRIM TOOL
C	RETAINING TAB(4)
D	MASKING TAPE
E	DASHBOARD

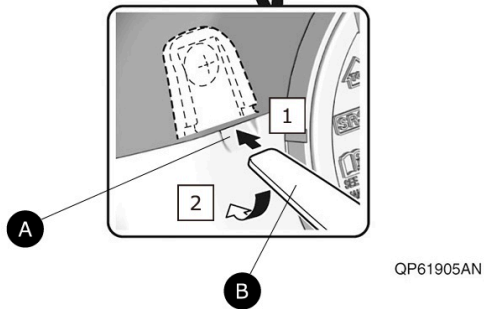

## 12 Secure the steering column upper cover.

● Driver's Switch Panel

13 Remove the driver's switch panel.


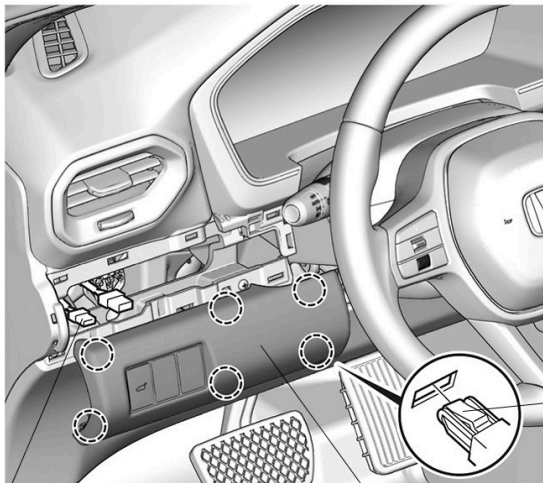


QP61906AN

A	DRIVER'S SWITCH PANEL
B	CLIP(6)
C	VEHICLE CONNECTORS

## ● Driver's Dashboard Lower Cover

### 14 Release the driver's dashboard lower cover.

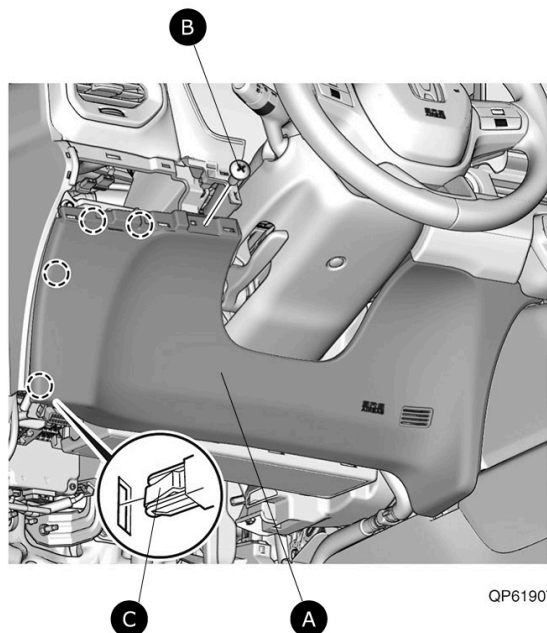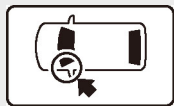


QP61907AN

<b>A</b>	DRIVER'S DASHBOARD LOWER COVER
<b>B</b>	SELF-TAPPING SCREW
<b>C</b>	CLIP(4)

## ● Steering Column Lower Cover


**15** Remove the self-tapping screws.

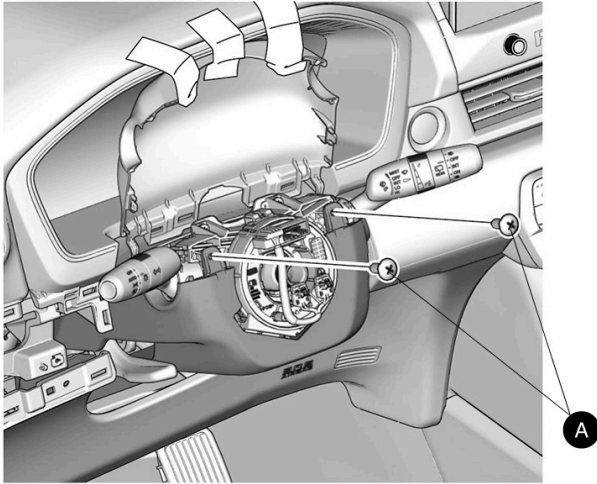

QP61908AN

<b>A</b>	SELF-TAPPING SCREW(2)
----------	-----------------------

**16** Remove the steering column lower cover.

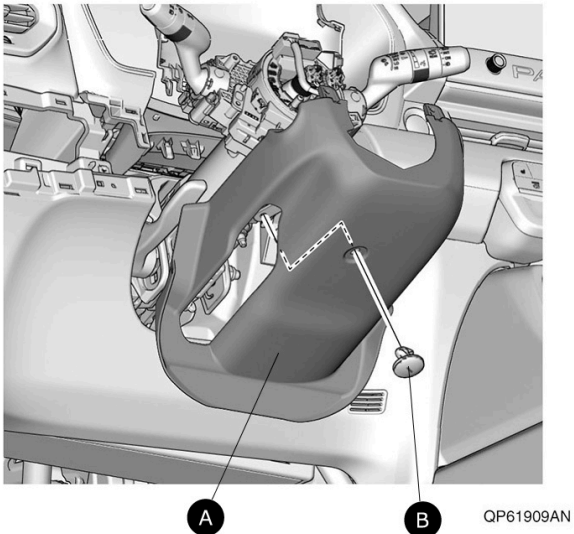


QP61909AN

<b>A</b>	STEERING COLUMN LOWER COVER
<b>B</b>	CLIP

## ● Cable Reel



### 17 Remove the cable reel.

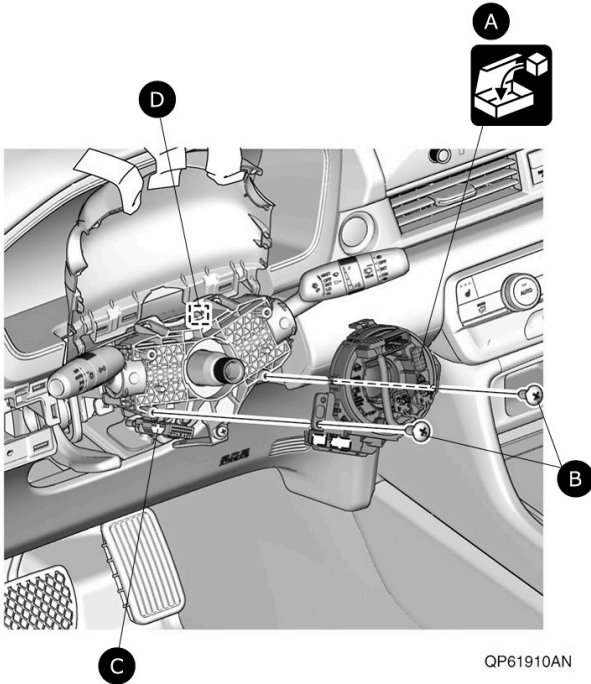

A	CABLE REEL
B	SELF-TAPPING SCREW(2)
C	VEHICLE CONNECTORS
D	RETAINING TAB

## Installing the Steering Wheel


### 18 Install the new cable reel.

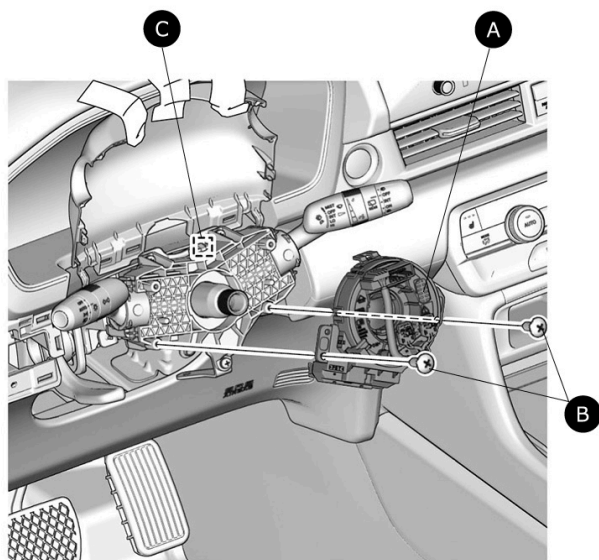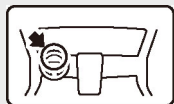

A	NEW CABLE REEL
B	SELF-TAPPING SCREW(2)
C	RETAINING TAB

QP61911AN

## 19 Remove the tape and dummy connector.

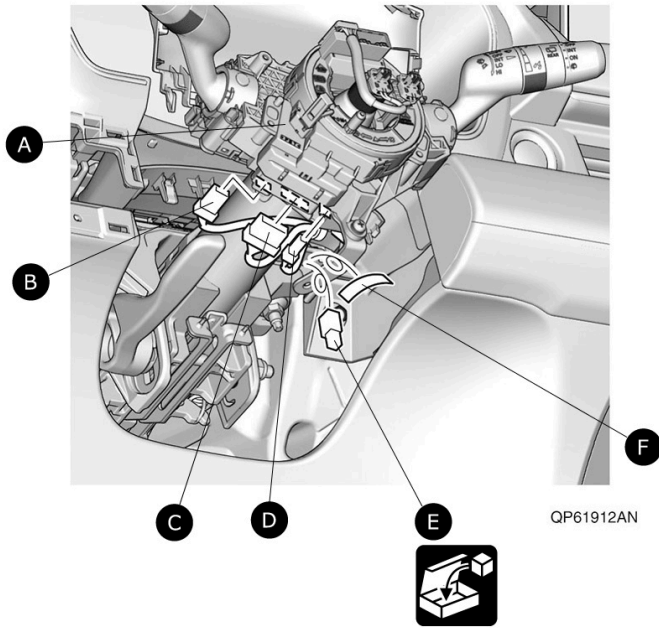


A	NEW CABLE REEL
B	VEHICLE 4-PIN CONNECTOR
C	VEHICLE 20-PIN CONNECTOR
D	VEHICLE 2-PIN CONNECTOR
E	DUMMY CONNECTOR
F	TAPE

## 20 Plug-in the vehicle connectors.


## 21 Install the steering column lower cover, driver's dashboard lower cover, driver's switch panel, and steering column upper cover.

## 22 Remove the steering wheel trim.

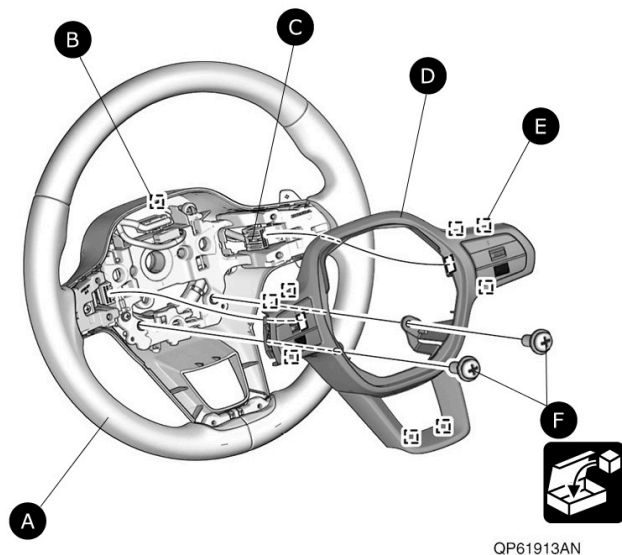


A	STEERING WHEEL
B	RETAINING TAB
C	VEHICLE CONNECTORS
D	STEERING WHEEL TRIM
E	RETAINING TAB(8)
F	WASHER-SCREW(2)

## 23 Remove the washer-screws.

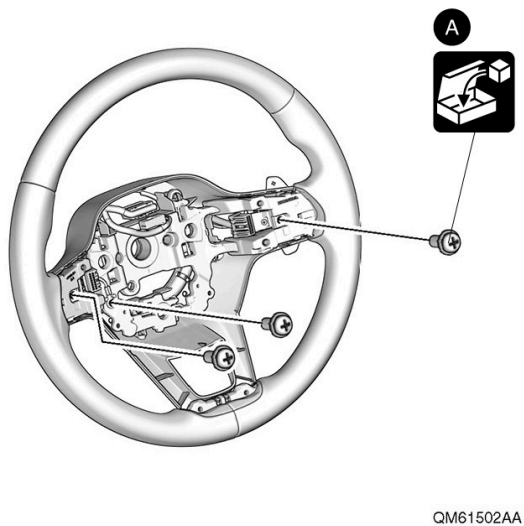


A	WASHER-SCREW(3)
---	-----------------

## 24 Remove the steering wheel cover.

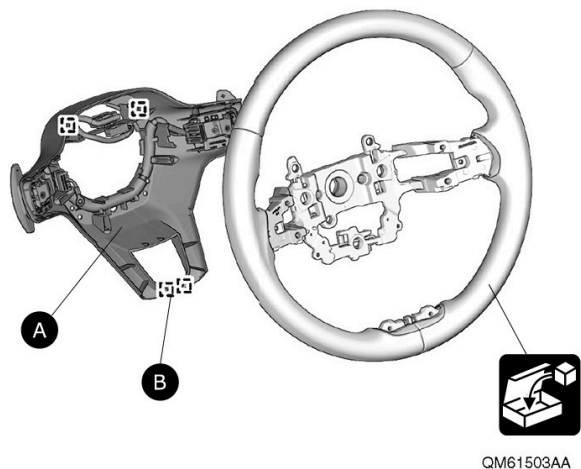


<b>A</b>	STEERING WHEEL COVER
<b>B</b>	RETAINING TAB(4)

## 25 Remove the left and right paddle shifters.

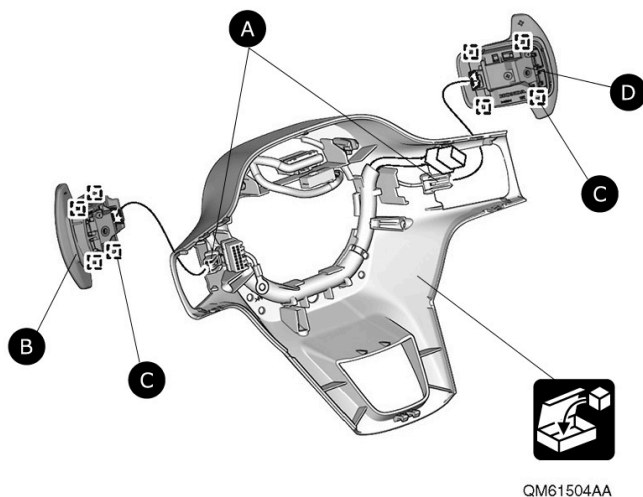


<b>A</b>	VEHICLE CONNECTORS
<b>B</b>	LEFT PADDLE SHIFTER
<b>C</b>	RETAINING TAB(4)
<b>D</b>	RIGHT PADDLE SHIFTER

## 26 Install the new cable reel cord.

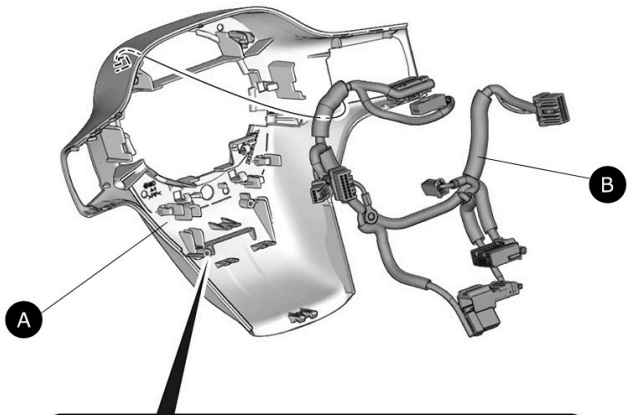


<b>A</b>	NEW STEERING WHEEL COVER
<b>B</b>	NEW CABLE REEL CORD
<b>C</b>	HOLDER(10)

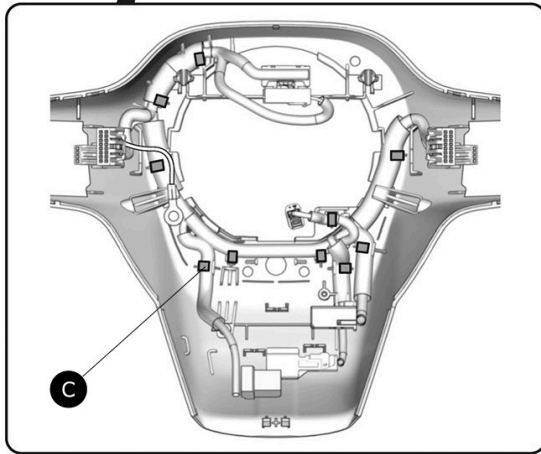

QPD1215AB

## 27 Plug-in the new cable reel cord connector.

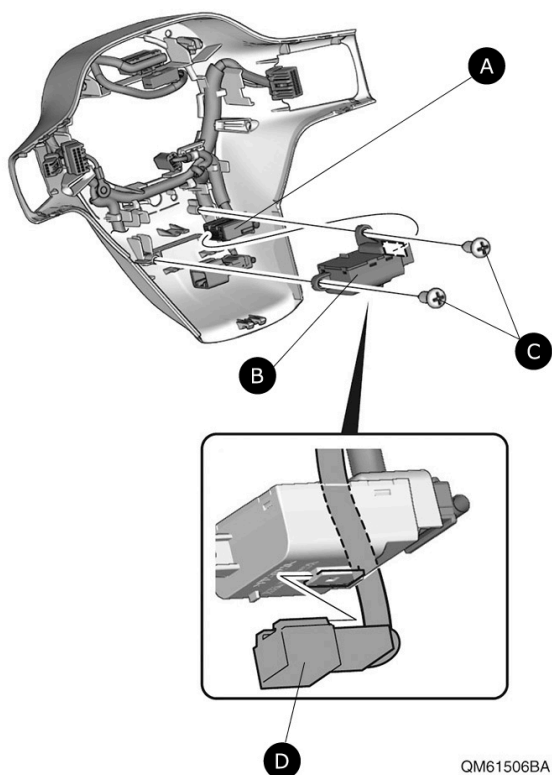


A	NEW CABLE REEL CORD 14-PIN CONNECTOR
B	CONTROL UNIT
C	SELF-TAPPING SCREW(2)
D	NEW CABLE REEL CORD 4-PIN CONNECTOR

## 28 Secure the new cable reel cord connector.

## 29 Install the control unit.

## 30 Plug-in the new cable reel cord connectors.

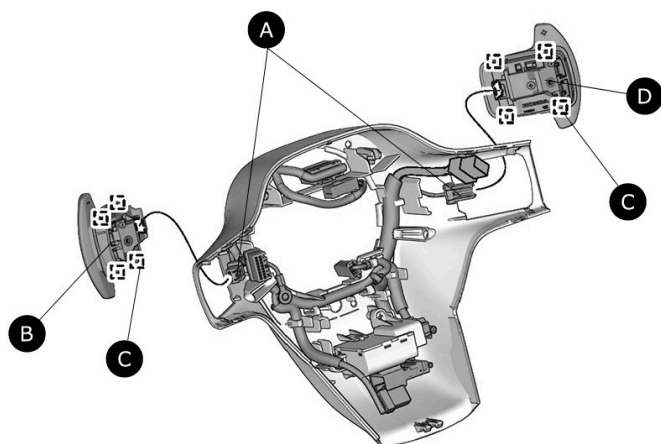


QM61507AA

<b>A</b>	NEW CABLE REEL CORD 4-PIN CONNECTOR(2)
<b>B</b>	LEFT PADDLE SHIFTER
<b>C</b>	RETAINING TAB(4)
<b>D</b>	RIGHT PADDLE SHIFTER

## 31 Install the left and right paddle shifters.

## 32 Plug-in the new steering wheel connector.

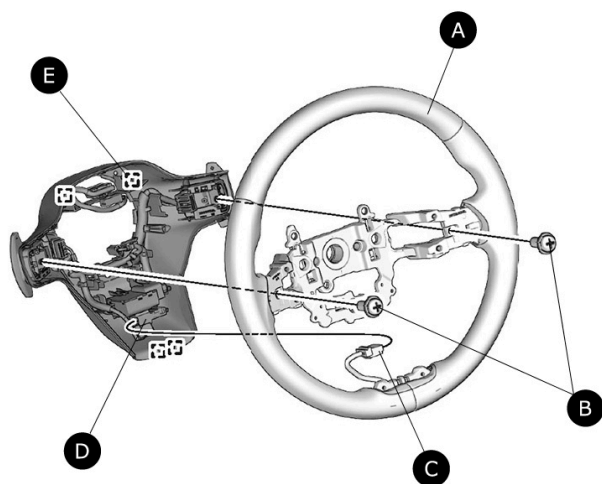


QM61508AA

<b>A</b>	NEW STEERING WHEEL
<b>B</b>	WASHER-SCREW (supplied)(2)
<b>C</b>	NEW STEERING WHEEL 4-PIN CONNECTOR
<b>D</b>	NEW CABLE REEL CORD 4-PIN CONNECTOR
<b>E</b>	RETAINING TAB(4)

## 33 Install the new steering wheel cover.

# 34

Secure the new cable reel cord ground terminal.

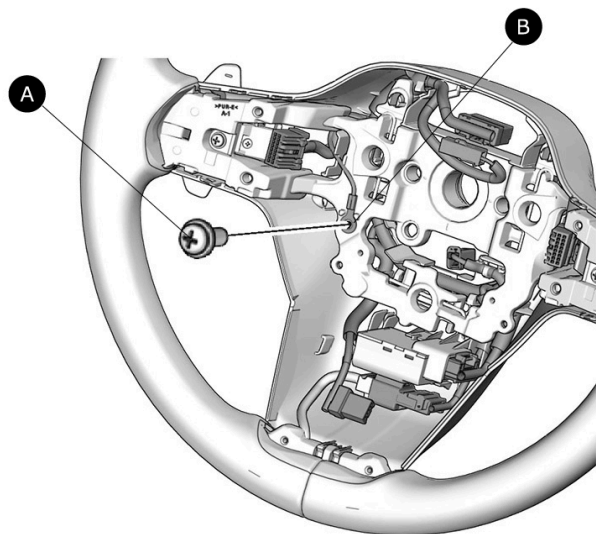


QM61509AA

<b>A</b>	WASHER-SCREW (supplied)
<b>B</b>	NEW CABLE REEL CORD GROUND TERMINAL

# 35


Install the switch.

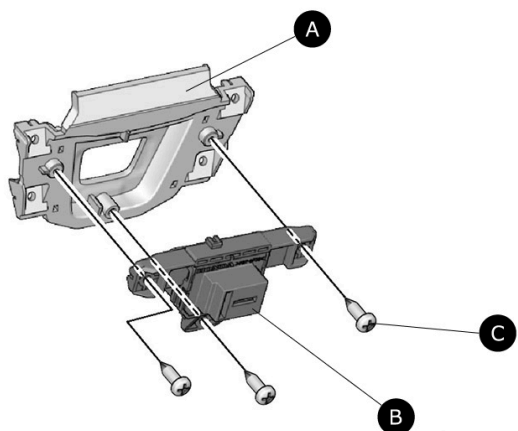

QM61510AA


<b>A</b>	SWITCH TRIM
<b>B</b>	SWITCH
<b>C</b>	SELF-TAPPING SCREW(3)

## 36 Install the switch trim.

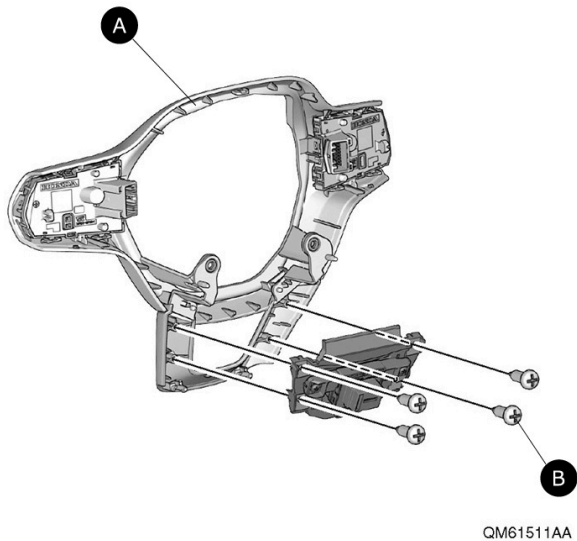

<b>A</b>	STEERING WHEEL TRIM
<b>B</b>	SELF-TAPPING SCREW(4)



## 37 Plug-in the new cable reel cord connectors.

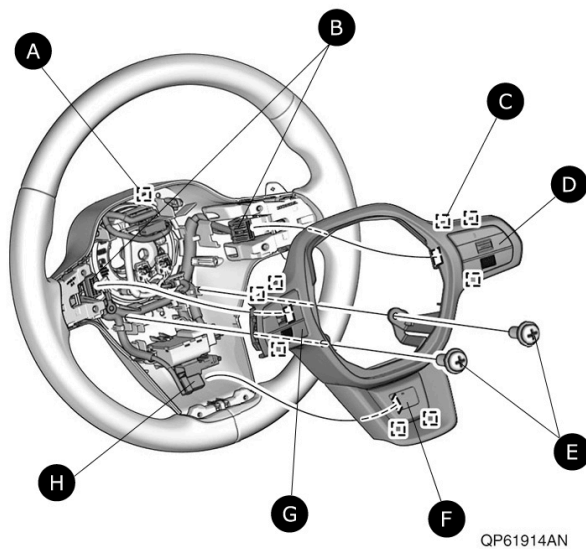

<b>A</b>	RETAINING TAB
<b>B</b>	NEW CABLE REEL CORD 16-PIN CONNECTOR(2)
<b>C</b>	RETAINING TAB(8)
<b>D</b>	RIGHT SWITCH
<b>E</b>	WASHER-SCREW (supplied)(2)
<b>F</b>	SWITCH
<b>G</b>	LEFT SWITCH
<b>H</b>	NEW CABLE REEL CORD 5-PIN CONNECTOR

## 38 Install the steering wheel trim.

# 39 Remove the locking pin.

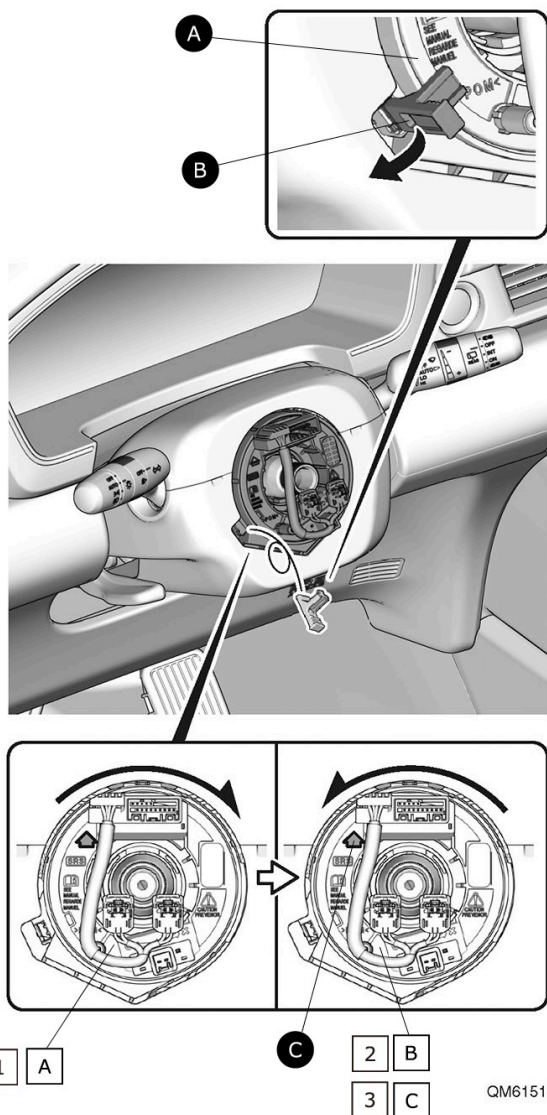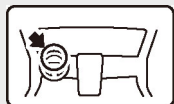

<b>A</b>	NEW CABLE REEL
<b>B</b>	LOCKING PIN
<b>A</b>	Rotate clockwise until it stops.
<b>B</b>	Rotate counterclockwise until the arrow mark on the new cable reel points up.
<b>C</b>	Rotate counterclockwise 2 full turns until the arrow mark points up.
<b>C</b>	ARROW MARK

# 40 Make sure the front wheels are pointing straight-ahead.

# 41 Rotate the new cable reel clockwise until it stops.

# 42 Rotate counterclockwise until the arrow mark on the new cable reel points up.

## 43

Rotate the new cable reel counterclockwise 2 full turns.



### NOTE


The arrow mark on the cable reel should point straight up.

44

Install the new steering wheel.

 NOTICE

- Do not tap on the new steering wheel or the steering column shaft when installing the new steering wheel.
- Engage the new steering wheel hole with the pin of the new cable reel.
- Make sure the harness does not get caught.

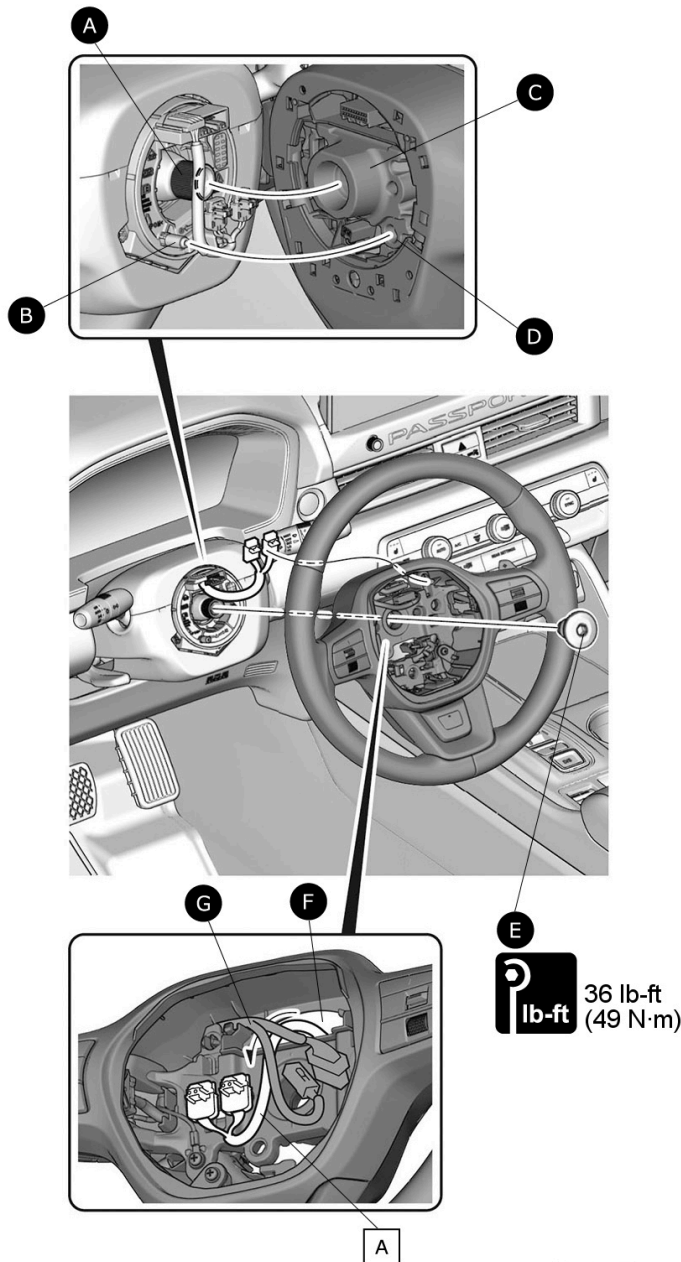

A	STEERING COLUMN SHAFT
B	PIN
C	NEW STEERING WHEEL
D	HOLE
E	NEW STEERING WHEEL BOLT (supplied)
F	NEW STEERING WHEEL OPENING
G	NEW CABLE REEL CORD
A	NEW CABLE REEL 2-PIN CONNECTORS CORD (Route under the new cable reel cord.)

## 45 Install the new steering wheel bolt.



### NOTICE

- Make sure the new steering wheel and the front wheels are in the straight-ahead position.
- Tighten to the specified torque within 5 minutes.

### NOTE

Make sure to use the replacement steering wheel bolt provided in this kit.

## 46 Plug-in the new cable reel cord connector.

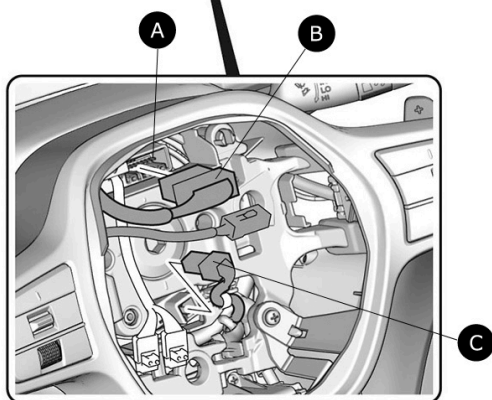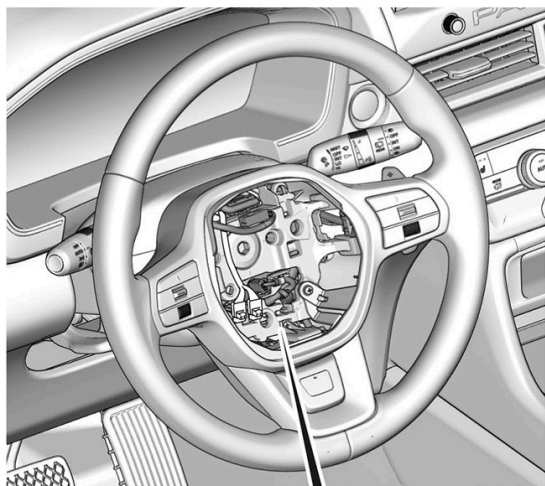

QP61916AN

<b>A</b>	NEW CABLE REEL
<b>B</b>	NEW CABLE REEL CORD 20-PIN CONNECTOR
<b>C</b>	NEW CABLE REEL CORD 2-PIN CONNECTOR




47

Plug-in the new cable reel cord connector and new cable reel connectors.

 **NOTE**

Make sure to correctly connect the connectors.

OPPOSITE SIDE VIEW

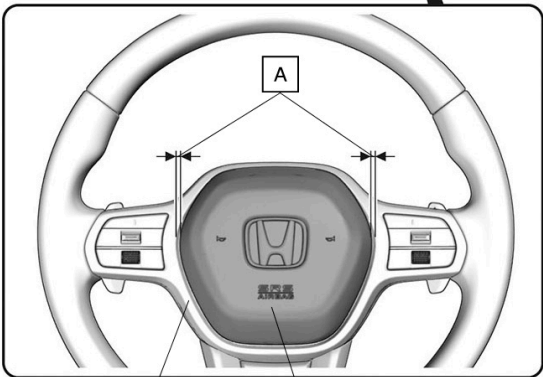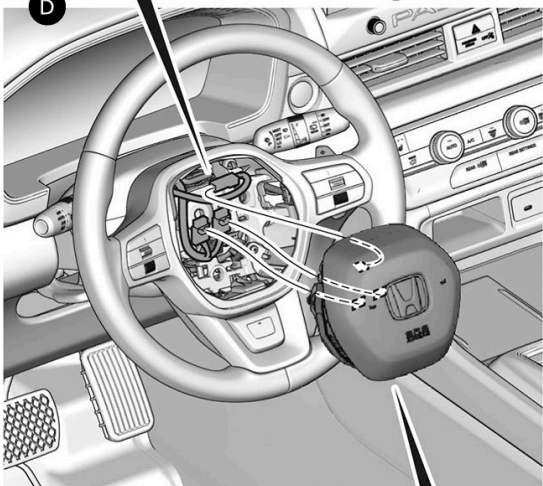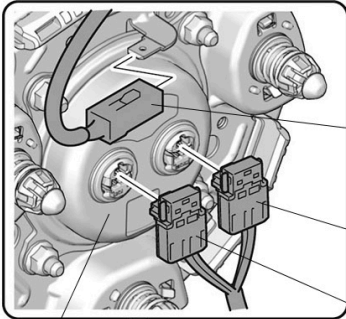

**E**

**F**

QP61917AN

<b>A</b>	NEW CABLE REEL CORD 1-PIN CONNECTOR
<b>B</b>	NEW CABLE REEL 2-PIN CONNECTOR (black)
<b>C</b>	NEW CABLE REEL 2-PIN CONNECTOR (light gray)
<b>D</b>	AIRBAG (inside)
<b>A</b>	Equal spacing.
<b>E</b>	STEERING WHEEL TRIM
<b>F</b>	AIRBAG

## 48 Install the airbag.

### NOTE

Make sure to work with reference to the service information.

## Check After Installation

## 49 Check that all parts are installed and properly routed.

### NOTE


- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

## Installing All Removed Parts

## 50 Install all removed parts except for the resonator.

## Operation Check

## 51 Connect the negative cable to the battery.

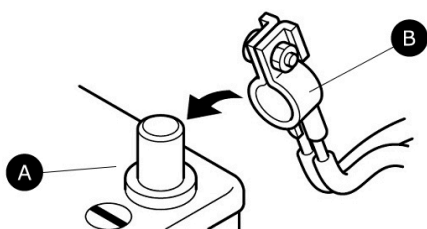

Q060702BM

<b>A</b>	BATTERY
<b>B</b>	NEGATIVE CABLE

## 52 Install the resonator.

## 53 Turn the ENGINE START/STOP button to ON; the SRS indicator should come on for about 6 seconds and then go off.

## Vehicle Check

### Vehicle Check

54

Make sure the horn and steering wheel switches work properly.

55

Rotate the new steering wheel and check for abnormal noise.

56

Make sure the new steering wheel and the front wheels are in the straight-ahead position. If the spoke angle of the new steering wheel is not in the straight-ahead position with the front wheels, adjust the front toe as described in the service information.

57

Make sure the accessory operates as described in the vehicle owner's manual.

58

Make sure all accessories and systems operate properly.

59

If necessary, restore the systems back to normal operation as described in the service information.

60

Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.

### Check/Restoration and Learning Operations

#### NOTE

Refer to the service information.

61

Connect the i-HDS, and clear the DTCs if needed.