



HONDA INSTALLATION INSTRUCTIONS

Accessory

ATF COOLER KIT
P/N 06255-RLX-306

Application

2020 Pilot
(LX, EX and EX-L)

Publications No.


VERSION 1

Issue Date


JUL 2019

PARTS LIST


ATF Cooler

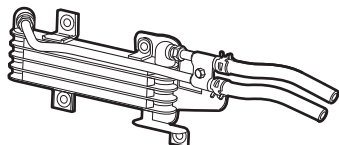


ATF Hose

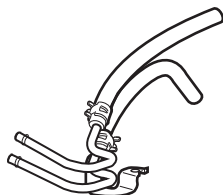

3 Washer Bolts, 6 x 20 mm

 

Washer Bolt 6 x 16 mm

 

4 Hose clamps



Tag



REQUIRED SPECIAL TOOLS

10 mm socket

8 mm Hex socket

T30 Torx socket

Philips screwdriver

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)

- Clip Pliers (T/N 07AAC-001A100)


INSTALLATION

Client Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE: Allow the engine and transmission to cool down before installing the ATF cooler.

1. Remove the front bulkhead cover, the resonator, and the intake air guide.


FRONT BULKHEAD COVER

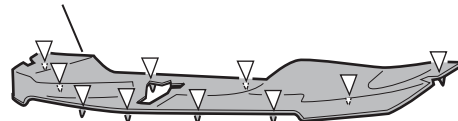

RESONATOR

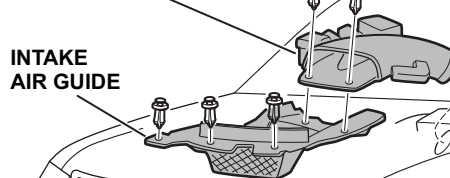


INTAKE AIR GUIDE

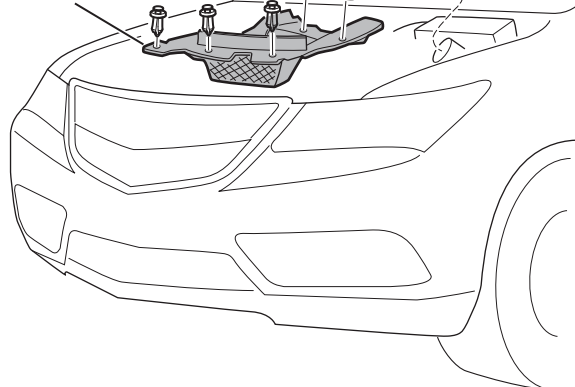

2. Remove the splash shield, and fold down the front bumper skid trim lower flap.



FRONT BUMPER SKID TRIM

Fold down
the lower
flap.

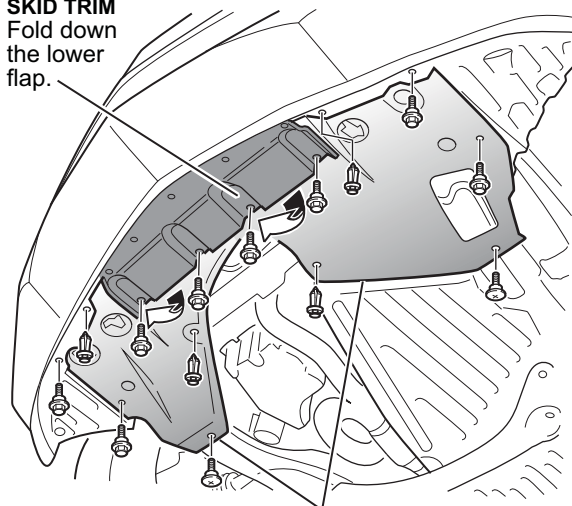


SPLASH SHIELD
Remove.

3. Remove the lower air guide.

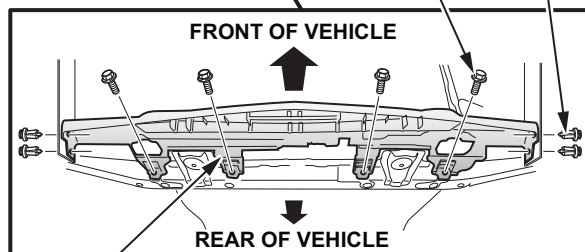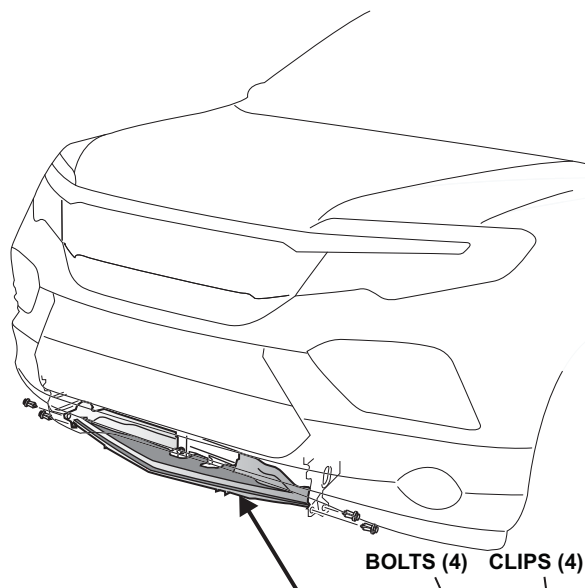


**LOWER AIR
GUIDE**

4. Remove the front bumper center lower grille
NOTE: If equipped, remove the parking sensor sub harness clamps.

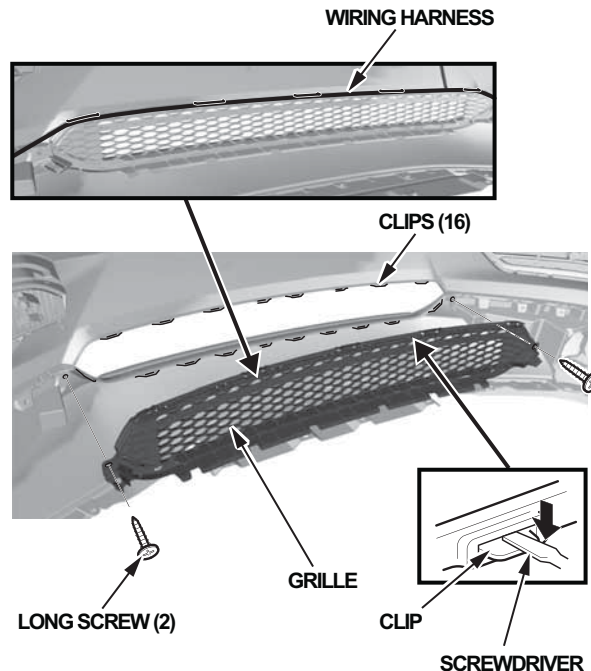


5. Slide the ATF cooler assembly up in front of the radiator as shown.

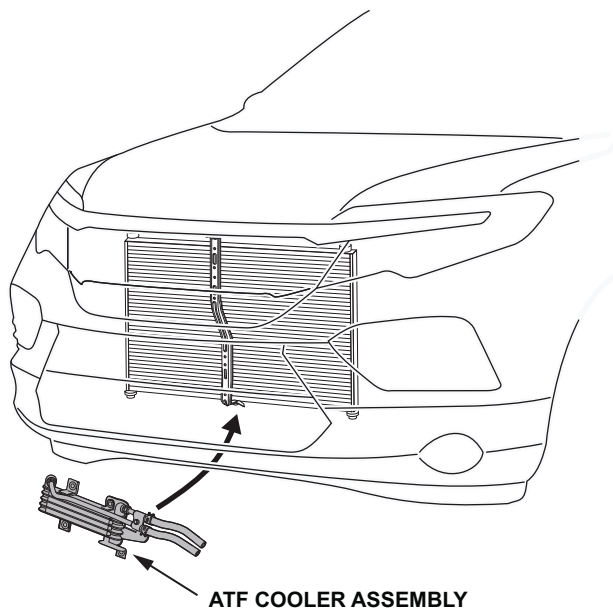


ATF COOLER ASSEMBLY

6. Secure the ATF cooler with the three 6 x 20 mm washer bolts to the front bulk head and the center mount support bracket.


**CENTER MOUNT
SUPPORT BRACKET**

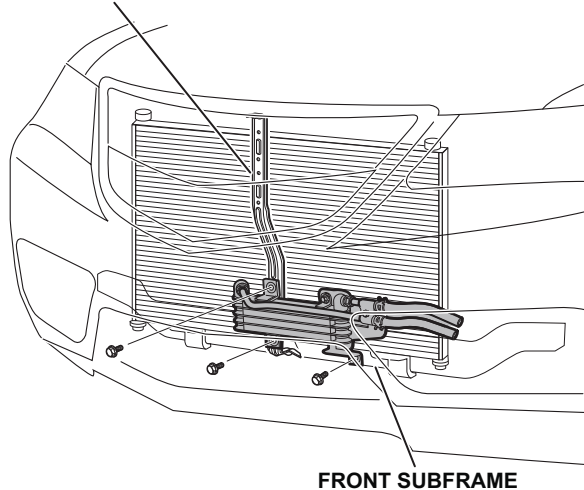

7. Install the ATF pipe assembly bracket to the vehicle's frame with the 6 x 12 mm flange bolt.

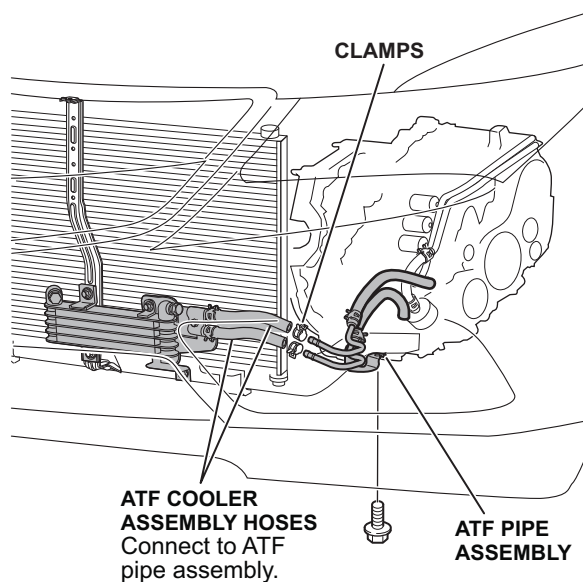

8. Remove the ATF filter hose and discard it. Then connect the upper ATF assembly hose to the ATF pipe, and the lower ATF assembly hose to the ATF filter as shown.

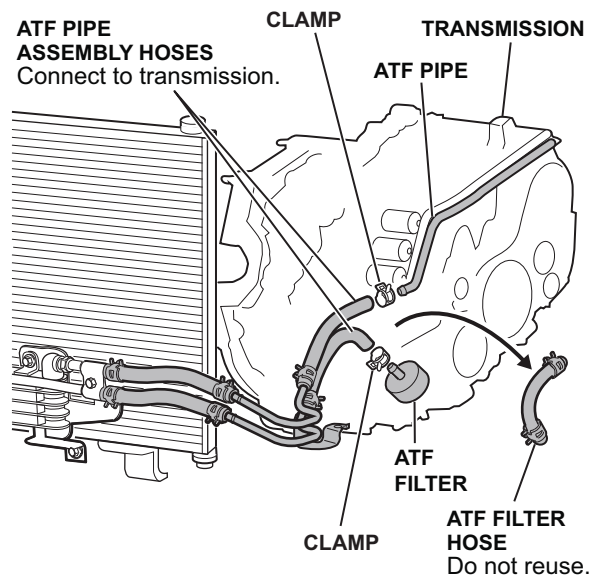

9. Install all removed parts.
10. Inspect the ATF and adjust the fluid level as needed. Refer to the "ATF Level - Check" section in the service information.
11. Install the hang-tag around the rear view mirror.