




20" ALUMINUM WHEEL	2026 PILOT MODEL SERIES	Publications No. VERSION 1
--------------------	----------------------------	-------------------------------

GENERAL VIEW

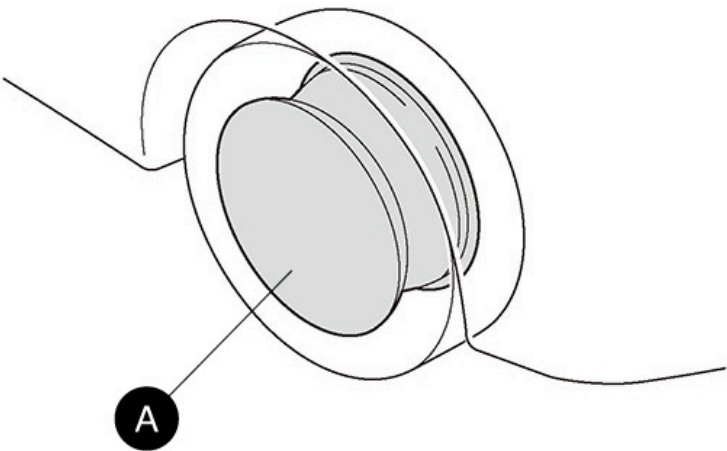

Q0N0101AJ

A	ALUMINUM WHEEL
---	----------------

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.















Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
---	------------------------------	--	---

	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the client. (Do not reuse.)

Safety: General



 
 

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Use a tire changer to install and remove the tires according to the directions in the operation manual furnished with the tire changer. Do not use a tire lever to install and remove the tires as it may cause damage to the tire and aluminum wheel.
- Follow the instructions in the online owner's manual when raising the vehicle, and when removing and installing the wheels. Do not overtighten the wheel nuts.
- Be careful not to damage the vehicle or the parts.
- When using wheel balancer, refer to the Owner's Manual of used machinery.
- The illustrations may differ slightly from the actual accessory.

■ Safety: Accessory


 

- The illustration is an example. It may differ from the actual parts such as shapes.
- This aluminum wheel is designed for use on a vehicle equipped with a tire pressure monitoring system (TPMS).
- This aluminum wheel is equipped with a tire pressure sensor. See the service information for the tire replacement and sensor installation procedures.
- Always install the correct sized tires specified in the tire and loading information label.
- Always use the specified wheel nuts and wheel lock nuts.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60 °F (15 °C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle or moisten it for 24 hours to allow the adhesive to cure.

PARTS LIST

Aluminum Wheel Kit (P/N 08W20-T90-100C)

Parts	Parts name	QTY	Remarks
	Aluminum wheel	1	The illustration may differ from the actual wheel.
	Wheel center cap	1	The illustration may differ from the actual center cap.
	Tire and loading information label A (9020A)	1	May not be used
	Tire and loading information label B (9020B)	1	May not be used
	TPMS sensor	1	sold separately

Aluminum Wheel Kit (P/N 08W20-T90-100E)

Parts	Parts name	QTY	Remarks
	Aluminum wheel	1	The illustration may differ from the actual wheel.
	Tire and loading information label B (9020B)	1	May not be used
	TPMS sensor	1	sold separately

Wheel Center Cap Kit (P/N 08W40-T90-100A)

Parts	Parts name	QTY	Remarks
	Wheel center cap	1	The illustration may differ from the actual center cap.

REQUIRED TOOLS AND SUPPLIES

- Ratchet
- 22 mm Socket
- Torque wrench
- Lubricant
- Valve insert tool
- Shop towel
- Isopropyl alcohol

SPECIFICATIONS

Rim size	20 x 8J (inset 50)	
Tire size	255/50R20 105H	
Bolt hole PCD	120 (5 holes)	
Tire pressure	Front	35 psi (240 kPa)
	Rear	35 psi (240 kPa)

INSTALLATION

NOTE


- The illustrations of the aluminum wheels are shown for reference purposes only.
- Install the correct size tire.
- The wheel nut torque is 94 lb-ft (127 N·m).

1 Clean the TPMS sensor.

2 Apply lubricant to the valve rubber.

NOTE


Do not apply lubricant to or immerse the housing assembly.

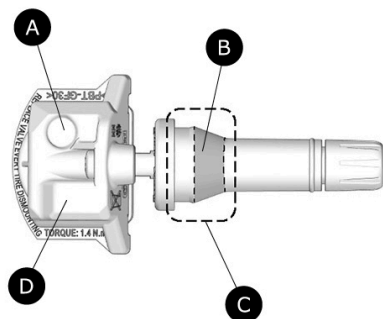

A	HOUSING ASSEMBLY
B	VALVE RUBBER
C	LUBRICATING AREA
D	TPMS SENSOR

QH22103AH

3 Remove the valve cap.

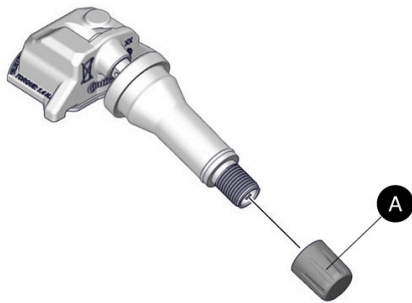

A	VALVE CAP
---	-----------

QH22104AH

4 Clean the aluminum wheel.


NOTE

Clean the mating surface.

5 Insert the TPMS sensor.

NOTE


Make sure to install the TPMS sensor in the correct direction.

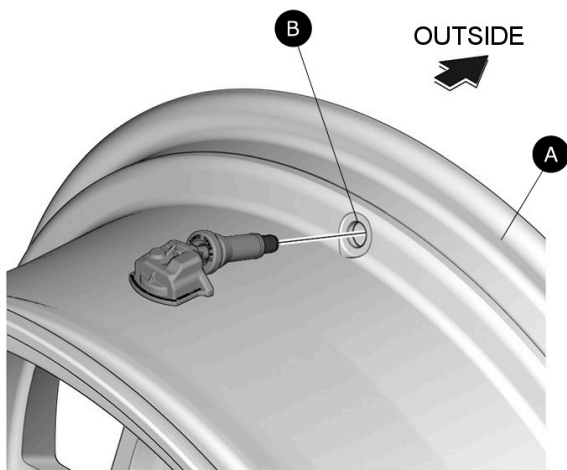

A	ALUMINUM WHEEL
B	RIM HOLE

QQ32104AD



6 Install the valve insert tool.

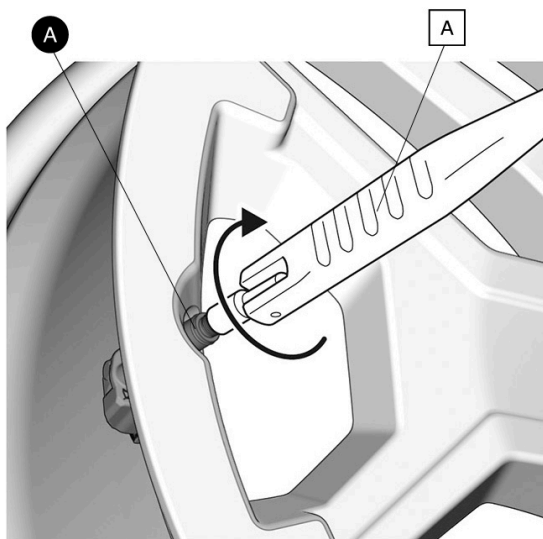

QQ32105AD

A	TPMS SENSOR VALVE
A	VALVE INSERT TOOL (Screw.)

7 Pull the TPMS sensor valve.

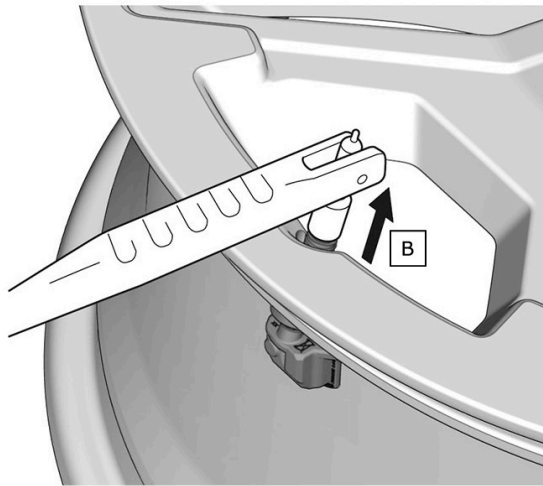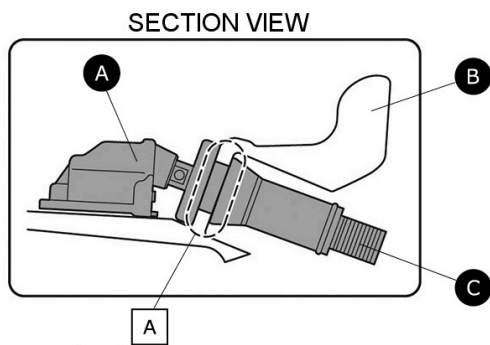

QQ32106AD


A	TPMS SENSOR
B	ALUMINUM WHEEL
C	TPMS SENSOR VALVE
A	Make sure there is no gap in this area.
B	Pull.

8 Install the valve cap.

9 Check the TPMS sensor.

NOTE

Keep angle between the tangent of the rim drop-well and bottom surface of the housing within -10° to $+10^{\circ}$ after insertion.

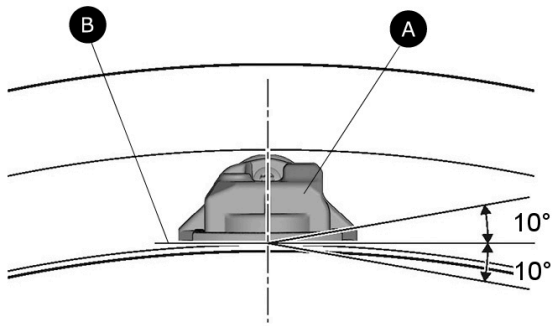

QJ80525AB

A	TPMS SENSOR
B	TANGENT OF THE RIM DROP-WELL

10 Install the tires.

NOTE

- Check that there is no damage to the bead area.
- Use a lubricant to install the tires.
- Always adjust to the tire pressure specified in the tire and loading information label or supplemental information.

11 Install the wheel center caps.

12 Install the wheels.

NOTE

The wheel nut torque is 94 lb-ft (127 N·m).


13

Choose one of these options.


• With standard 18" wheels	
	Go to step 14
• With standard 20" wheels	
	Go to step 16

14 Clean the attaching area.

15 Attach the tire and loading information label A or tire and loading information label B.

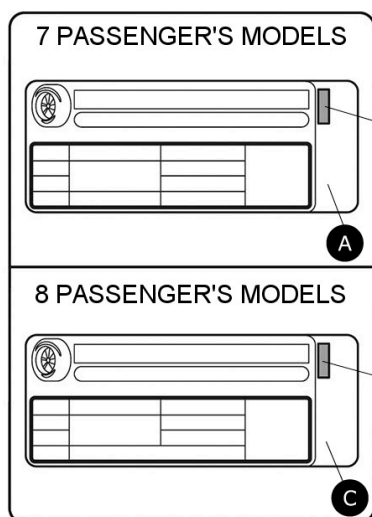

A	TIRE AND LOADING INFORMATION LABEL A
B	9020A
C	TIRE AND LOADING INFORMATION LABEL B
D	9020B
E	STANDARD TIRE AND LOADING INFORMATION LABEL
F	VEHICLE PANEL
A	ADHESIVE BACKING (Remove.)

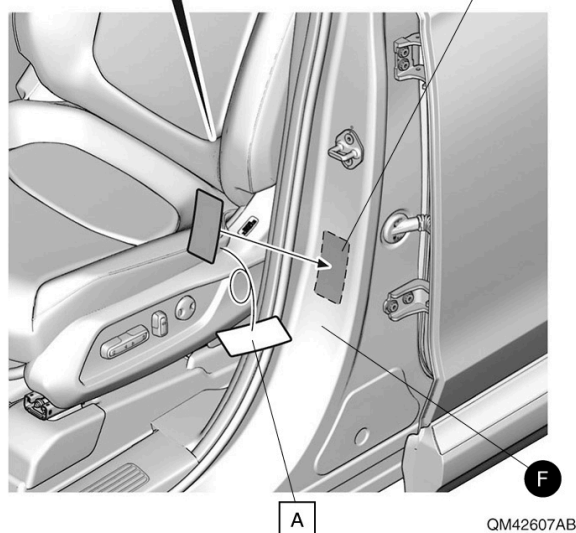

16 Drive the vehicle for at least 40 seconds at a speed of 15 mph (24 km/h) or more. All sensor IDs will be automatically memorized.

17 Check that all parts are installed properly.

Give a copy of this page to your customer.

20" ALUMINUM WHEEL

● Use and Care

- Use a neutral detergent to clean the wheels.
- Rinse off the neutral detergent promptly after cleaning the wheels.