INSTALLATION	Accessory SPLASH GUARDS P/N 08P00-THR-100		Application 2021 ODYSSEY	Publications No. VERSION 1 Issue Date JUL 2020
PARTS LIST Left front splash guard		2	Grommets	
Right front splash guard		Clip		
Left rear splash guard		 TOOLS AND SUPPLIES REQUIRED Phillips screwdriver Stubby Phillips screwdriver Pushpin The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857. Trim Tool Set (T/N SOJATP2014) Plastic Trim Tool (T/N SILTRIMTL10) Illustration of the Splash Guards Installed on the Vehicle 		
Right rear splash guard	63			
14 Self-tapping screws	9		RIGHT REAR SPLASH GUA RIGHT FRONT SPLASH GUARD	ARD
Spring nut	20		LEFT F	EFT REAR SPLASH GUARD

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- Be careful not to damage the paint finish.
- Clean the areas to be covered.


Installing the Front Splash Guards

1. Turn the steering wheel fully counterclockwise.

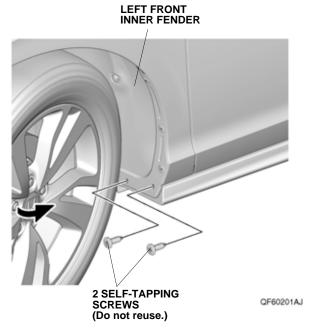


2. Remove the two self-tapping screws from the left front inner fender.

3. Using a pushpin, pierce the center of the two clips on the left front inner fender.

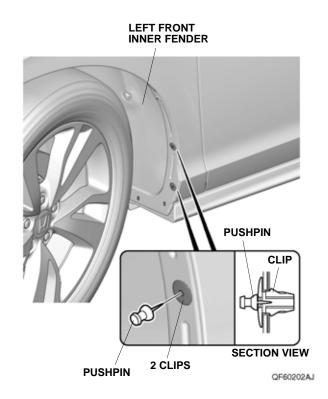


4. Secure the left front splash guard with four selftapping screws in the order shown below. NOTE: Make sure there is no gap between the left front splash guard and the vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the body, and retighten the screws.

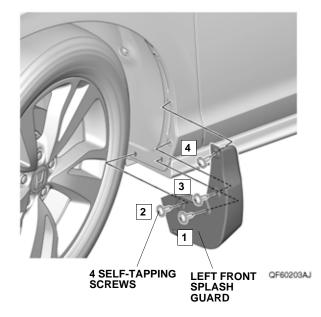


5. Turn the steering wheel fully clockwise, and repeat steps 2 through 4 for the right side of the vehicle.

Installing the Rear Splash Guards


6. Remove the three self-tapping screws and one clip from the rear bumper and left rear inner fender.

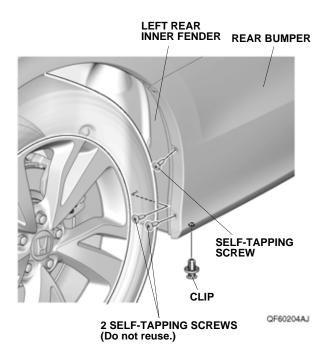


 Locate the recessed mark. Using a pushpin, pierce the rear bumper at the recessed mark. NOTE: Make sure to pierce the recessed mark perpendicular to the rear bumper.

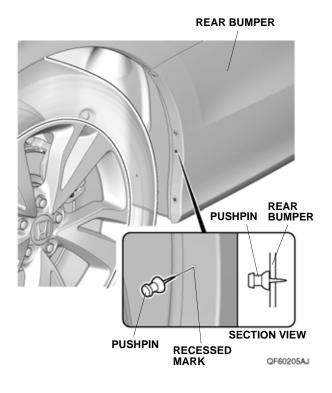

8. Pull apart the rear bumper and the left rear inner fender. Install one grommet on the vehicle panel hole.

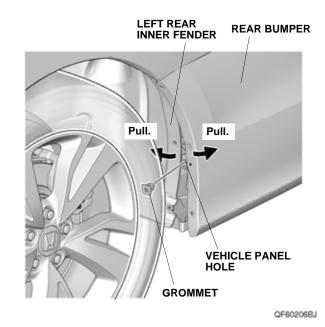


9. Install the self-tapping screw removed in step 6.

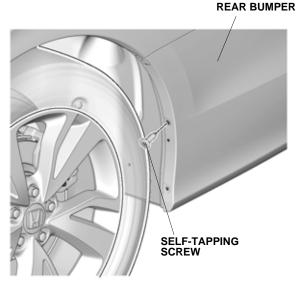


QF70601AH

10. Loosely install the left rear splash guard on the rear bumper and left rear inner fender with three self-tapping screws, and install the clip removed in step 6.

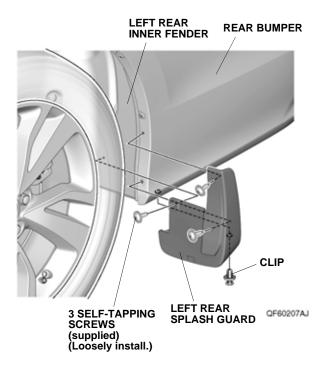


 Secure the left rear splash guard with the three self-tapping screws in the order shown below.
 NOTE: Make sure there is no gap between the left rear splash guard and the bumper. If there is a gap, loosen the self-tapping screws, hold the splash guard against the bumper, and retighten the screws.

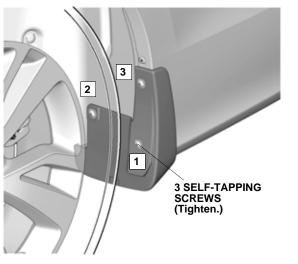


QF70602AH


12. Remove the two self-tapping screws from the right side of the rear bumper.

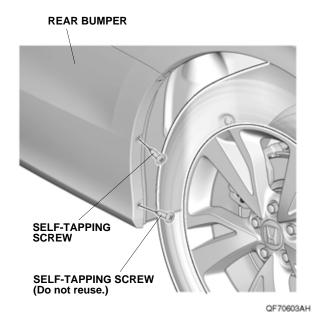


 Locate the recessed mark. Using a pushpin, pierce the rear bumper at the recessed mark. NOTE: Make sure to pierce the recessed mark perpendicular to the rear bumper.

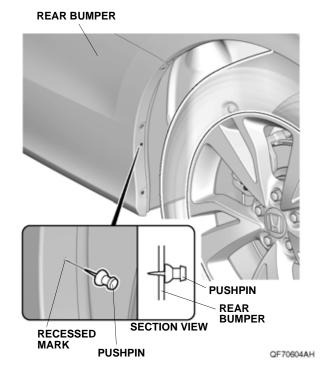

14. Pull apart the rear bumper and the right rear inner fender. Install one grommet on the vehicle panel hole.

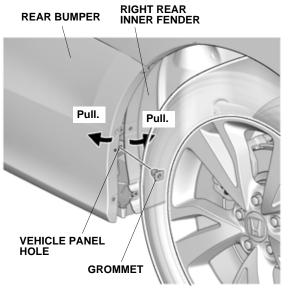


- QF70605BH
- 15. Install the self-tapping screw removed in step 12.

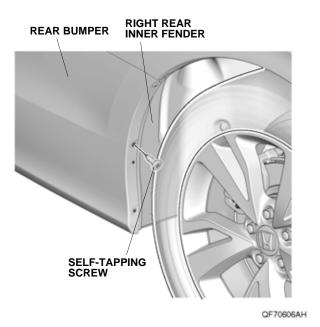


 Install one spring nut into the right rear inner fender hole.
 NOTE: Make sure to install the spring put in the

NOTE: Make sure to install the spring nut in the correct orientation.

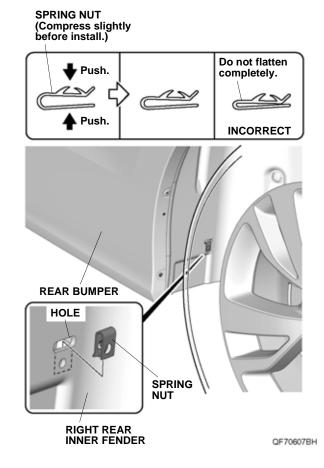

17. Loosely install the right rear splash guard on the rear bumper and spring nut with three self-tapping screws and clip.

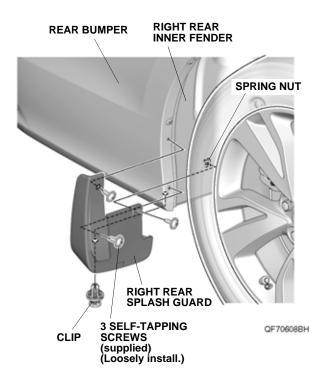

 Secure the right rear splash guard with the three self-tapping screws in the order shown below.
 NOTE: Make sure there is no gap between the right rear splash guard and the bumper. If there is a gap, loosen the self-tapping screws, hold the splash guard against the bumper, and retighten the screws.

