




INSTALLATION INSTRUCTIONS

Accessory INTERIOR TRIM KIT	Application 2003-2006 ELEMENT	Publications No. All 31063
		Issue Date OCT 2005

PARTS LIST


Center Panel Trim Kit (sold separately)
P/N 08Z03-SCV-100A (Blue)
P/N 08Z03-SCV-100C (Gray)

Center trim

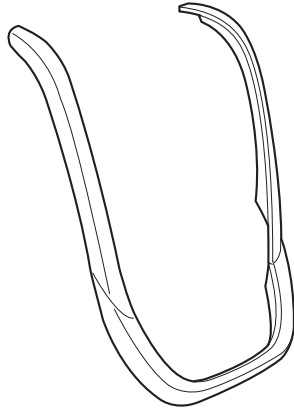


Meter Panel Trim Kit (sold separately)
P/N 08Z03-SCV-100B (Blue)
P/N 08Z03-SCV-100D (Gray)

Meter trim

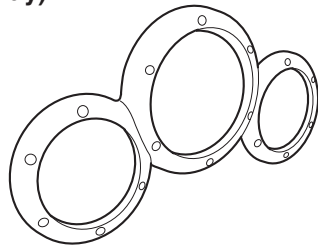


Air outlet trim

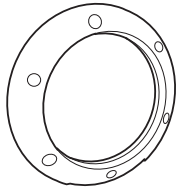


Center Panel Trim Kit (sold separately)
P/N 08Z03-SCV-100E (Blue)
P/N 08Z03-SCV-100F (Gray)

Driver's door switch trim
(EX model only)

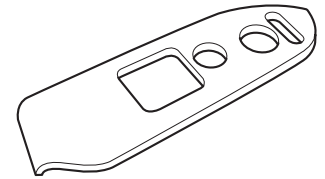

Passenger's door switch trim
(EX model only)

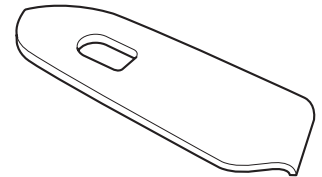

SUPPLIES REQUIRED

- Isopropyl alcohol
- Shop towel
- Masking tape

INSTALLATION

NOTE:


- Be careful not to damage the body paint finish.
- Install this interior trim kit only if the outside air temperature is 60°F (15°C) or above.

- Using isopropyl alcohol on a shop towel, clean the areas where the interior trims will attach.
- Attach a strip of masking tape to the end of each outer adhesive backing, and peel back about 2 to 3 cm (1/2 to 1 in.) of the adhesive backing. Fold the ends back, and tape them to the front of the trim pieces. Remove and discard the inner adhesive backing.
- Position the interior trim pieces on the existing panels. While applying light pressure to the inner panels, carefully remove the adhesive backing from the interior trim.
 - Before installing the switch trim, check that the hole in the panel is aligned with the switch hole.
 - Install the outlet trim so that the line drawn across the top and bottom recesses is vertical with the chipped end facing down.
- After installing the trim, use the palm of your hand to hold pressure against each piece for 30 seconds.

Left Switch Trim: (EX model only)

OUTER ADHESIVE BACKING
[Peel back 2 to 3 cm (1/2 to 1 in.) from the end, and tape it to the front of the trim.]

LEFT SWITCH TRIM

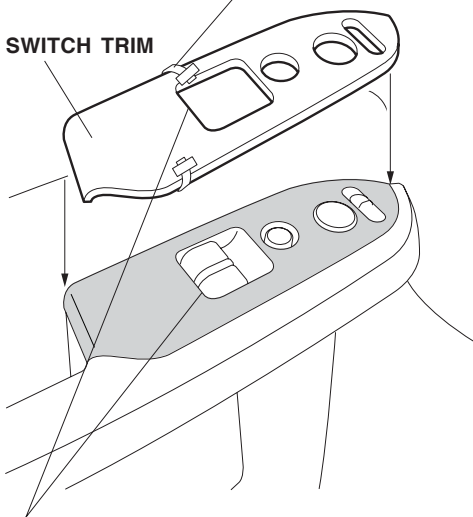


Check that the hole in the switch trim is aligned with the switch hole.

Right Switch Trim: (EX model only)

OUTER ADHESIVE BACKING
[Peel back 2 to 3 cm (1/2 to 1 in.) from the end, and tape it to the front of the trim.]


RIGHT SWITCH TRIM

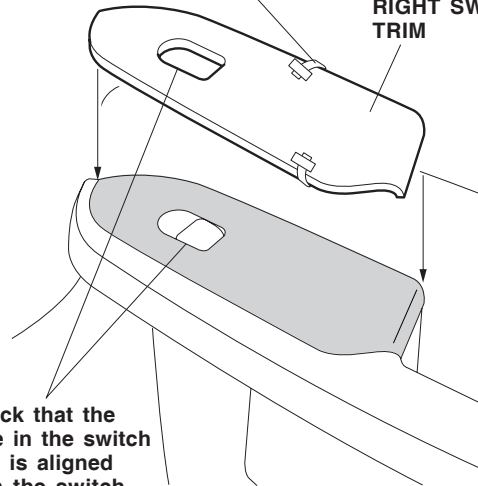

Check that the hole in the switch trim is aligned with the switch hole.

Right and Left Air Outlet Trims:


OUTER ADHESIVE BACKING
[Peel back 2 to 3 cm (1/2 to 1 in.) from the end, and tape it to the front of the trim.]

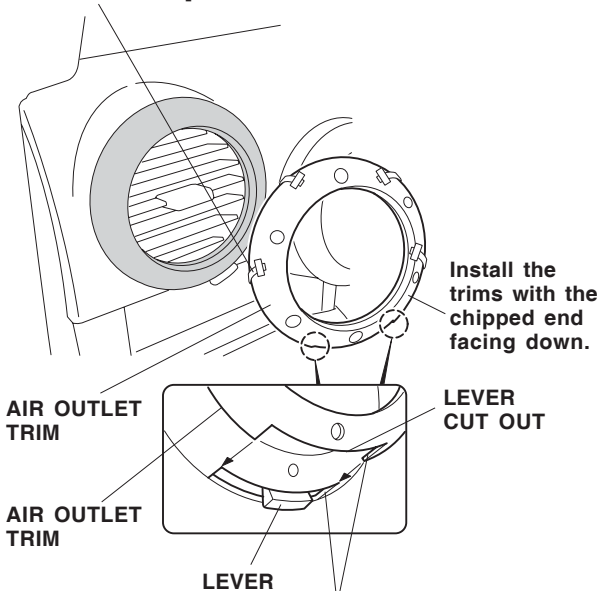

Install the trims with the chipped end facing down.

Install the trims so that the cutout on the bottom matches the lever.


Center Trim:

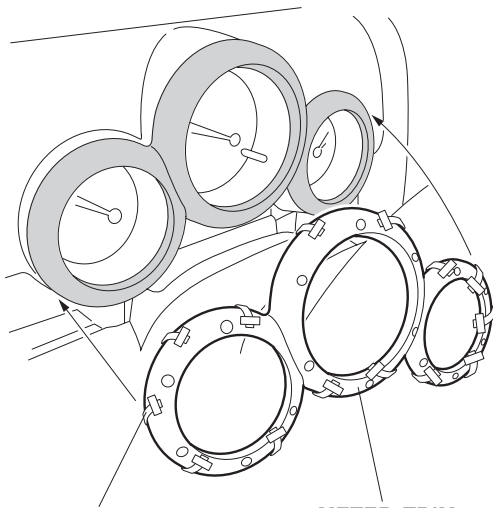

OUTER ADHESIVE BACKING
[Peel back 2 to 3 cm (1/2 to 1 in.) from the end, and tape it to the front of the trim.]

METER TRIM

Meter Trim:

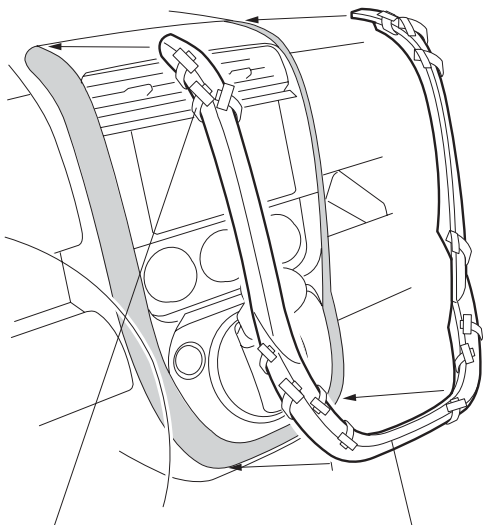

OUTER ADHESIVE BACKING
[Peel back 2 to 3 cm (1/2 to 1 in.) from the end, and tape it to the front of the trim.]

CENTER TRIM

USE AND CARE

Use a sponge or soft cloth dampened with mild detergent and water solution. After cleaning, wipe with a clean, soft cloth. Do not use cleaners or polishers containing abrasive compounds to clean the interior trims as they may damage the surface.