



# INSTALLATION INSTRUCTIONS

Accessory <b>LOWER TRIM GARNISH</b> P/N 08P01-S9V-100A	Application <b>2003-2005 PILOT</b>	Publications No. <b>All 28064</b>
		Issue Date <b>SEP 2004</b>

## PARTS LIST

Front lower trim chrome piece



## TOOLS AND SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel

Masking tape


## INSTALLATION

NOTE: This front lower trim kit should only be installed if the ambient air temperature is 60°F (15°C) or above.

1. Using isopropyl alcohol on a shop towel, clean the area where the front lower trim chrome piece will attach.
2. On the back of the front lower trim chrome piece, attach a strip of masking tape to the ends of the outer backings and remove 2 to 3 inches from the ends. Fold the ends back, and tape them to the front of the chrome piece. Remove the remaining backing from the trim piece.

### OUTER BACKING

Remove 2 to 3 inches of adhesive backing and tape it to the front of the chrome piece.

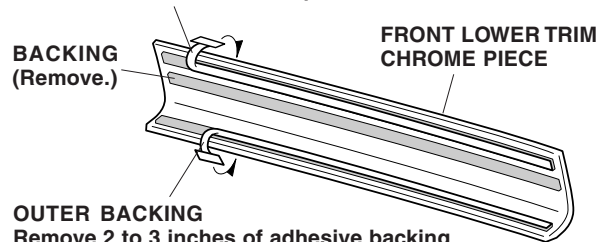

### OUTER BACKING

Remove 2 to 3 inches of adhesive backing and tape it to the front of the chrome piece.

3. Position the front lower trim chrome piece on the front lower trim equally on both sides. While holding pressure on each chrome piece, slowly and carefully remove each backing. After installing, hold the chrome piece firmly against the trim with the palm of your hand for 30 seconds.

Position the chrome piece on the front lower trim equally on both sides.

