



INSTALLATION INSTRUCTIONS

Accessory

WOOD-LOOK TRIM KIT
FACTORY RES
P/N 08Z03-S9V-100B

Application

2003-2005 PILOT

Publications No.

All 28085

Issue Date

SEP 2004

PARTS LIST

Wood-look RES trim



SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel

Masking tape


INSTALLATION

NOTE: This wood RES trim should be installed only if the outside air temperature is 60°F (15°C) or above.

1. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the wood-look RES trim will attach.
2. Attach a strip of masking tape to the end of each outer adhesive backing, and remove 2 to 3 inches of the adhesive backing. Fold the ends back, and tape them to the front of the trim. If necessary, remove and discard the inner adhesive backings.
3. Position the trim on the existing panel. While applying light pressure on the trim, carefully remove the adhesive backings.


4. After installing the trim, use the palm of your hand to hold pressure against the trim for 30 seconds.

TRIM ATTACHING SURFACE
Clean with isopropyl alcohol.

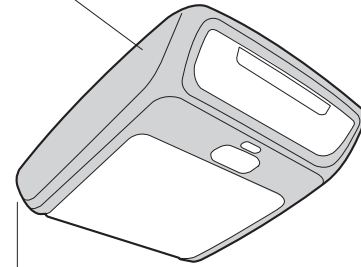

WOOD-LOOK
RES TRIM

OUTER ADHESIVE
BACKING
Remove 2 to 3 inches
from the end, and tape it
to the front of the trim.

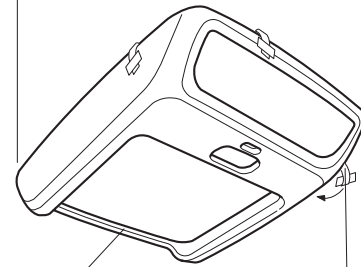

USE AND CARE

Use a sponge or soft cloth dampened with mild detergent and water solution. After cleaning, wipe with a clean, soft cloth. Do not use cleaners or polishers containing abrasive compounds to clean the wood-look RES trim as they may damage the surface.