



INSTALLATION INSTRUCTIONS

Accessory

SIDE UNDER SPOILER

Application

2006-2008 CIVIC
2-DOOR

Publications No.

All 37696


Issue Date

AUG 2007


NOTE: Cannot be installed with splash guards.

PARTS LIST

Left side under spoiler

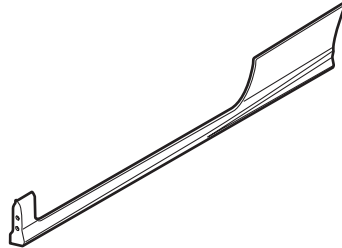


Right side under spoiler

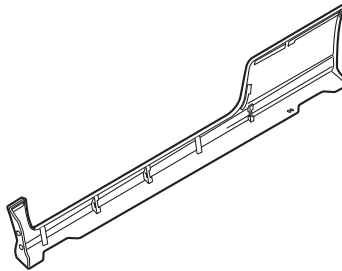


2 Side lower brackets

The side lower bracket will deform easily. Handle the part carefully with both hands when you move it.

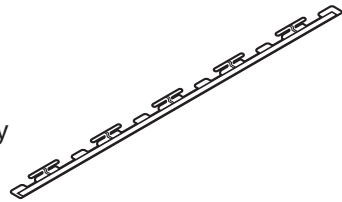


Template

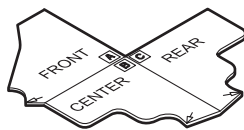

4 Self-tapping screws



2 Under brackets

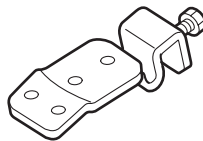

4 Screws



TOOLS AND SUPPLIES REQUIRED

- Phillips screwdriver
- Tape measure
- Felt-tip pen
- Shop towel
- Isopropyl alcohol
- Masking tape
- Scissors
- Utility knife
- Touch-up paint
- 8 mm Wrench
- Gloves
- Heat gun
- Sprayer
- Squeegee
- Neutral detergent


INSTALLATION

NOTE:


- Be careful not to damage the body finish when installing the side under spoilers.
- Install the left side under spoiler first, then install the right side under spoiler.
- Be sure to use the bolts, nuts, and screws furnished with this kit. Use of bolts, nuts, and screws other than those not included in this kit can cause damage to the parts.
- These installation instructions show the left side under spoiler being installed. The same procedure applies to installing the right side under spoiler.
- Wear gloves to protect your hands while handling the side lower bracket.
- This side under spoiler kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours.

1. Position the left side under spoiler on the vehicle body to check the installation position. Using isopropyl alcohol on a shop towel, clean the surface of the vehicle thoroughly where the left side under spoiler will be attached to ensure secure adhesion of the double-sided adhesive tape.


Thoroughly clean the surface where the left side under spoiler will be attached with isopropyl alcohol.

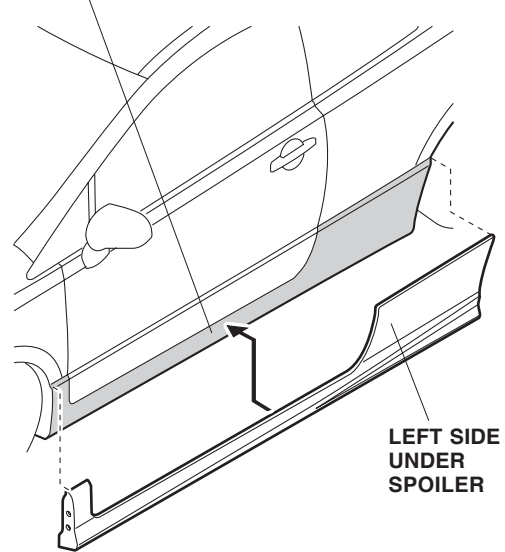


2. Using a tape measure and felt-tip pen, measure and mark the body as shown.

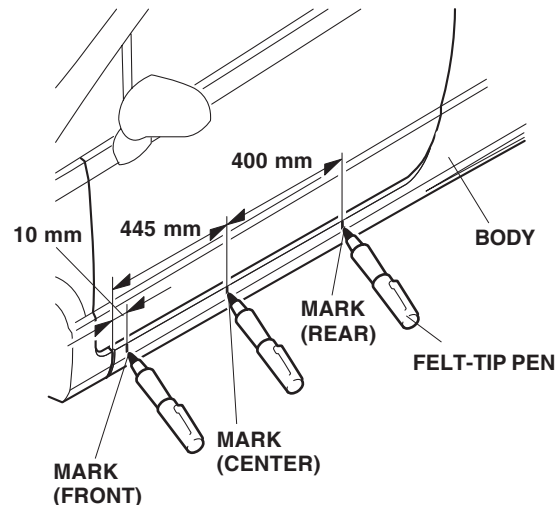

3. Cut out part A from the template.

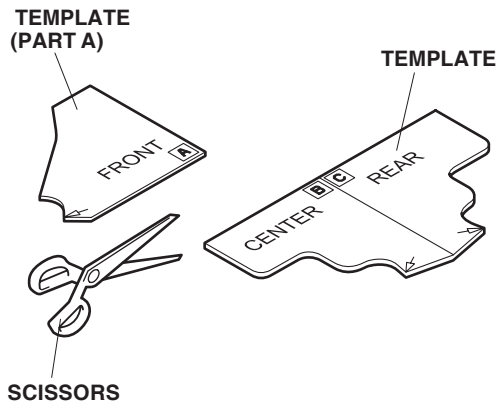


4. Measure and cut both ends of the adhesive backing attached to the inner side of the side lower bracket, and remove the cut pieces of the adhesive backing from both ends.

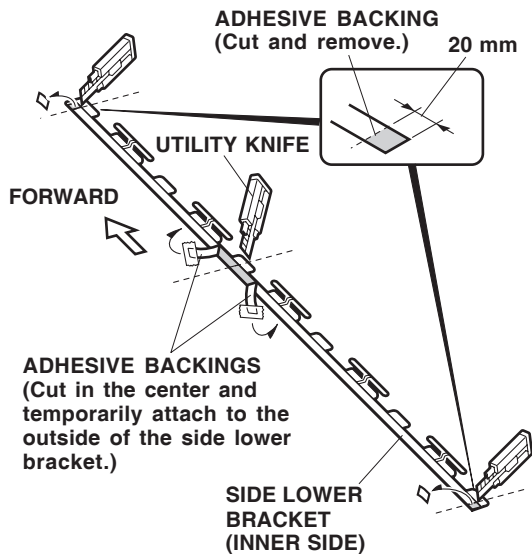

5. Using a utility knife, cut the center of the adhesive backing attached to the side lower bracket.
6. Attach a piece of adhesive tape to each of the cut ends of the adhesive backing, and then temporarily attach them to the outside of the side lower bracket.

7. Align the first rib on the front of the side lower bracket with the mark (front) you made in step 2.

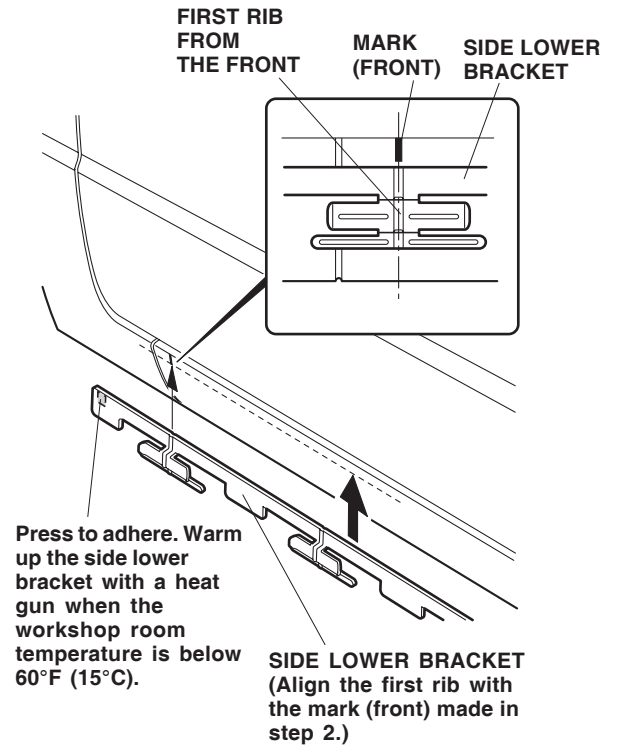

8. Temporarily adhere the side lower bracket to the vehicle body by pressing the front end of the side lower bracket (where you removed the adhesive backing) against the vehicle body.
- Carefully position the side lower bracket on the vehicle body so you don't bend it, and adhere it to the vehicle body securely.
 - Wear gloves to protect your hands during this operation.
 - Do not worry if the side lower bracket is slightly slanted as vertical adjustment of the side lower bracket is not made in this step of the procedure.
 - If the side lower bracket comes off after temporarily adhering it, repeat step 1 to clean the surface with isopropyl alcohol where the side lower bracket will attach.
 - When the workshop room temperature is below 60°F (15°C), warm up the side lower bracket to 60°F (15°C) or above before attaching it to the vehicle body.

