



INSTALLATION INSTRUCTIONS


Accessory
REAR UNDER SPOILER

Application
**2007 CIVIC Si
4-DOOR**


Publications No.
All 34139
Issue Date
NOV 2006

PARTS LIST

Rear under spoiler

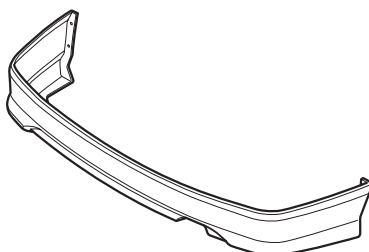


4 Square head bolts




4 Flange nuts



4 Flange bolts



2 Black flange bolts



2 Clip nuts



4 Spacers



TOOLS REQUIRED

- Phillips screwdriver
- Flat-tip screwdriver
- Ratchet
- 10 mm socket
- Drill
- 3 mm and 10 mm Drill bits
- Clip remover
- Pushpin
- Blanket
- Masking tape
- Isopropyl alcohol
- Shop towel
- Eye protection (face shield, safety goggles, etc.)
- Hacksaw

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- Be careful not to damage the rear bumper and body paint finish.
- This rear under spoiler kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to "cure", do not wash the vehicle for 24 hours.

