



HONDA INSTALLATION INSTRUCTIONS

Accessory

CARGO NET
P/N 08L96-T2A-101

Application

**2017 ACCORD 4-DOOR
AND ACCORD HYBRID**

Publications No.


VERSION 2

Issue Date

JUN 2016

PARTS LIST

Cargo net

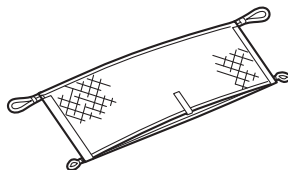

2 Anchors A (small)



2 Anchors B (large)




4 Bolts




4 Rivet nuts




Right template (petrol models)
(Not be used)

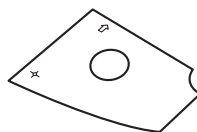


Left template (petrol models)
(Not be used)

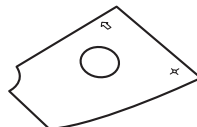


Right template (hybrid models)

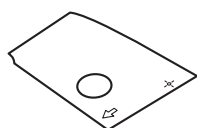

Left template (hybrid models)

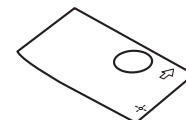

Accessory User's Information Manual

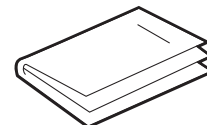

TOOLS AND SUPPLIES REQUIRED

19 mm Open end wrench

Pushpin

Drill

3 mm and 9 mm Drill bits

15 mm Hole saw

Eye protection (face shield, safety goggles, etc.)

File

Touch-up paint

Hex wrench

Ruler

Utility knife


Tape

Masking tape

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Plastic Trim Tool (T/N SILTRIMTL10)
- Trim Tool Set (T/N SOJATP2014)
- Rivet Nut Tool, 6 mm (T/N 07AAE-000A100)

Illustration of the Cargo Net in the Vehicle

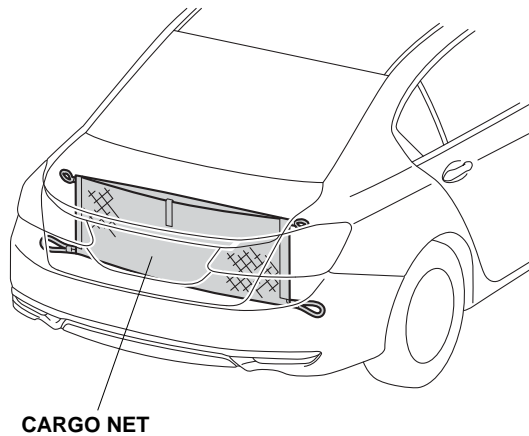

CARGO NET


QE12601AG

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE: Be careful not to damage the body.


1. Open the Trunk. Remove the trunk floor.

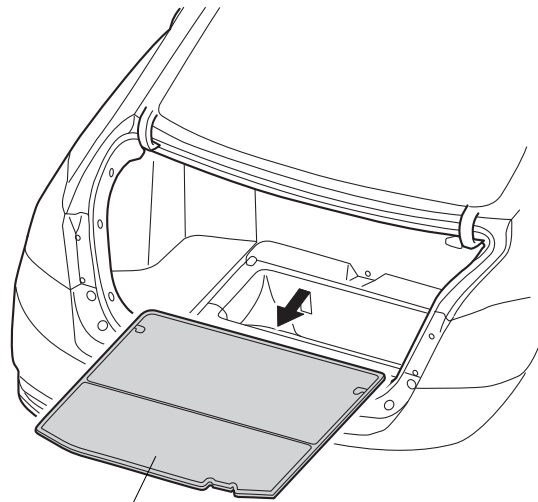

TRUNK FLOOR


QE92402AN

2. Remove the trunk rear trim panel.

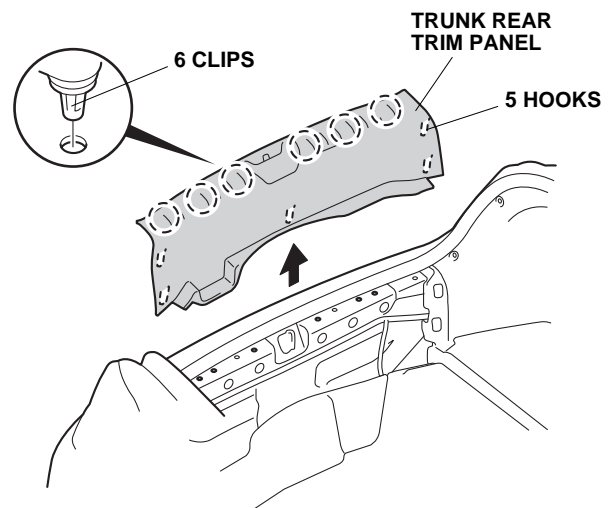


QBD1002AB


3. Remove the tool box.

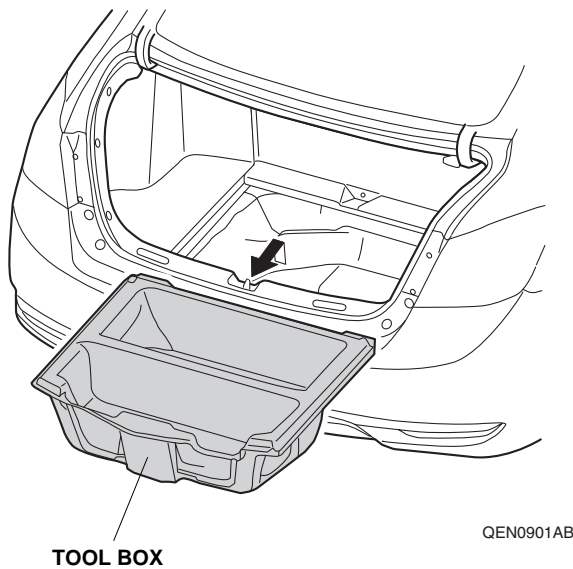


4. Push on the tabs, and remove the cargo hook.

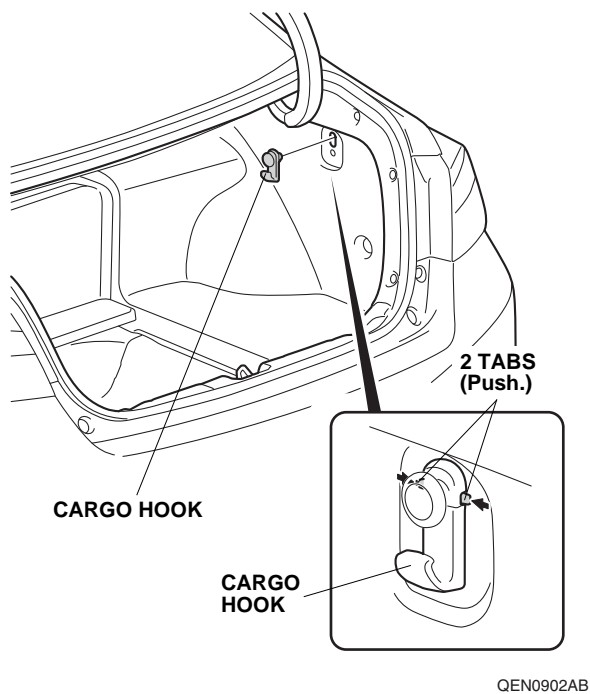

5. Pull away the weatherstrip. Release the right and left trunk side trim panels.

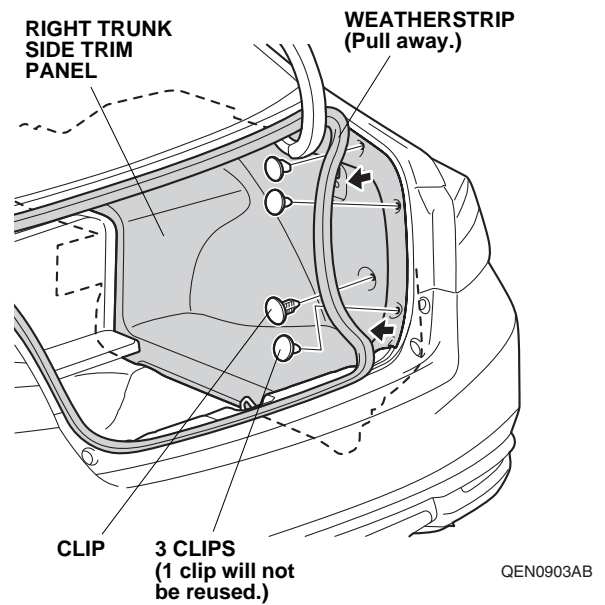


6. Wearing eye protection, use a 9 mm drill bit to enlarge one clip hole to 9 mm.
- Wrap tape around the drill bit at 15 mm (0.59 in.) from the tip of the bit.
 - Remove any burrs from the edge of the hole. Apply touch-up paint to the drilled surface and allow the paint to dry thoroughly.

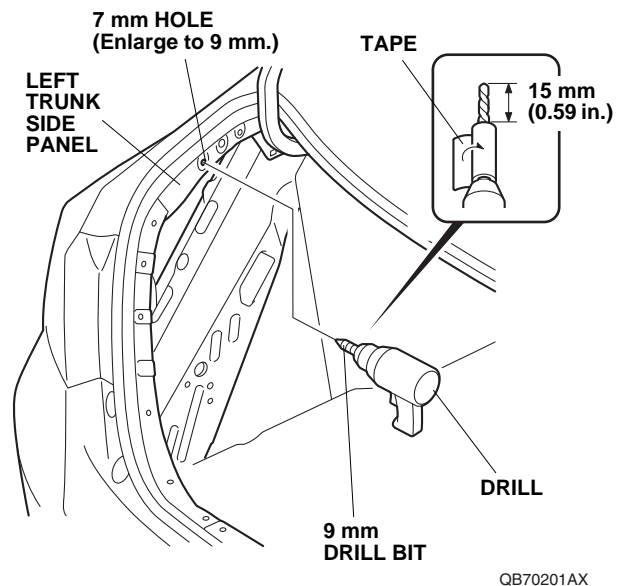


7. Repeat step 6 on the right side of the vehicle.

8. Thread the rivet nut onto the mandrel of the rivet nut tool as shown.

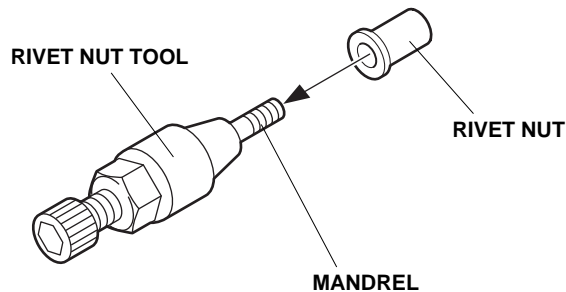

771013AE


9. Insert the rivet nut into the hole in the left trunk side panel and install the hex wrench on the rivet nut tool.

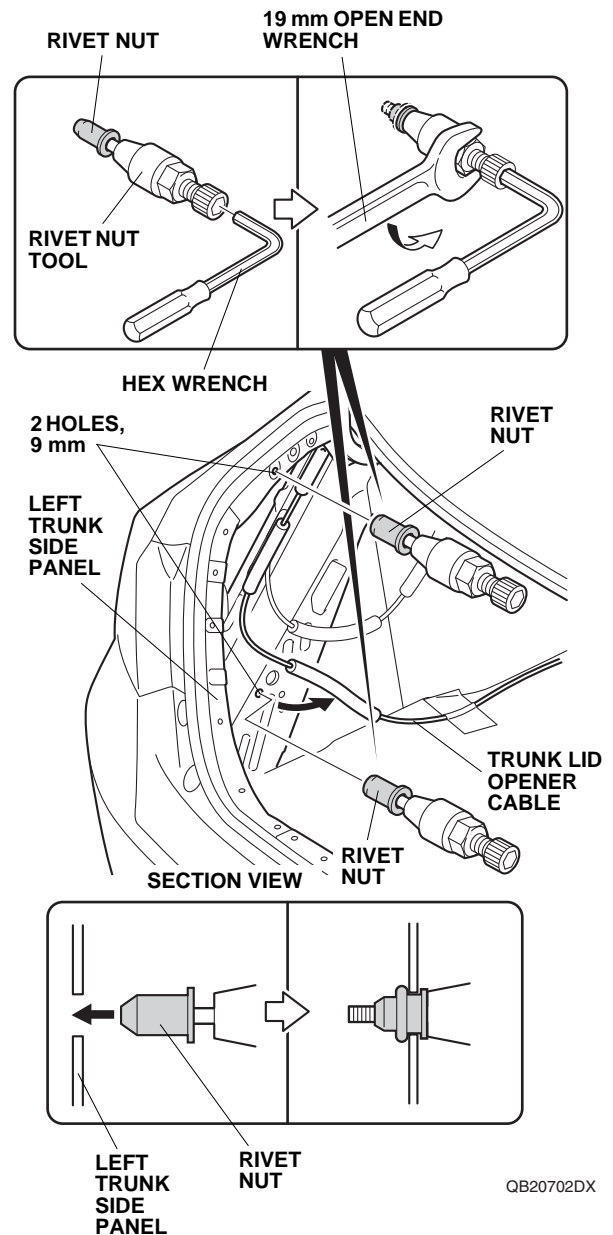


QB20702DX

10. While holding the rivet nut tool with the hex wrench, turn the 19 mm wrench counterclockwise and install the rivet nut into the left trunk side panel.
11. Remove the tool from the rivet nut by turning the hex wrench counterclockwise.
12. Repeat steps 8 through 11 to install a second rivet nut on the left side.


13. Repeat steps 8 through 11 to install the two rivet nuts on the right side.

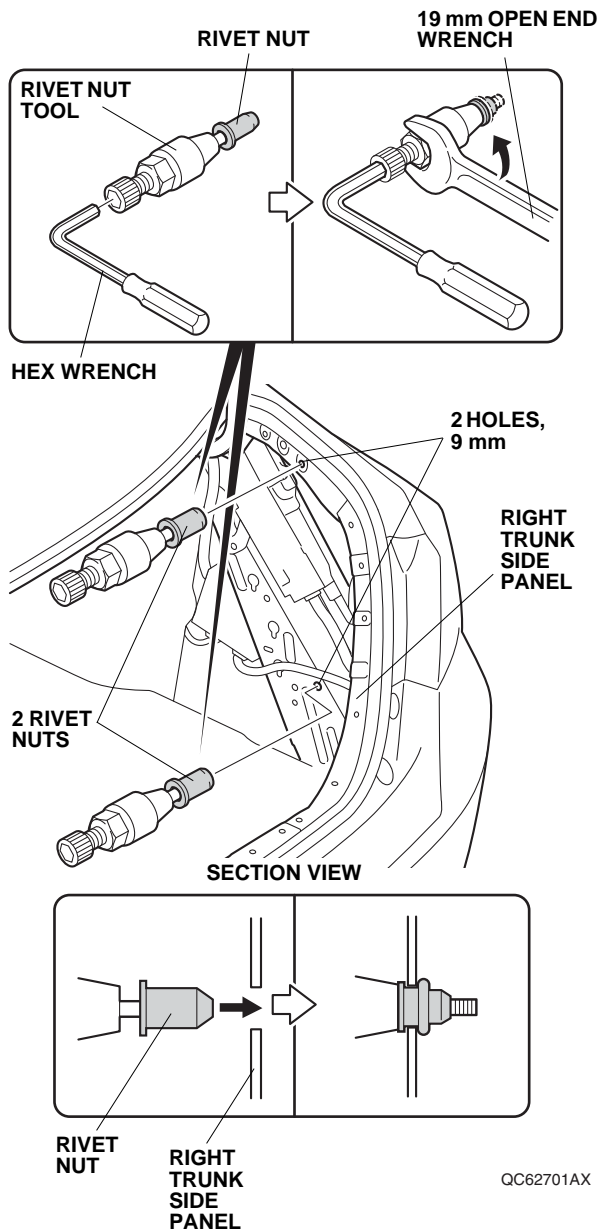


14. Pull away the left trunk side trim panel. Using a utility knife, cut out the insulation from the left trunk side trim panel as shown.

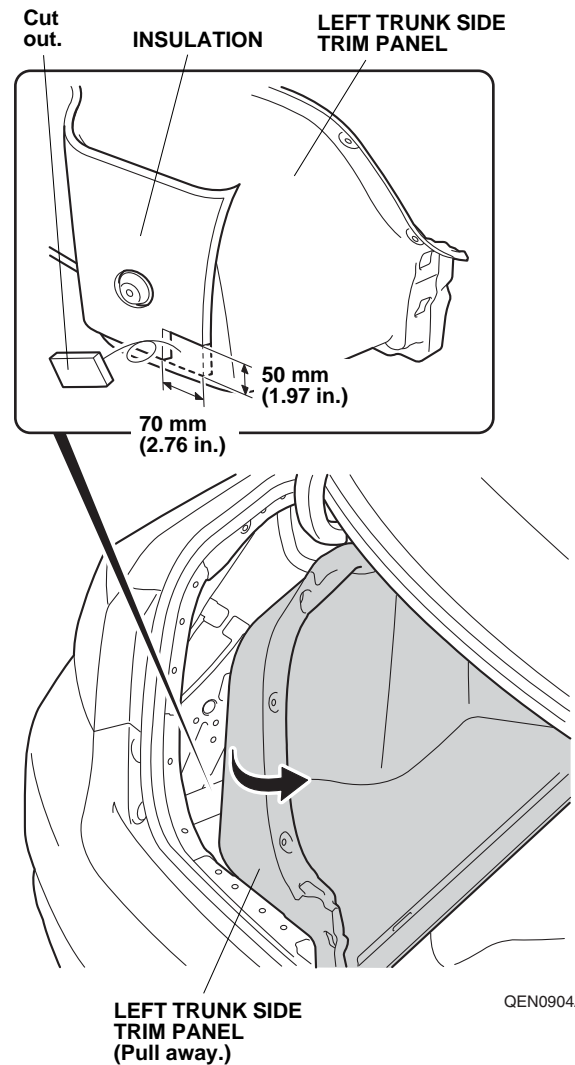


15. Attach the left template to the left trunk side trim panel with masking tape as shown.

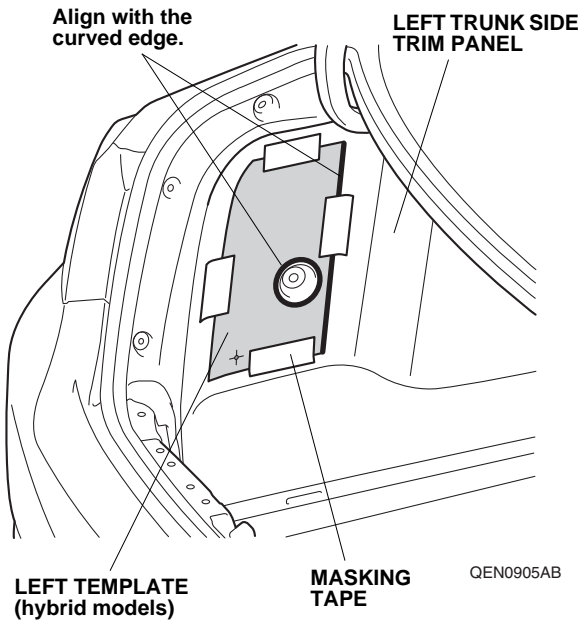

16. Using a felt-tip pen, mark the left trunk side trim panel through the hole in the left template. Then, remove the left side template.

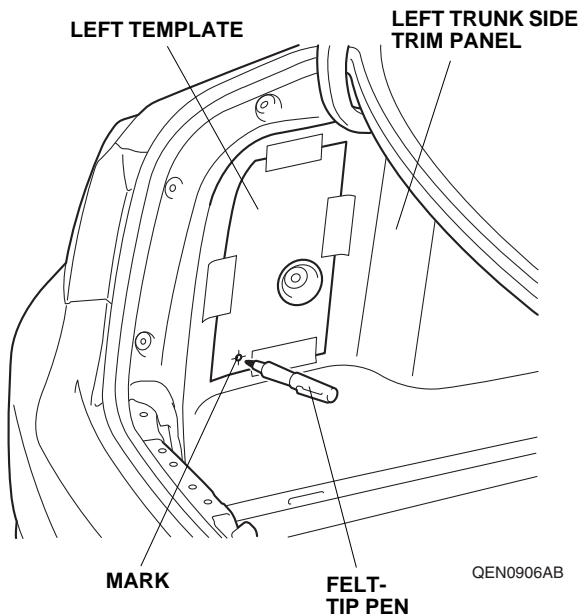


17. Using a pushpin, pierce the left trunk side trim panel at the mark you made in step 16.

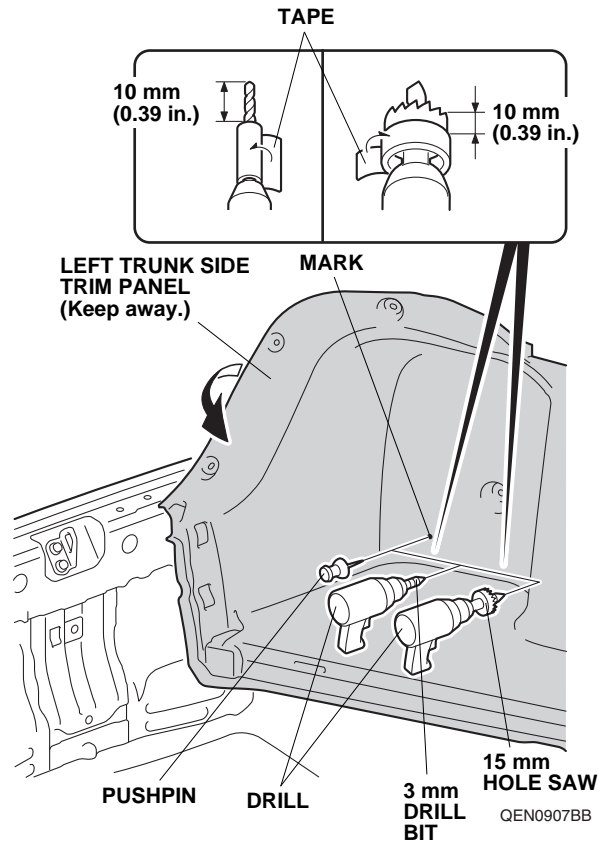


18. While wearing eye protection, drill the pierced mark in the left trunk side trim panel to 15 mm. First drill with a 3 mm drill bit, and finish with a 15 mm hole saw. Remove any burrs.

NOTE: Wrap tape around a 3 mm drill bit and a 15 mm hole saw 10 mm (0.39 in.) away from the tip, or use a drill stop.


19. Pull away the right trunk side trim panel. Using a utility knife, cut out the insulation from the right trunk side trim panel as shown.

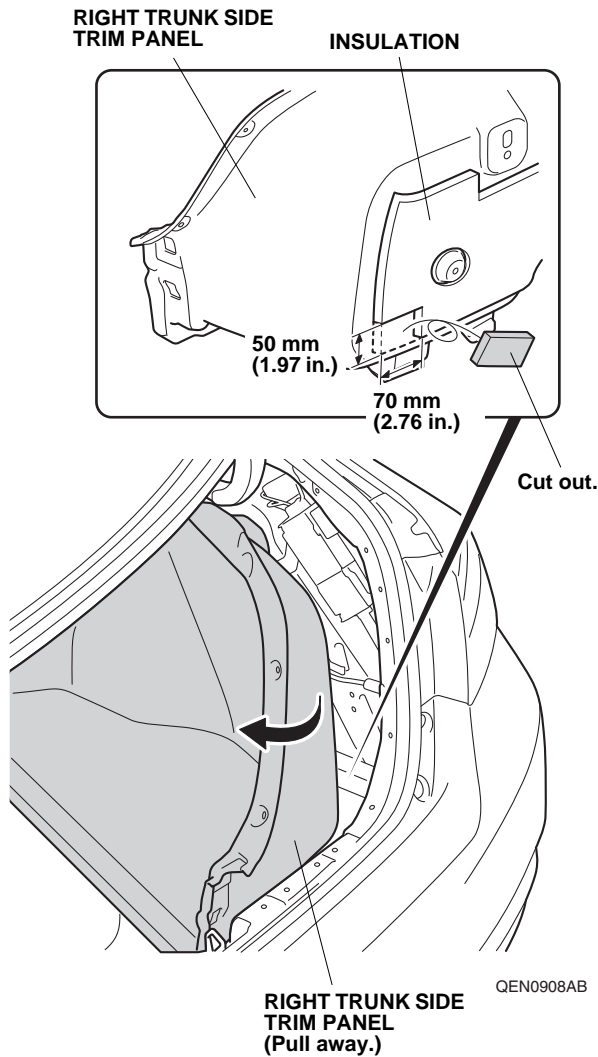


20. Attach the right template to the right trunk side trim panel with masking tape as shown.

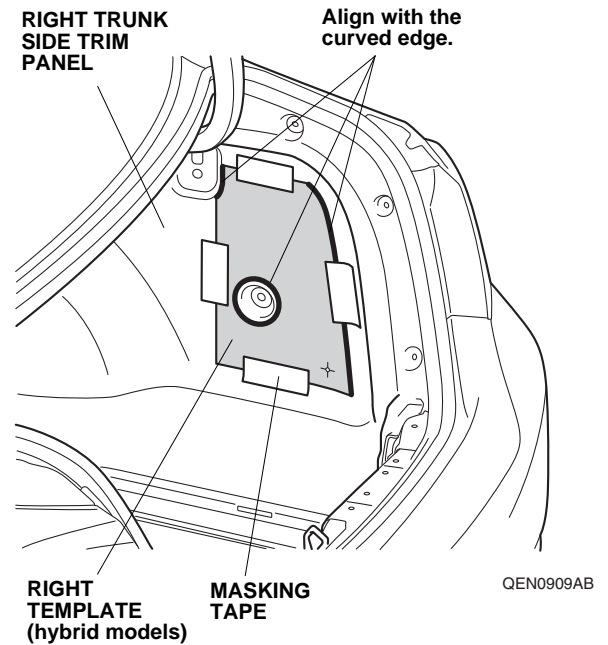

21. Using a felt-tip pen, mark the right trunk side trim panel through the hole in the right template. Then remove the right side template.

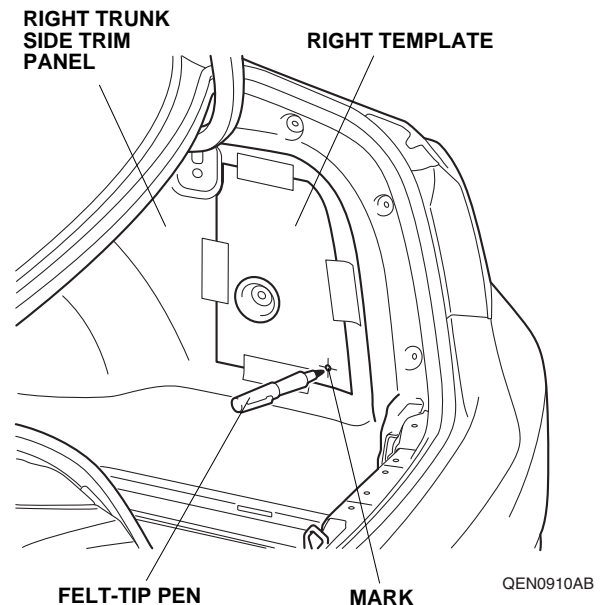


22. Using a pushpin, pierce the right trunk side trim panel at the mark you made in step 21

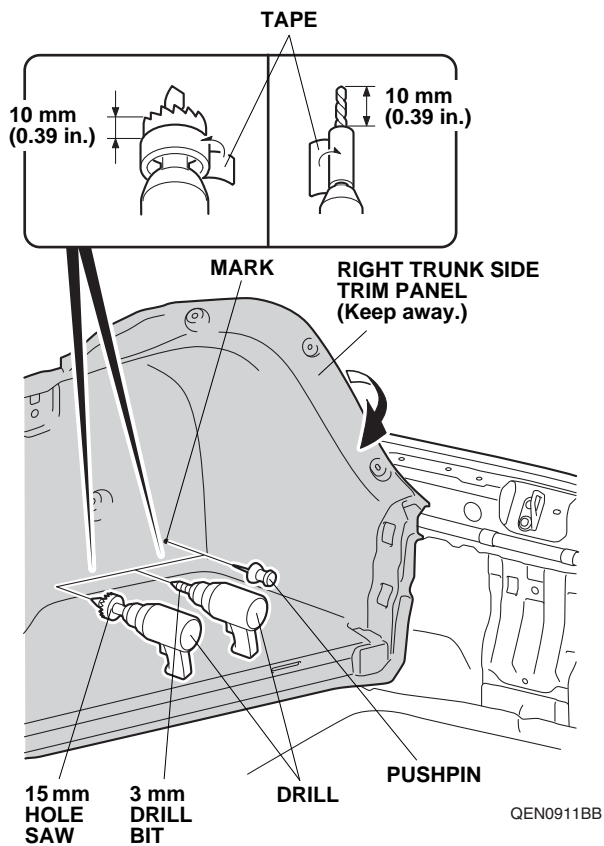


23. While wearing eye protection, drill the pierced mark in the right trunk side trim panel to 15 mm. First drill with a 3 mm drill bit, and finish with a 15 mm hole saw. Remove any burrs.
NOTE: Wrap tape around a 3 mm drill bit and a 15 mm hole saw 10 mm (0.39 in.) away from the tip, or use a drill stop.

24. Install the right trunk side trim panel.

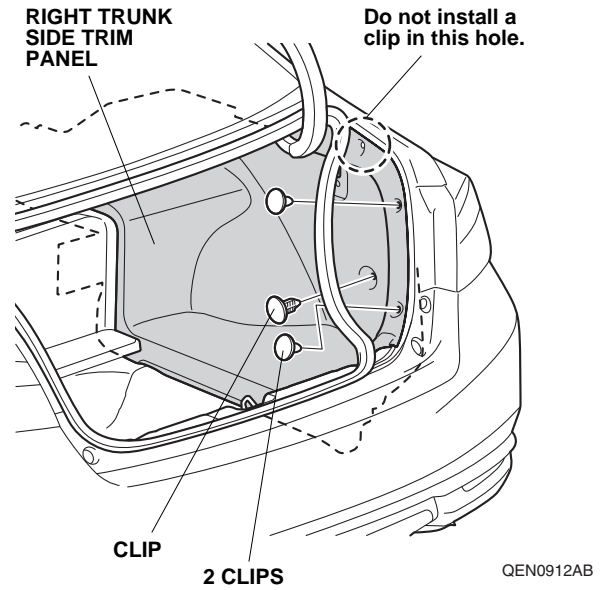


25. Install the left trunk side trim panel the same way.

26. Thread a bolt into each anchor.

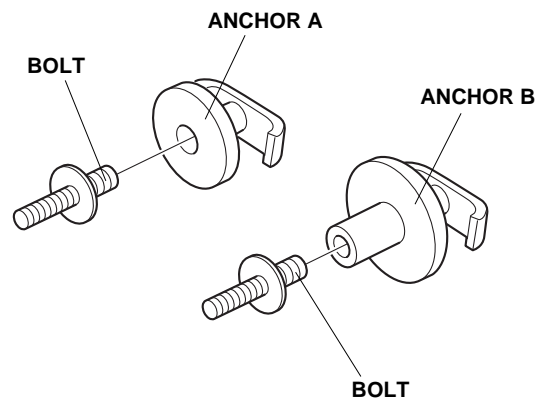


27. Thread one anchor A into the upper rivet nut and one anchor B into the lower rivet nut. Adjust each anchor to the horizontal position.

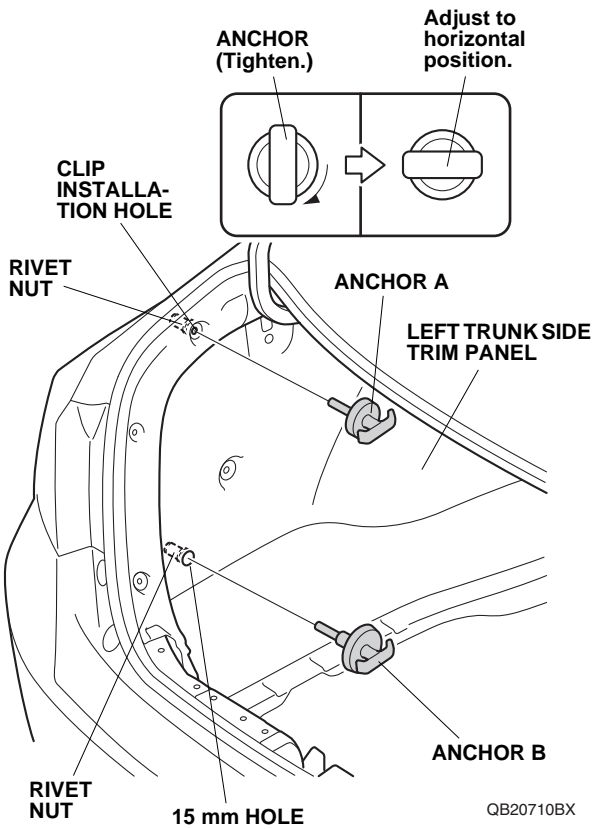

28. Repeat steps 26 and 27 to install anchors on the right side of the vehicle.
29. Install all removed parts.

30. Install the cargo net to the anchors in the trunk.

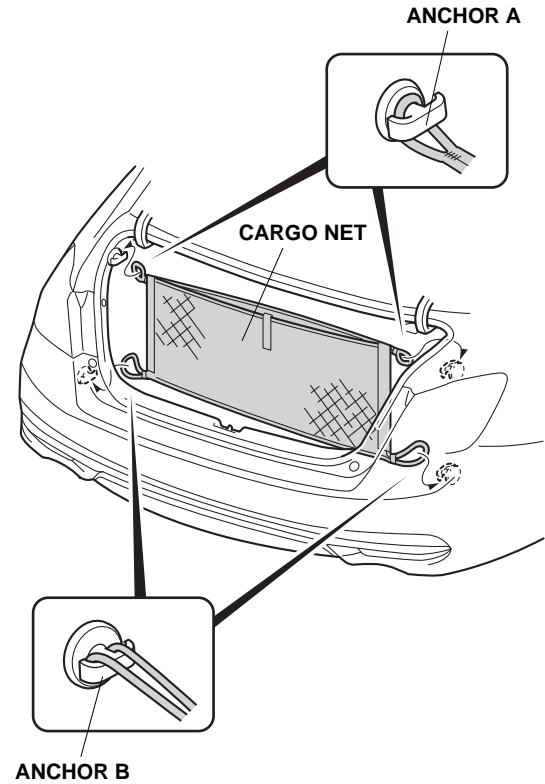

QE12603AG