



## INSTALLATION INSTRUCTIONS

### Accessory

**SPLASH GUARDS**  
P/N 08P00-T2F-100

### Application

**2017 ACCORD**  
4-DOOR

### Publications No.

**VERSION 1**

### Issue Date


**JUN 2016**

### PARTS LIST

Left front splash guard



Right front splash guard




Left rear splash guard



Right rear splash guard



8 Washer-screws



2 Spring nuts



### TOOL AND SUPPLIES REQUIRED

Phillips screwdriver

Pushpin

Stubby Phillips screwdriver


Utility knife

Ruler

*The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.*

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

### Illustration of the Splash Guards on the Vehicle

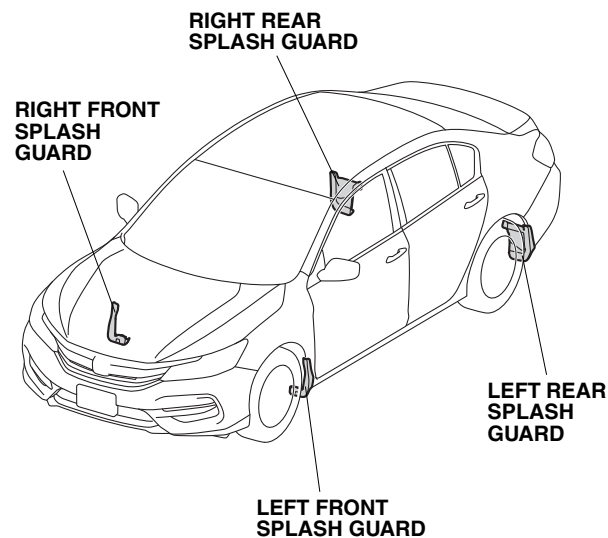

QE21010AC

### INSTALLATION


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

### NOTE:

- Do not damage the paint finish.
- Clean and wax the areas to be covered using a high-quality paste wax.


## Installing the Front Splash Guards

1. Turn the steering wheel fully counterclockwise.

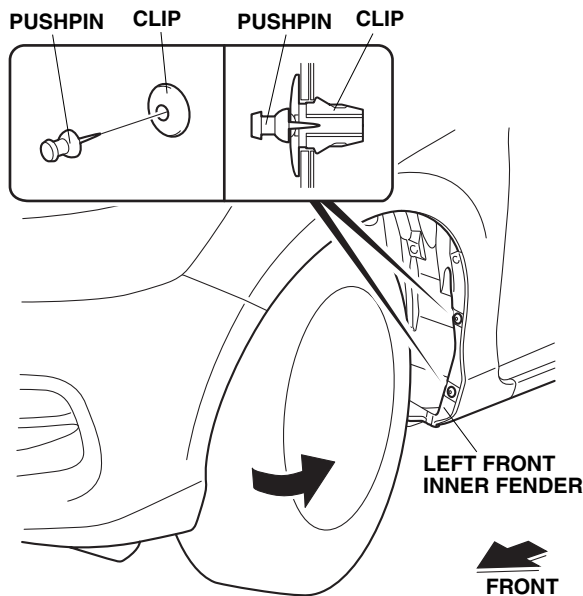


QE21011AC

2. Using a pushpin, pierce the center of the two clips in the left front inner fender.
3. Remove the lower clip from the left front inner fender.

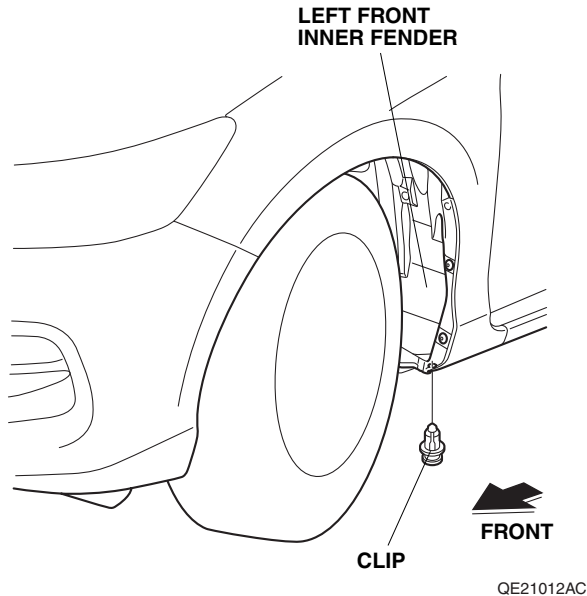

QE21012AC

4. Install the left front splash guard to the left front inner fender in this order 1 → 2 → 3 using the two washer-screws and the clip removed in step 3. If necessary, trim the under sealant. Make sure there is no gap between the left front splash guard and the vehicle body. If there is a gap, loosen the three screws, hold the splash guard against the body, and tighten the three screws.

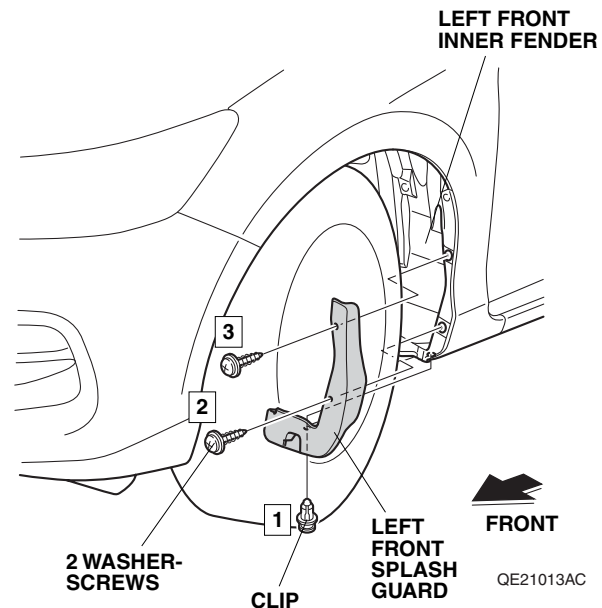


QE21013AC


5. Turn the steering wheel fully clockwise, and repeat steps 2 through 4 to install the right front splash guard.

## Installing the Rear Splash Guards


- Remove and discard the screw from the rear bumper.

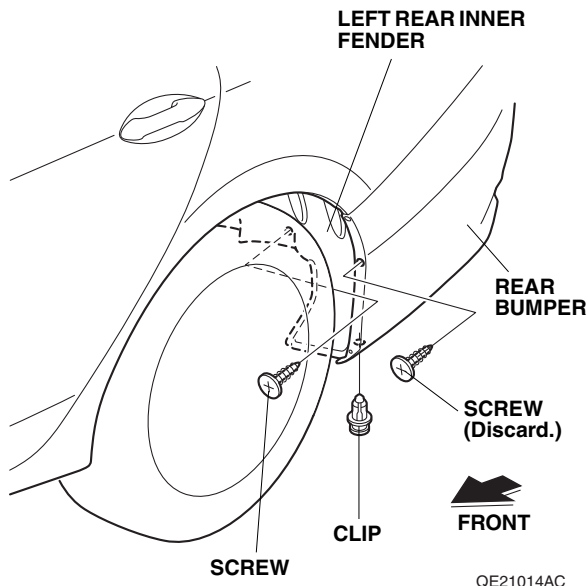


- Remove the screw and clip from the left rear inner fender and rear bumper.
- Using a pushpin, pierce the rear bumper at the dimple.

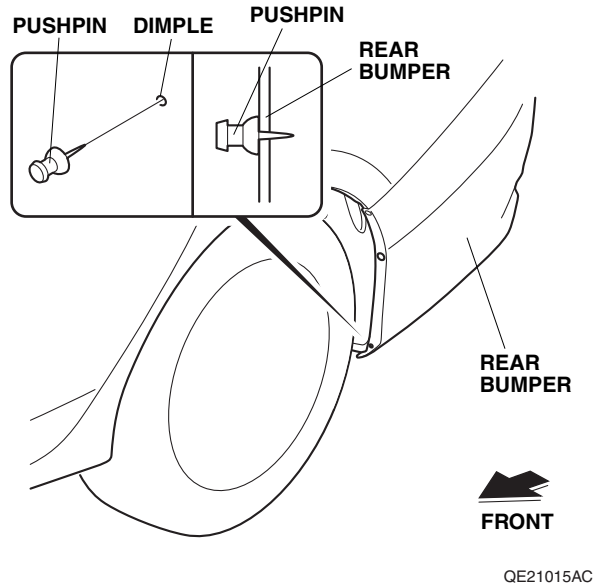


- Pull away the rear bumper. Cut the left rear inner fender in the area shown.

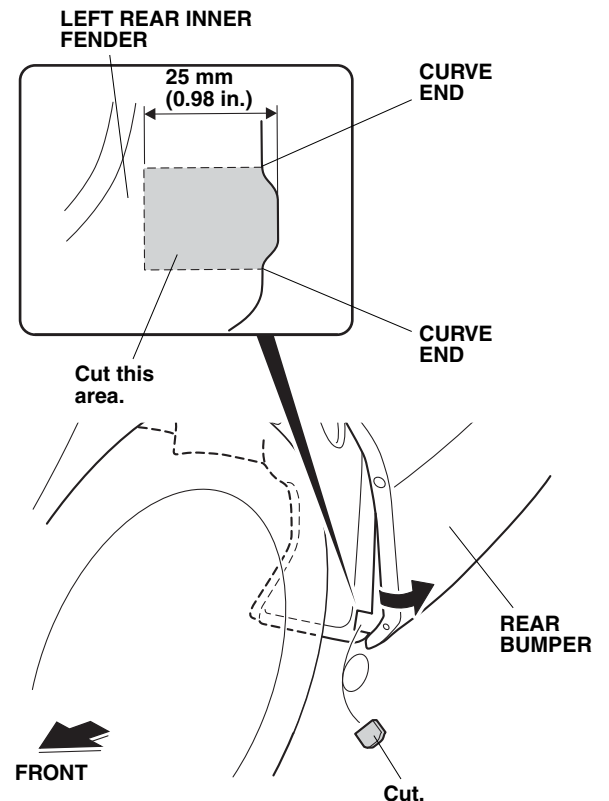

- Reinstall the rear bumper back into its original position.
- Reinstall the clip removed in step 7.
- Install one spring nut over the hole in the rear bumper. Install the spring nut in the direction shown.

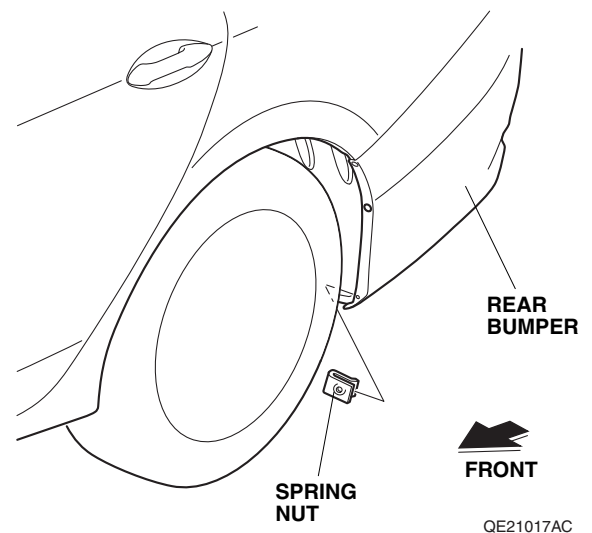

13. Install the left rear splash guard to the rear bumper in this order 1 → 2 → 3 using the two washer-screws and one screw removed in step 7. Make sure there is no gap between the left rear splash guard and the vehicle body. If there is a gap, loosen the three screws, hold the splash guard against the body, and tighten the three screws.

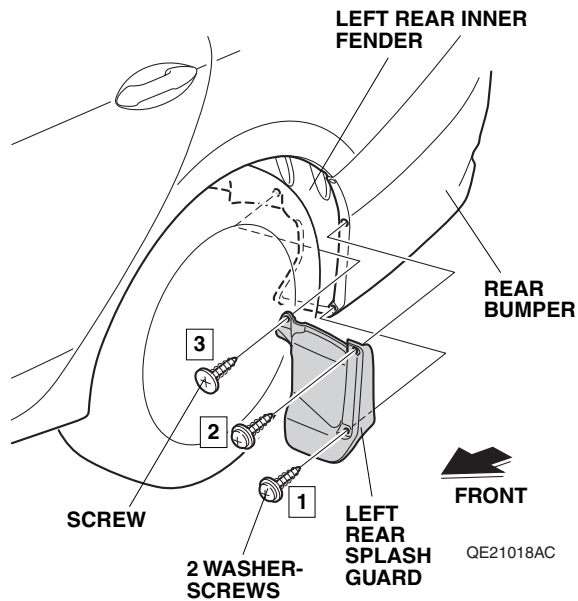

14. Repeat steps 6 through 13 to install the right rear splash guard.