



HONDA INSTALLATION INSTRUCTIONS

Accessory
SIDE OUT PANEL COVERS
P/N 08F05-TVA-100

Application
2018 ACCORD

Publications No.
VERSION 1
Issue Date
OCT 2017

PARTS LIST

Left front side out panel cover
(Identification mark: L)

Right front side out panel cover
(Identification mark: R)

Left rear side out panel cover
(Identification mark: L)

Right rear side out panel cover
(Identification mark: R)

4 Alcohol wipes




TOOLS AND SUPPLIES REQUIRED

Ruler

Masking tape

Illustration of the Side Out Panel Covers Installed on the Vehicle

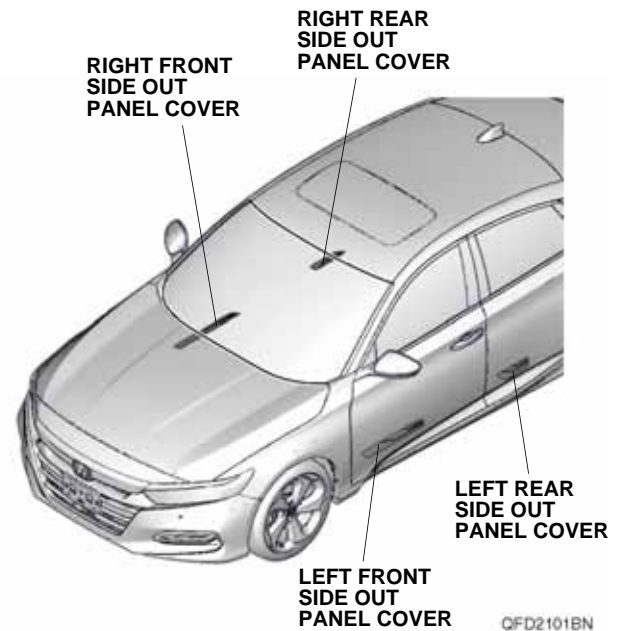

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- Be careful not to damage the body paint finish.
- This kit should only be installed if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure the customer is aware of this.

Installing the Side Out Panel Covers


1. Open the left front door. Measure and attach a piece of masking tape to the vehicle panel as shown.

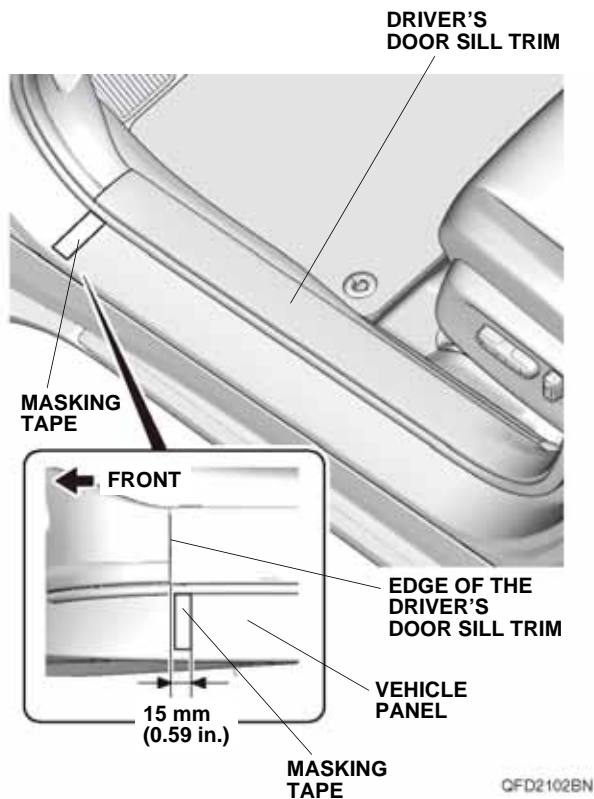


2. Using an alcohol wipe, thoroughly clean the vehicle panel where the left front side out panel cover will attach.

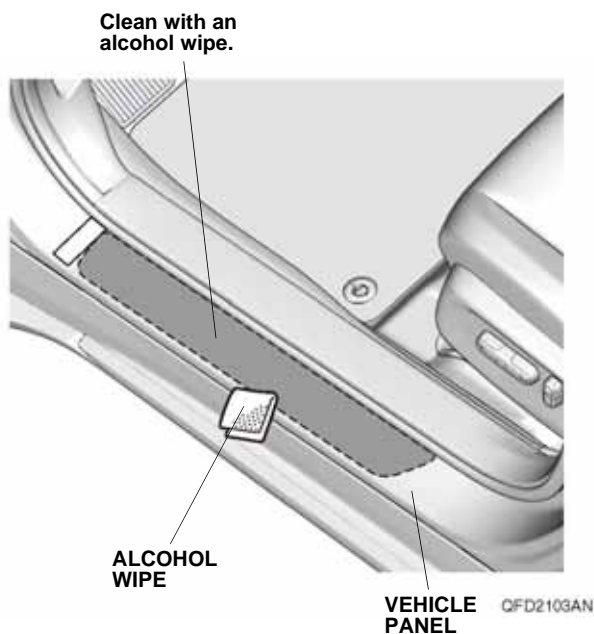


3. Peel back the adhesive backings, and tape them to the front surface of the left front side out panel cover with masking tape.
NOTE: Check the identification mark of the left front side out panel cover.

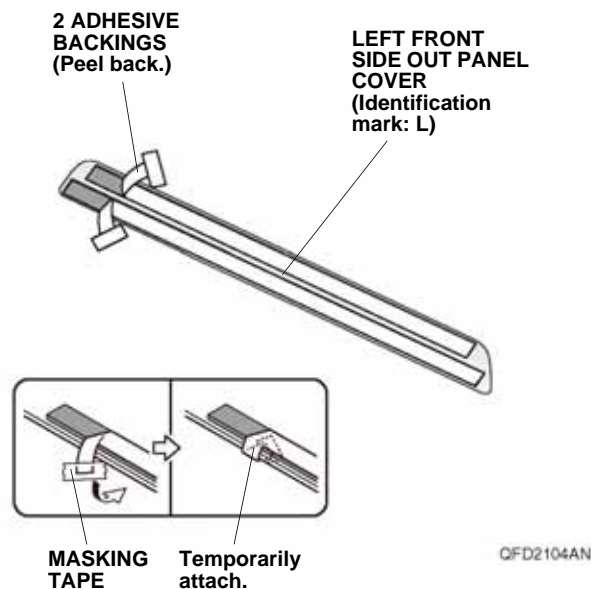

4. Line up the left front side out panel cover with the masking tape and curve end as shown. Attach the left front side out panel cover to the vehicle panel.

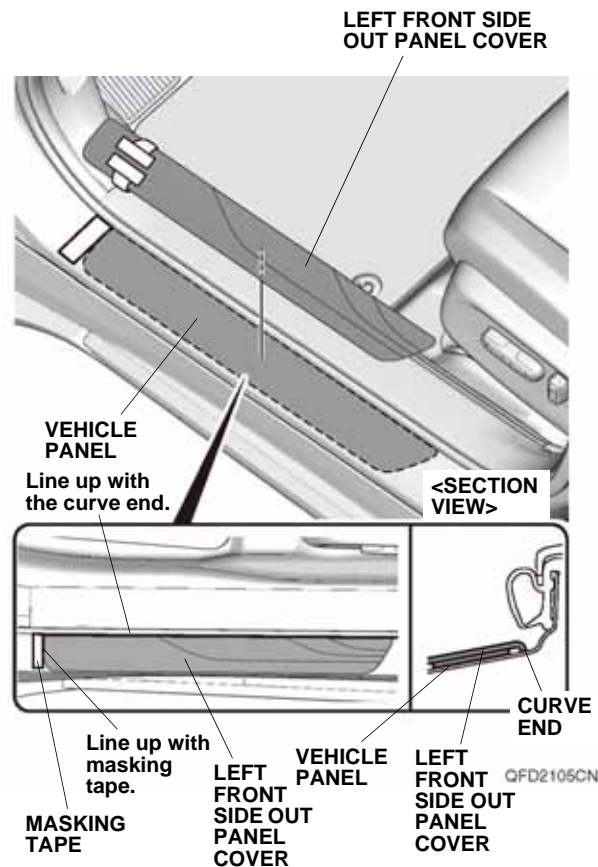


5. While applying light pressure against the left front side out panel cover, carefully remove the taped adhesive backings.

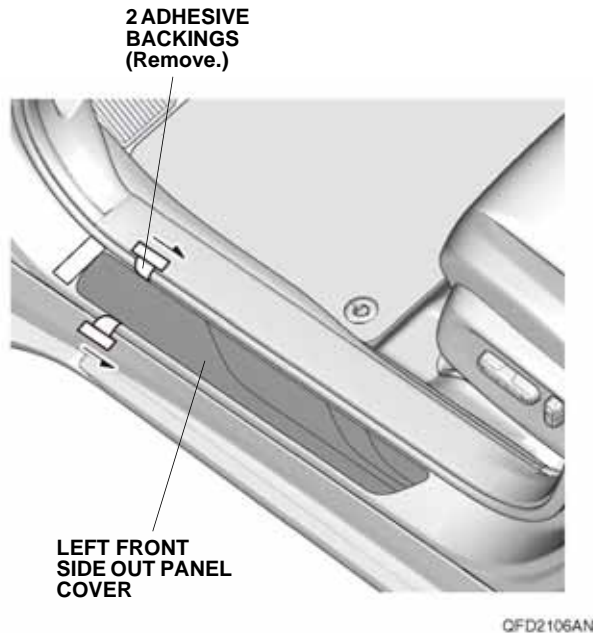


6. Using the palm of your hand, firmly press the left front side out panel cover against the vehicle panel.
7. Remove the masking tape.


8. Open the left rear door. Measure and attach a piece of masking tape to the vehicle panel as shown.

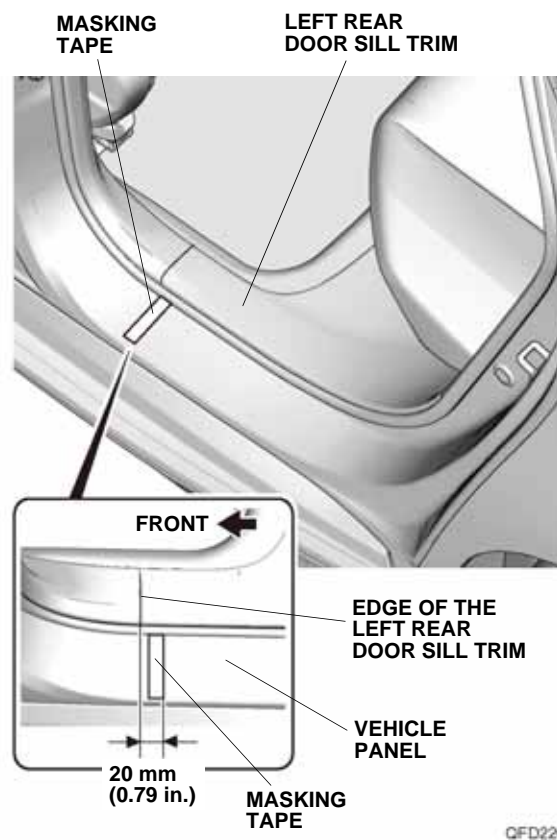


9. Using an alcohol wipe, thoroughly clean the vehicle panel where the left rear side out panel cover will attach.

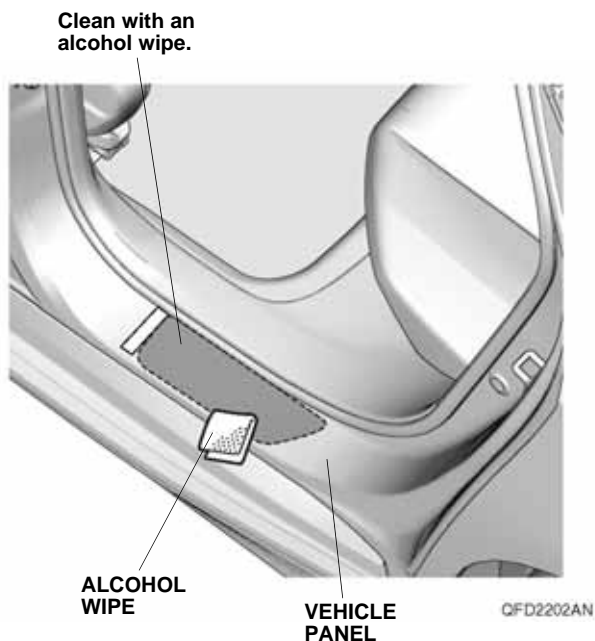


10. Peel back the adhesive backings, and tape them to the front surface of the left rear side out panel cover with masking tape.
NOTE: Check the identification mark of the left rear side out panel cover.

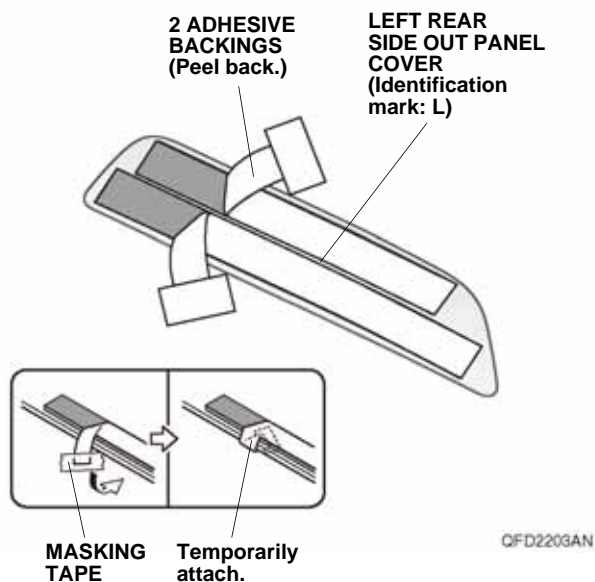

11. Line up the left rear side out panel cover with the masking tape and curve end as shown. Attach the left rear side out panel cover to the vehicle panel.

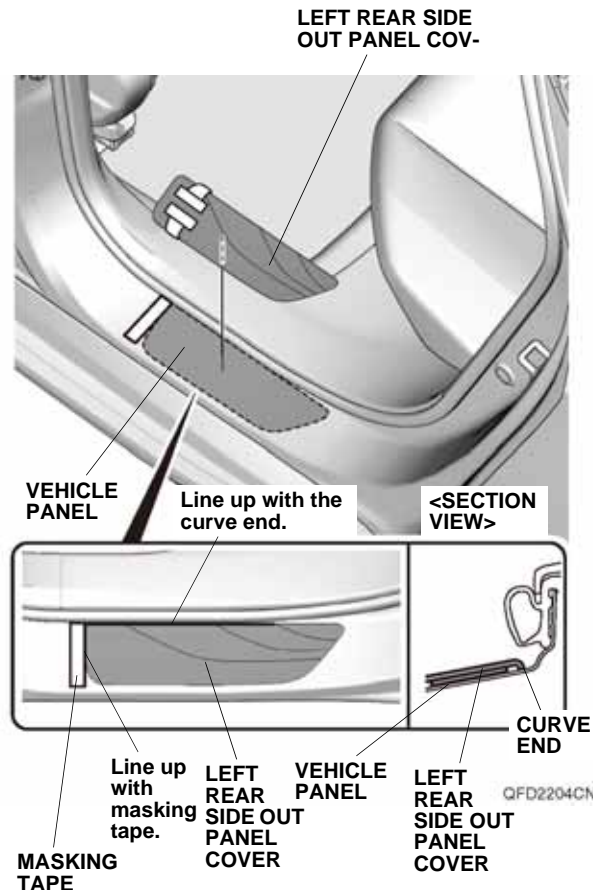

12. While applying light pressure against the left rear side out panel cover, carefully remove the taped adhesive backings.

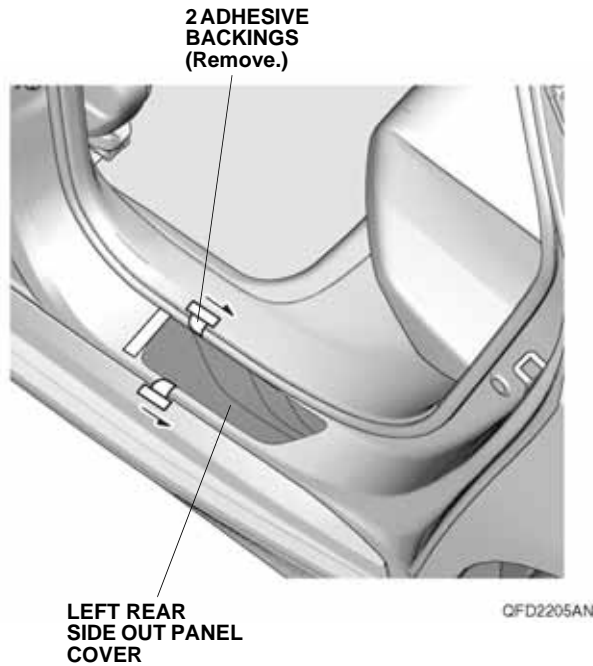

13. Using the palm of your hand, firmly press the left rear side out panel cover against the vehicle panel.
14. Remove the masking tape.
15. Repeat steps 1 through 14 on the right side of the vehicle.