## www.collegehillshonda.com

### HONDA

## **INSTALLATION INSTRUCTIONS**

Accessory

SPLASH GUARDS P/N 08P00-SNA-100 Application


2011 CIVIC 4-DOOR Si Publications No. **All 44409** 

Issue Date
AUG 2010


NOTE: Cannot be installed with rear or side under spoiler.

#### **PARTS LIST**

Left front splash guard



Right front splash guard



Left rear splash guard



Right rear splash guard



8 Self-tapping screws, 5 x 20 mm



4 Self-tapping screws, 5 x 25 mm



4 Spring nuts



2 Grommets



#### **TOOLS REQUIRED**

Stubby Phillips screwdriver

Phillips screwdriver

Clip remover

Pushpin

Utility knife


#### **INSTALLATION**

#### NOTE:

- These instructions show the left splash guards being installed. The same procedure applies to installing the right splash guards.
- Clean and wax the areas to be covered with a high-quality paste wax.


#### **Installing the Front Splash Guards**

- Turn the steering wheel all the way counterclockwise.
- 2. Using a pushpin, make small holes through the center of the three clips.

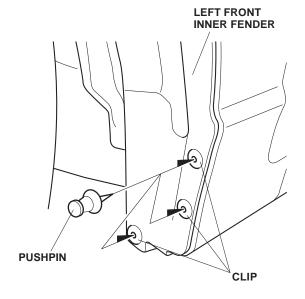

# www.collegehillshonda.com


3. Position the left front splash guard on the left front inner fender, and install the three 5 x 20 mm self-tapping screws. Tighten the three self-tapping screws in the order shown.

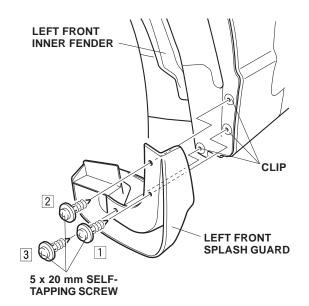


4. Turn the steering wheel all the way clockwise, and repeat steps 2 and 3 to install the right front splash guard.

#### **Installing the Rear Splash Guards**

5. If equipped, remove and discard the left rear inner fender (two self-tapping screws and one clip).

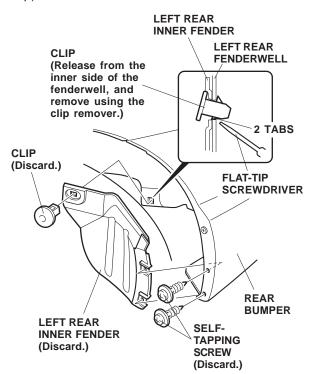


6. Install one grommet into the hole in the left rear fenderwell. Slide two spring nuts over the holes in the rear bumper.

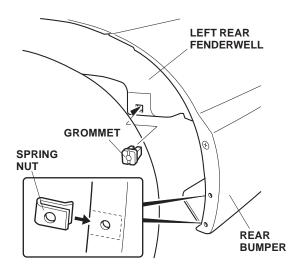

### www.collegehillshonda.com

7. Position the left rear splash guard on the left rear fenderwell and rear bumper, then install the two 5 x 25 mm self-tapping screws and one 5 x 20 mm self-tapping screw. Tighten the three self-tapping screws in the order shown. Cut off any excessive undercoat material with a utility knife.

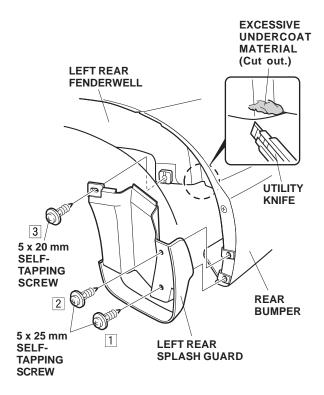

8. Repeat steps 5 through 7 to install the right rear splash guard.