



HONDA INSTALLATION INSTRUCTIONS

Accessory

FRONT UNDER SPOILER
P/N 08F01-TEA-101

Application

2017 CIVIC
2 and 4 DOOR Si, 5-DOOR

Publications No.

VERSION 3

Issue Date


OCT 2017

PARTS LIST

Front under spoiler



Template A

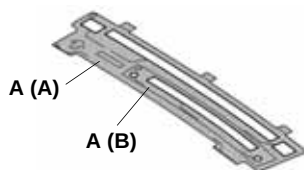

Template B
(For Si models only)



Template C
(For Si models only)



4 Washer-bolts
(For 5-DOOR models only)



4 Bolts
(For Si models only)



3 Male clips



3 Female clips



2 Clips



4 Nuts



3 Primers



4 Washers



3 Alcohol swabs




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Flat-tip screwdriver
Pushpin
Utility knife
Drill
3 mm, 6 mm, 8 mm, and 10 mm Drill bits
File
Masking tape
Diagonal cutters
Shop towel
Eye protection (face shield, safety goggles, etc.)
Blanket
Ruler
5 mm Hex wrench
10 mm Open end wrench
Ratchet
Torque wrench
10 mm Socket

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Rubber Roller (T/N MHLE54D)
- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Front Under Spoiler Installed on the Vehicle

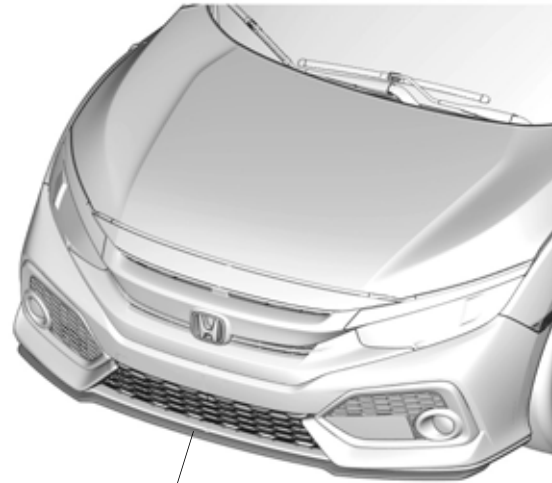

FRONT UNDER SPOILER

QF23601AT


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- Be careful not to damage the body paint finish.
 - This front under spoiler kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
 - To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.
1. Disconnect the negative cable from the battery.


2. Remove the front bumper:
 - Apply masking tape as shown.
 - Wrap a shop towel around the hood latch.

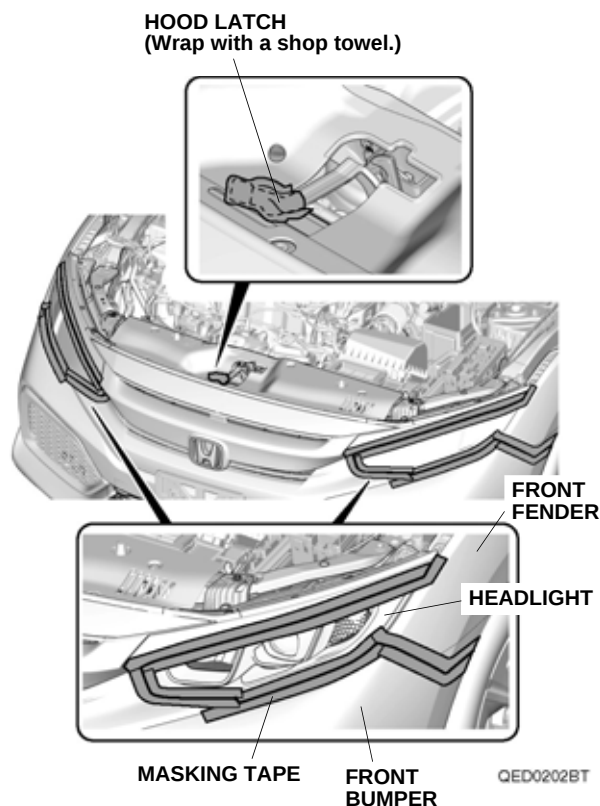


- Remove the front bulkhead cover.

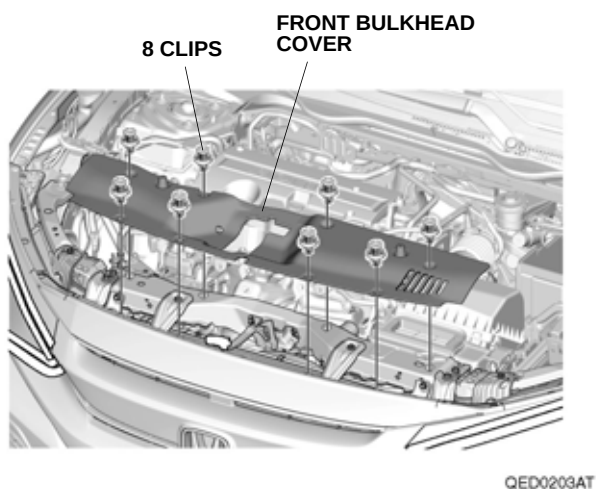


- Remove the four self-tapping screws, two bolts, two hex bolts, and seven clips.

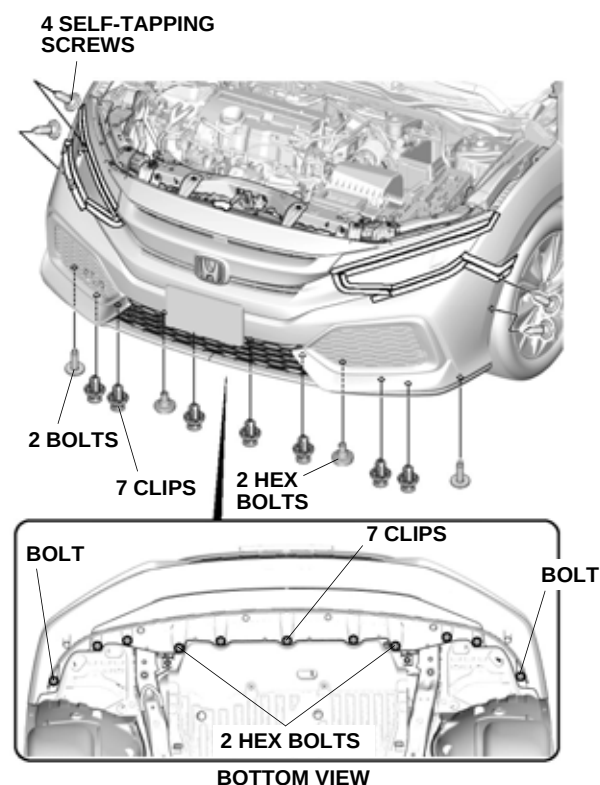


- With the help of an assistant, release the seven retaining tabs on each side.
NOTE: Remove the retaining tabs from the outside in the order shown. Make sure to remove the retaining tabs in the correct direction.

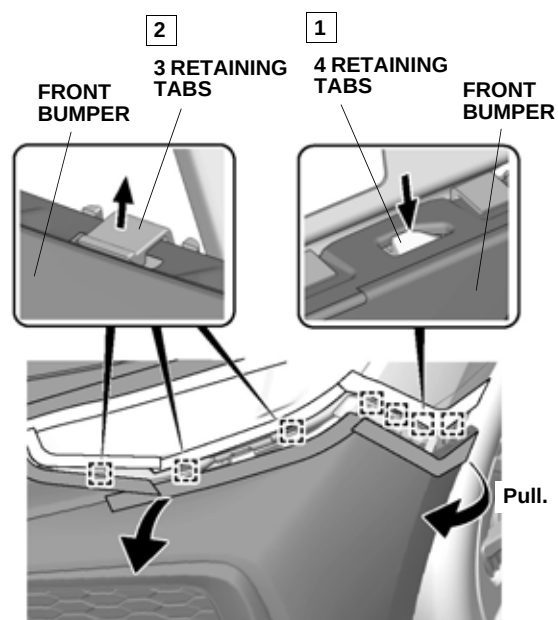

- Remove the five clips.

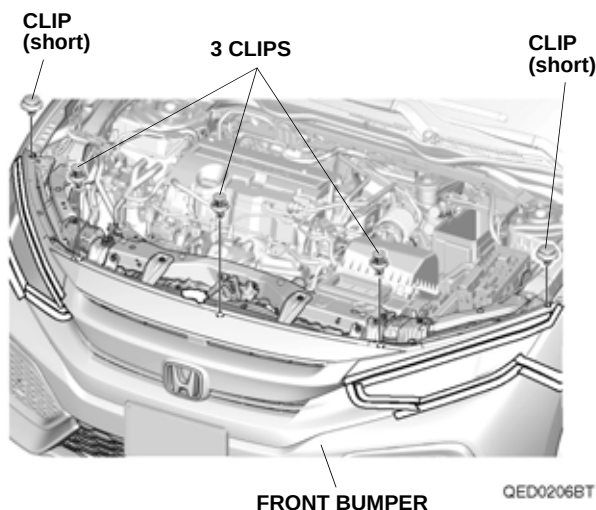


- With the help of an assistant, remove the front bumper. Place the front bumper on a blanket to prevent damage.

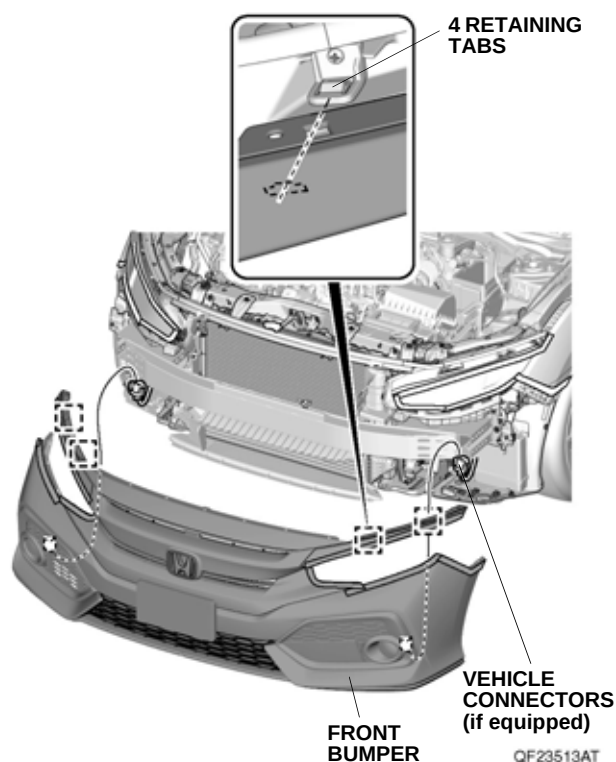


Installing the Front Under Spoiler

- Remove the air spoiler.

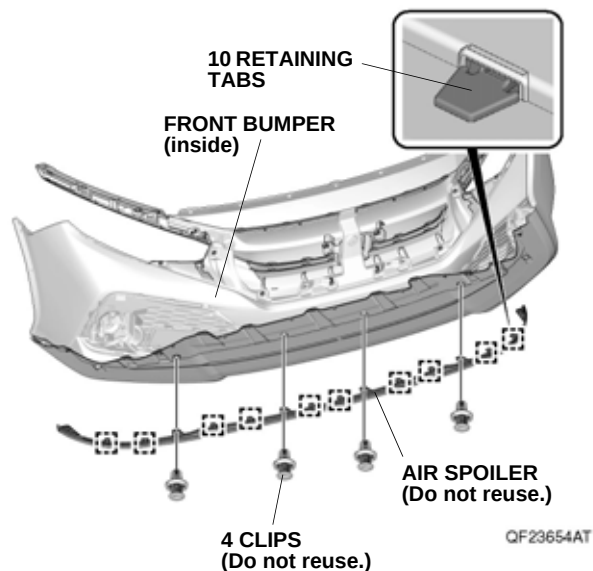


- Using a utility knife, cut out the front bumper as shown. Then, remove any burrs.

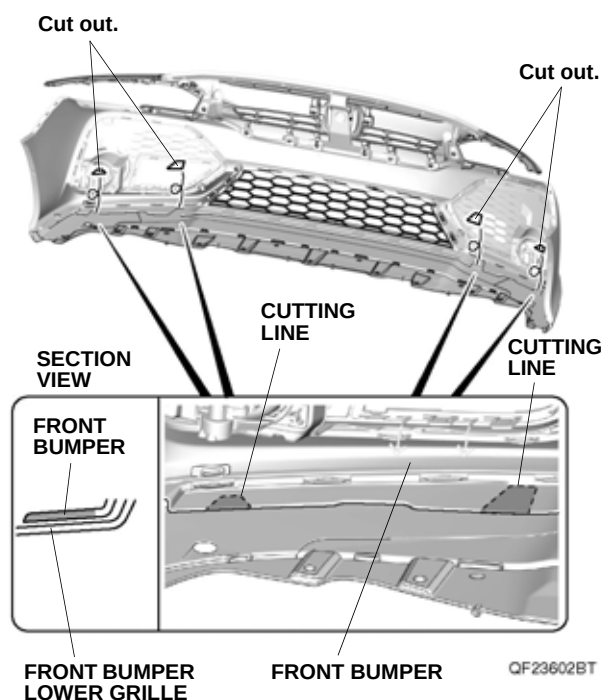


For Si models, continue with step 5; for 5-DOOR models, go to step 8.

Si models

5. Line up template B with the front bumper lower grille as shown. Attach template B to the front bumper lower grille with masking tape.

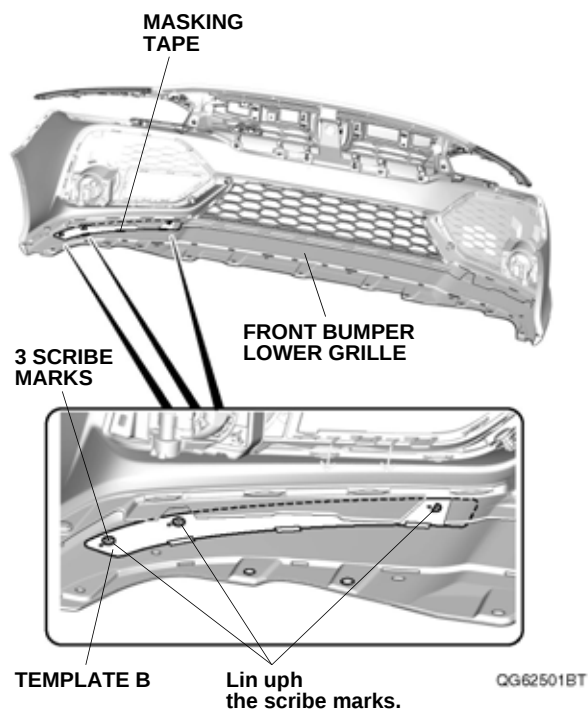


6. Using a pushpin, pierce the center of the three marks on template B.

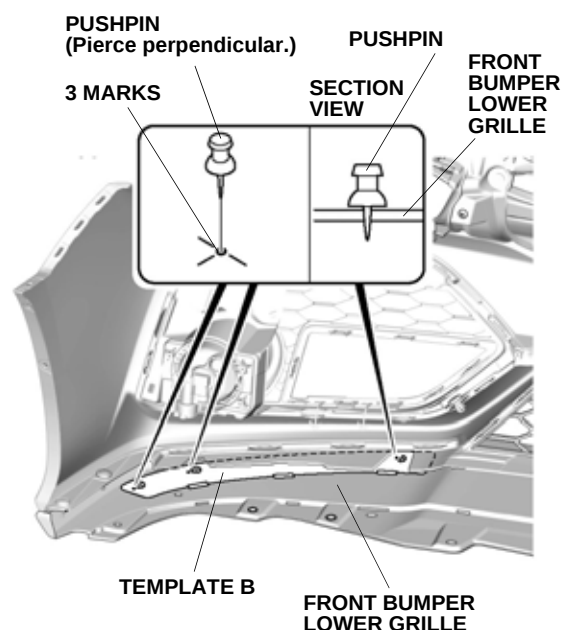


7. Remove template B from the front bumper lower grille, turn it over, and repeat steps 5 and 6 on the other side. Go to step 9.

5-DOOR models


8. Using a pushpin, pierce the center of six scribe marks on the front bumper lower grille.

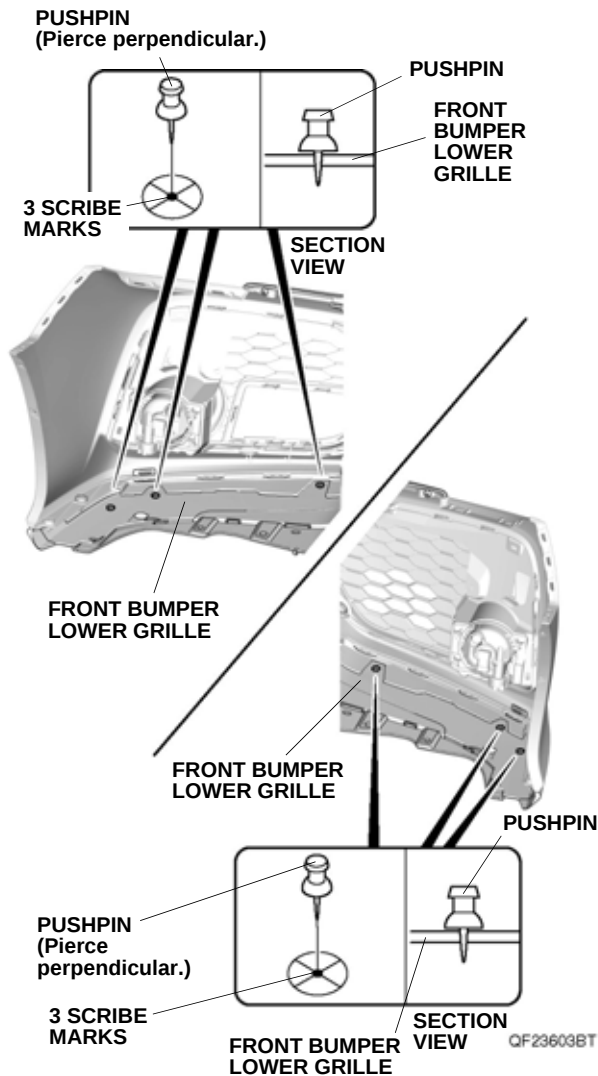

9. While wearing eye protection, drill the six pierced marks to 10 mm.
- Wrap masking tape around each drill bit 10 mm (0.39 in.) away from the tip or use a drill stop.
 - First, drill with a 3 mm drill bit, then follow with a 6 mm drill bit, an 8 mm drill bit, and finish with a 10 mm drill bit.

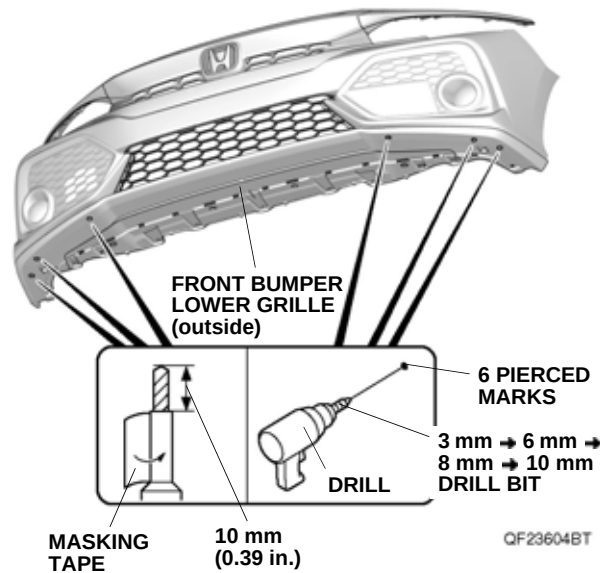


10. Using a file, remove any burrs from the holes.
11. Using three alcohol swabs, thoroughly clean the front bumper lower grille where the front under spoiler will attach.

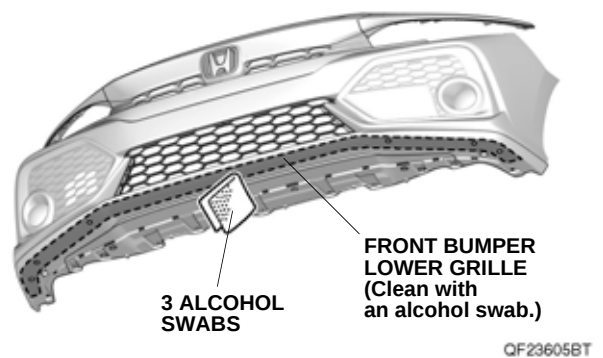

For Si models, continue with step 12; for 5-DOOR models, go to step 20.

Si models


12. Line up template C with the front bumper lower grille as shown. Attach template C to the front bumper lower grille with masking tape.

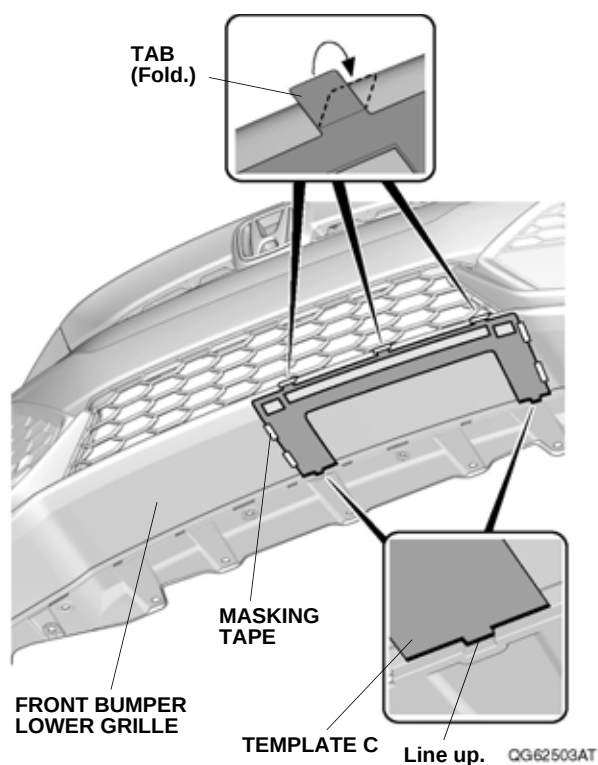


13. Apply the primer to the front bumper lower grille where the front under spoiler will attach.

NOTE:

- Apply the primer evenly.
- Be careful not to apply the primer anywhere except in the indicated area.
- Do not apply additional primer.
- Wait 10 minutes for the primer to dry before attaching the front under spoiler.

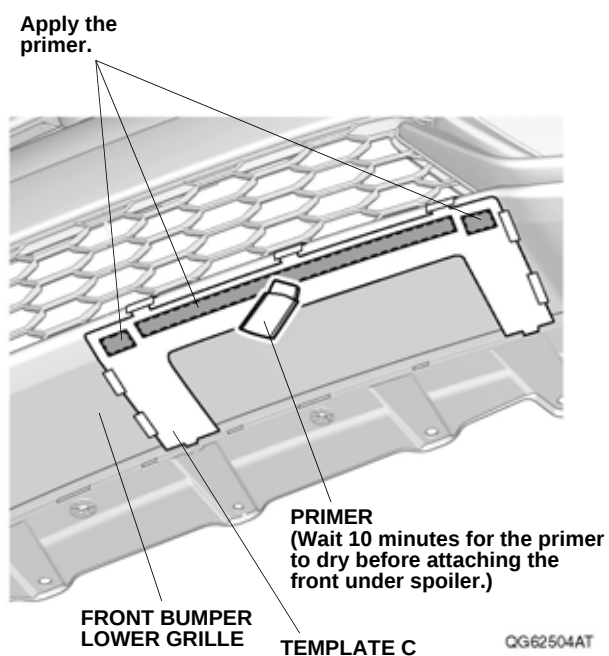


14. Remove the two adhesive backings. Attach two male clips to the front bumper lower grille as shown.

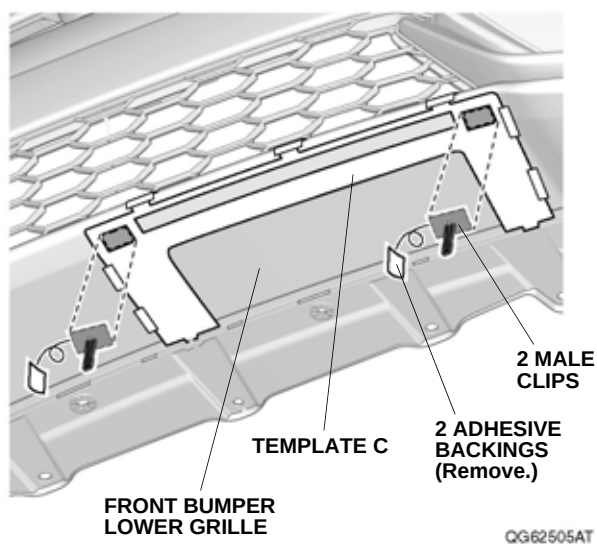

15. Remove template C.


16. Turn template C over, line it up, and attach it with masking tape as shown.

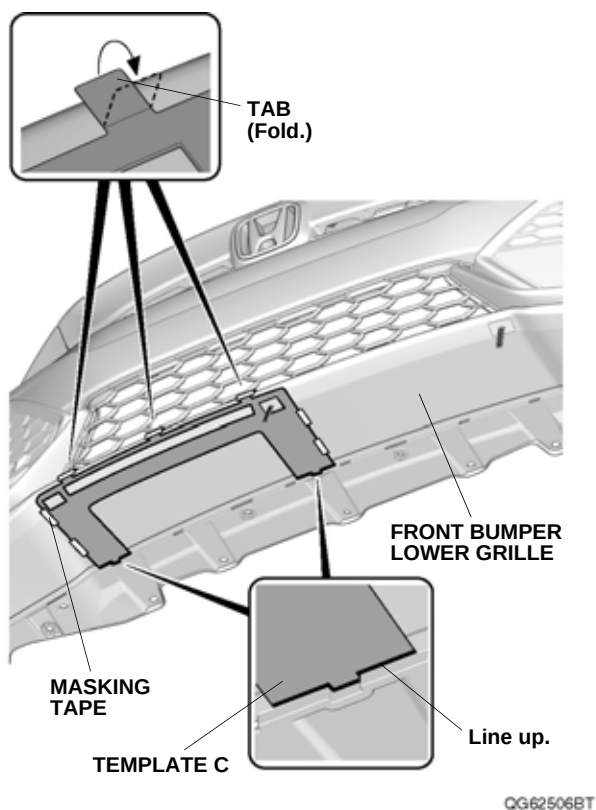


17. Apply the primer to the front bumper lower grille where the front under spoiler will attach.

NOTE:

- Apply the primer evenly.
- Be careful not to apply the primer anywhere except in the indicated area.
- Do not apply additional primer.
- Wait 10 minutes for the primer to dry before attaching the front under spoiler.

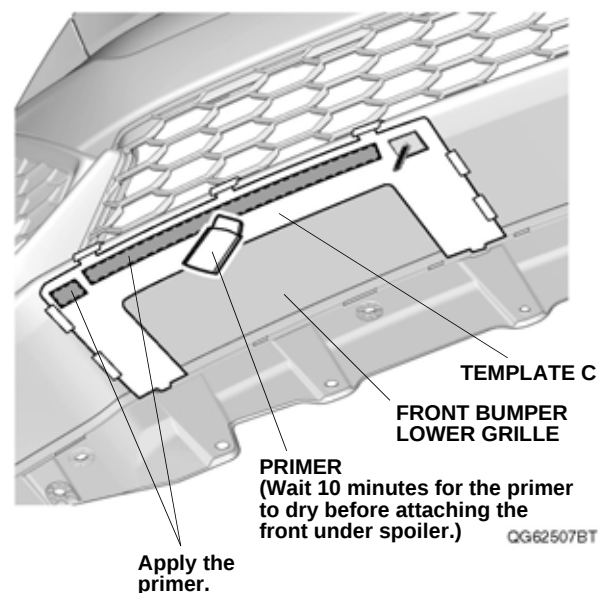


18. Remove the adhesive backing. Attach one male clip to the front bumper lower grille as shown.

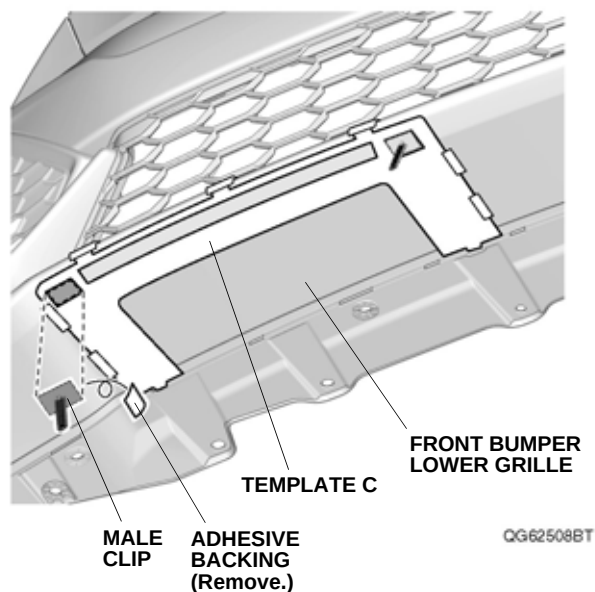

19. Remove template C.

20. Using a utility knife, cut out template A.

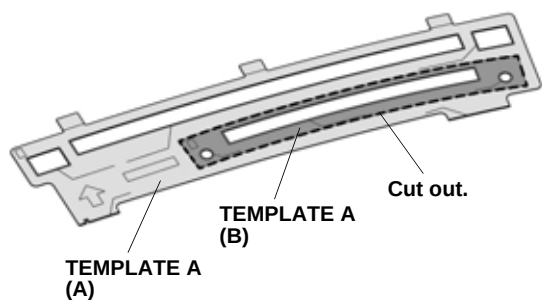


QF23651AT

For 5-DOOR models, continue with step 21; for Si models, go to step 29.

5-DOOR models

21. Line up template A (A) with the front bumper lower grille as shown. Attach template A (A) to the front bumper lower grille with masking tape.

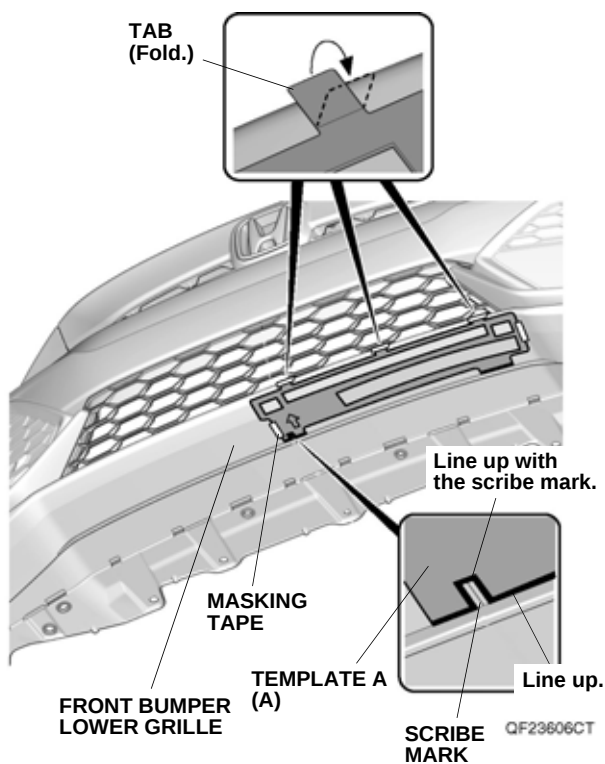


QF23606CT

22. Apply the primer to the front bumper lower grille where the front under spoiler will attach.

NOTE:


- Apply the primer evenly.
- Be careful not to apply the primer anywhere except in the indicated area.
- Do not apply additional primer.
- Wait 10 minutes for the primer to dry before attaching the front under spoiler.

Apply the primer.

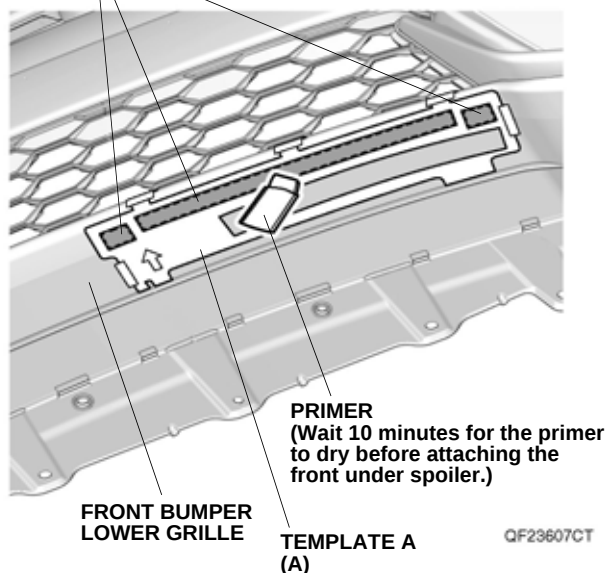

QF23607CT


23. Remove the two adhesive backings. Attach two male clips to the front bumper lower grille as shown.

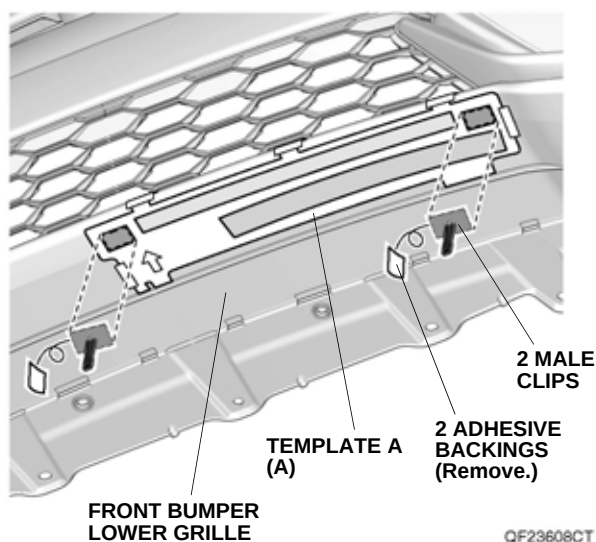

QF23608CT

24. Remove template A (A).


25. Turn template A (A) over, line up the template A (A) with the front bumper lower grille as shown. Attach template A (A) to the front bumper lower grille with masking tape.

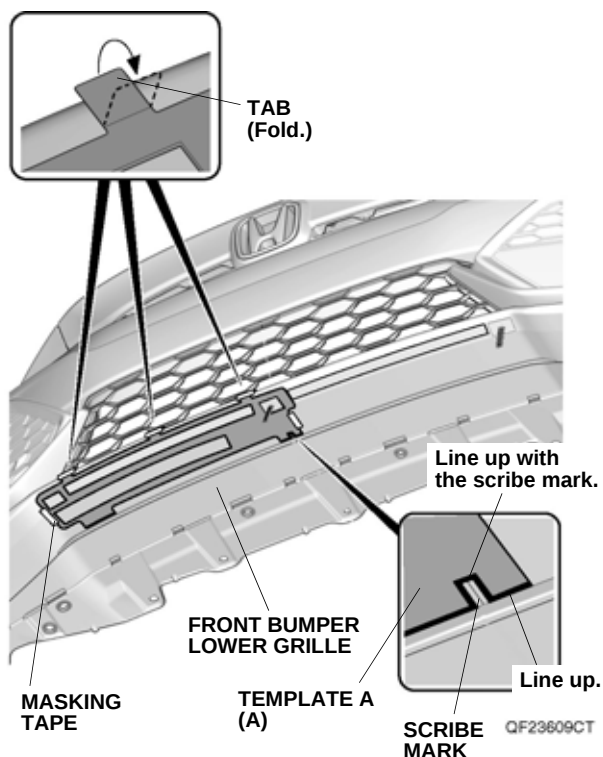


26. Apply the primer to the front bumper lower grille where the front under spoiler will attach.

NOTE:

- Apply the primer evenly.
- Be careful not to apply the primer anywhere except in the indicated area.
- Do not apply additional primer.
- Wait 10 minutes for the primer to dry before attaching the front under spoiler.

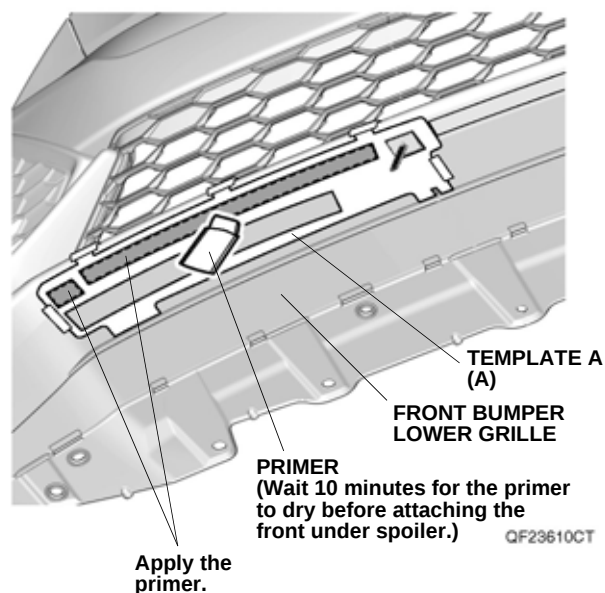


27. Remove the adhesive backing. Attach one male clip to the front bumper lower grille as shown.

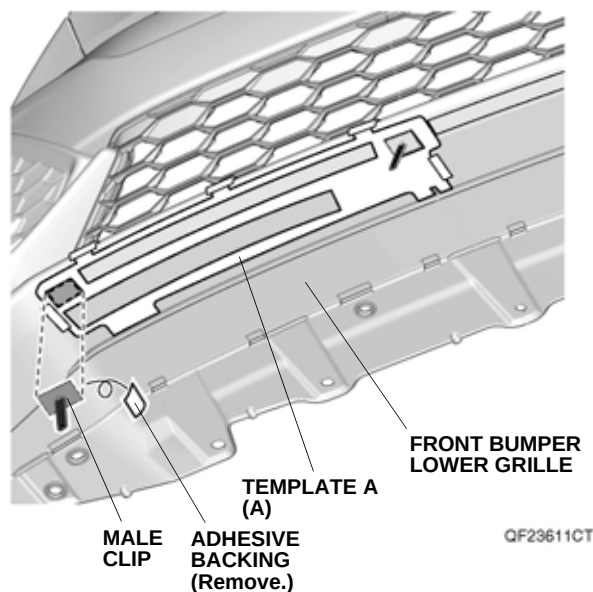

28. Remove template A (A).


29. Line up template A (B) with the front bumper lower grille as shown. Attach template A (B) to the front bumper lower grille with masking tape.

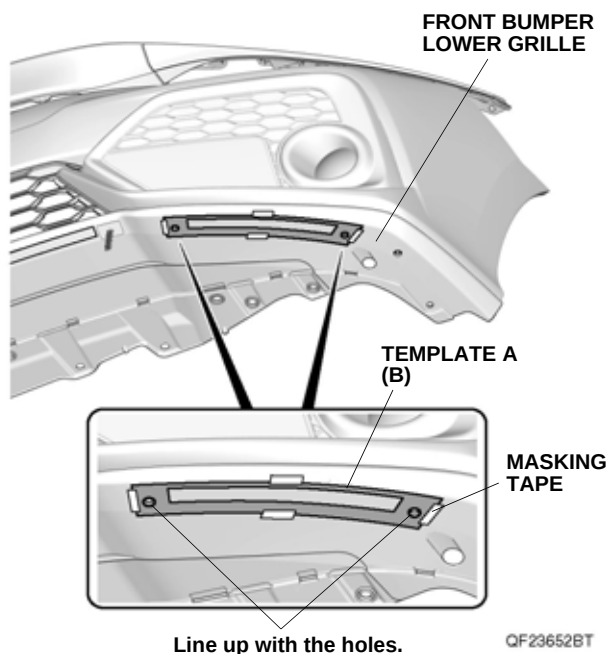

30. Apply the primer to the front bumper lower grille where the front under spoiler will attach.


NOTE:

- Apply the primer evenly.
- Be careful not to apply the primer anywhere except in the indicated area.
- Do not apply additional primer.
- Wait 10 minutes for the primer to dry before attaching the front under spoiler.

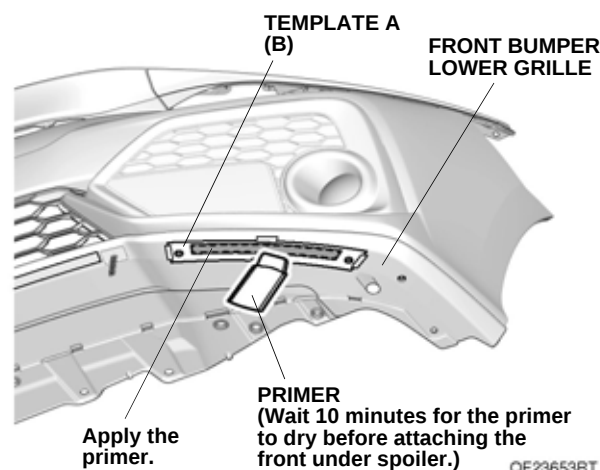


31. Remove template A (B). Turn template A (B) over, and repeat steps 29 and 30 to apply the primer.

32. Peel back the adhesive backings, and tape them to the front surface of the front under spoiler with masking tape.

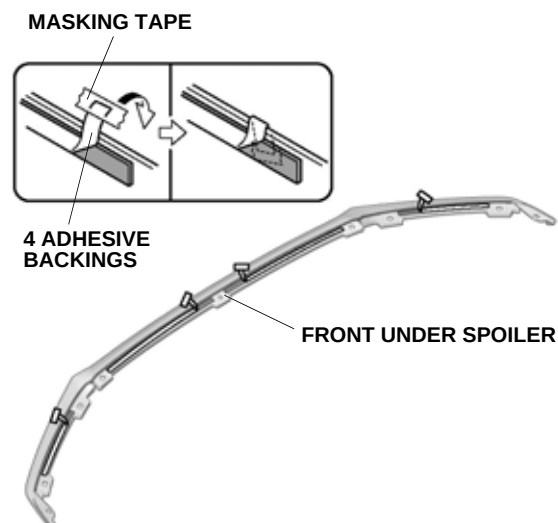


QF23612AT

33. Install the front under spoiler to the front bumper lower grille.

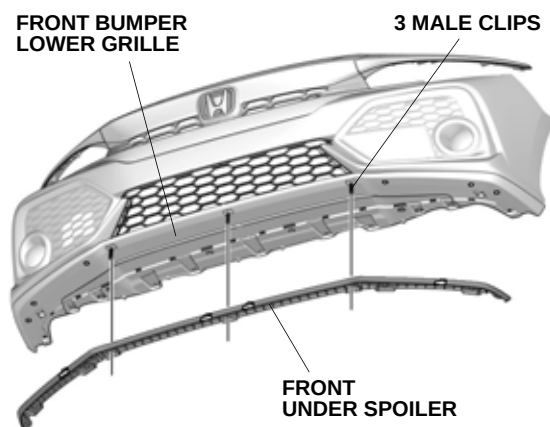


QF23613BT


34. Loosely install the three female clips into each male clip.
NOTE: Make sure to install the female clips in the correct orientation.

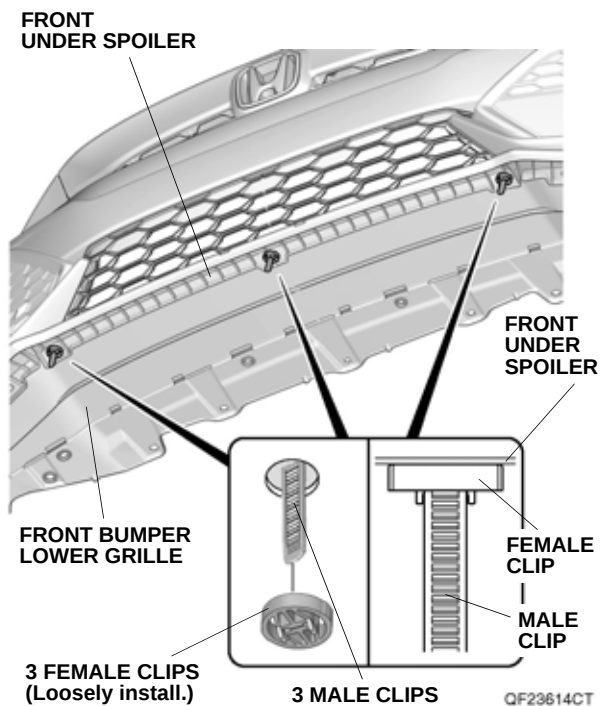

35. Remove the four adhesive backings. Press the front under spoiler firmly against the front bumper lower grille with the palm of your hands to adhere the front under spoiler.

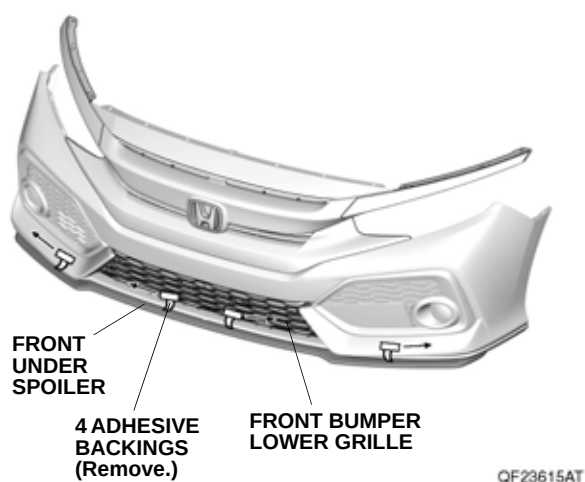


36. Tighten the three female clips loosely installed in step 34.
NOTICE: Do not push the female clips too tight; you could deform the front under spoiler. If necessary, readjust the female clips.

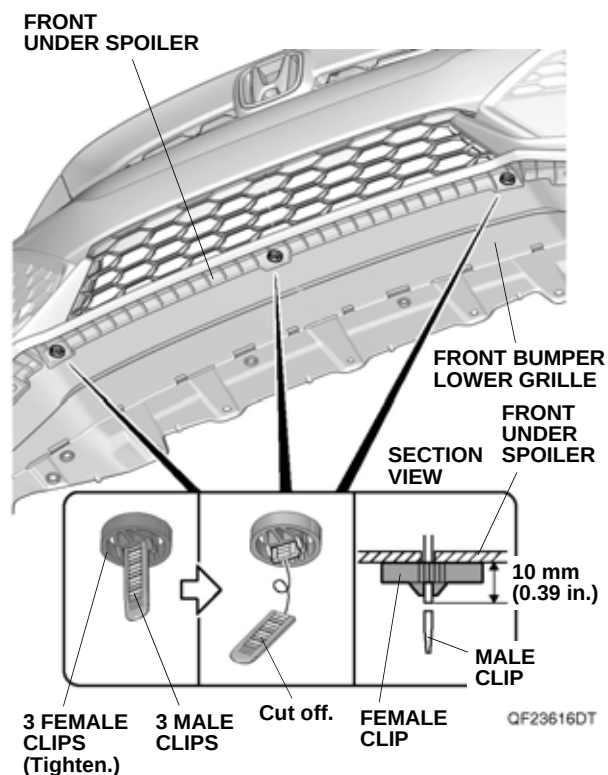

For Si models, continue with step 37; for 5-DOOR models, go to step 38.


Si models

37. Install the two clips, four bolts, four washers, and four nuts. Go to step 39.

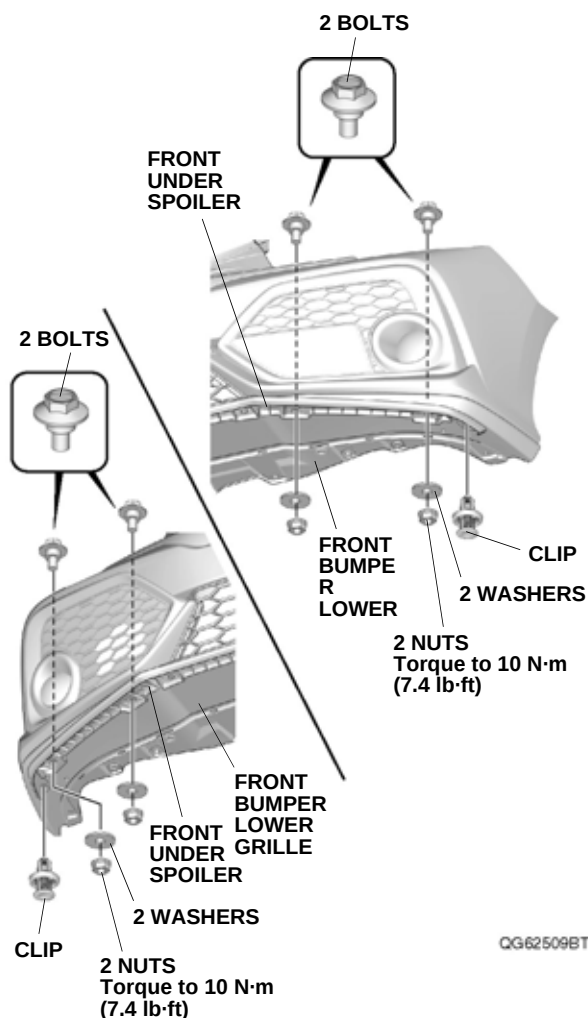


5-DOOR models

38. Install the two clips, four washer-bolts, four washers, and four nuts.

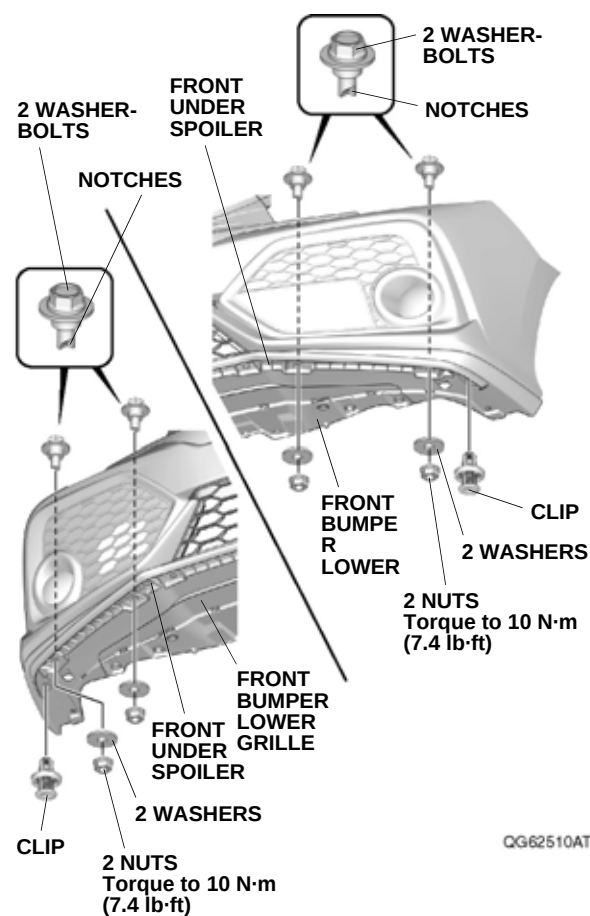

39. With the help of an assistant, install the front bumper.

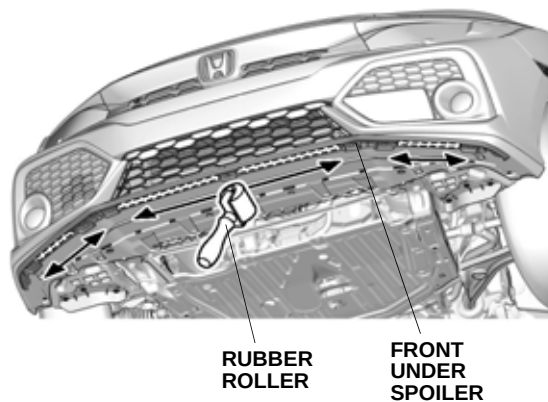

40. Using a rubber roller, apply firm pressure while rolling, especially at the ends, to set the adhesive.
41. Check that all wire harnesses are routed properly and all connectors are plugged in.
42. Install all removed parts.
43. Connect the negative cable to the battery.
44. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
45. Set the clock.
46. If necessary, restore the systems back to normal operation as described in the service information.