



## HONDA INSTALLATION INSTRUCTIONS

### Accessory

HFP FLOOR MATS  
P/N 08P15-TBJ-100A

### Application

2020 CIVIC Si  
2-DOOR

### Publications No.

VERSION 1

### Issue Date

AUG 2019

## PARTS LIST

Driver's floor mat



Passenger's floor mat




Left rear floor mat



Right rear floor mat



## Illustration of the Floor Mats Installed in the Vehicle

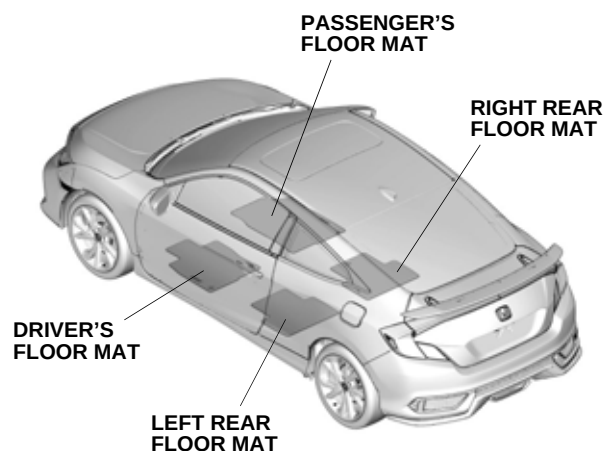

QF01001AT


## INSTALLATION

### NOTE:

- Before installing the mats, identify their installation positions.
- Connect the driver's mat to the anchors to prevent the mat from sliding forward and possibly interfering with the pedals.
- If you remove the driver's mat, make sure you re-anchor it when you put it back in your vehicle.
- If you replace the driver's mat, use a factory mat designed to be used with the anchors.
- If you use a non-factory mat in the driver's footwell, make sure it fits properly and that it can be used with the anchors.
- Do not put an additional mat on top of the anchored mat. It may slide forward and possibly interfere with the pedals.


## Installing the Floor Mats

1. Remove the floor mats.

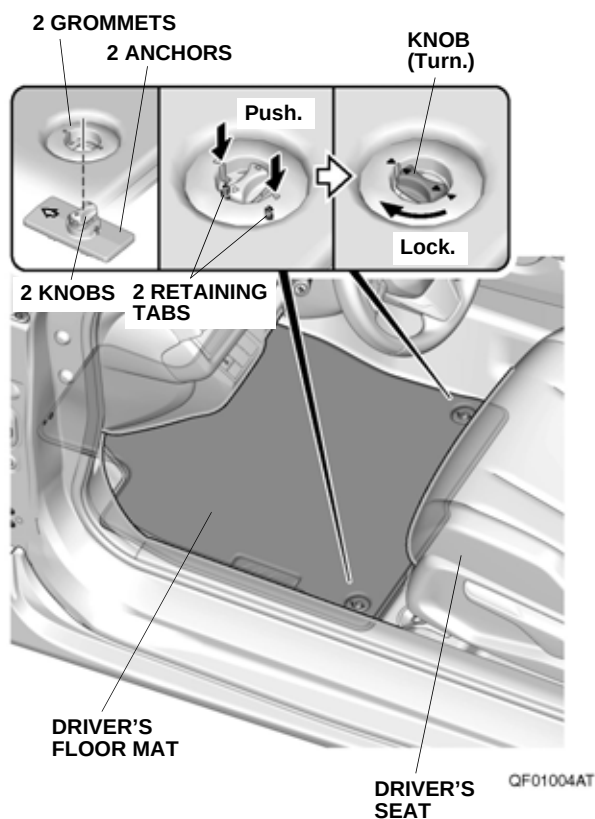


2. Place the grommets in the driver's floor mat over the anchors. Push the grommets into the anchors to secure the retaining tabs, then turn the knobs 90° to secure the driver's floor mat.

3. Place the passenger's floor mat as shown.

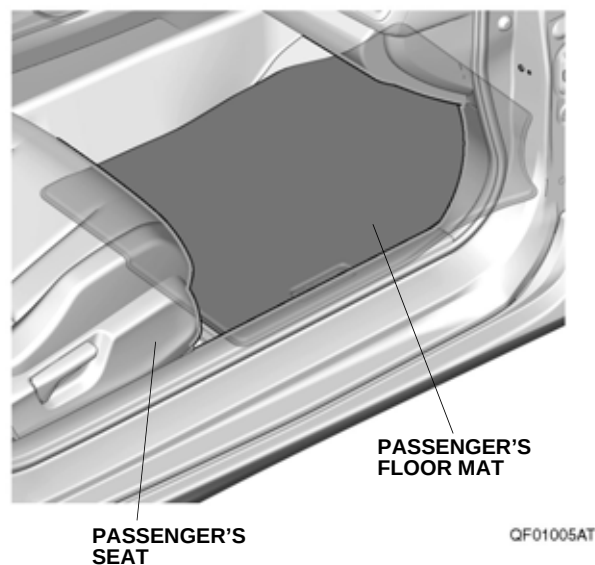

4. Place the left rear floor mat as shown.

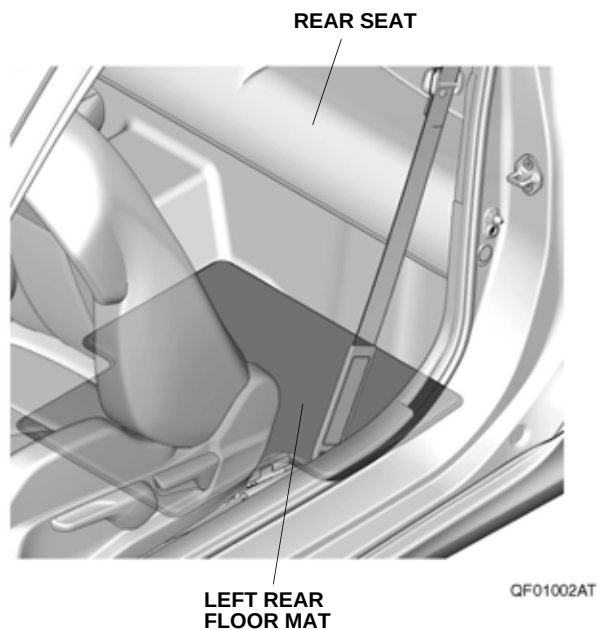

5. Place the grommet in the right rear floor mat over the anchor. Push the grommet into the anchor to secure the retaining tabs, then turn the knob 90° to secure the right rear floor mat.

