



HONDA INSTALLATION INSTRUCTIONS

Accessory

REAR BUMPER APPLIQUE
P/N 08P48-TGG-102

Application

2021 CIVIC
5-DOOR

Publications No.


VERSION 1

Issue Date


AUG 2020

PARTS LIST


Rear bumper applique

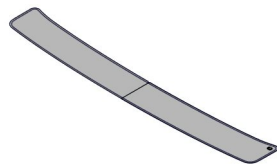


Applicator

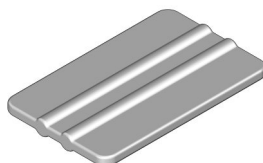

Soft sleeve

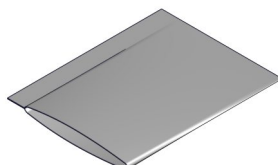

Alcohol swab



TOOLS AND SUPPLIES REQUIRED

Shop towel

Spray bottle


3M Protective tape application solution

Masking tape

Felt-tip pen

Gloves

Illustration of the Rear Bumper Applique Installed in the Vehicle

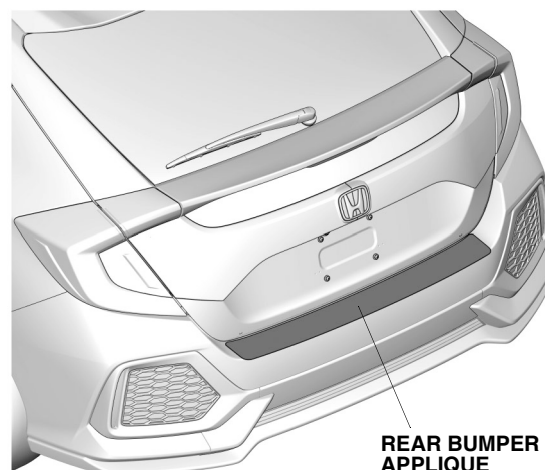

REAR BUMPER
APPLIQUE

QF10701AJ

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:

- Always wear gloves when working with 3M Protective tape application solution.
- Be careful not to damage the paint finish.
- This rear bumper applique kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.


1. Open the trunk lid. Use the alcohol swab to thoroughly clean the area where the rear bumper applique will attach.

REAR BUMPER APPLIQUE LOCATION
(Clean with an alcohol swab.)

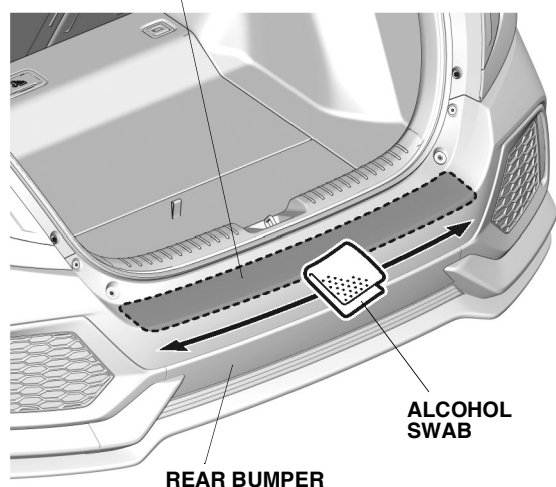

QF10702AJ


2. Attach a strip of masking tape to the rear bumper as area shown. Using a felt-tip pen, mark on the tape at the center of the tailgate anchor.

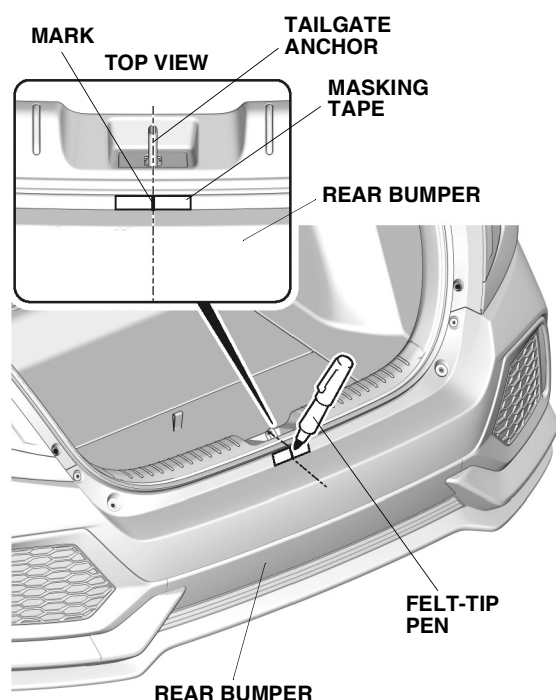

QF10703AJ


3. Using a spray bottle with 3M protective tape application solution, spray the area where the rear bumper applique will attach.

Spray with 3M protective tape application solution.

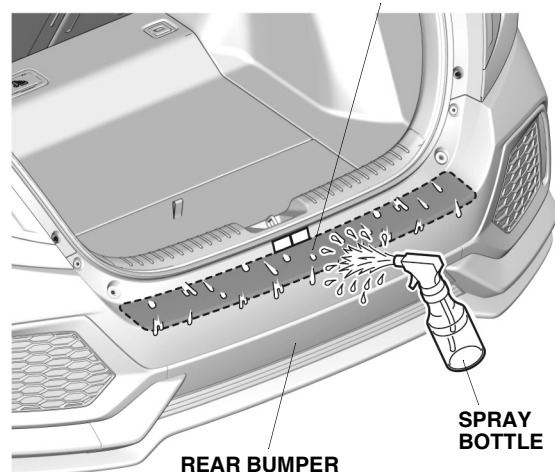


QJ62206AH

4. Remove the adhesive backing from the side of the rear bumper applique with the 3M mark.

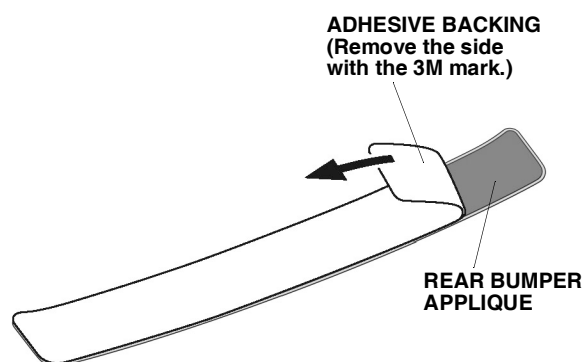


QF10705AJ

5. Spray the rear bumper applique with the 3M protective tape application solution.

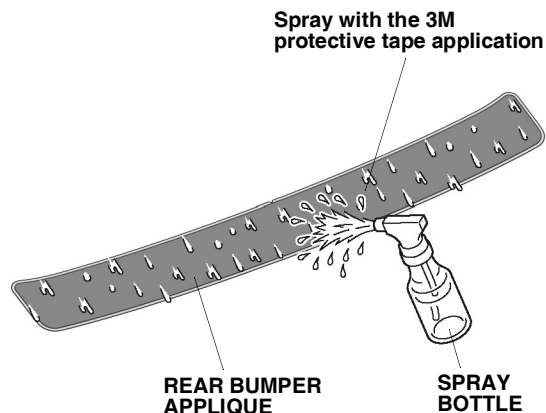


QF10706AJ

6. Line up the line on the rear bumper applique with the mark on the masking tape. Line up the edge of the rear bumper applique along the edge of the curved surface as shown. Smooth the rear bumper applique against the rear bumper.

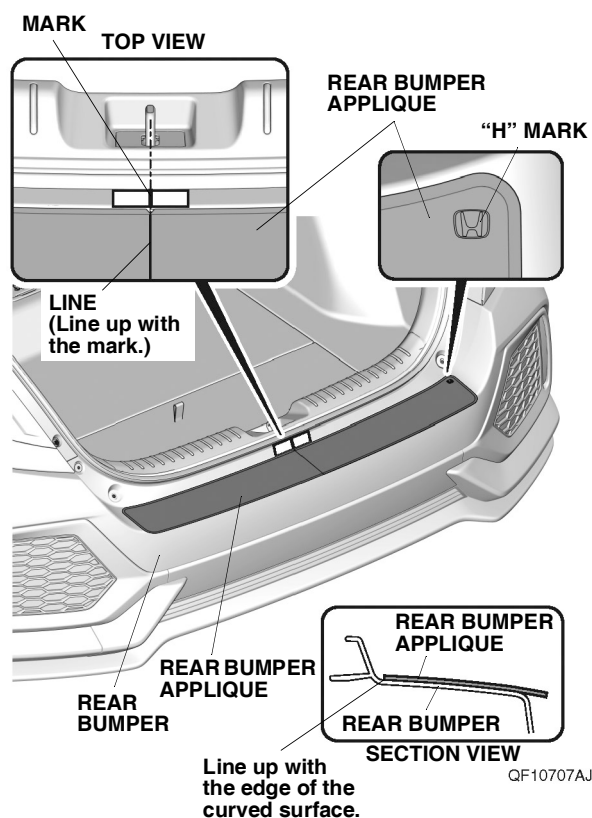


7. Insert the applicator into the soft sleeve.

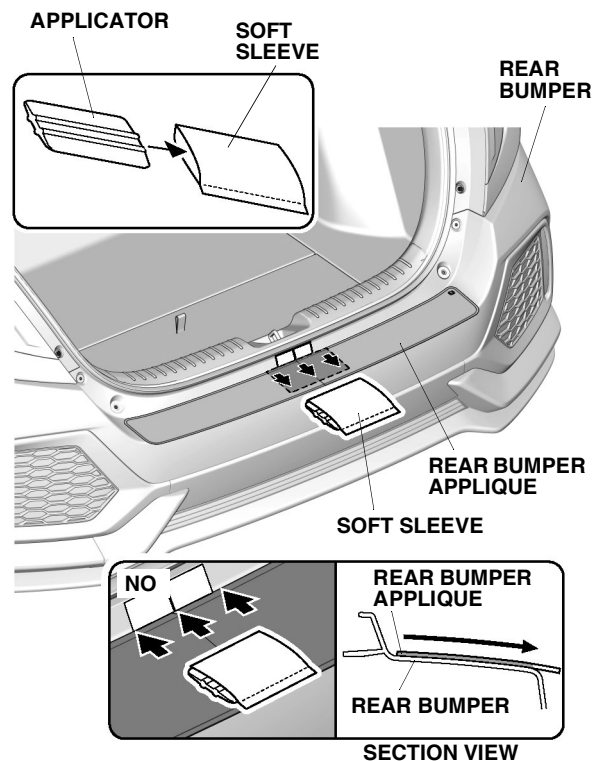


8. Starting from the front and working rearward, use the soft sleeve to smooth out the center of the upper section on the rear bumper applique. Move the soft sleeve in one direction only. If you see an air bubble, stop and gently peel up that section to work out the bubble. Work slowly and keep pressure against the rear bumper applique.


9. Starting from the center and working outward, use the soft sleeve to smooth the rear bumper applique on the left and right sides of the upper section on the rear bumper applique. Move the soft sleeve in one direction only. If you see an air bubble, stop and gently peel up that section to work out the bubble. Work slowly and keep pressure against the rear bumper applique.

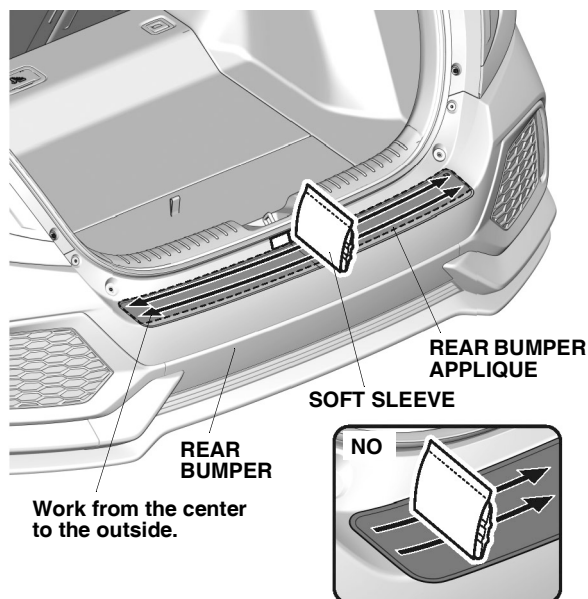


10. Slowly remove the protective film from the rear bumper applique.
NOTE: Do not pull up on the protective film.

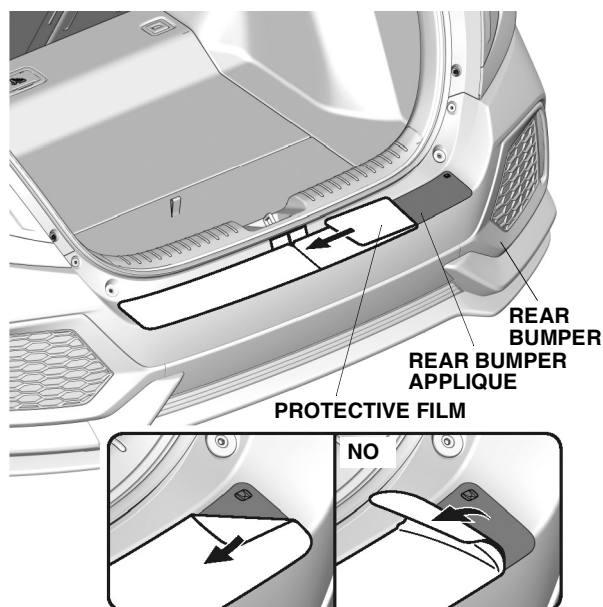


11. Repeat step 8 at the center of the lower section on the rear bumper applique.

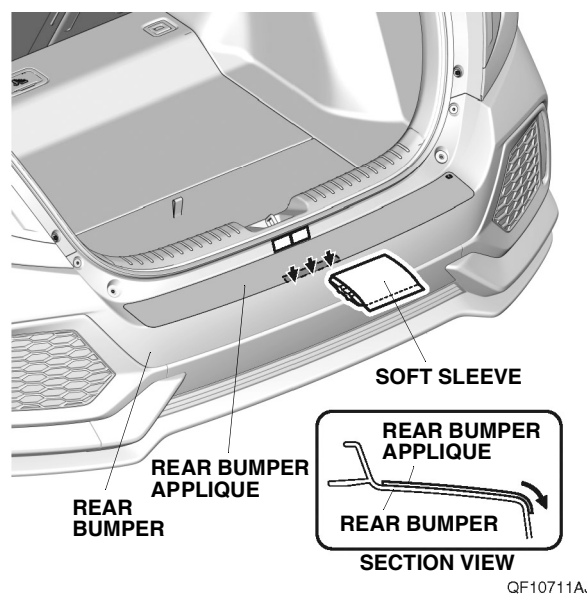

12. Repeat step 9 at the left and right sides of the lower section on the rear bumper applique.

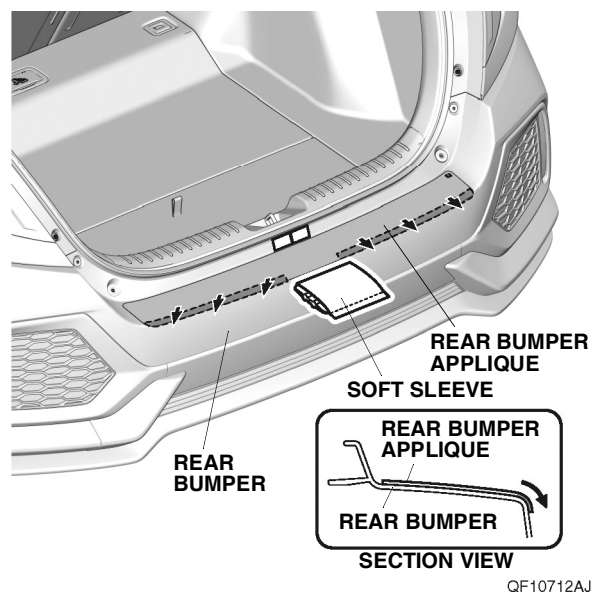

13. Using a shop towel, wipe up the 3M protective tape application solution. Allow the rear bumper applique to dry thoroughly. Remove the masking tape.

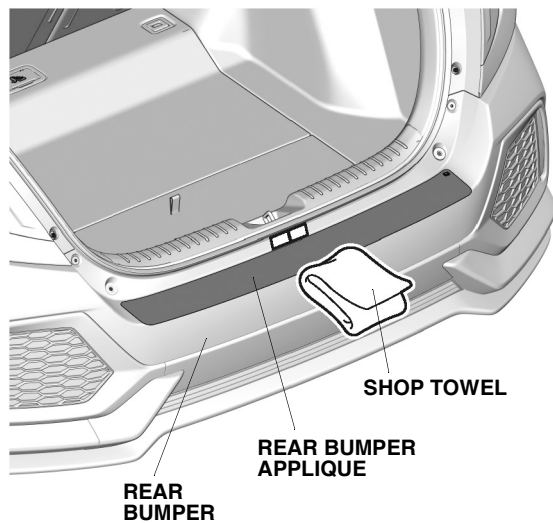

QF10713AJ