



## INSTALLATION INSTRUCTIONS

Accessory  
HOOD AIR DEFLECTOR  
P/N 08P47-T0A-100


Application  
2014 CR-V

Publications No.  
All 50019  
Issue Date  
JULY 2013


Put this information in the glove box with the vehicle owner's manual.

### PARTS LIST

Hood air deflector

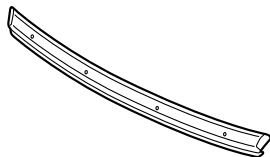

2 Brackets A

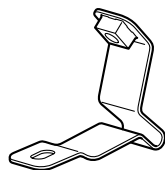

Bracket B




Bracket C



2 Collars



2 Alcohol swabs

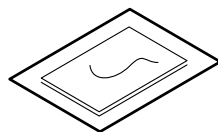

2 Clips



2 Screws




3 Truss screws



4 Protective films



Advice label



3 Grommets




### TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Masking tape

**Illustration of the Hood Air Deflector Installed on the Vehicle**

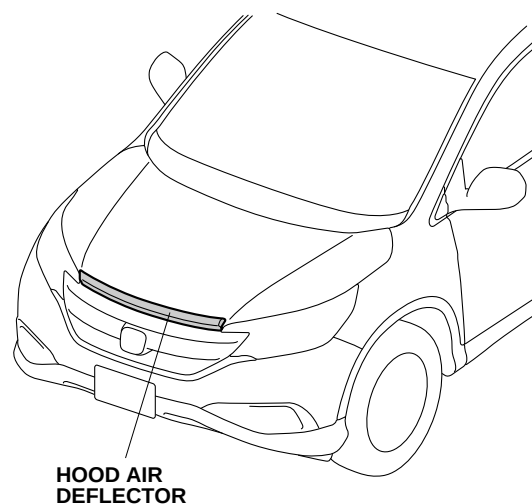


HOOD AIR  
DEFLECTOR

## INSTALLATION


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

### NOTE:


- Do not damage the paint finish when you install the hood air deflector.
  - This hood air deflector kit should be installed only if the ambient air temperature is above 15° C (60° F).
  - To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customer.
  - The hood air deflector cannot be installed with a nose mask.
1. Open the hood. Locate the three square holes on the inside of the hood. Push one grommet nut into each square hole in the hood.

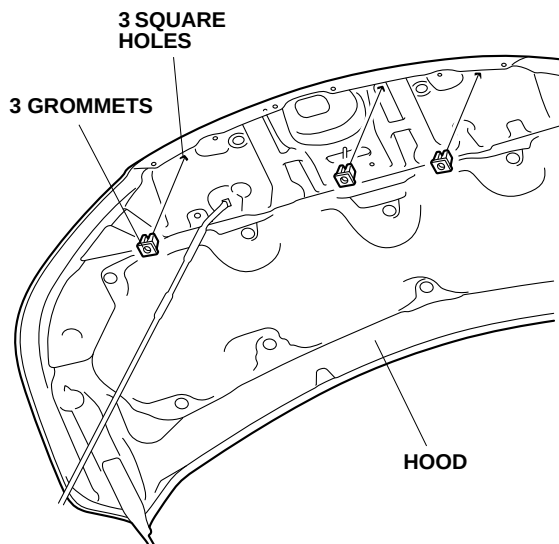


2. Using an alcohol swab, clean the hood where each protective film will attach.

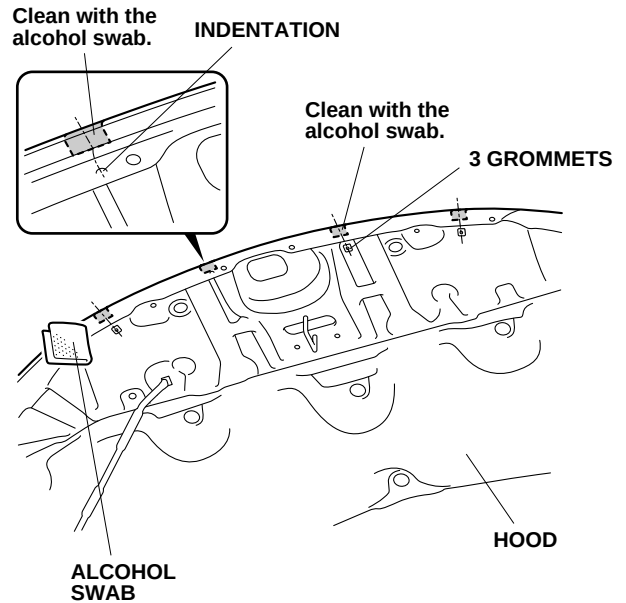


3. Remove the adhesive backings from each protective film, and attach the four protective films around the front of the hood. Use the three grommets and the indentation as reference. Wrap half of the protective film around the lip of the hood at each of the four locations.

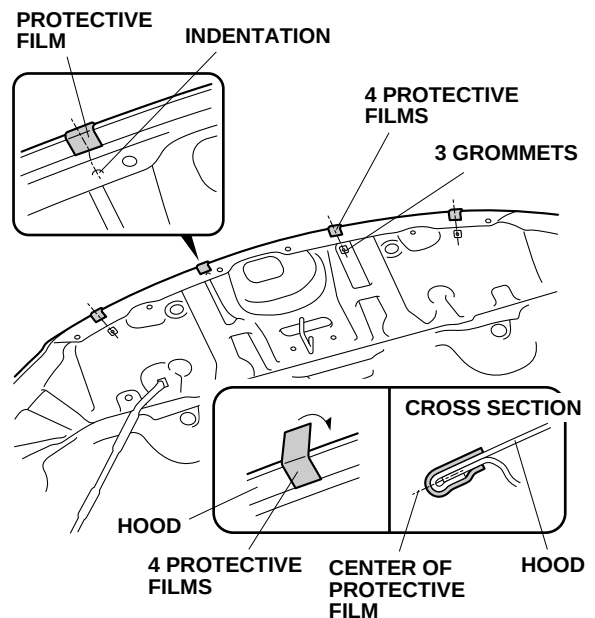


4. Position two brackets A over the protective tapes at the outer locations, and position bracket B over the inner grommet. Loosely install one truss screw through each bracket and into the grommet.

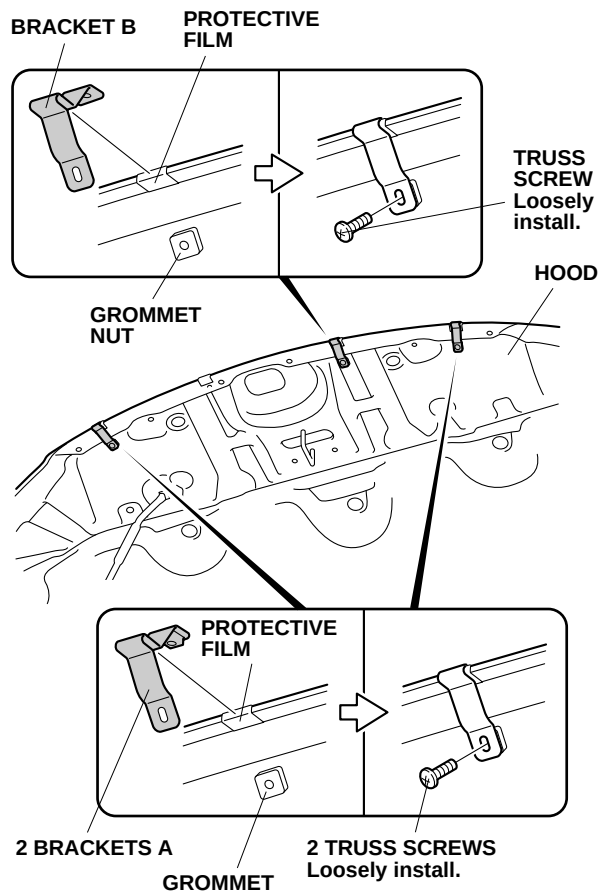


5. Position bracket C over the protective film, and align bracket C to the indentation on the inside of the hood. Secure bracket C to the hood with a piece of masking tape as shown.

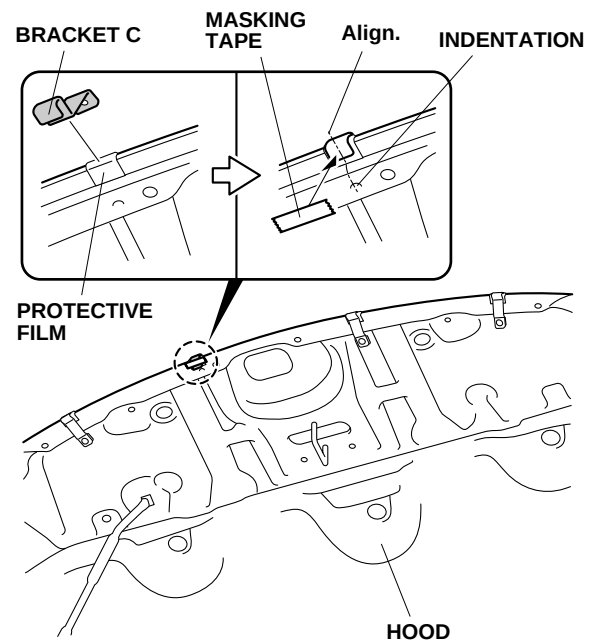


6. Gently close the hood. Position the hood air deflector on the hood and adjust the rubber molding around the front of the hood as shown.

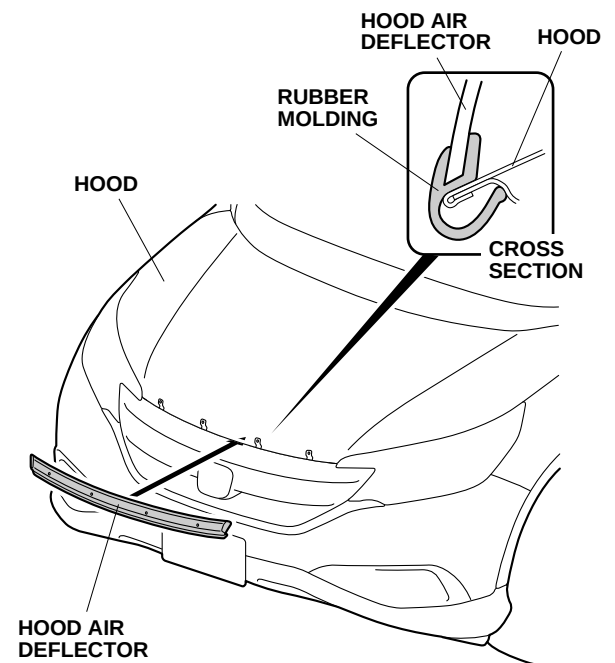


7. Align the holes in the hood air deflector with the holes in the four brackets. Secure the hood air deflector to the brackets with two screws, two collars, and two clips. Tighten the screws securely.

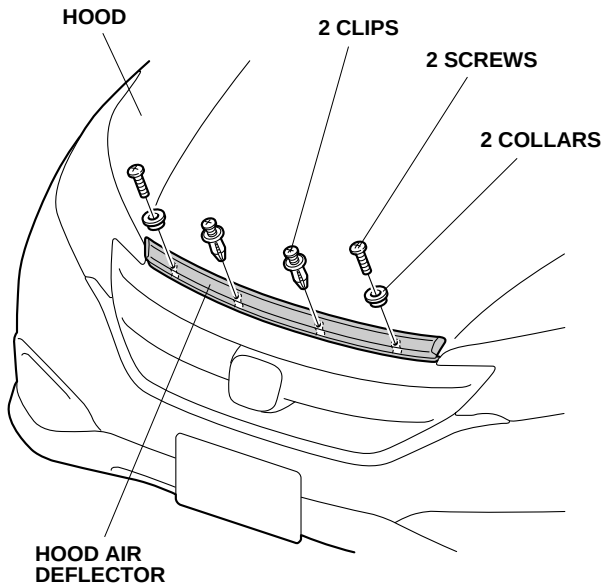

8. Open the hood. Tighten three truss screws loosely installed in step 4. Remove the masking tape attached in step 5.

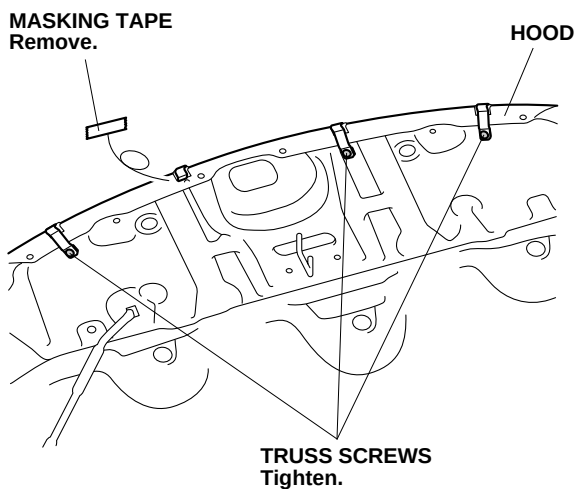

9. Using an alcohol swab, clean the inside the hood where the advice label will attach.

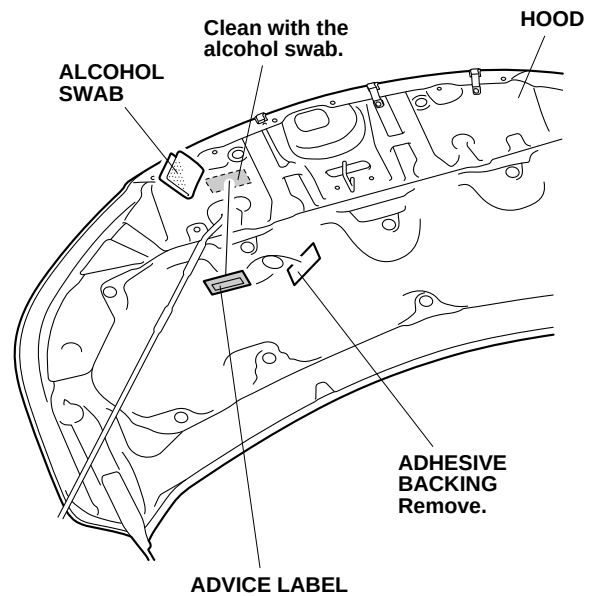

10. Remove the adhesive backing from the advice label, and attach the advice label to the hood in the area shown.

NOTE: Do not attach the advice label over any vehicle caution labels.

## CARE OF THE HOOD AIR DEFLECTOR

- To avoid damaging the surface, never use ammonia-based cleaners or solvents to clean the hood air deflector.
- Clean with a solution of mild dishwashing soap and water using a soft cloth or chamois.
- To remove fine scratches and restore the original luster, use Meguiar's Mirror Glaze plastic cleaner and polish or an equivalent high-quality plastic cleaner.