



# INSTALLATION INSTRUCTIONS

Accessory

CARGO NET  
P/N 08L96-T0A-100

Application

201) CR-V

Publications No.

J9FG-CB-%


Issue Date

G9DH-85%

Put this information in the glove box with the vehicle owner's manual.

## PARTS LIST


Cargo net

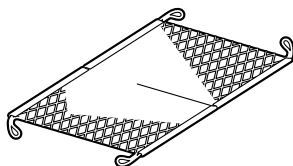

4 Snaps



## Illustration of the Cargo Net in the Vehicle

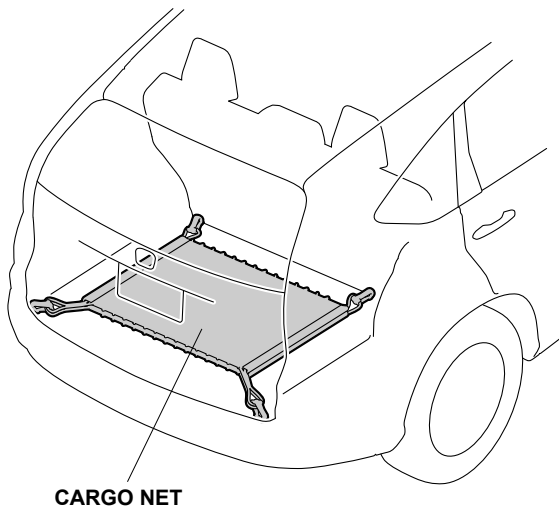


CARGO NET

## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

## Installing the Cargo Net

1. Fold the cargo net in half, and attach four snaps to the cargo net as shown.

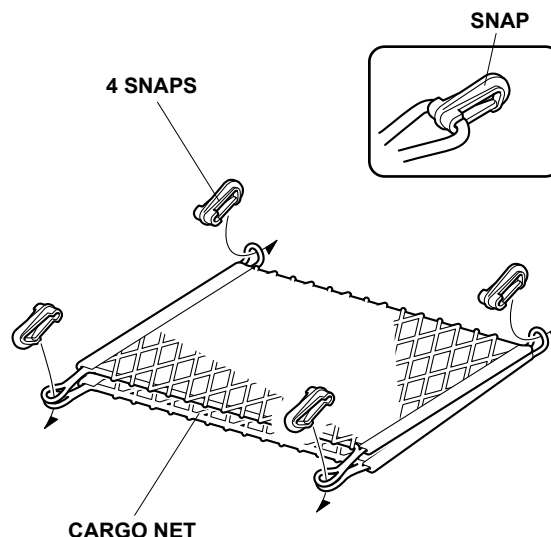


4 SNAPS

SNAP

CARGO NET

2. Open the tailgate, and secure four snaps to the hooks in the cargo area.

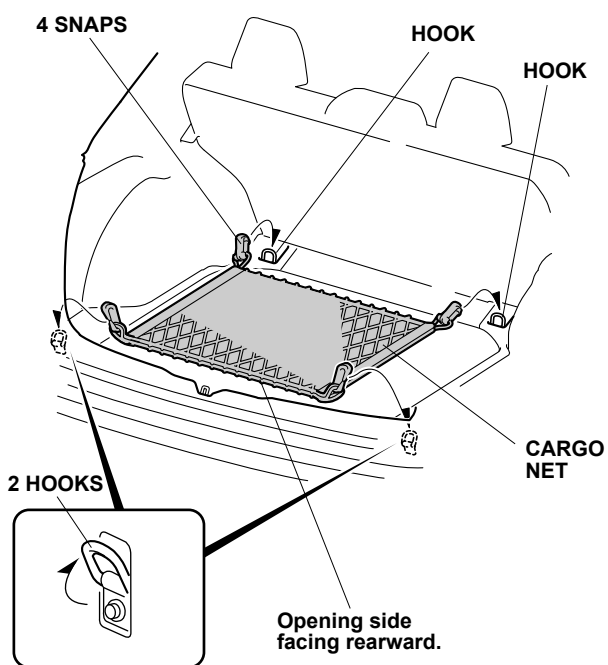

4 SNAPS

HOOK

HOOK

CARGO NET

2 HOOKS

Opening side facing rearward.