



HONDA INSTALLATION INSTRUCTIONS

Accessory

DOOR EDGE FILMS
P/N 08P20-SZT-100

Application

2013 CR-Z

Publications No.

All 13103

Issue Date


NOV 2012

PARTS LIST


Left door edge film




Right door edge film

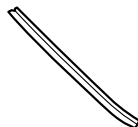


Applicator

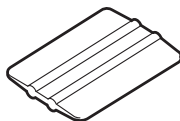

Soft sleeve

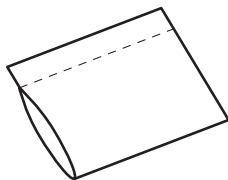

2 Alcohol wipes

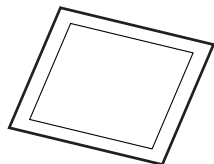

TOOL AND SUPPLIES REQUIRED

Shop towel


Spray bottle

3M Protective tape application solution

Tape measure

Illustration of the Door Edge Films on the Vehicle

RIGHT DOOR
EDGE FILM

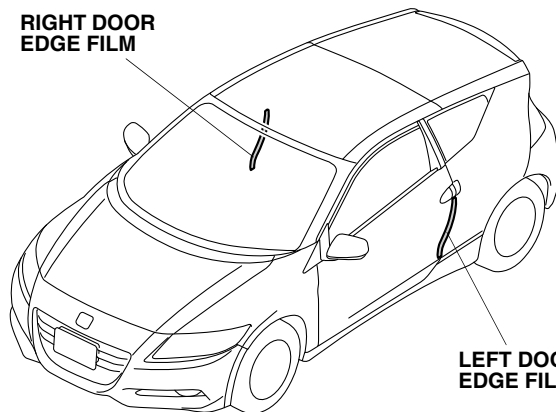

LEFT DOOR
EDGE FILM


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


NOTE:

- Do not damage the vehicle paint finish.
- This kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customer.
- Identify each door edge film by referring to the identification mark.
- Wash your hands thoroughly with soap and water before handling the door edge films.


1. Open the driver's door. Using the alcohol wipe, thoroughly clean the driver's door where the left door edge film will attach.

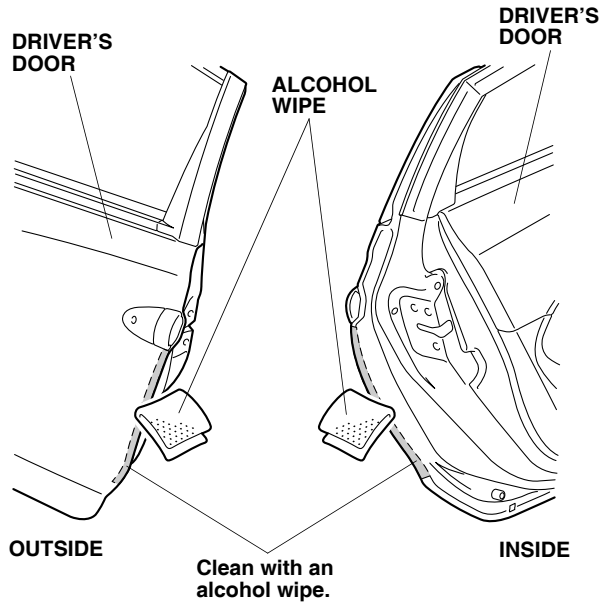


2. Close the driver's door. Using a spray bottle with 3M protective tape application solution, spray the outside of the driver's door where the left door edge film will attach.
NOTE: Do not spray the inner surface of the driver's door.

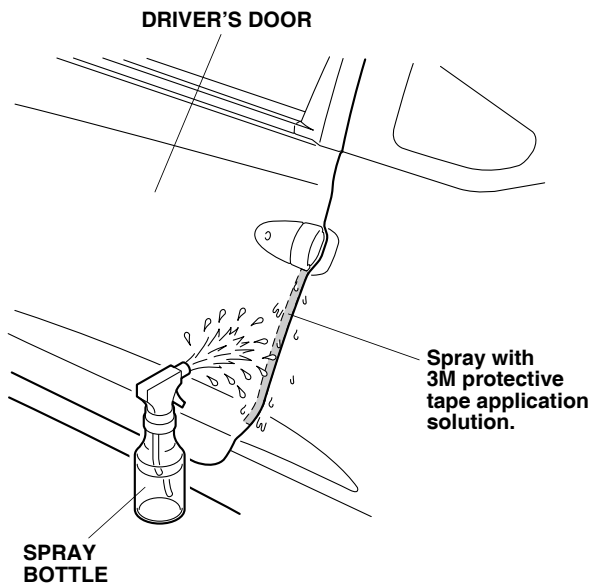


3. Open the driver's door. Peel back about 50 mm of the adhesive backing from the left door edge film. Align the v-notch on the left door edge film to the driver's door as shown.

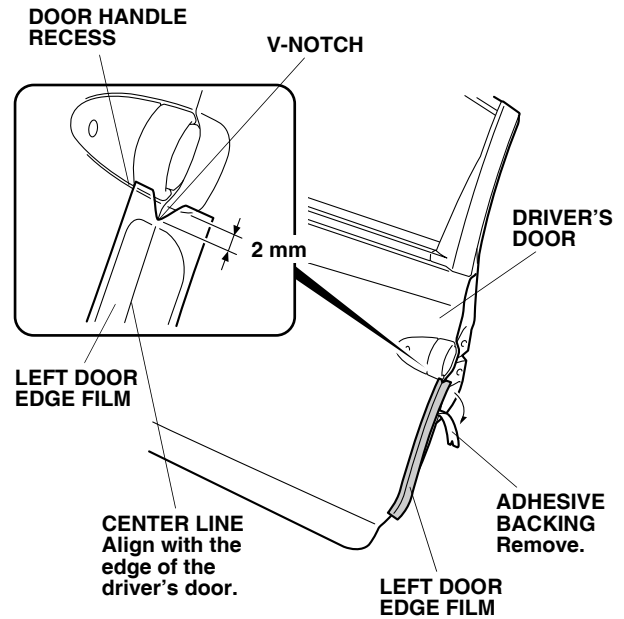


4. Align the center line on the left door edge film to the edge of the driver's door. While applying light pressure, carefully remove the adhesive backing, and attach the left door edge film to the driver's door.
5. Insert the applicator into the soft sleeve. Starting from the middle and working outward, use the soft sleeve to smooth out the left door edge film.
NOTE: Move the soft sleeve in one direction only.

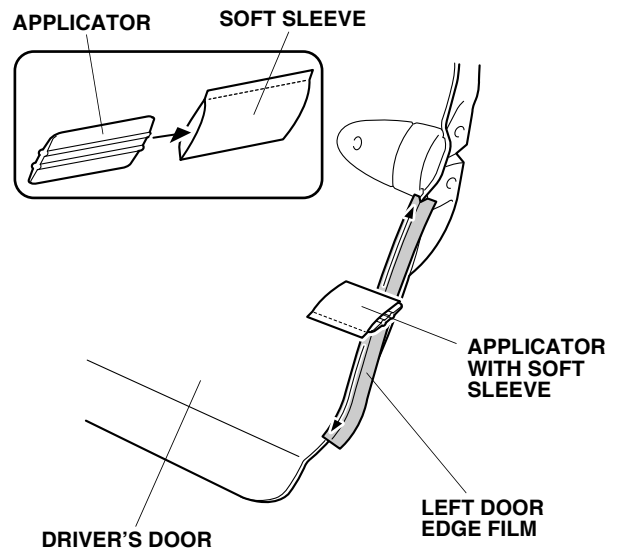


6. Slowly remove the protective film from the left door edge film.

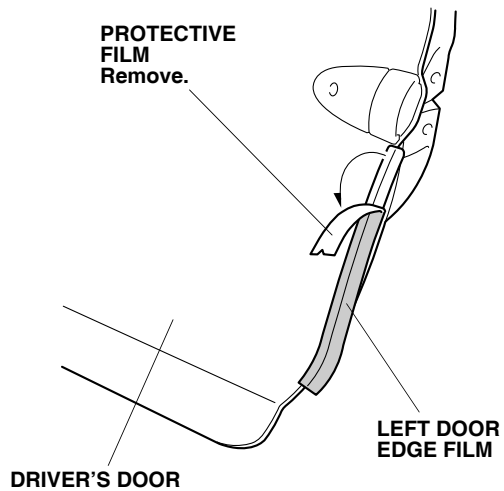

7. Starting from the top and working downward, use the soft sleeve to fold the left door edge film inside the driver's door as shown.
NOTE: Move the soft sleeve in one direction only. Do not damage the door seam sealant.

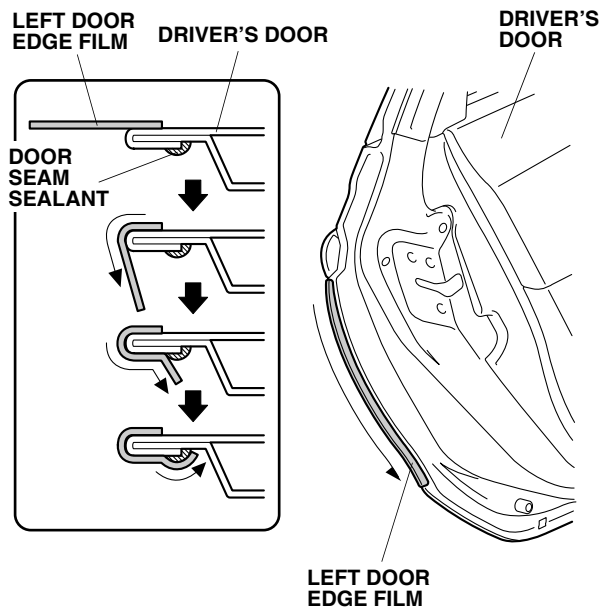

8. Using a shop towel, wipe the excess 3M protective tape application solution from the left door edge film.
NOTE: Allow the left door edge film to dry thoroughly.

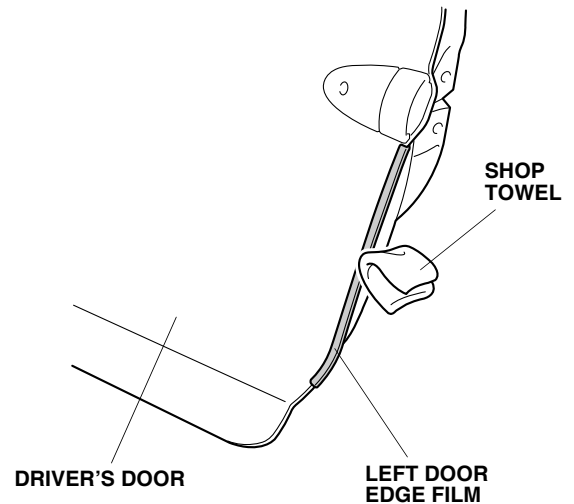

9. Repeat steps 1 through 8 to install the door edge film on the right side of the vehicle.