



**INSTALLATION  
INSTRUCTIONS**

Accessory

**SHIFT KNOB**

Application

**2007 FIT**

Publications No.

**All 31713**

Issue Date

**MAR 2006**

**PARTS LIST**


Shift knob




Flange nut



Shift lever collar  
(Not used)



Ty-rap  
(Not used)

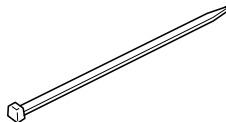

Boot ring  
(Not used)




**TOOLS REQUIRED**


14 mm Combination wrench

**INSTALLATION**

1. Remove the shift knob by turning it counter-clockwise.

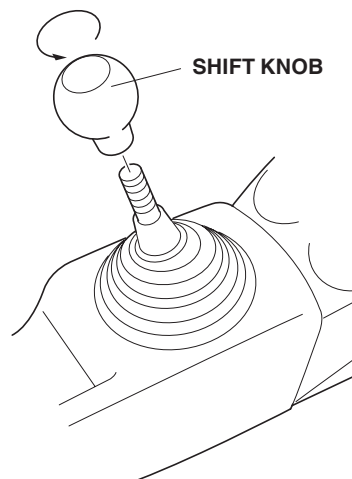

2. Install the flange nut on the shift lever to the end of the threads. Note the direction of the flange nut.

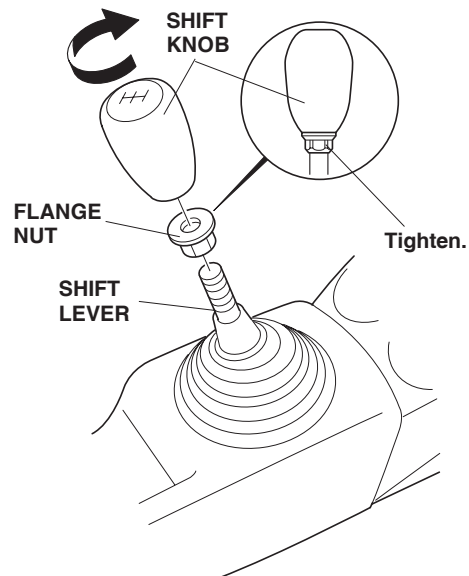

3. Install the shift knob on the shift lever until it's tight, then place it in the correct location, and tighten the flange nut securely.