www.collegehillshonda.com

INSTALLATION INSTRUCTIONS

CARGO COVER P/N 08U35-TK6-110


Application		
2009	FIT	

Publications No.
All 39855
Issue Date

AUG 2008

PARTS LIST

Cargo Cover



5 Snaps




5 Covers



2 Clips



Accessory User's Information Manual




TOOLS AND SUPPLIES REQUIRED


Tape measure
Phillips screwdriver
Pushpin
Felt-tip pen

INSTALLATION

1. Measure and mark the right rear seat-back at the two locations shown. Use your finger to confirm the location of each hole.

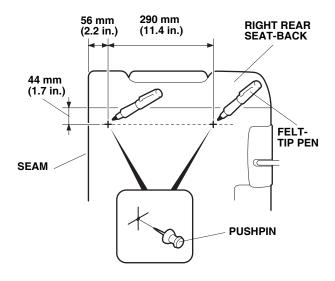


- 2. Using a pushpin, pierce the material and confirm each hole location.
- 3. Measure and mark the left seat-back using the above procedures.

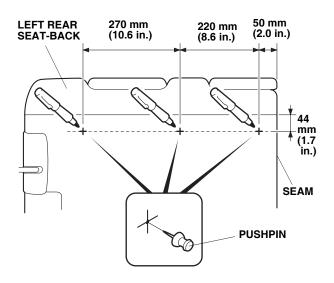


www.collegehillshonda.com


4. Insert the snaps through the covers and install the snaps at the pierced marks. Be careful not to overtighten the screws.

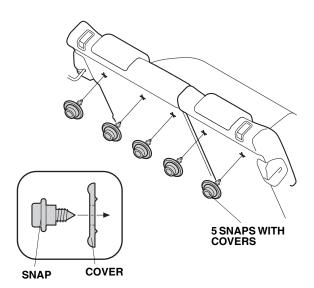

5. Install one clip to the inside of the tailgate frame on each side of the tailgate.

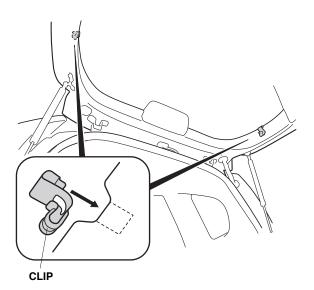

6. Place the rear shelf in the cargo area, and snap the five buttons on the rear shelf to the five snaps on the seat-back.

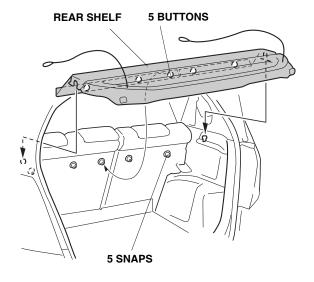

7. Hook the cord on each side of the rear shelf to each clip installed on the tailgate.

