



**INSTALLATION INSTRUCTIONS**


Accessory  
**EXHAUST PIPE FINISHER**  
 P/N 08F53-TK6-100

Application  
**2009 FIT**


Publications No.  
**All 39863**  
 Issue Date  
**AUG 2008**

**PARTS LIST**

Exhaust pipe finisher

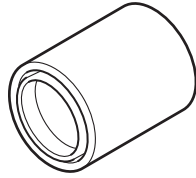

Flange bolt



**TOOLS AND SUPPLIES REQUIRED**

Ratchet


10 mm Socket

Torque wrench


**INSTALLATION**

**NOTE:** Allow the exhaust pipe to cool down before installing the accessory.

1. Slide the exhaust pipe trim onto the exhaust pipe with the bolt facing down. Partially thread the flange bolt into the exhaust pipe trim.

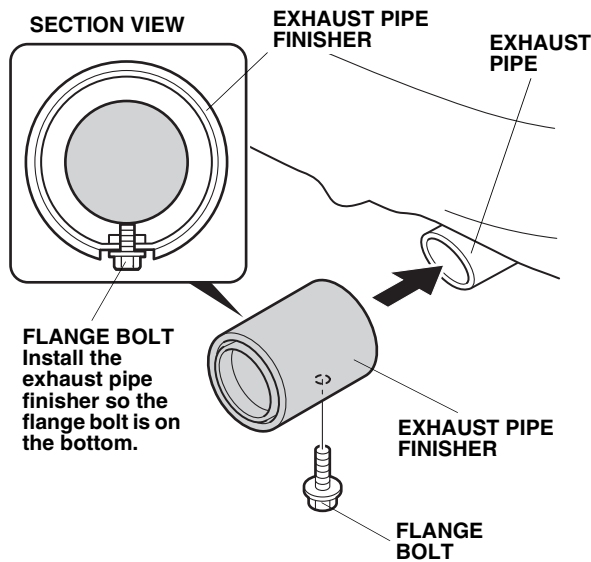

2. Slide the exhaust pipe trim onto the exhaust pipe until it bottoms against the exhaust pipe.

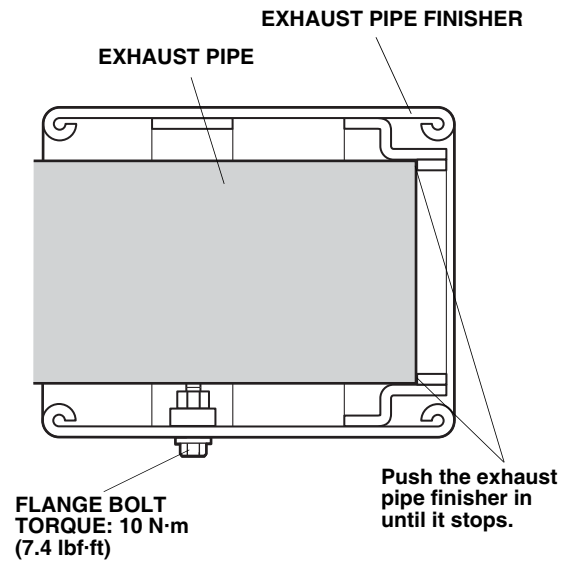

3. While pushing the exhaust pipe finisher firmly against the exhaust pipe, torque the flange bolt to 10 N-m (7.5 lbs-ft).
4. Start the engine, and rev it up a few times. Listen for vibrations from the exhaust pipe trim, and adjust if necessary.