



## INSTALLATION INSTRUCTIONS

### Accessory

**EXHAUST PIPE FINISHER  
P/N 08F53-TK6-100**

### Application

**2011 FIT**

### Publications No.

**All 45090**



### Issue Date

**NOV 2010**

### PARTS LIST

Exhaust pipe finisher

Flange bolt

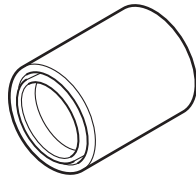

### TOOLS AND SUPPLIES REQUIRED

Ratchet wrench


Socket (10 mm)

Torque wrench


### INSTALLATION

**NOTE:** Allow the exhaust pipe to cool down before installing the accessory.

1. Slide the exhaust pipe trim onto the exhaust pipe with the bolt facing down. Thread the flange bolt into the exhaust pipe trim.

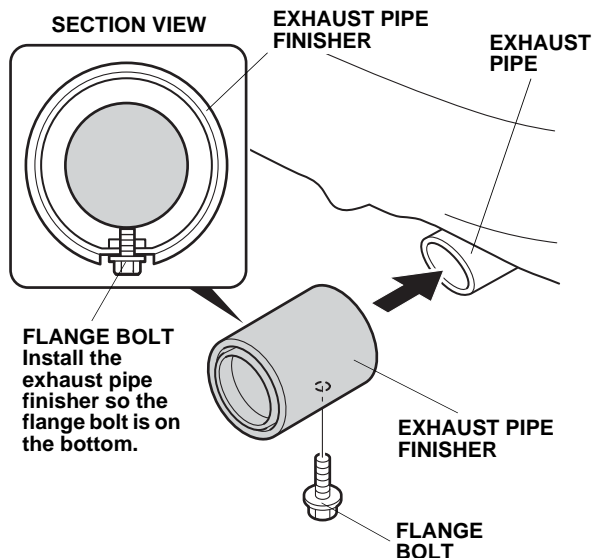

2. Slide the exhaust pipe trim firmly onto the exhaust pipe until it bottoms.

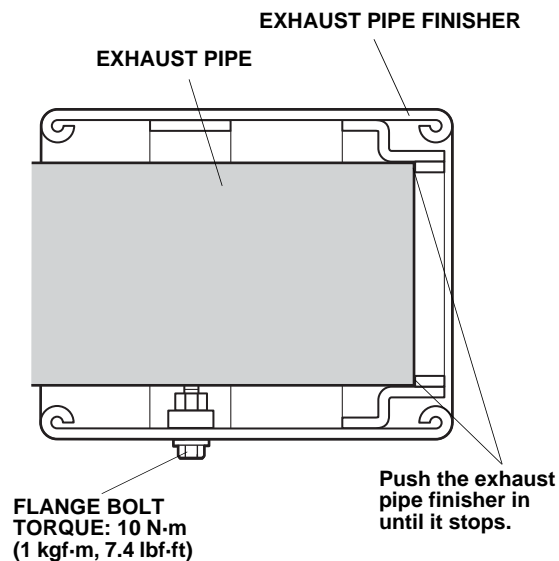

3. While pushing the exhaust pipe trim firmly against the pipe, torque the flange bolt to 10 N·m (7.5 lbf·ft).
4. Start the engine and rev it a few times. Listen for vibrations or abnormal noise from the exhaust pipe trim, and adjust it if necessary.