



## INSTALLATION INSTRUCTIONS

### Accessory

DOOR SWITCH TRIM  
P/N 08Z03-TK6-100B

### Application

2012 FIT

### Publications No.


All 45989

### Issue Date

AUG 2011

## PARTS LIST


Right front door switch trim

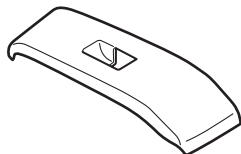


Left front door switch trim




Right rear door switch trim

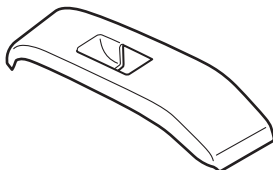

Left rear door switch trim

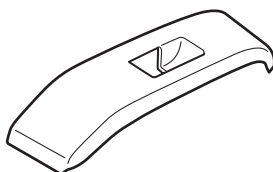

2 Alcohol swabs



## TOOLS AND SUPPLIES REQUIRED

Masking tape

## INSTALLATION


### NOTE:

- The door switch trim should be installed only if the ambient air temperature is 15°C (60°F) or above.
- These installation instructions show the left door switch trim being installed. The same procedure applies to installing the right door switch trim.


## Installing the Front Door Switch Trim

1. Peel back approximately 1½ inches of the adhesive backing from each outer adhesive strip, and tape the ends to the front surface of the switch trim. Remove the remaining adhesive backings.


### Left Side

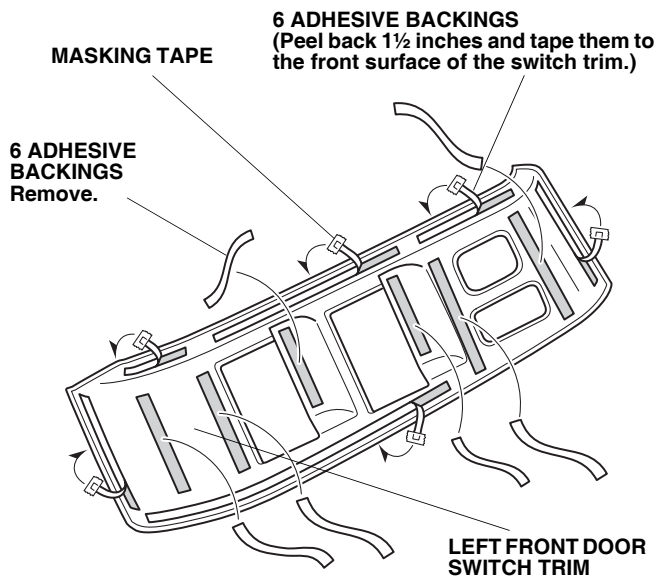


### Right Side

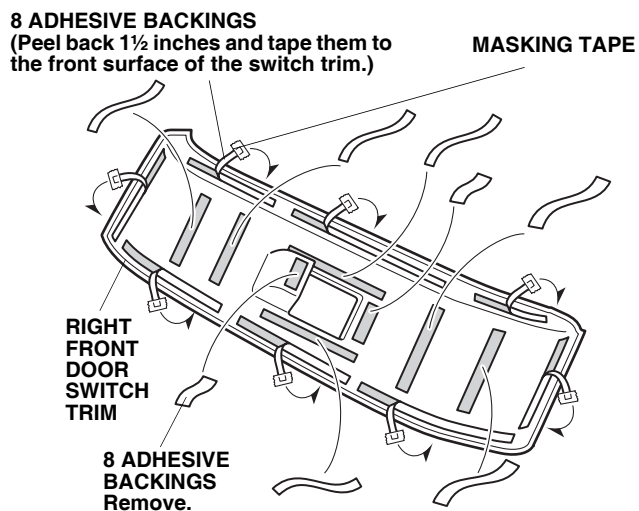

2. Using an alcohol swab, clean the surface where the left front door switch trim will be installed.

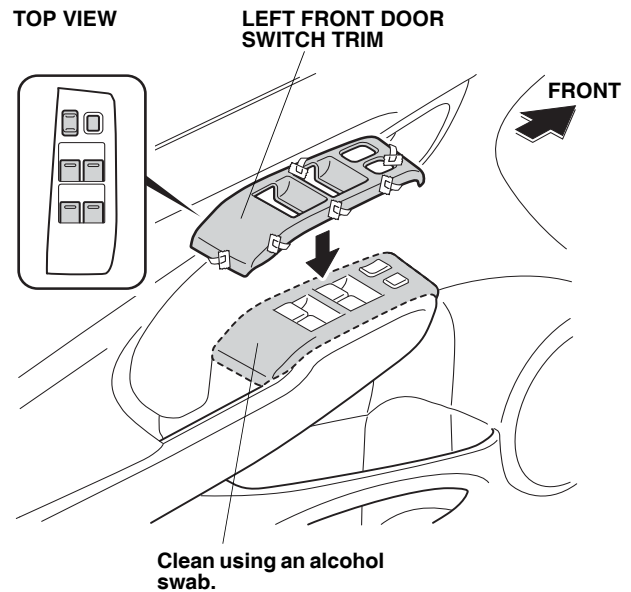


3. Attach the left front door switch trim to the door switch panel as shown.
4. While pressing on the door switch trim, carefully remove the adhesive backings. Press and hold the door switch trim firmly with the palm of your hand, especially at the corners, for 30 seconds.

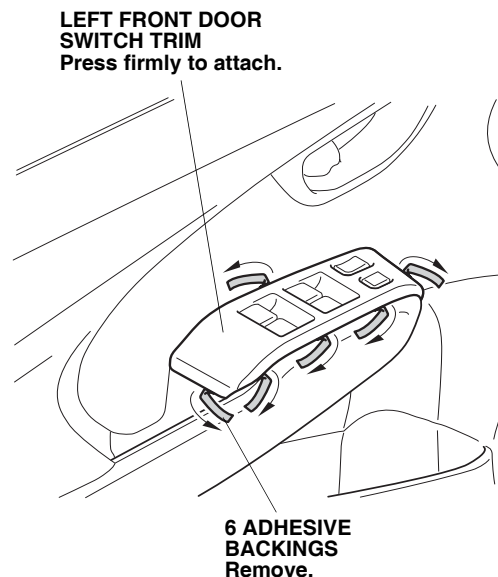


5. Repeat steps 1 thru 4 to install the right front door switch trim.

## Installing the Rear Door Switch Trim

6. Peel back approximately 1½ inches of adhesive backing from each adhesive strip, and tape the ends to the front surface of the switch trim. Remove the remaining adhesive backings.

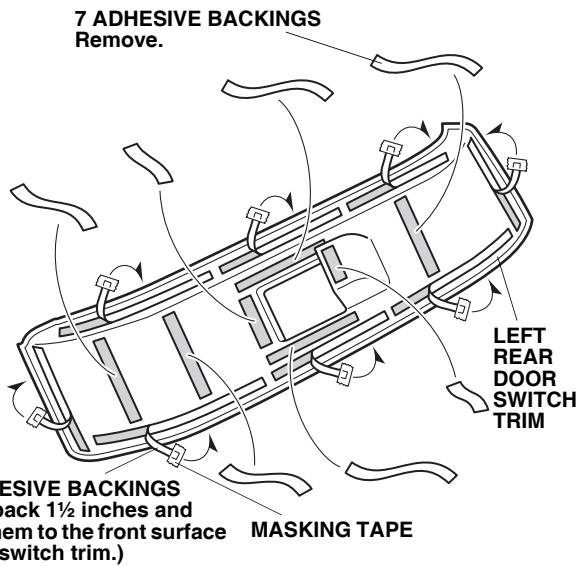


7. Using an alcohol swab, clean the surface where the left rear door switch trim will be installed.

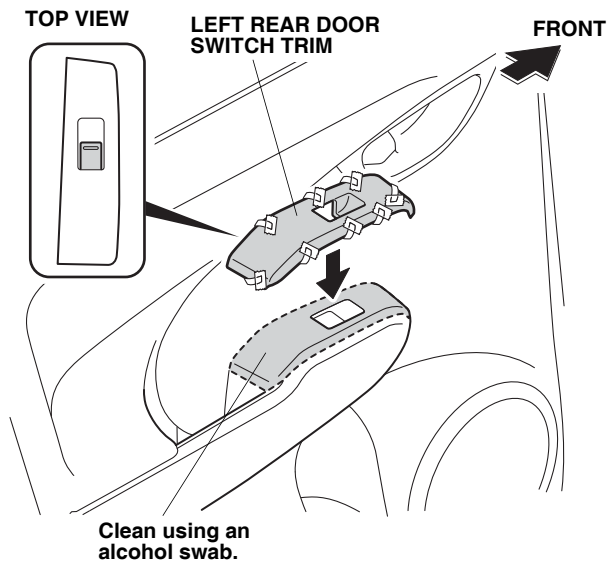

8. Attach the left rear door switch trim to the door switch panel as shown.

9. While pressing on the door switch trim, carefully remove the adhesive backings. Press and hold the door switch trim firmly with the palm of your hand, especially at the corners, for 30 seconds.

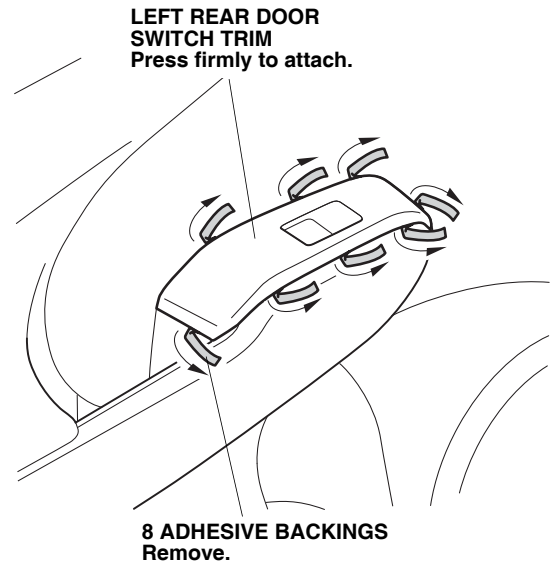

10. Repeat steps 6 thru 9 to install the right rear door switch panels.