



INSTALLATION INSTRUCTIONS

Accessory

SPORT PEDALS
P/N 08U74-TK6-100B

Application

2013 FIT
(M/T)

Publications No.

All 13243

Issue Date

JULY 2012

PARTS LIST


Accelerator pedal cover



2 Pedal pads




2 Pedal pad covers

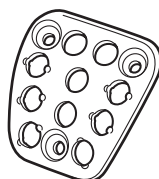


Upper plate



Lower plate

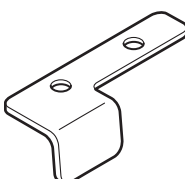

9 Rivets



TOOLS AND SUPPLIES REQUIRED

Drill

2 mm and 5 mm Drill bits

Eye protection (safety goggles, face shield, etc.)

Electrical tape

File

Felt-tip pen (white)

Pushpin


Rivet tool (MAR 3900)

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

Installing the Accelerator Pedal Cover

1. Apply the parking brake. Align the accelerator pedal cover with the accelerator pedal. Mark the accelerator pedal through the three holes in the accelerator pedal cover using a felt-tip pen (white).

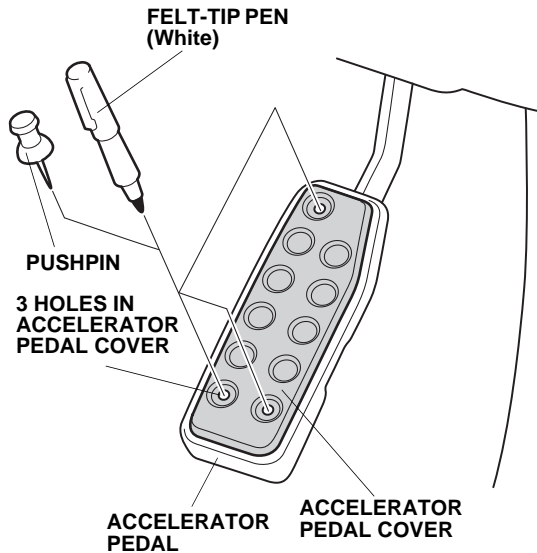


2. Using a pushpin, pierce through the accelerator at each mark. Remove the accelerator pedal cover.
3. While wearing eye protection, hold the accelerator pedal against the floor and drill each pierced mark to 5 mm. First, use a 2 mm drill bit, then enlarge each hole with a 5 mm drill bit. To avoid drilling the second layer, wrap tape around each bit 7 mm from the tip.

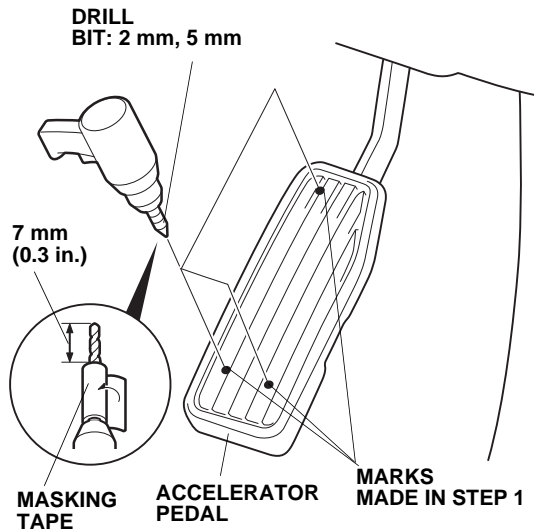


4. Use a file to remove the burrs from the edges of the holes.

5. Slide the upper and lower plates into the left side of the accelerator pedal. Note the installation direction of the upper and lower plates.

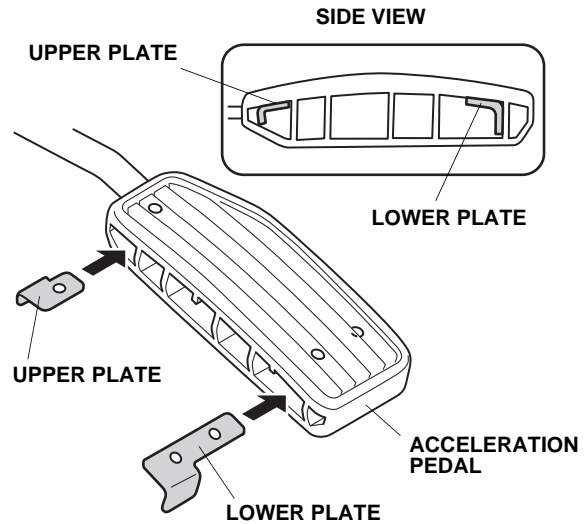


6. Place the accelerator pedal cover on the accelerator pedal. Insert one rivet through each hole in the pedal cover and into the plates. Using a rivet tool (MAR 3900), secure the accelerator plate to the accelerator pedal.

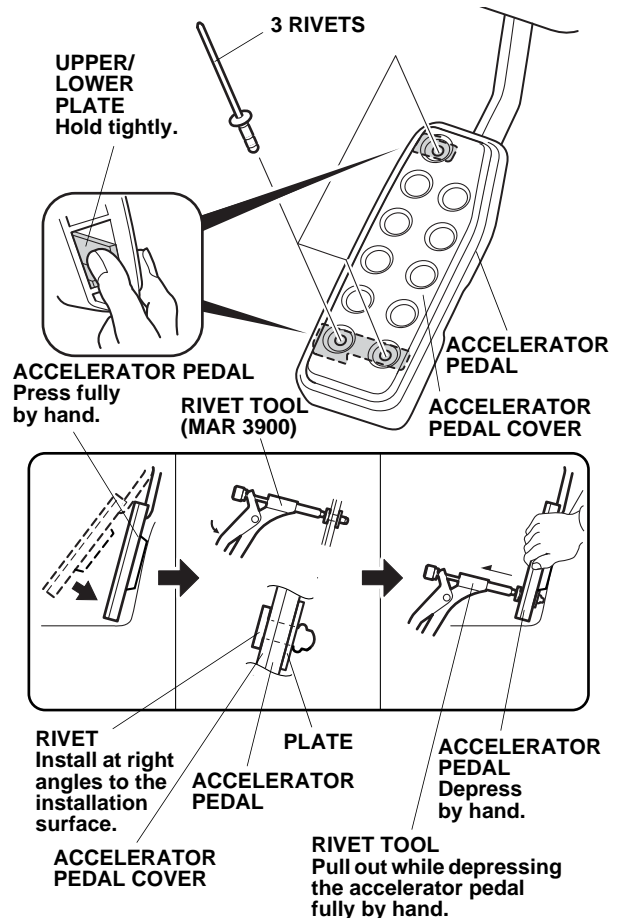


Installing the Pedal Pad Cover


- Remove the vehicle brake pedal pad from the brake pedal.

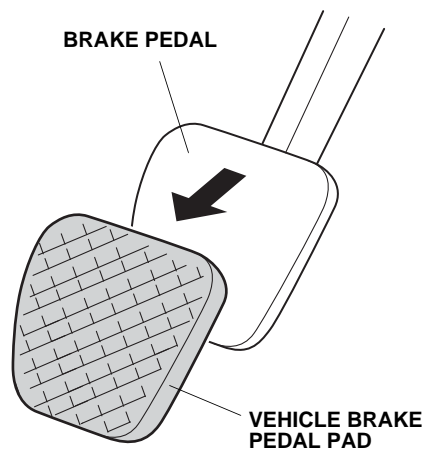


- Separate the rubber pedal from the brake pedal cover. Install the new pedal pad on the brake pedal. Check that the pedal pad is installed on the brake pedal securely.

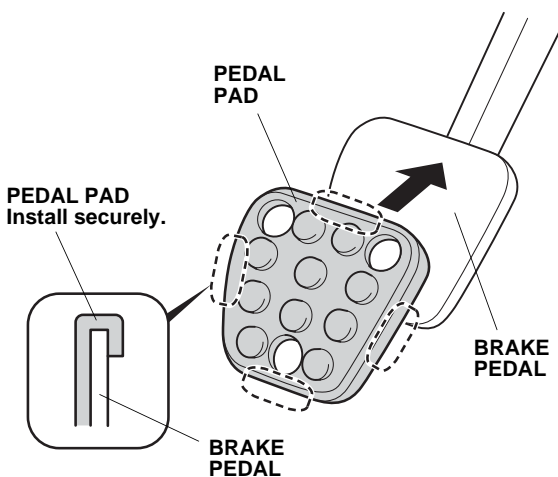

- Align the pedal pad cover over the pedal pad.

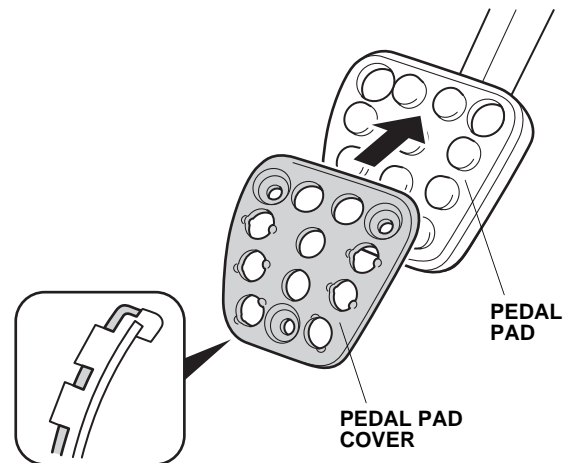

- Insert one rivet through each hole in the pedal pad/cover and into the brake pedal. Using the rivet tool, secure the brake pedal pad cover to the brake pedal.

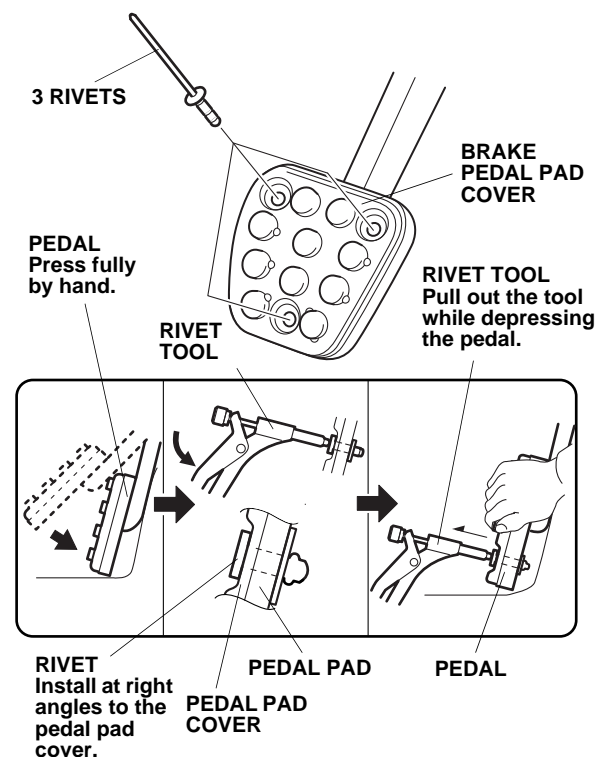

- Repeat steps 7 thru 10 to install the pedal pad and pedal pad cover to the clutch pedal.