



## HONDA INSTALLATION INSTRUCTIONS

### Accessory

ILLUMINATED DOOR  
SILL TRIM  
P/N 08E12-T5A-100

### Application

2018 FIT

### Publications No.


VERSION 1

### Issue Date


JUL 2017

## PARTS LIST


Left front illuminated door sill trim

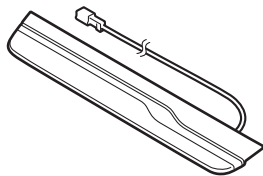


Right front illuminated door sill trim

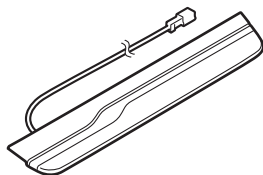


Left rear door sill trim




Right rear door sill trim




Door sill trim harness

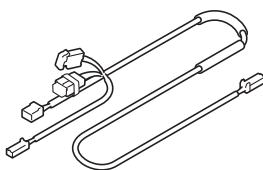


Fuse label

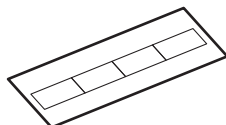


18 Wire ties

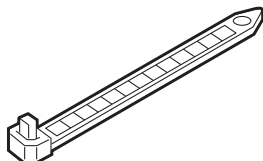

Urethane tape




Protective tape




2 Protective clips




2 Alcohol swabs

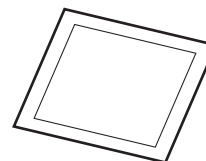


Wire tie with clip

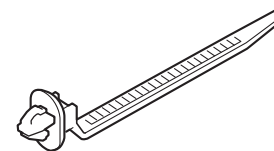

Clip



Aluminum tape

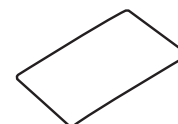


## TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver  
10 mm Open end wrench  
Ruler  
Masking tape  
Tape  
Felt-tip pen  
Scissors  
Utility knife  
File  
Needle nose pliers  
Diagonal cutters  
Isopropyl alcohol  
Shop towel

*The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.*

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)


### **Illustration of the Illuminated Door Sill Trim in the Vehicle**

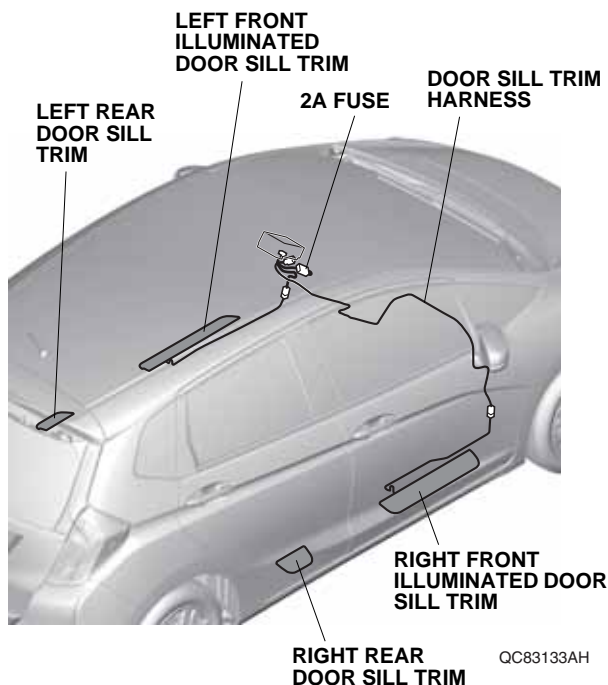

## INSTALLATION


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery.
2. Remove the passenger's under cover.

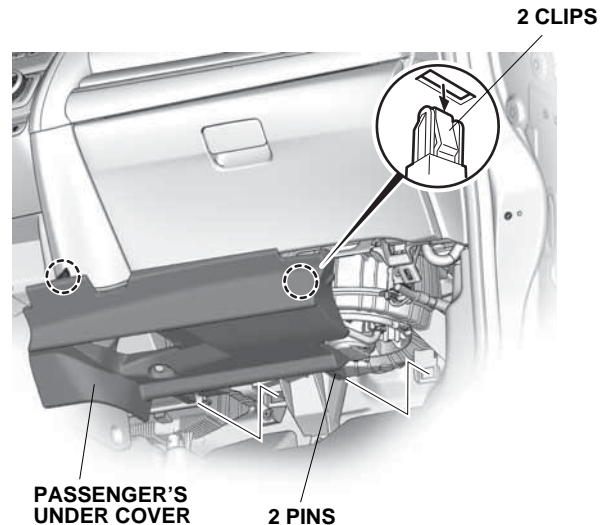


QC90301AJ


- Open the glove box, push inward on the stops, and remove the glove box.

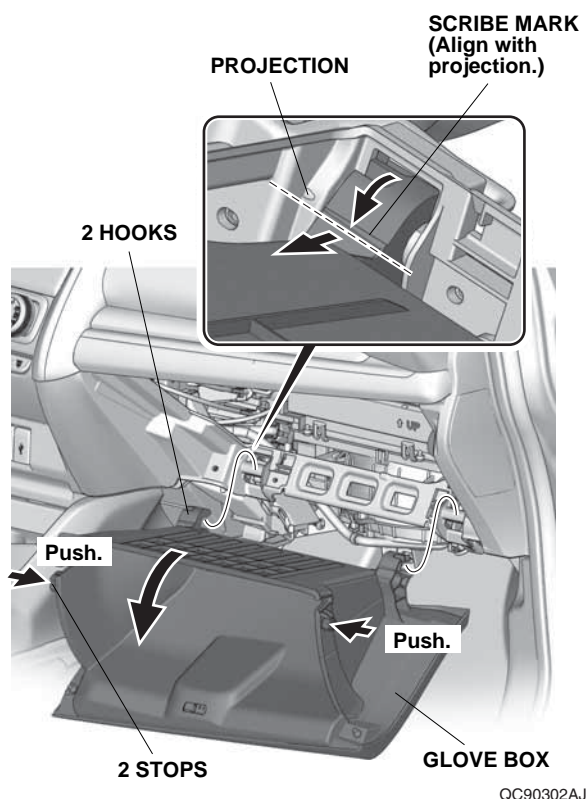


- Pull back the door opening seal, and remove the passenger's front door sill trim.

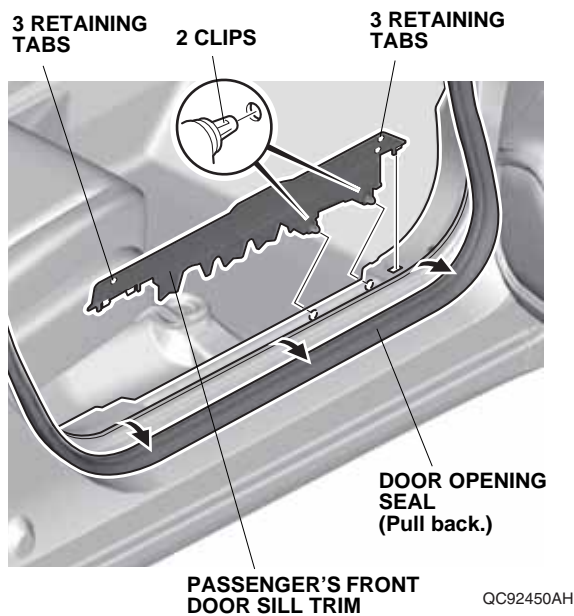


- Pull back the door opening seal, and remove the passenger's kick panel.

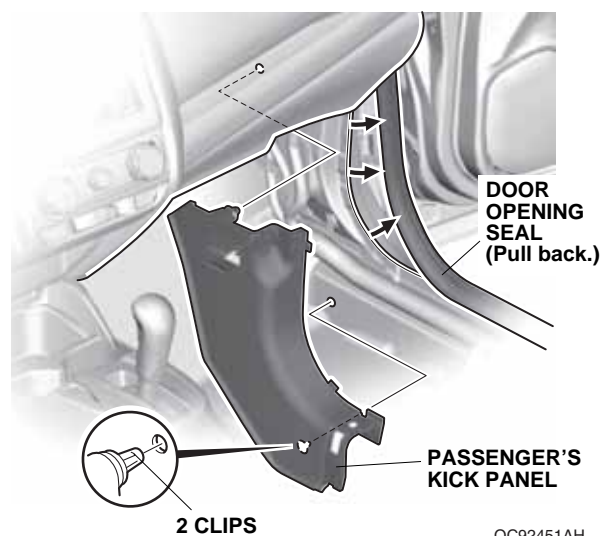


- Pull back the door opening seal, and remove the driver's front door sill trim.

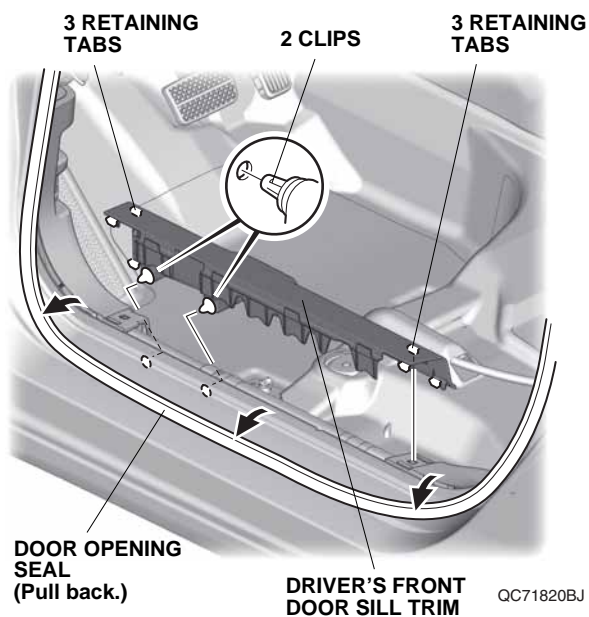


7. Pull back the door opening seal, and remove the driver's kick panel.

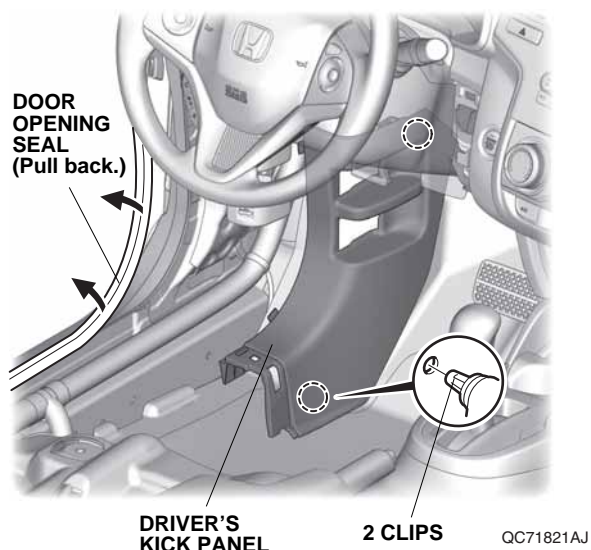


8. Apply tape to the areas shown.

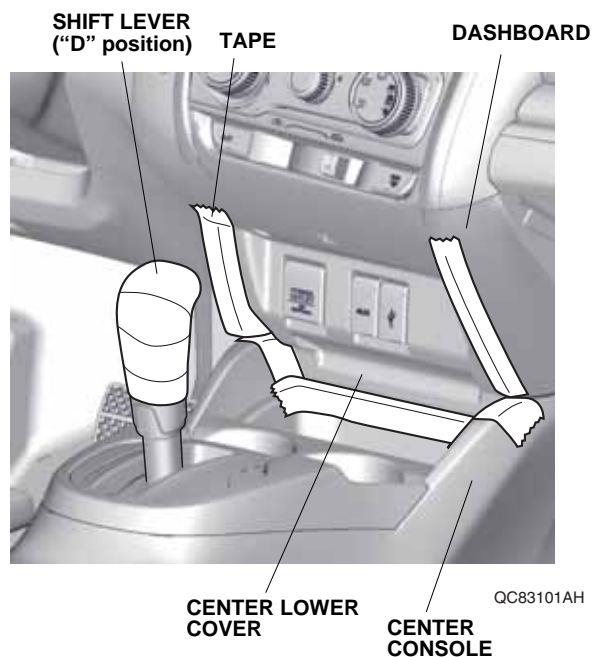

9. Remove the center lower cover, and unplug the vehicle connectors.

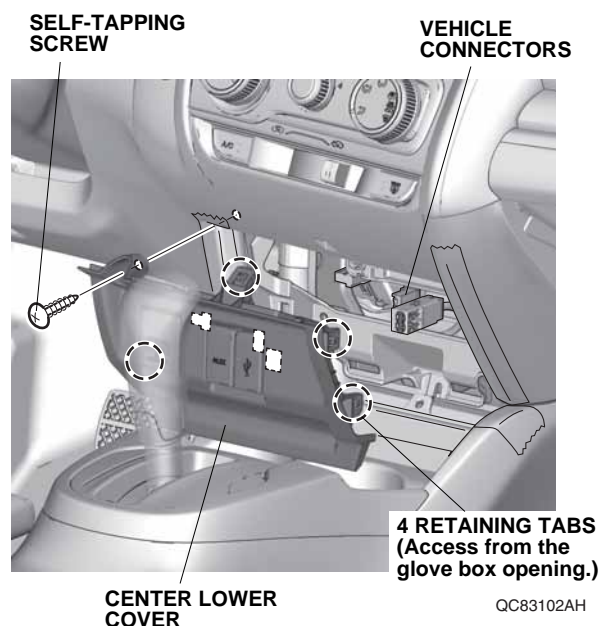


10. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the fuse label will attach.

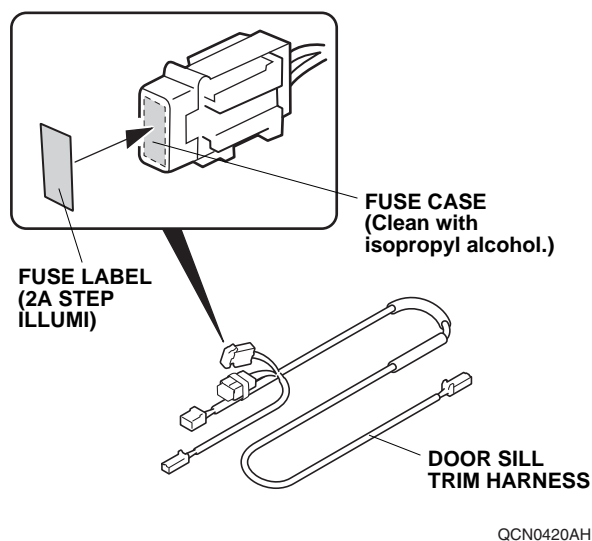

11. Attach the fuse label to the door sill trim harness fuse case.

## Without Other Accessory Harness 8-pin Connector


12. Plug the door sill trim harness 8-pin connector into the fuse box. Go to step 15.

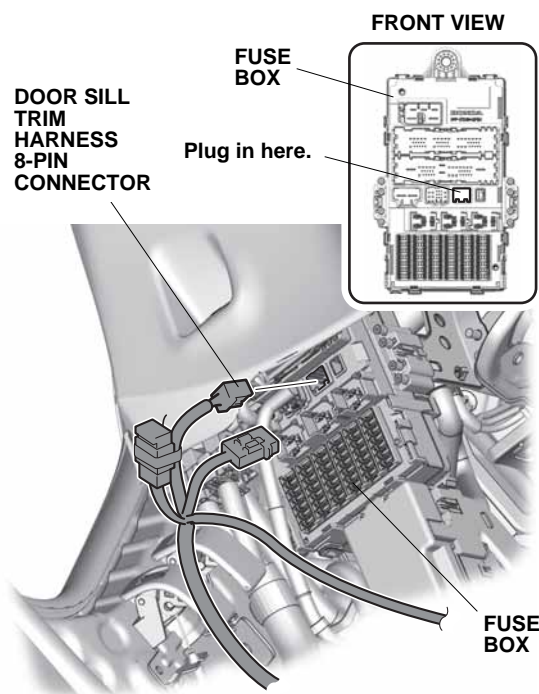

QC83103AH

## With Other Accessory Harness 8-pin Connector


13. If other accessory harness 8-pin connector is plugged into the fuse box, unplug it from the fuse box. Remove and discard the dummy connector from the door sill trim harness 8-pin connector, and plug other accessory harness 8-pin connector into the door sill trim harness 8-pin connector.

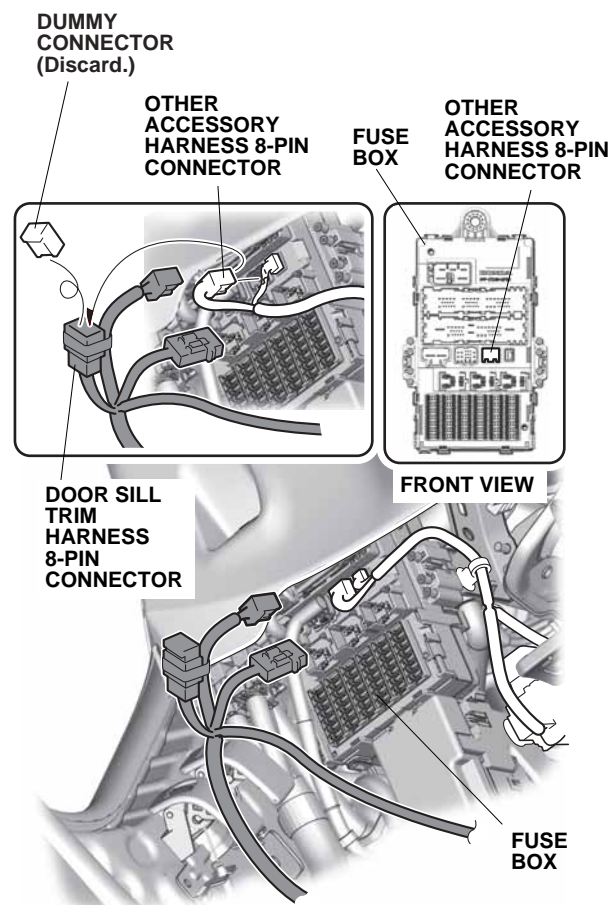


QC83104AH




14. Plug the door sill trim harness 8-pin connector into the fuse box.

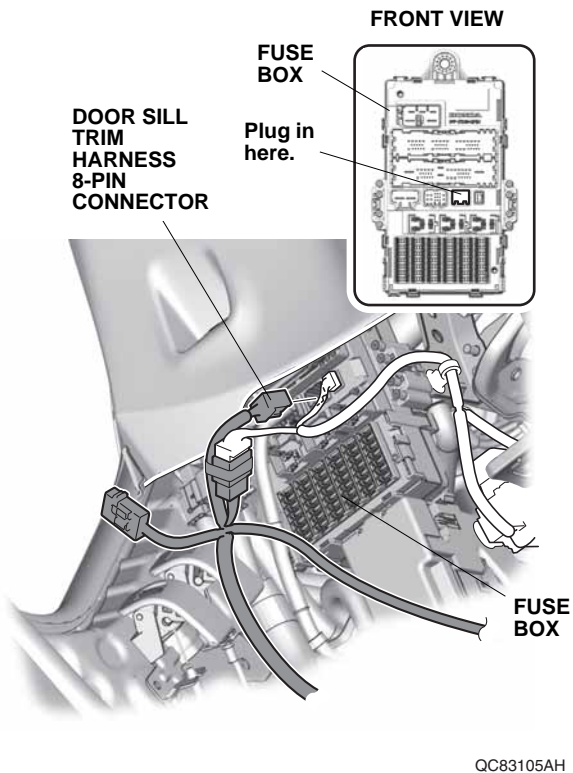


15. Attach the door sill trim harness fuse case to the vehicle connector.

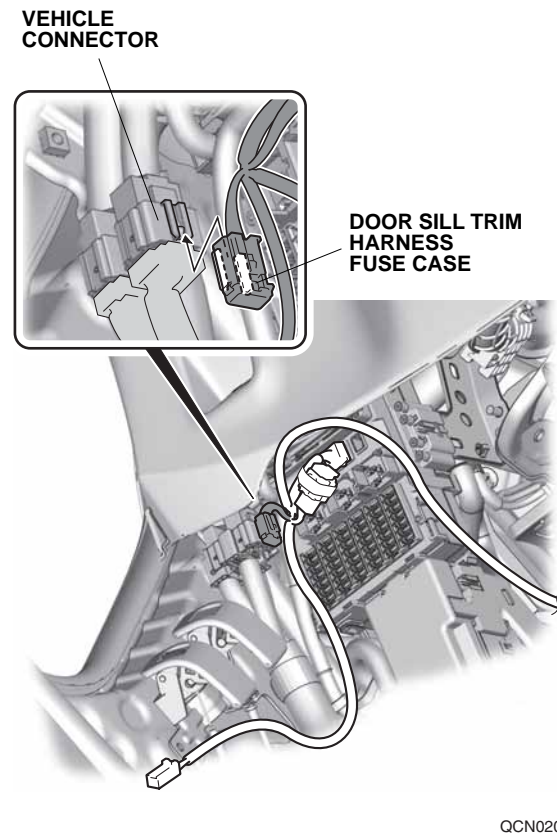


16. Secure the door sill trim harness to the vehicle harness with two wire ties.

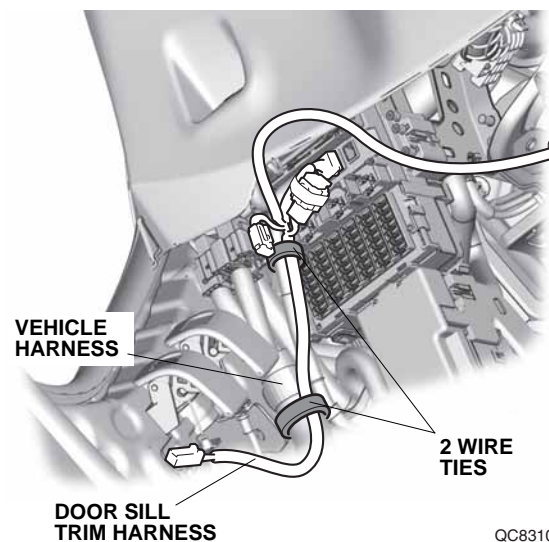


17. Route the door sill trim harness as shown. Secure the door sill trim harness to the vehicle harness with two wire ties. If other accessory harness is already secured to the vehicle harness, secure the door sill trim harness to other accessory harness with two wire ties.

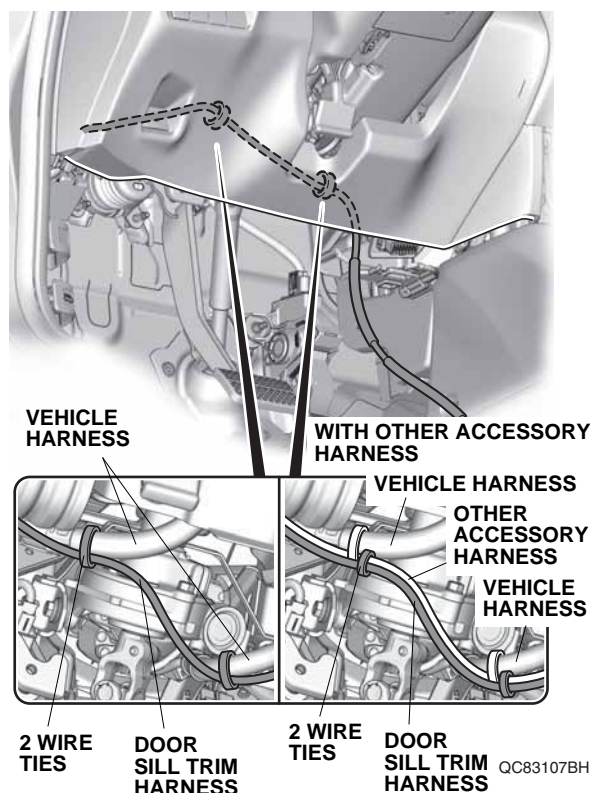

18. Route the door sill trim harness as shown. Secure the door sill trim harness to the vehicle frame with one wire tie. If other accessory harness is already secured to the vehicle frame, secure the door sill trim harness to other accessory harness with one wire tie.

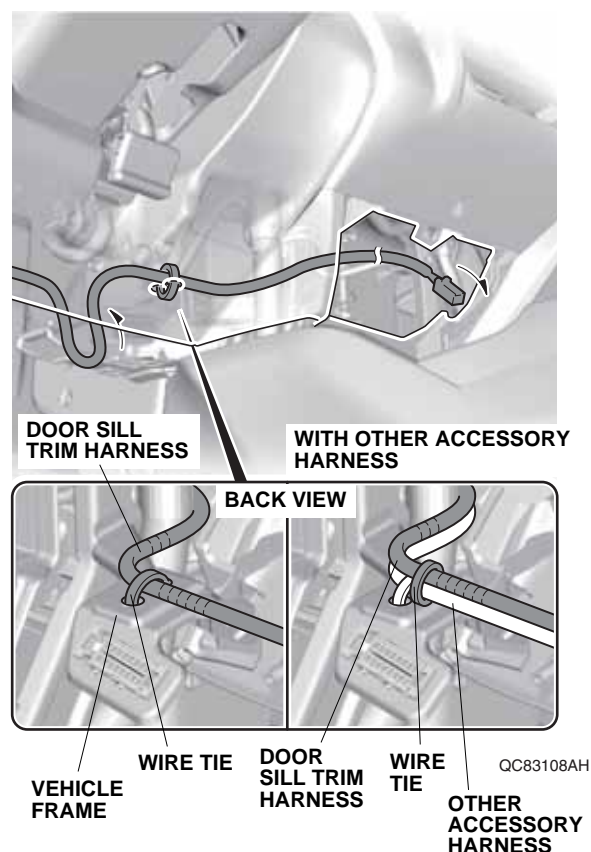


19. Secure the door sill trim harness to the vehicle harness with one wire tie.

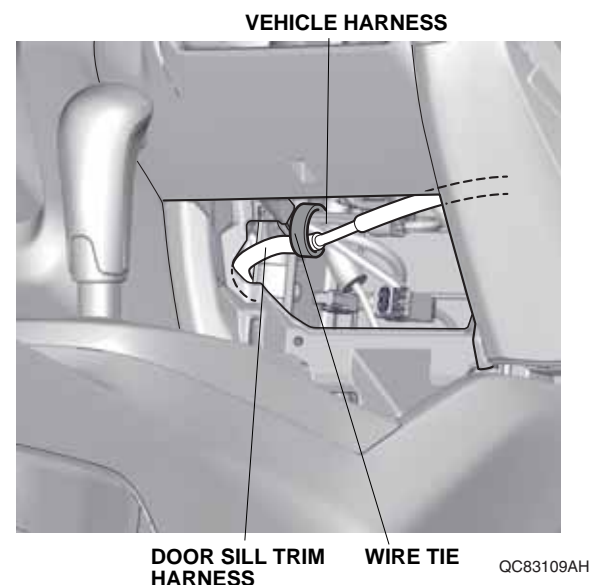


20. Route the door sill trim harness as shown. Align the green tape on the door sill trim harness with the vehicle wire tie, and secure the door sill trim harness to the vehicle harness with one wire tie.

GREEN TAPE

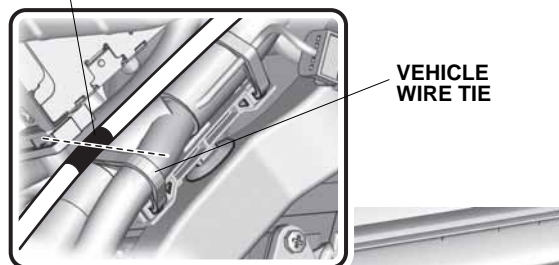

VEHICLE WIRE TIE

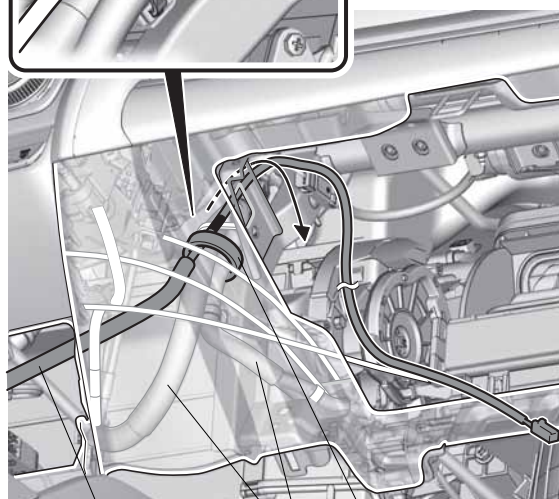


DOOR SILL TRIM HARNESS

WIRE TIE  
VEHICLE HARNESS

QC83110AH

21. Route the door sill trim harness as shown. Then secure it to the steering hanger beam with three wire ties.

STEERING HANGER BEAM

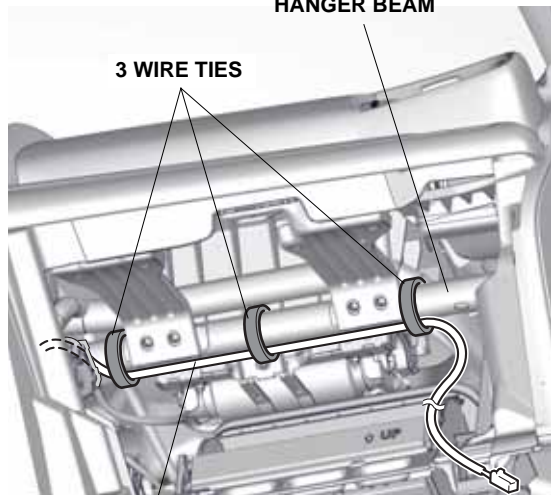


3 WIRE TIES

DOOR SILL TRIM HARNESS

QC83111AH

22. Route the door sill trim harness as shown. Then secure it to the vehicle harness with two wire ties.

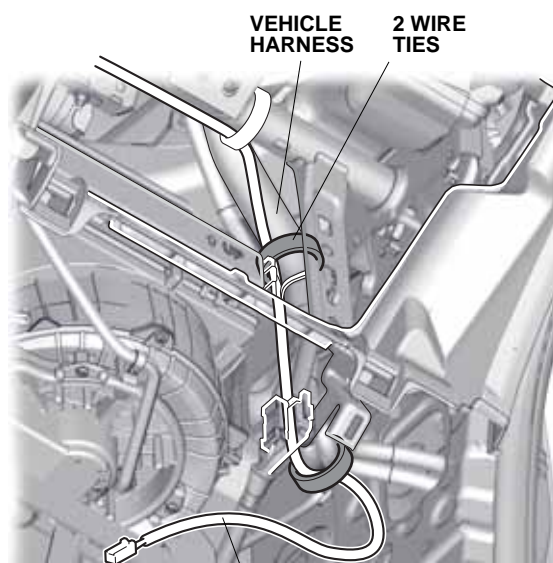


VEHICLE HARNESS

2 WIRE TIES

DOOR SILL TRIM HARNESS

QC83112AH

23. Using scissors, cut the protective tape at the measurements shown.

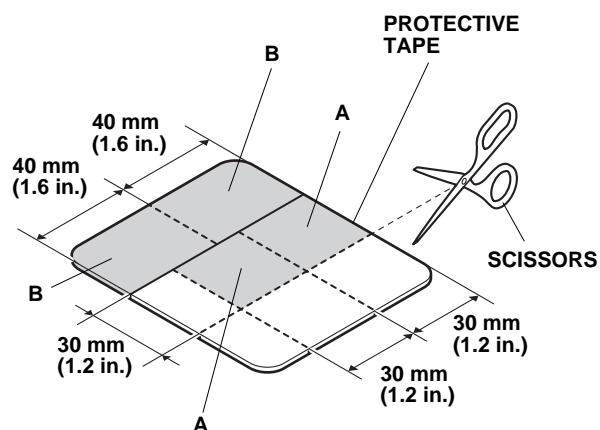


PROTECTIVE TAPE

SCISSORS


QC32315AH




24. Attach masking tape to the vehicle panel at the measurement shown.

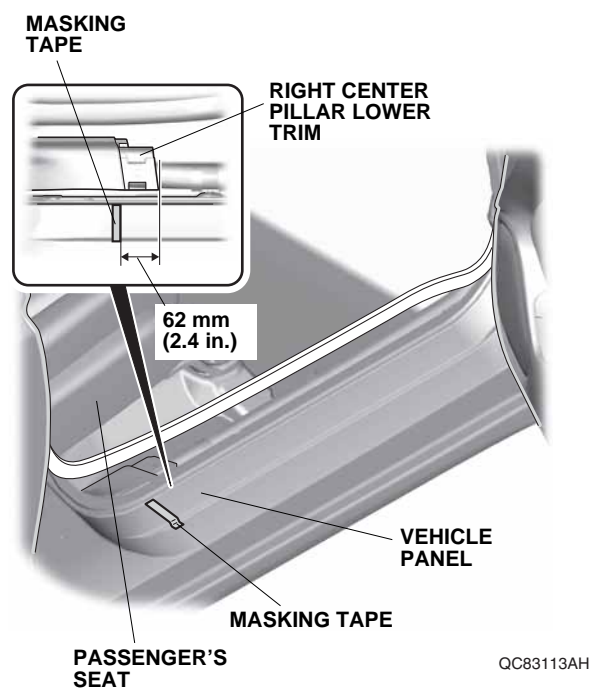


25. Align the edge of the right front illuminated door sill trim with the edge of the masking tape.

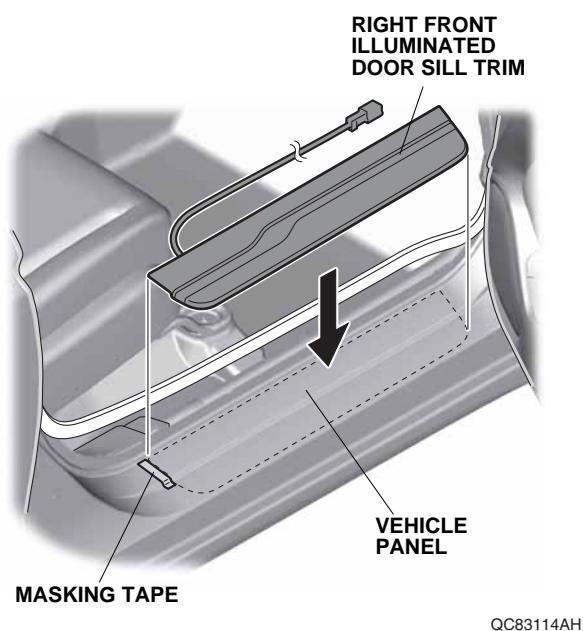


26. Using a felt-tip pen, mark the door opening seal and vehicle panel as shown.

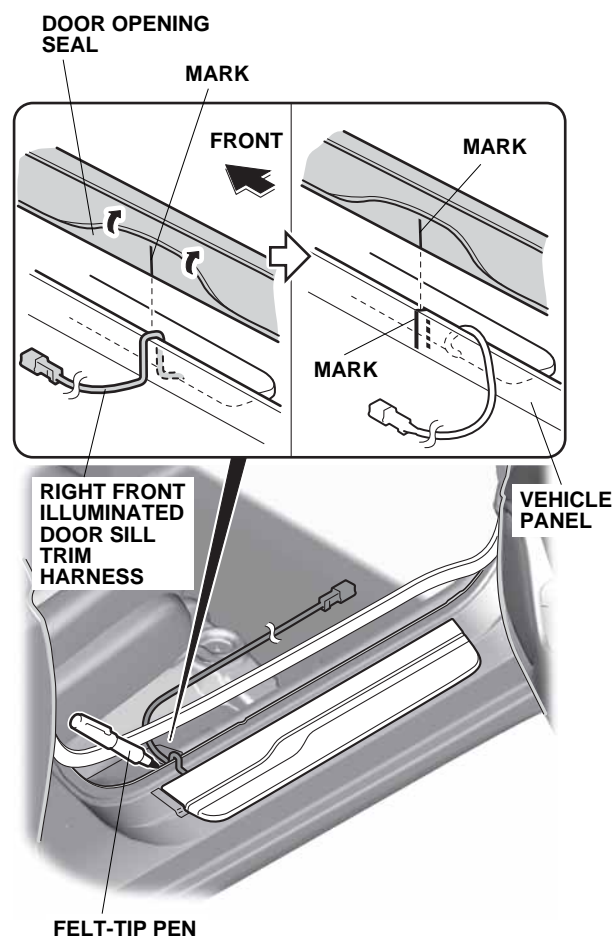


27. Remove the right front illuminated door sill trim.

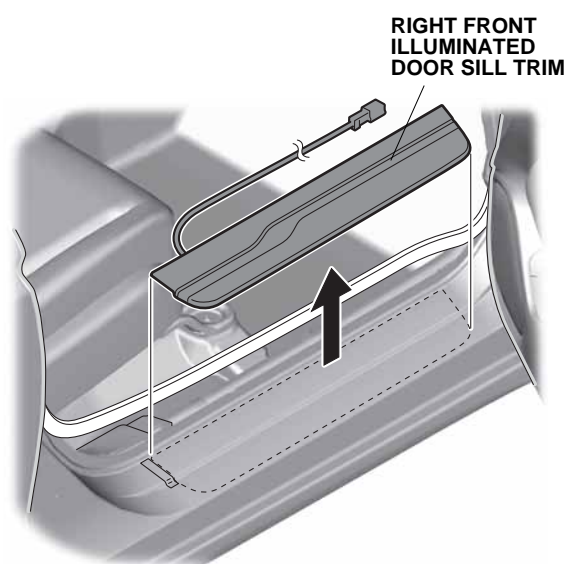

28. Using a utility knife, cut out the door opening seal at the measurements shown.

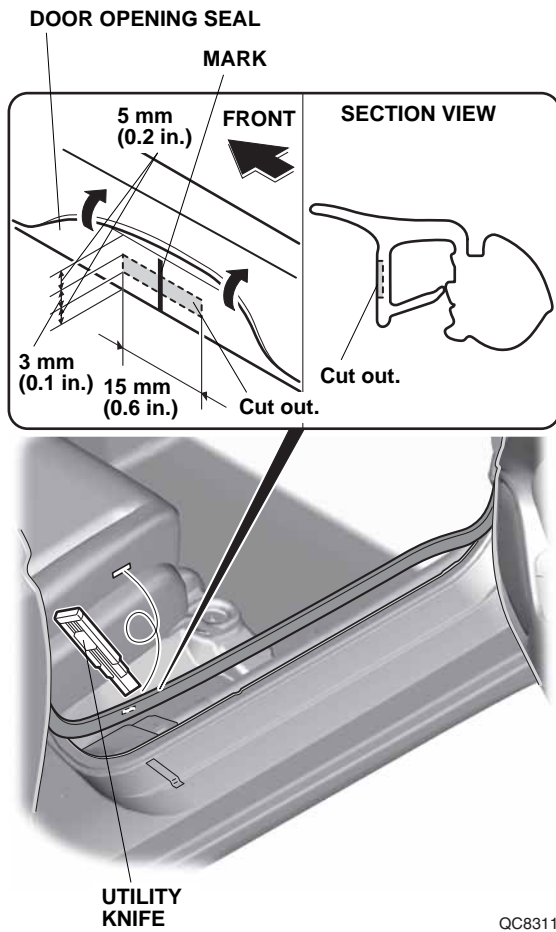


29. Using needle nose pliers, remove three steel wires from the door opening seal.

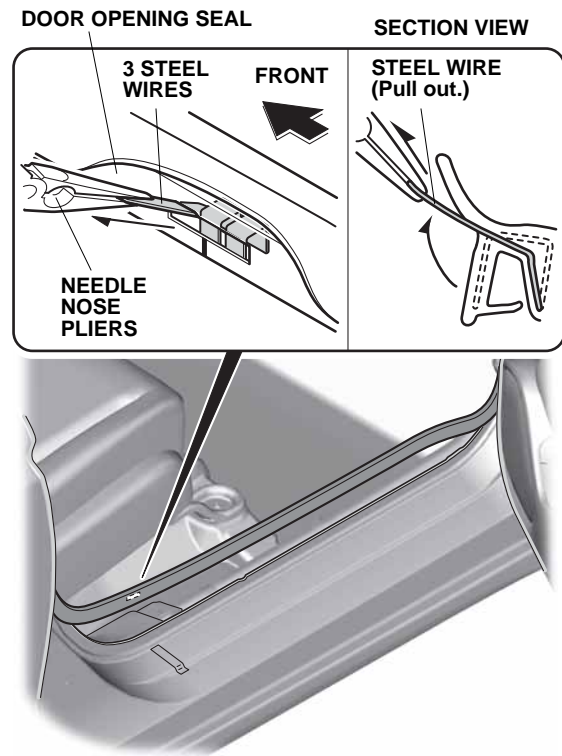

QC83118AH


30. Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the protective tape will attach. Attach one piece of protective tape A to the vehicle panel.

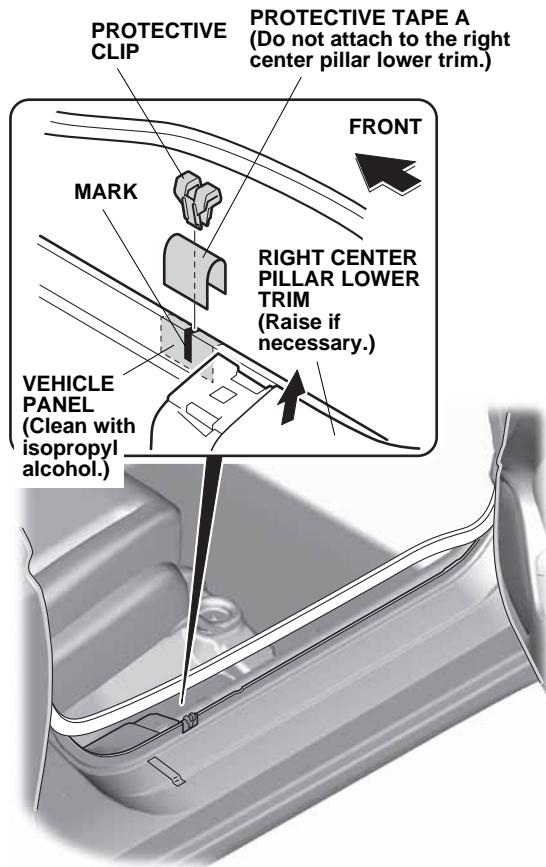

QC83119AH

31. Install the protective clip to the protective tape A.


32. Peel back the ends of four adhesive backings on the right front illuminated door sill trim and attach them to the front of the trim with masking tape.

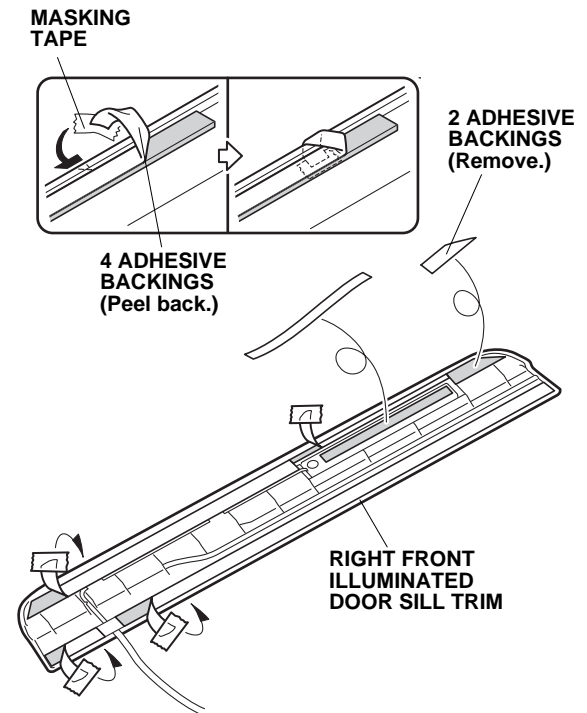

QC92303AH


33. Remove two adhesive backings.

34. Using an alcohol swab, thoroughly clean the area where the right front illuminated door sill trim will attach.

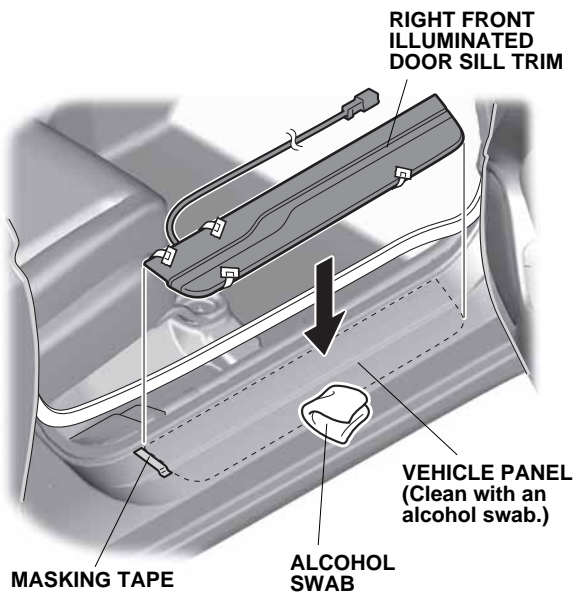

QC83120AH


35. Align the edge of the right front illuminated door sill trim with the edge of the masking tape.
36. Attach the right front illuminated door sill trim to the vehicle panel by removing the four adhesive backings, then press on the trim firmly with your hands.

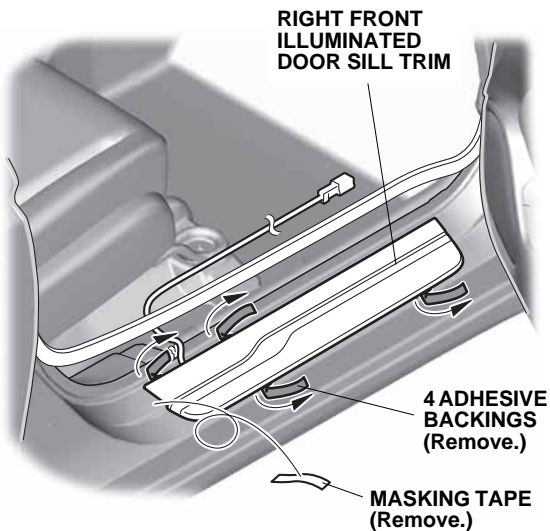

QC83121AH

37. Remove the masking tape.

38. Route the right front illuminated door sill trim harness over the protective clip as shown.

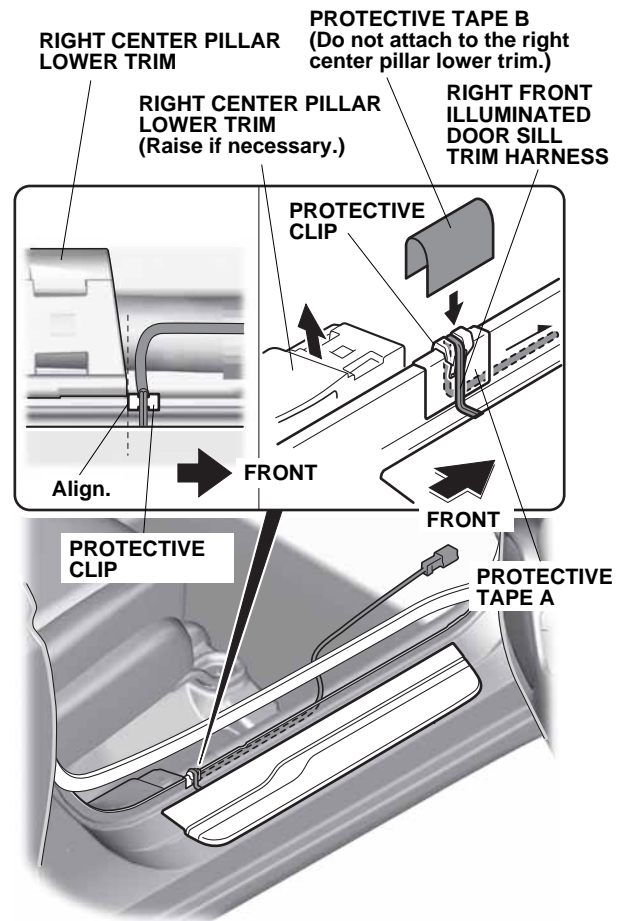


QC83122AH

39. Attach the one piece of protective tape B to the protective clip.
40. Repeat steps 24 through 39 to install the left front illuminated door sill trim on the left side of the vehicle.




41. Using scissors, cut one urethane tape in half, and attach one piece of urethane tape around the left front illuminated door sill trim harness 2-pin connector.

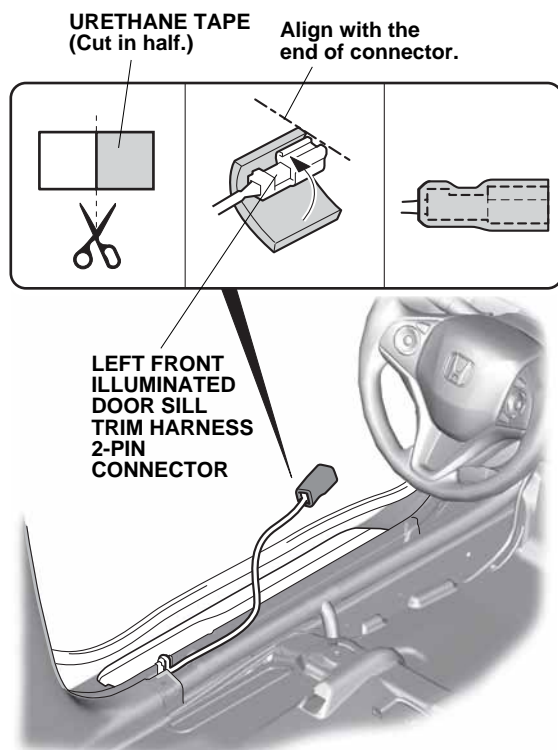


QC83123AH

42. Plug the door sill trim harness 2-pin connector into the left front illuminated door sill trim harness 2-pin connector.

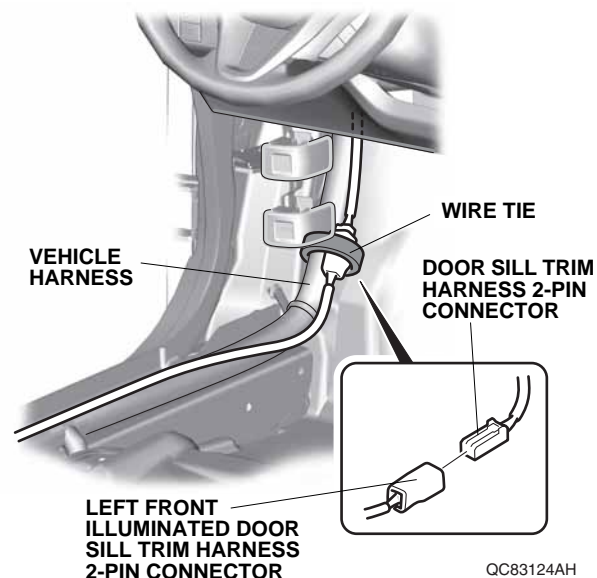


QC83124AH

43. Secure the 2-pin connectors to the vehicle harness with one wire tie.
44. Secure the left front illuminated door sill trim harness to the vehicle harness with three wire ties.

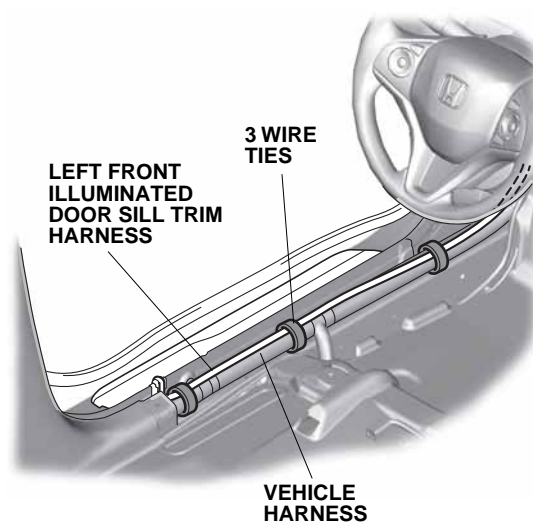

QC83126AH


45. Plug the door sill trim harness 2-pin connector into the right front illuminated door sill trim harness 2-pin connector.

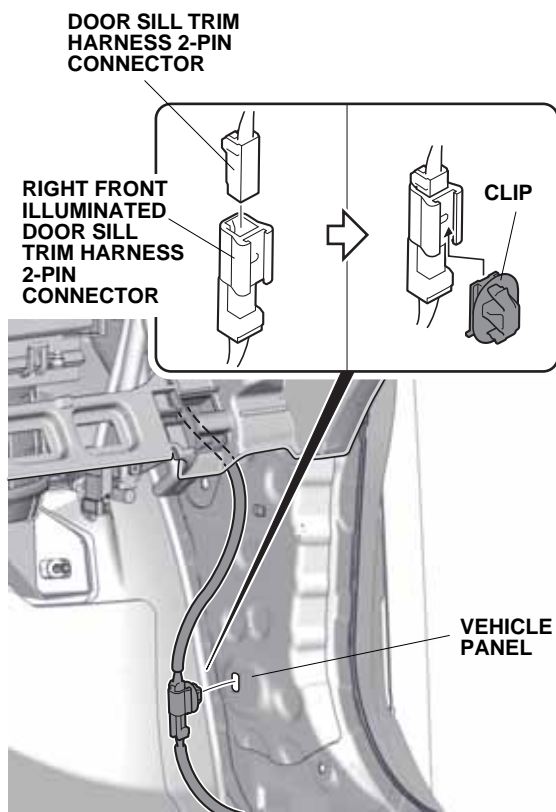

QC83128AH


46. Attach the clip to the right front illuminated door sill trim harness 2-pin connector, and secure the 2-pin connectors to the vehicle panel.

47. Secure the door sill trim harness to the vehicle panel with one wire tie with clip.

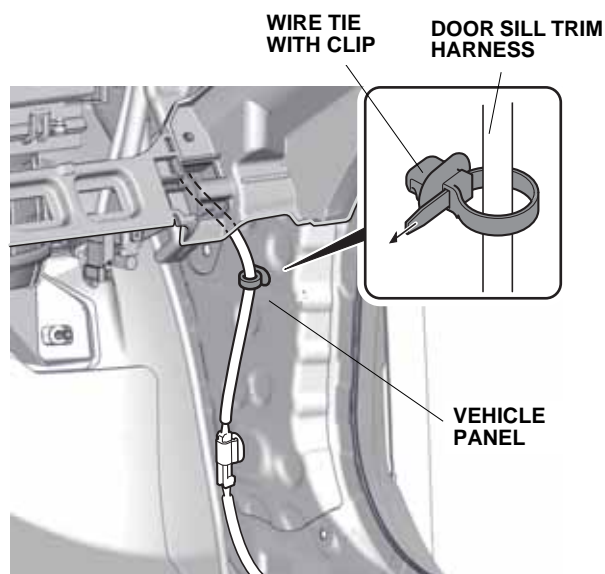

QC83129AH


48. Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the aluminum tape will attach.

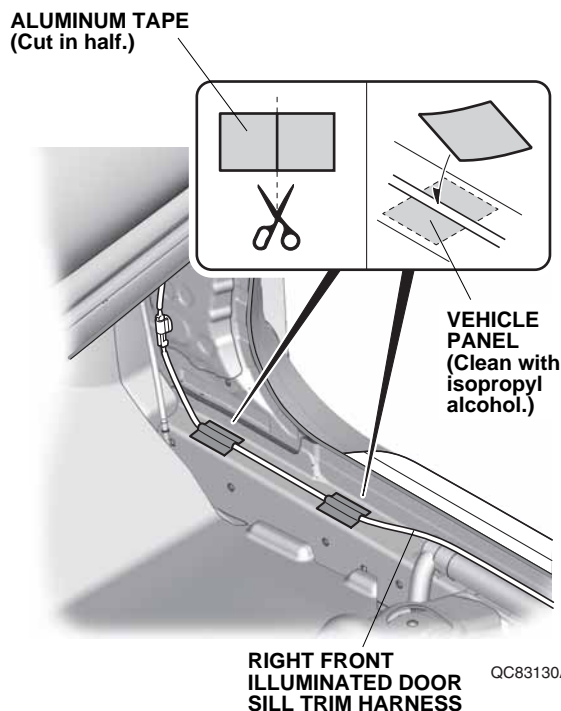


QC83130AH

49. Using scissors, cut the aluminum tape in half. Secure the right front illuminated door sill trim harness to the vehicle panel with aluminum tape.

50. Secure the right front illuminated door sill trim harness to the vehicle harness with two wire ties.

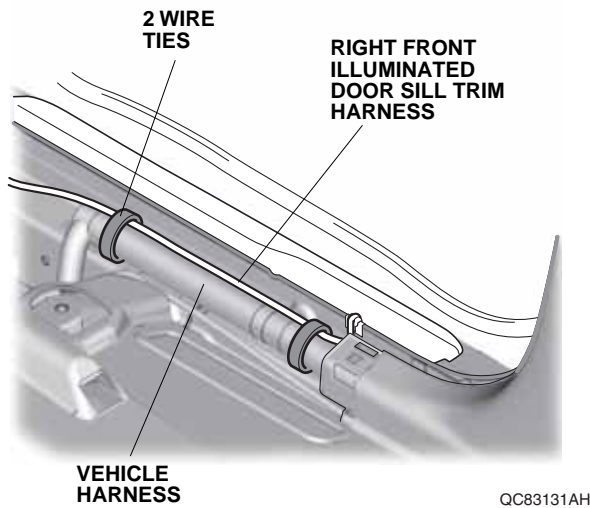


51. Using a utility knife, cut the driver's front door sill trim in the area shown.

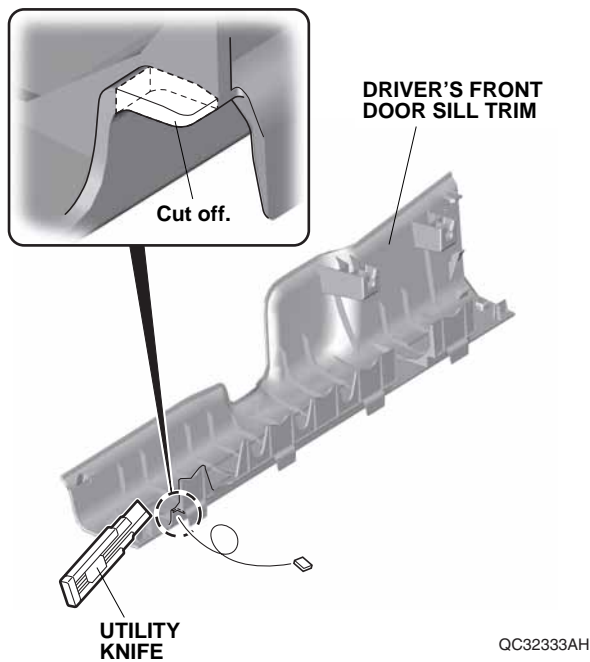


52. Using a file, remove any burrs from the edge.

53. Install the driver's kick panel.

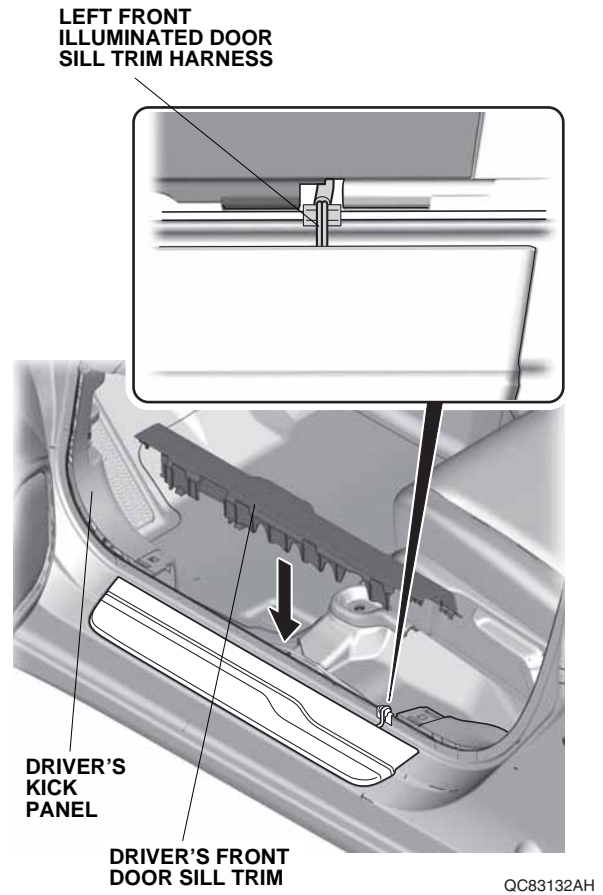


54. Install the driver's front door sill trim.
55. Repeat steps 51 through 54 on the right side of the vehicle.


56. Pull back the door opening seal, and attach masking tape to the vehicle panel as shown.

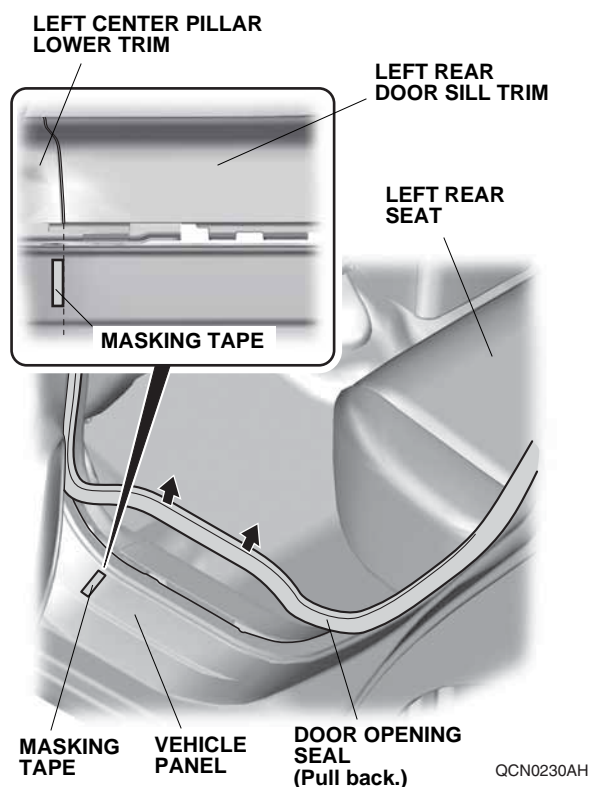


57. Peel back the ends of two adhesive backings on the left rear door sill trim and attach them to the front of the trim with masking tape.

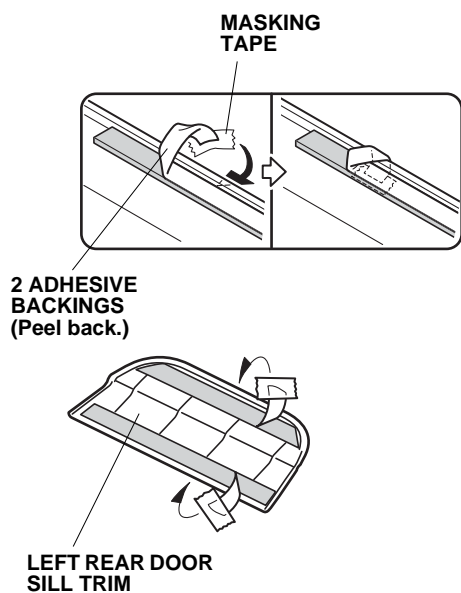

58. Using an alcohol swab, thoroughly clean the area where the left rear door sill trim will attach.

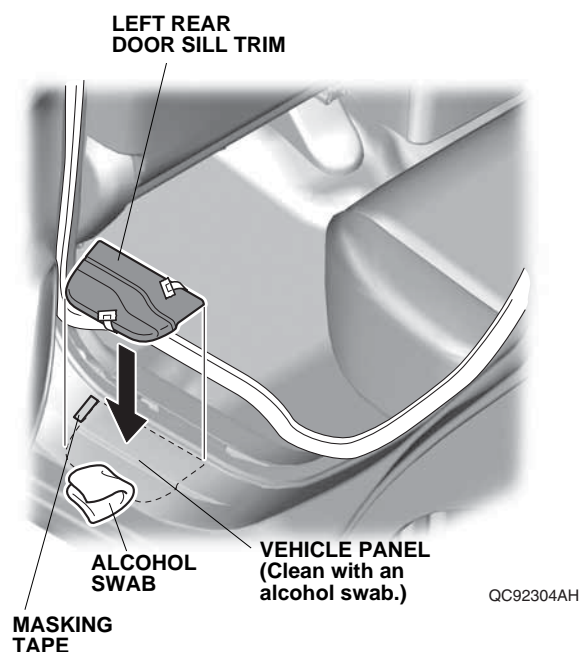

59. Position the left rear door sill trim at the masking tape.
60. Attach the left rear door sill trim to the vehicle panel by removing the two adhesive backings, then press on the trim firmly with your hands.

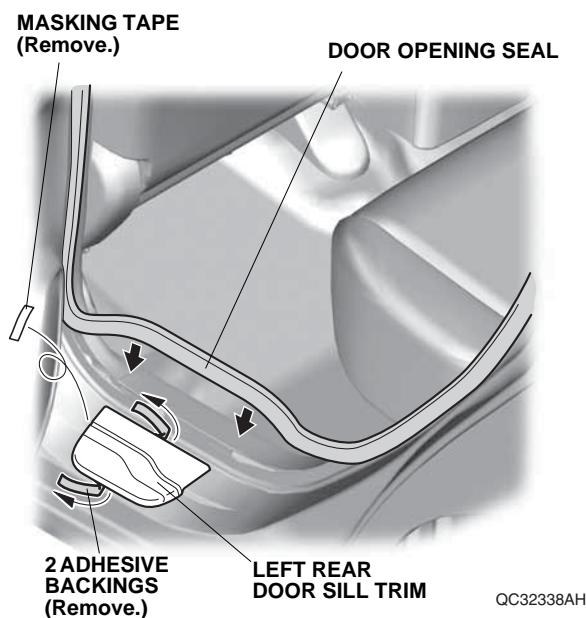

61. Remove the masking tape.
62. Install the door opening seal.
63. Repeat steps 56 through 62 to install the right rear door sill trim.



64. Check that all wire harnesses are routed properly and all connectors are plugged in.
65. Install all removed parts.
66. Connect the negative cable to the battery.
67. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
68. Set the clock on vehicles without navigation.
69. Make sure the light comes on when you open each front door.
70. If necessary, restore the systems back to normal operation as described in the service information.