



HONDA INSTALLATION INSTRUCTIONS

Accessory

AMBIENT LIGHTS

Application

2019 PASSPORT

Publications No.
VERSION 1

Issue Date
JAN 2019


PARTS LIST

Ambient Lights Kit
P/N 08E10-TG7-100
P/N 08E10-TG7-100A

2 Ambient lights



Ambient light harness

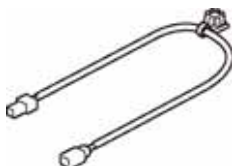

Wire tie




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
10 mm Open end wrench
Diagonal cutters
Shop towel

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Ambient Lights in the Vehicle

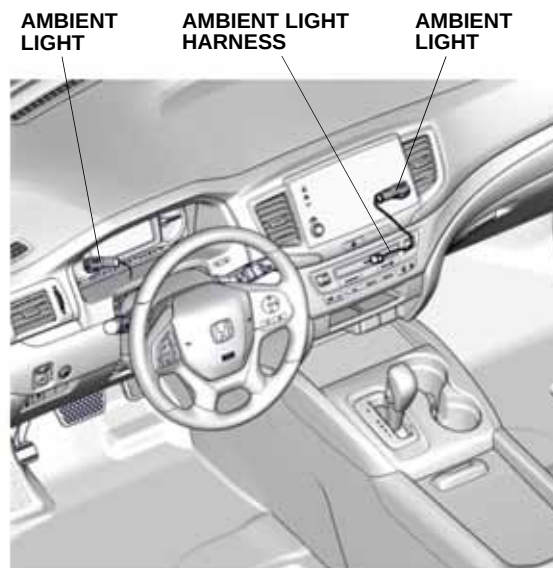



QH22301AB

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery:
 - Wrap a shop towel around the hood latch.

HOOD LATCH
(Wrap with a shop towel.)

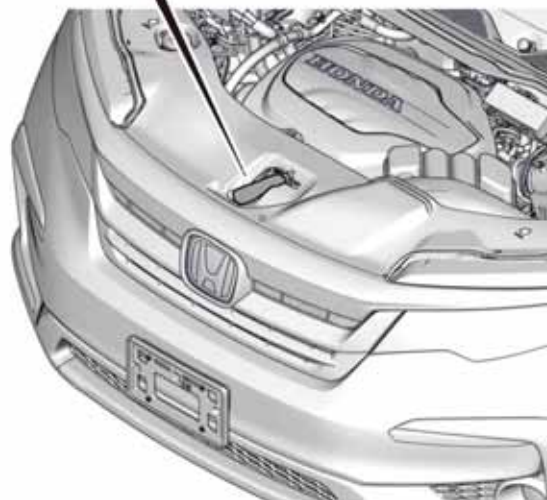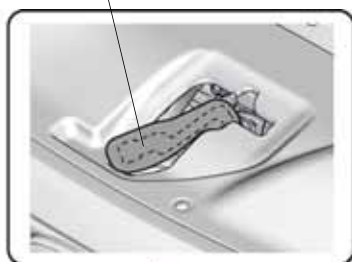


QH21201AB

- Remove the front bulkhead cover.

FRONT BULKHEAD COVER

10 CLIPS

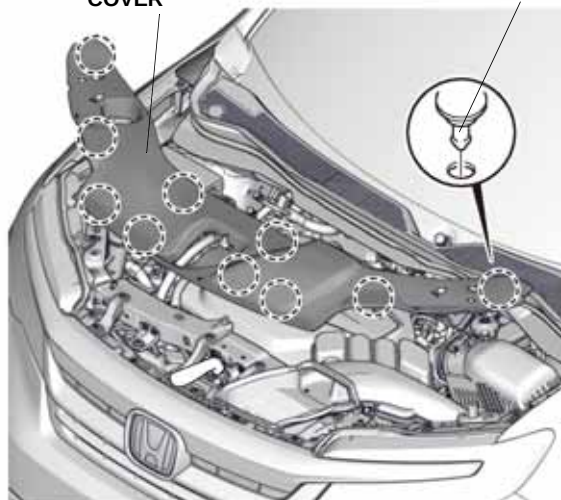


QH21202AB

- Remove the intake air tube.
- Disconnect the negative cable from the battery.

2 CLIPS


INTAKE AIR TUBE

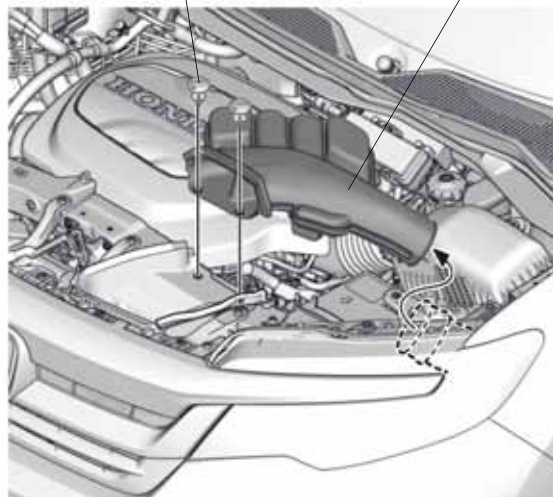

QH21203AB

2. Remove the passenger's dashboard under cover.

4 CLIPS

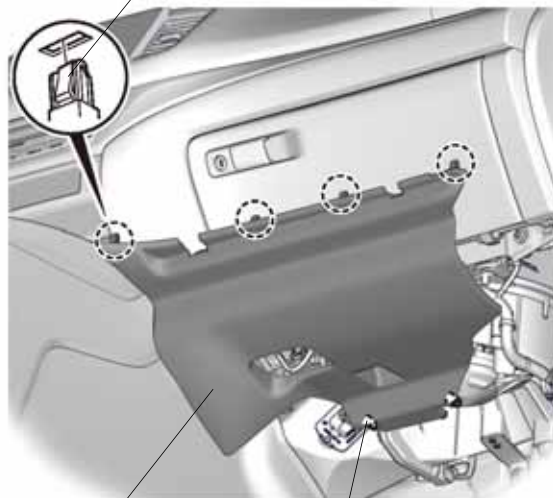


PASSENGER'S DASHBOARD UNDER COVER


2 PINS

QH22302AB


3. Pull away the door opening seal, and remove the driver's dashboard side lid.

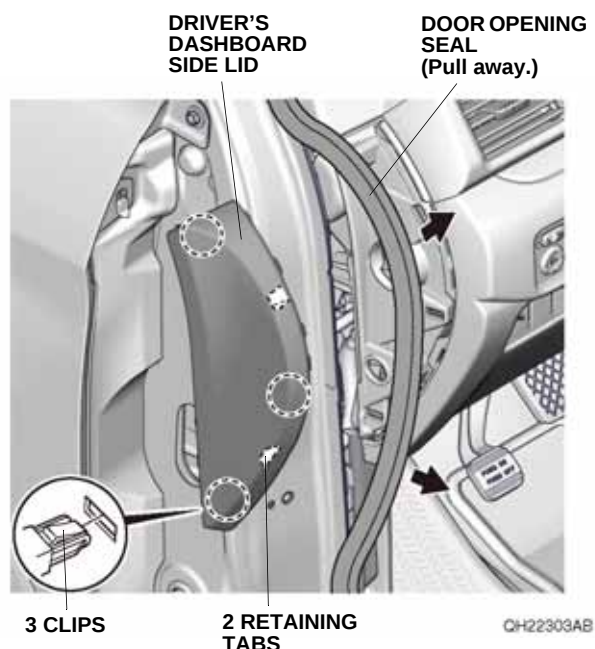


4. Remove the driver's dashboard lower cover, and unplug the vehicle connectors, and release the vehicle sensor.

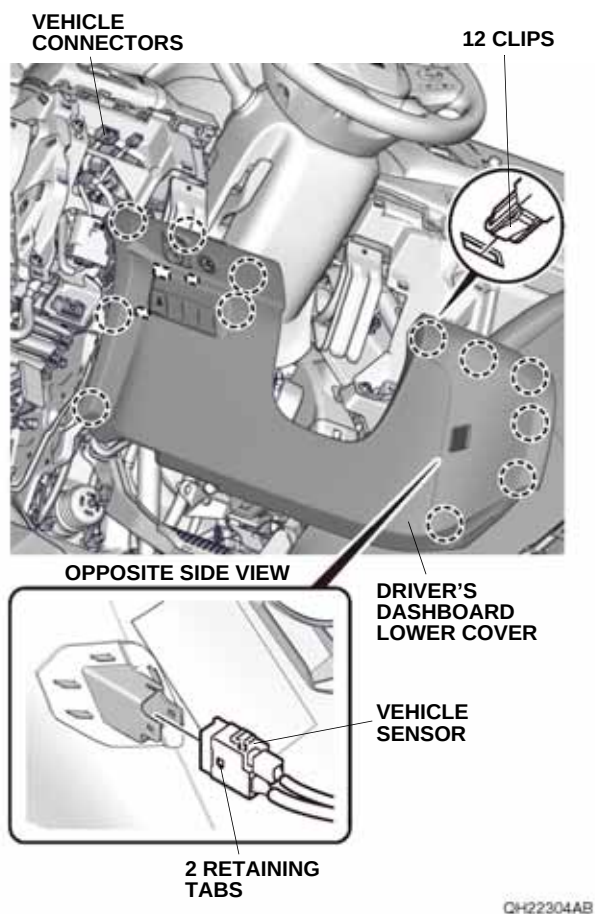


5. Remove the tape to free the vehicle 2-pin connector.

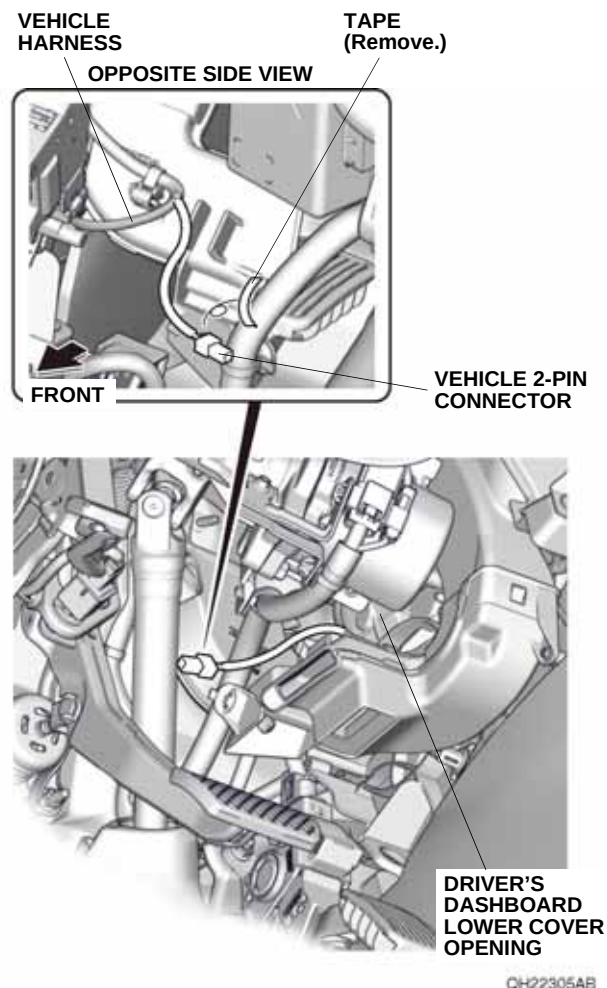


6. Install the ambient light to the instrument panel as shown.

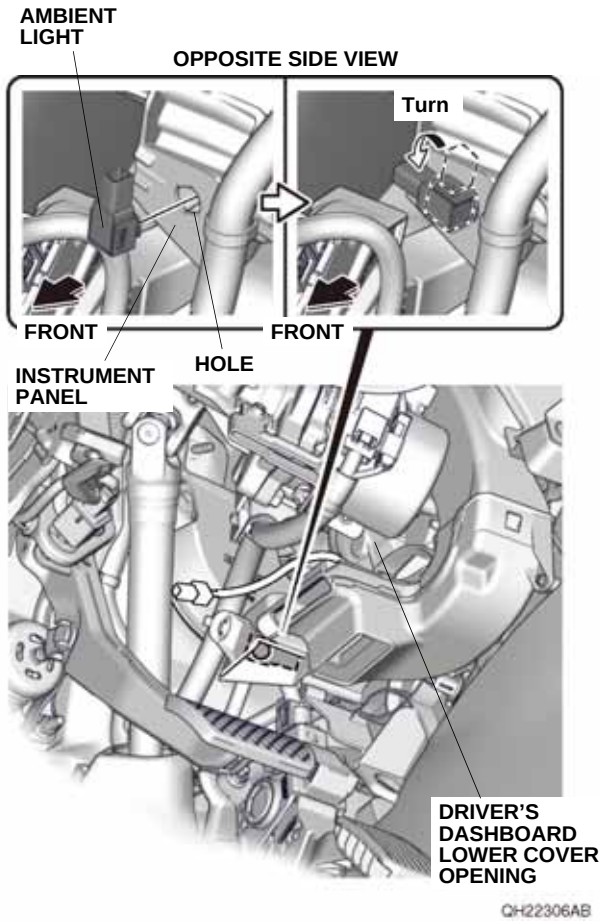

7. Plug the vehicle 2-pin connector into the ambient light.

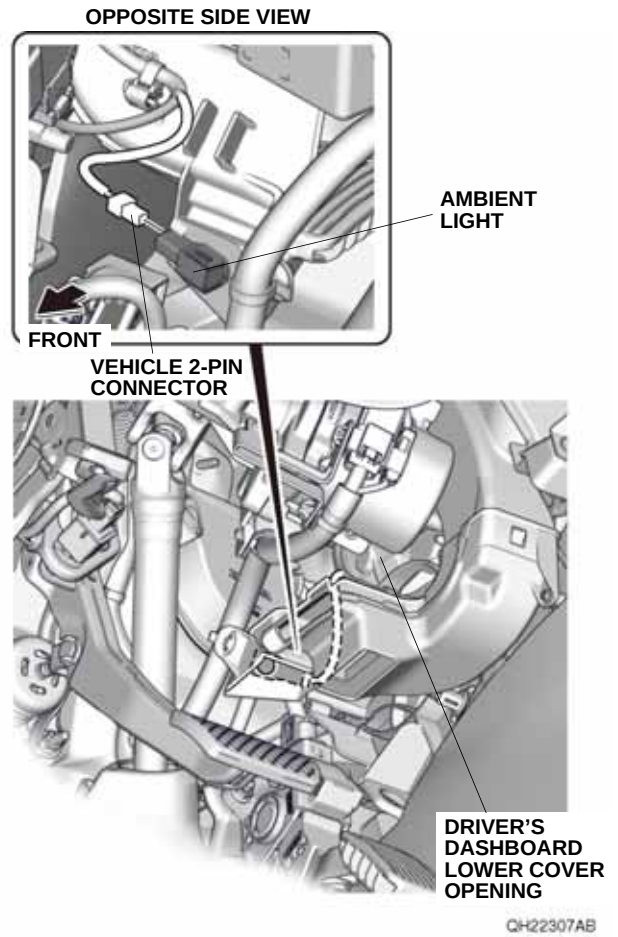


8. Install the ambient light to the passenger's dashboard under cover as shown.

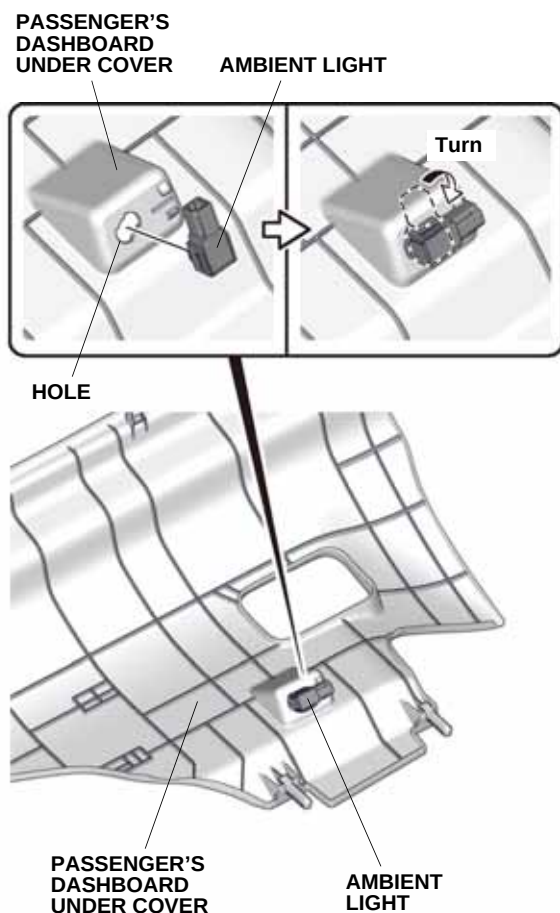


QH22308AB

9. Remove the tape to free the vehicle 2-pin connector.

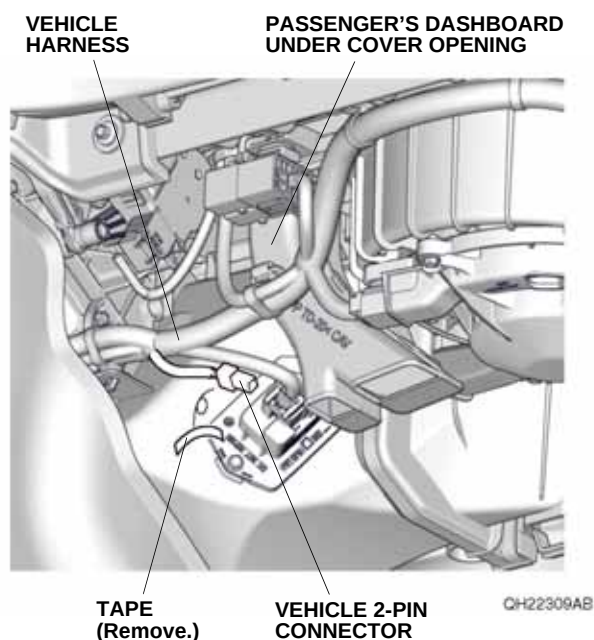

QH22309AB


10. Plug the vehicle 2-pin connector into the ambient light harness 2-pin connector. Secure the 2-pin connectors to the vehicle harness with one wire tie.

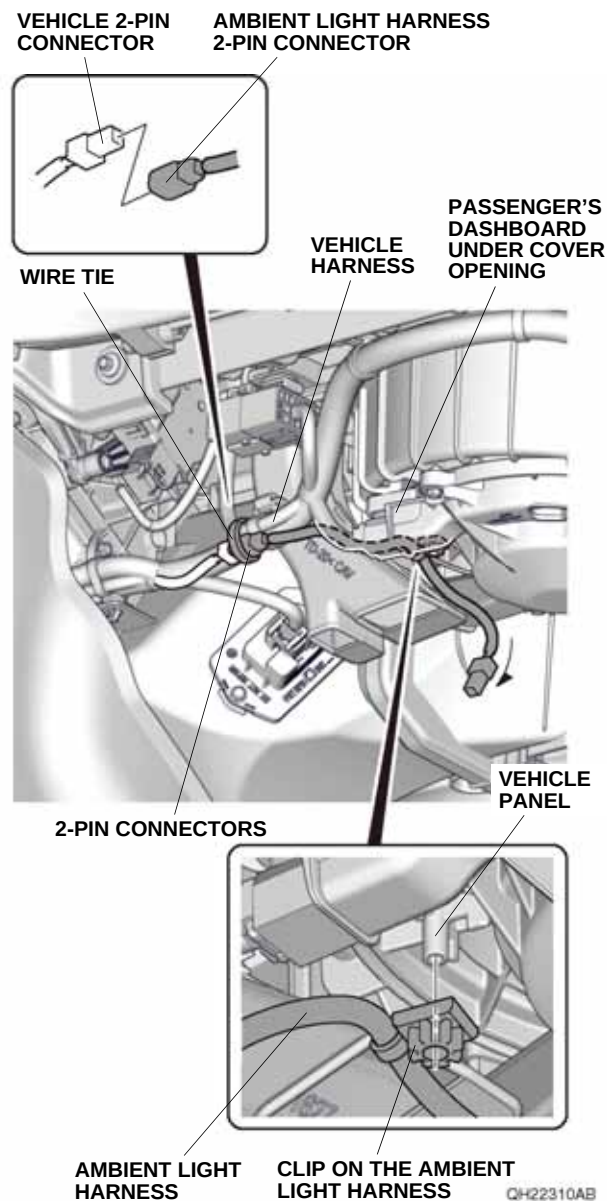

QH22310AB

11. Route the ambient light harness as shown, and secure it to the vehicle panel with the clip on the ambient light harness.

12. Plug the ambient light harness 2-pin connector into the ambient light, then install the passenger's dashboard under cover.

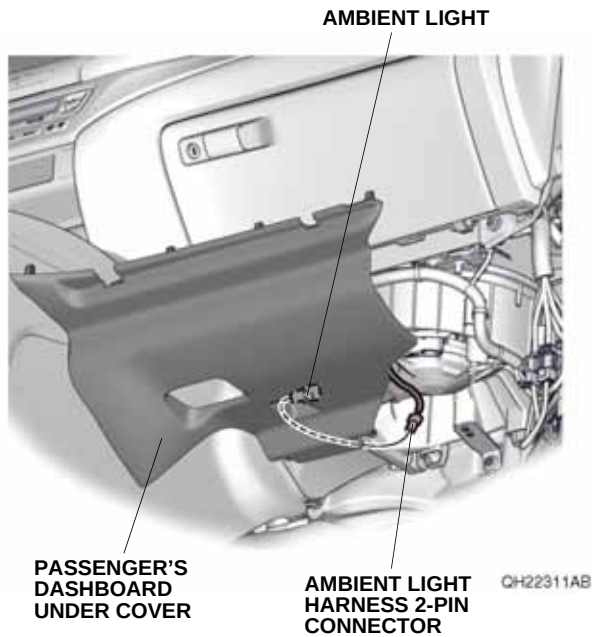

13. Check that all wire harnesses are routed properly and all connectors are plugged in.
14. Install all removed parts except for the front bulkhead cover and the intake air tube.
15. Connect the negative cable to the battery.
16. Install the front bulkhead cover and the intake air tube.
17. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
18. Set the clock on vehicles without navigation.
19. If necessary, restore the systems back to normal operation as described in the service information.

Check the Operation of the Ambient Light

20. Set the light switch set to the  or  position, make sure the ambient lights are on.
21. Set the headlight switch to the AUTO position, and make sure the ambient lights are on with the parking lights or headlights.
22. If the ambient lights do not come on, check the fuse and all the connectors.

