



## HONDA INSTALLATION INSTRUCTIONS

Accessory

BLACK EMBLEM

Application

2020 PASSPORT

Publications No.

VERSION 1

Issue Date

AUG 2020

### PARTS LIST

**Rear Emblem + Car Name Kit**  
**P/N 08F20-TGS-100**

Rear H emblem



PASSPORT emblem



2 Push nuts



2 Alcohol wipes




**AWD Emblem Kit**  
**P/N 08F20-TGS-100A**

AWD emblem



Alcohol wipe

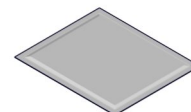


**ELITE Emblem Kit**  
**P/N 08F20-THR-100G**

ELITE emblem



Alcohol wipe




**SPORT Emblem Kit**  
**P/N 08F20-TVA-100C**

SPORT emblem



Alcohol wipe



## TOOLS AND SUPPLIES REQUIRED

10 mm Open end wrench

6 mm, 8 mm, and 10 mm Sockets

Ratchet

Torque wrench

Diagonal cutters


Masking tape

String

*The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.*

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Push Pin Pliers (T/N 07AAC-001A101)

### **Illustration of the Black Emblems Installed on the Vehicle**

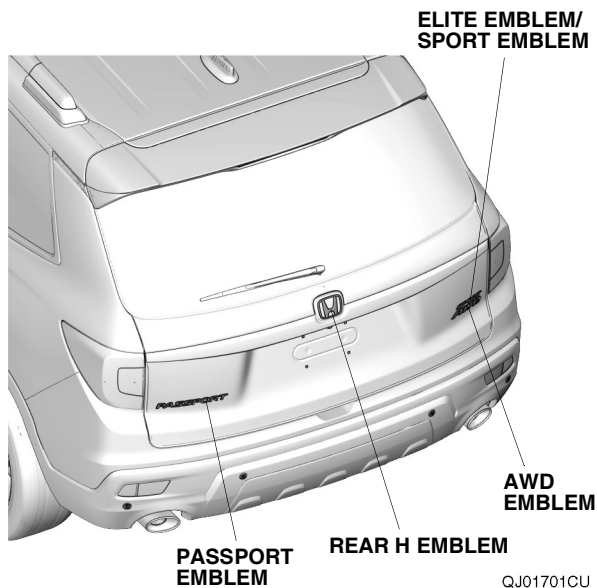


## INSTALLATION


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

### NOTE:

- Be careful not to damage the body paint finish.
  - This kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
  - To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure the your customer is aware of this.
1. Disconnect the negative cable from the battery.
  2. Remove the rear window wiper arm assembly.

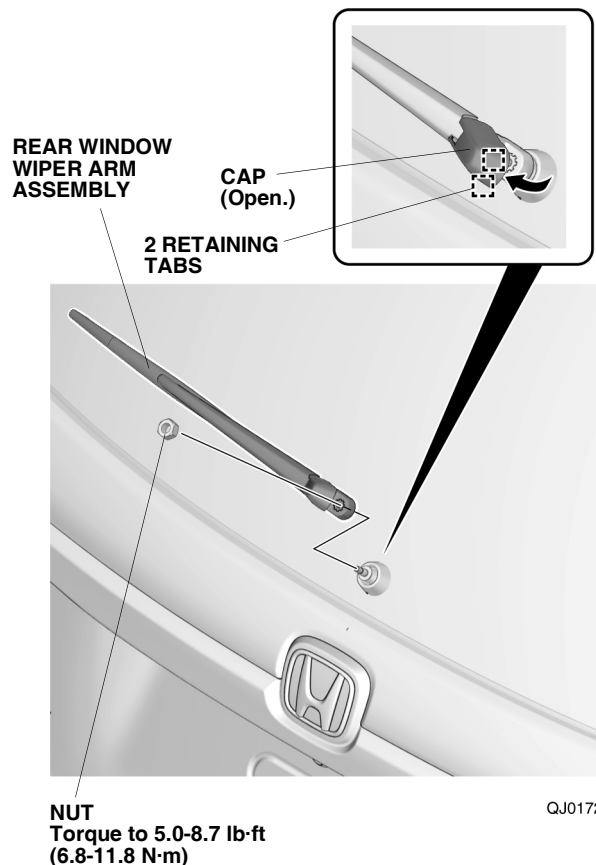


3. Remove the tailgate upper trim panel.

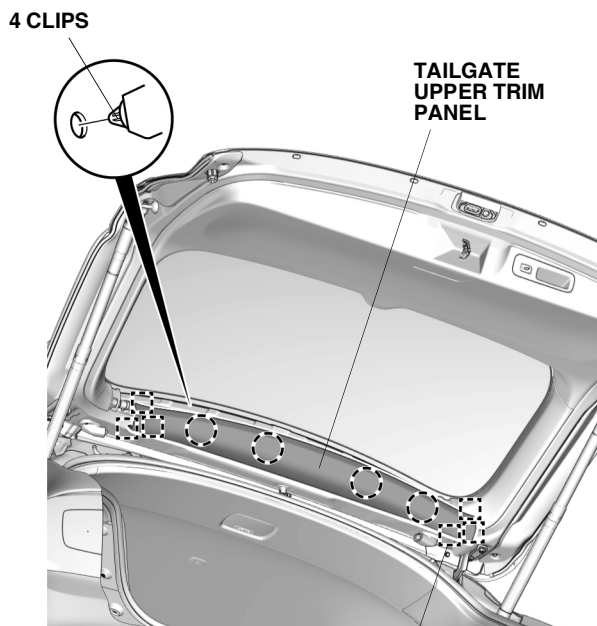


6 RETAINING TABS QJ01721AU


4. Remove the left and right tailgate side trim panels.

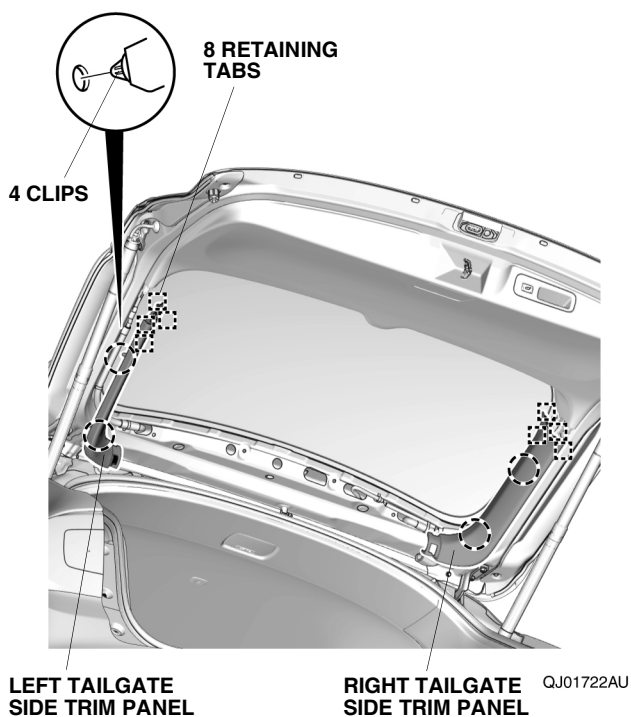


5. Apply masking tape as shown.

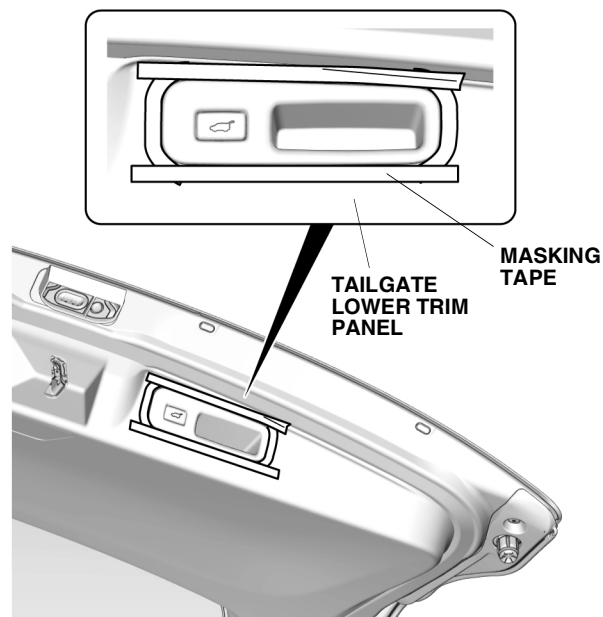

6. Remove the tailgate pull pocket and unplug the vehicle connector (if equipped).

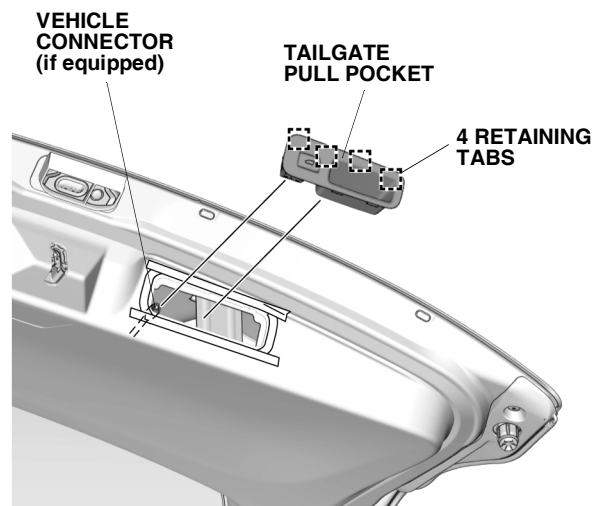


7. Remove the tailgate lower trim panel.

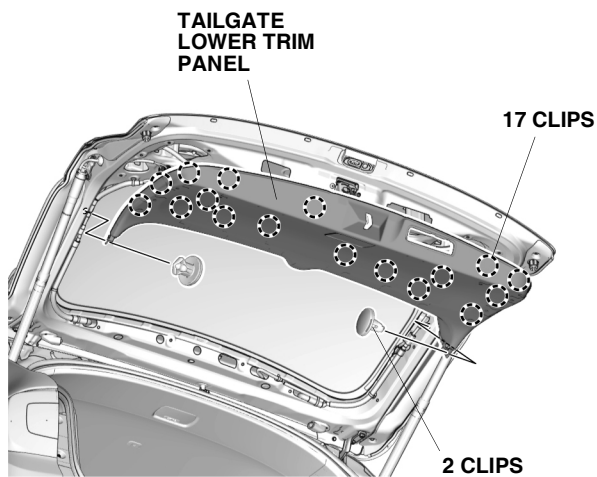


QJ01725AU

8. Remove the rear window wiper motor and unplug the vehicle connector.

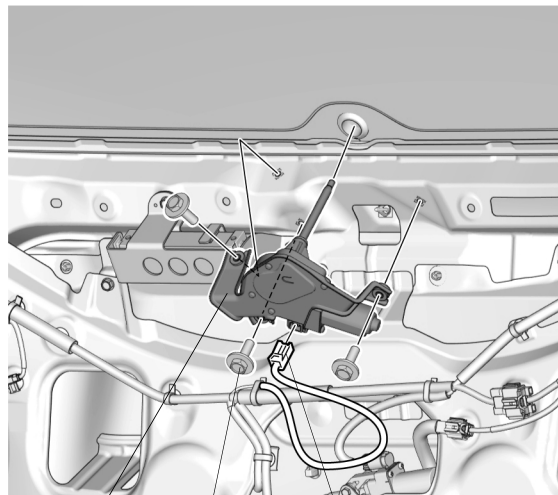


QJ01726AU

9. Remove the bolts.

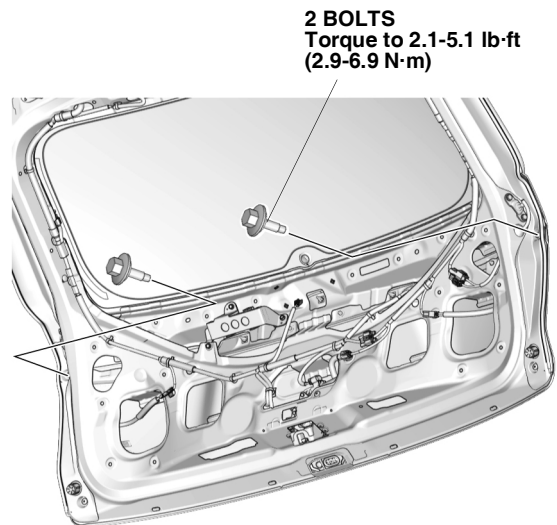


QJ01727AU

10. Apply masking tape as shown.

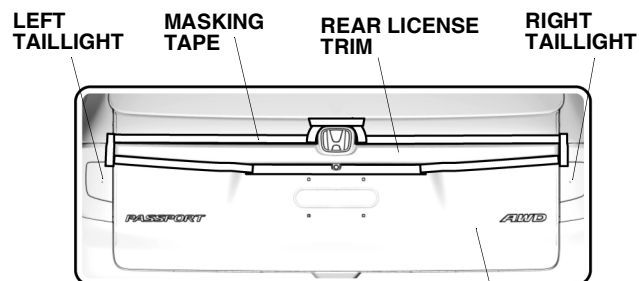


QJ01702DU


11. Release the rear license trim.

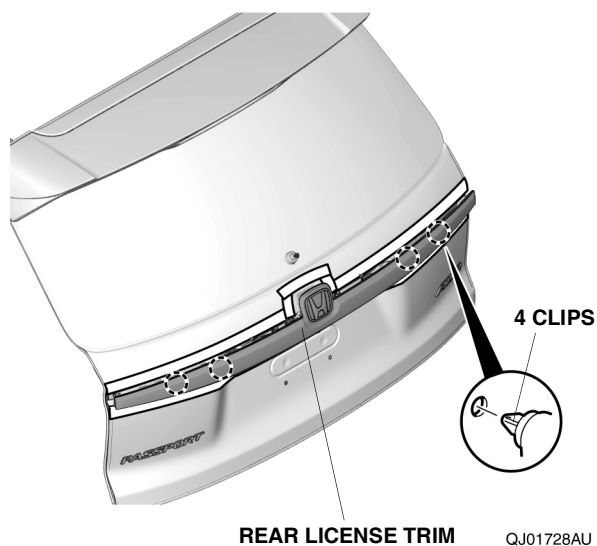

12. Release the clips.

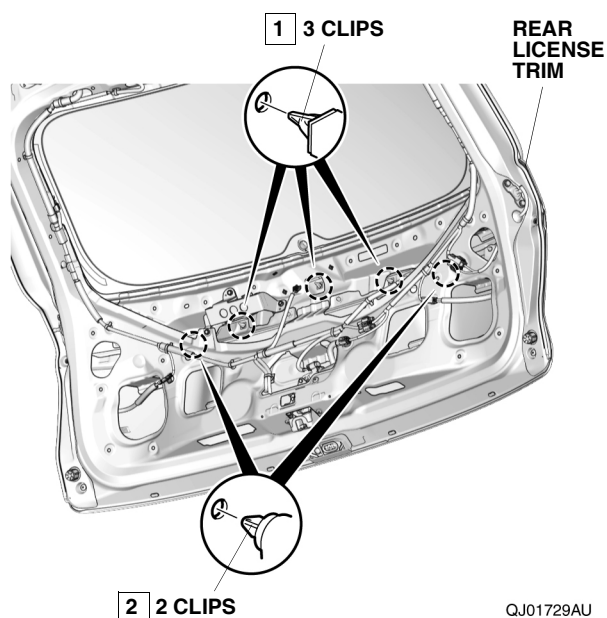


13. Remove the rear license trim and unplug the vehicle connectors.  
NOTE: Make sure to remove the clip if it remained on the vehicle.

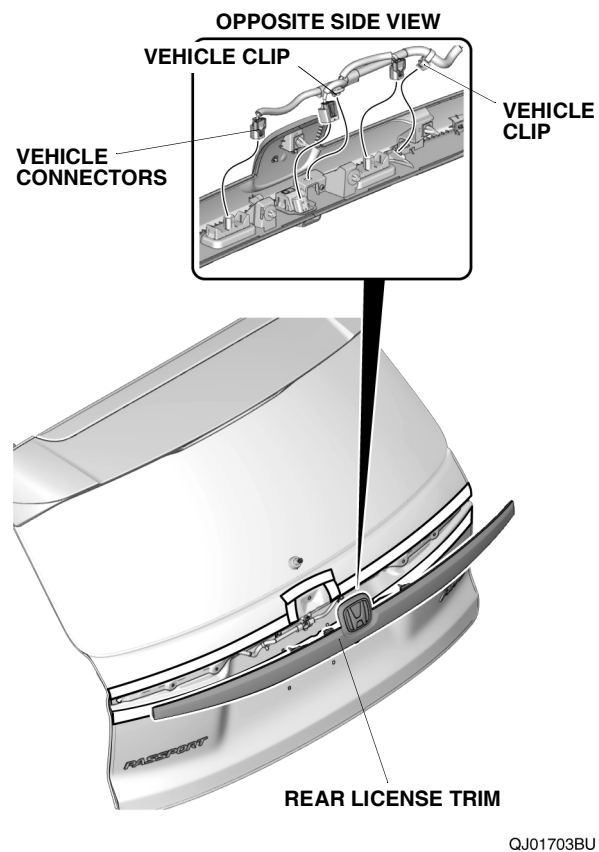


## Installing the Black Emblems


14. Remove the rear H emblem from the rear license trim.

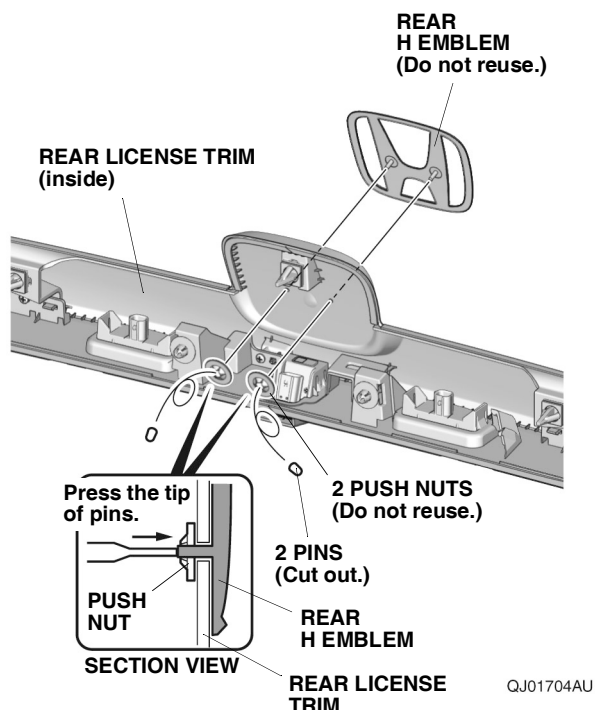

15. Using an alcohol wipe, thoroughly clean the rear license trim where the rear H emblem will attach.

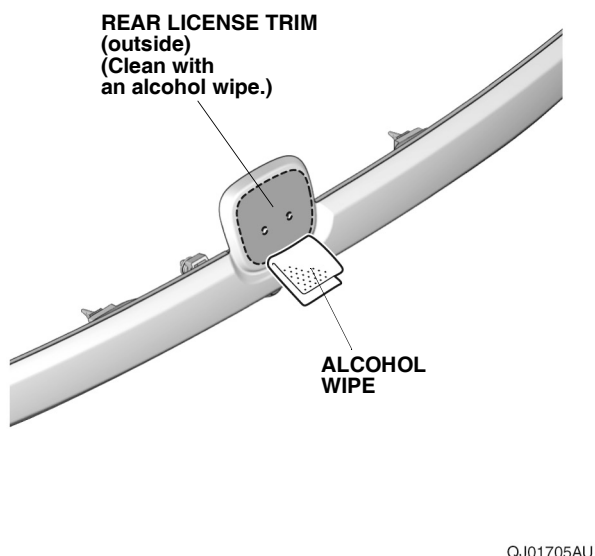


16. Remove the adhesive backings from the rear H emblem.
17. Install the rear H emblem to the rear license trim as shown.  
NOTE: Check the orientation of the push nut.

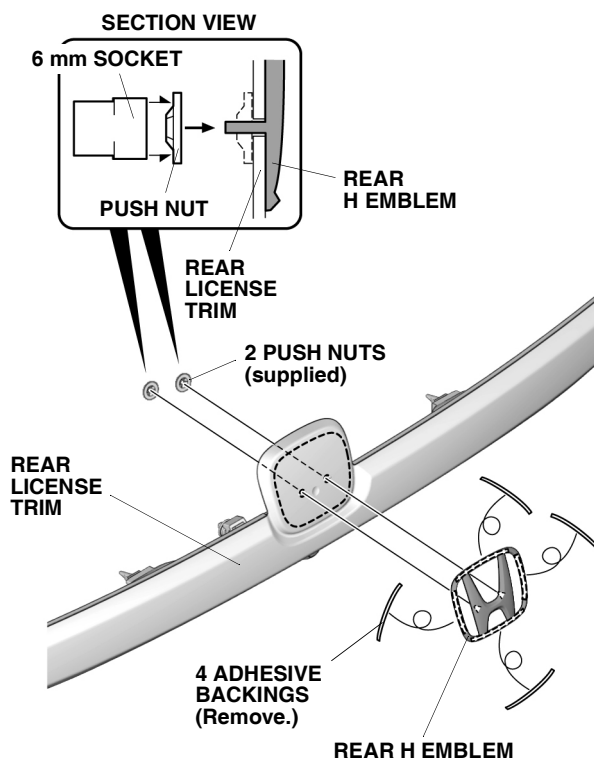

18. Using the palm of your hand, firmly press the rear H emblem against the rear license trim for 30 seconds.

19. Remove the position film from the PASSPORT emblem, then remove the PASSPORT emblem from the guide form.

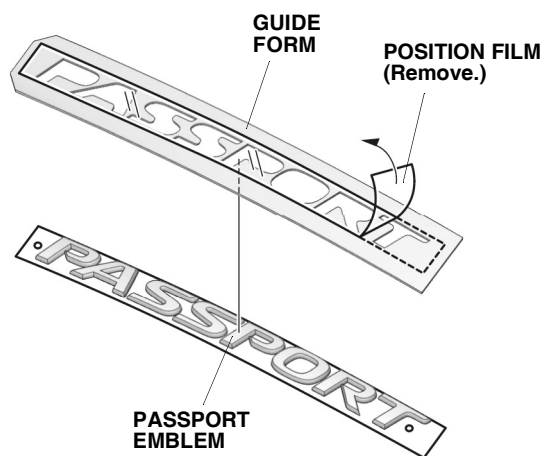


QJ01707AU

20. Install the guide form to the PASSPORT emblem on the tailgate.




QJ01708AU

21. Attach masking tape along the guide form as shown.

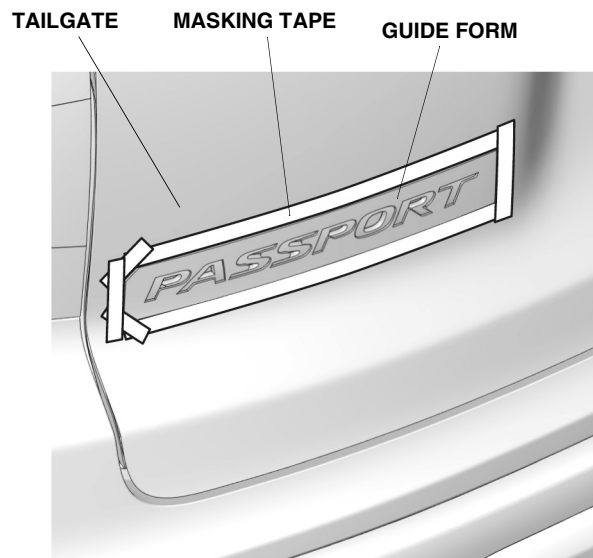

QJ01709AU

22. Remove the guide form from the tailgate.

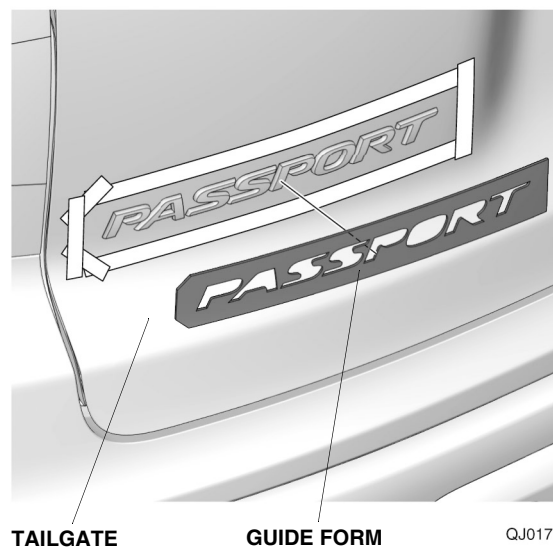


QJ01710AU

23. Using a piece of string, remove the PASSPORT emblem by cutting along the outer edges as shown.  
NOTE:


- Do not damage the vehicle body when removing the PASSPORT emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the vehicle body.



24. Install the PASSPORT emblem in the guide form, and temporarily secure it with masking tape.

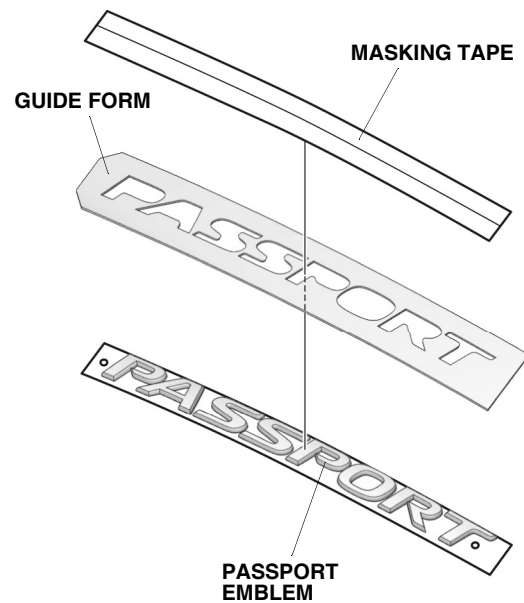


25. Using an alcohol wipe, thoroughly clean the tailgate where the PASSPORT emblem will attach.

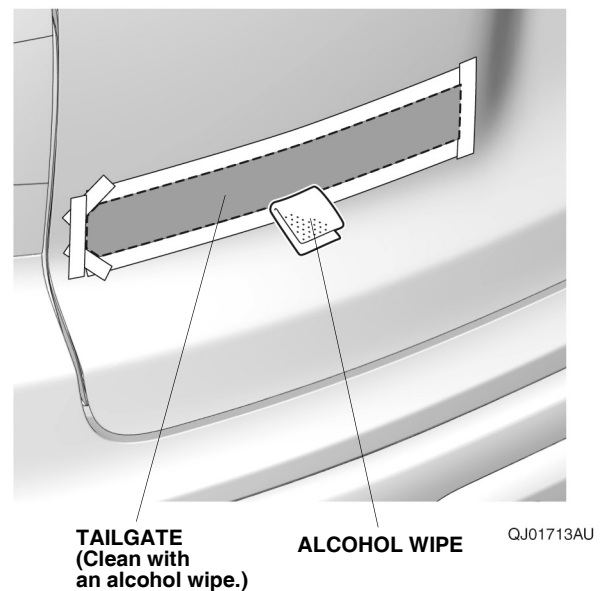




26. Remove the adhesive backing from the PASSPORT emblem. Line up the guide form with the masking tape, and attach the PASSPORT emblem to the tailgate.

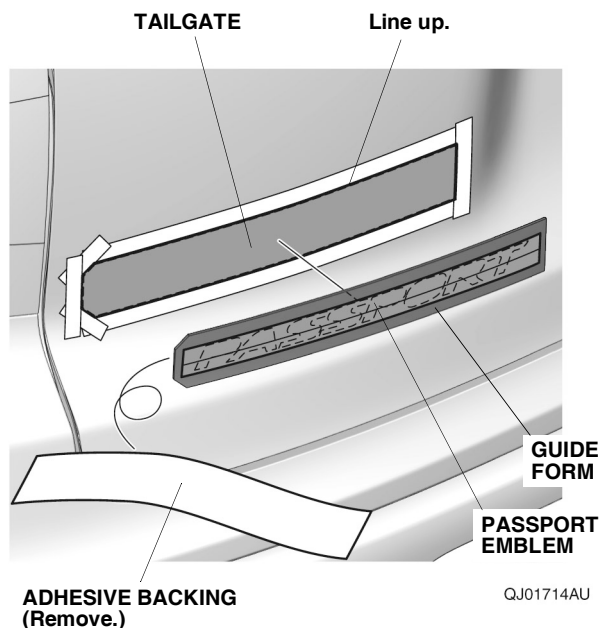


27. Remove the guide form and using the palm of your hand, firmly press the PASSPORT emblem against the tailgate for 30 seconds.

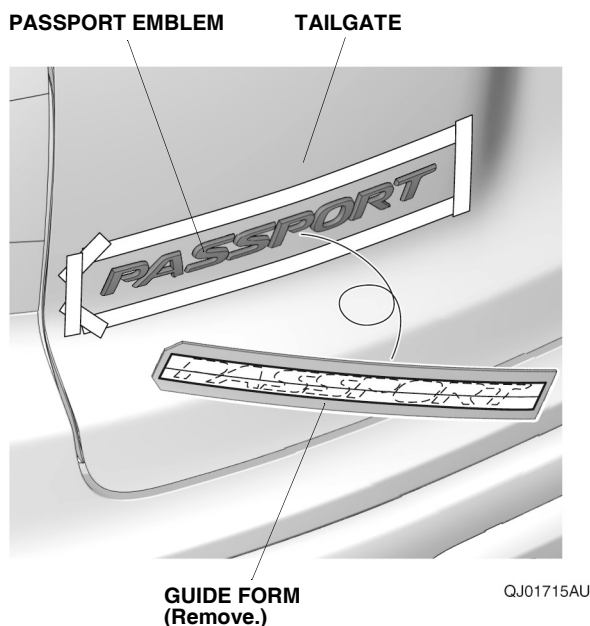

28. Remove the masking tape from the tailgate.

If the vehicle is equipped with the AWD emblem, continue with step 29; if not, go to step 45.


29. Attach masking tape along the AWD emblem as shown.

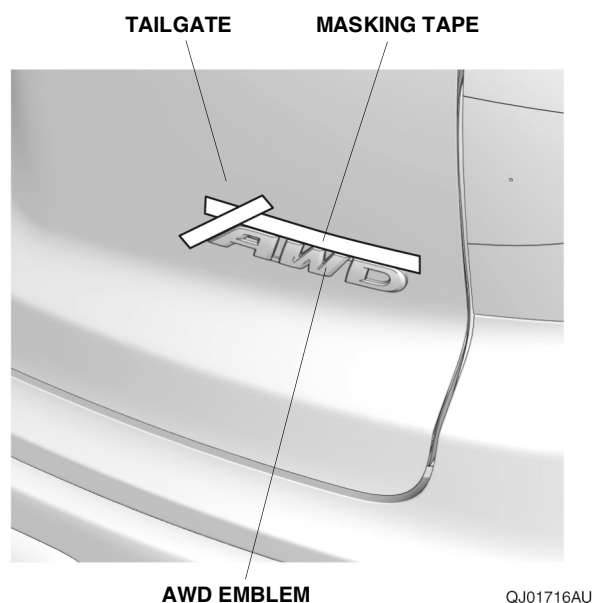


30. Using a piece of string, remove the AWD emblem by cutting along the outer edges as shown.

NOTE:


- Do not damage the vehicle body when removing the AWD emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the vehicle body.

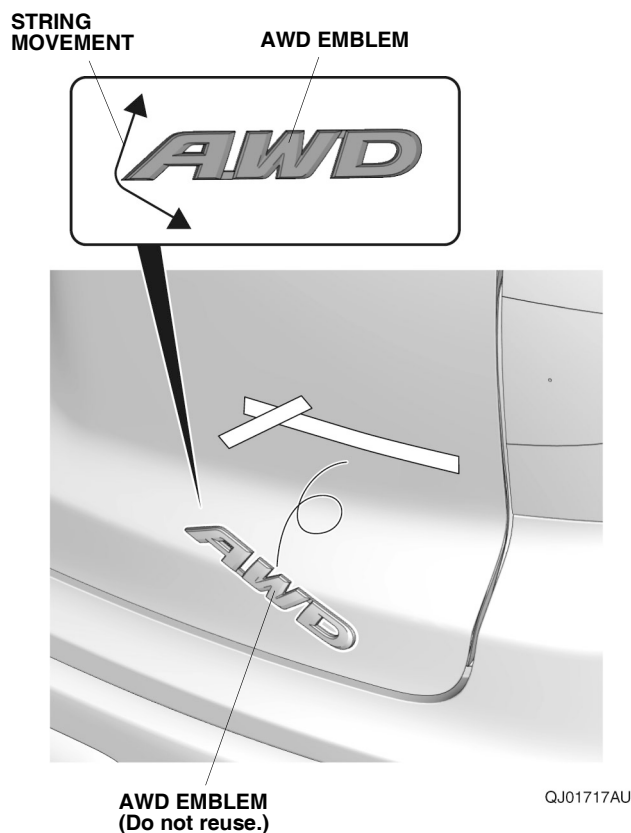

31. Using an alcohol wipe, thoroughly clean the tailgate where the AWD emblem will attach.

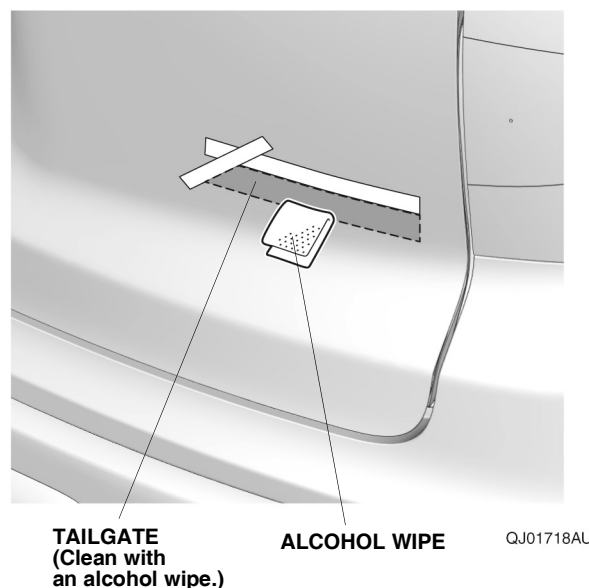


32. Remove the adhesive backing from the AWD emblem. Line up the AWD emblem with the masking tape, and attach the AWD emblem to the tailgate.

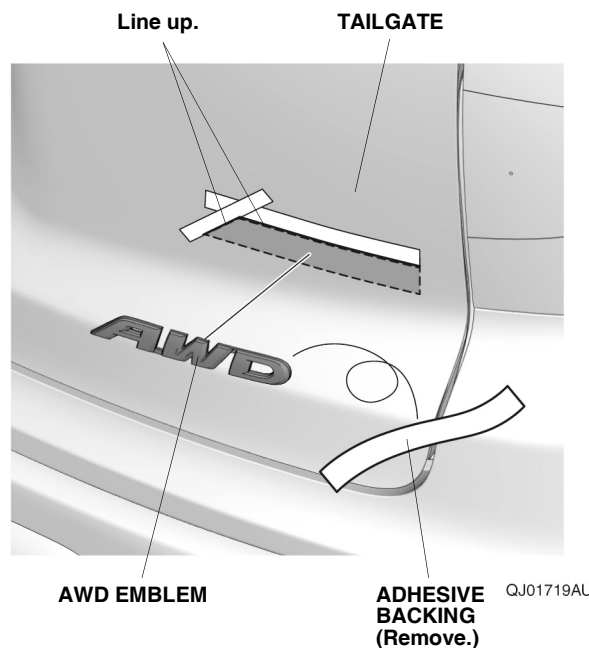

33. Using the palm of your hand, firmly press the AWD emblem against the tailgate for 30 seconds.
34. Remove the masking tape from the tailgate.

If the vehicle is equipped with the ELITE emblem, continue with step 35; if not, go to step 45.

35. Remove the position film from the ELITE emblem, then remove the ELITE emblem from the guide form.

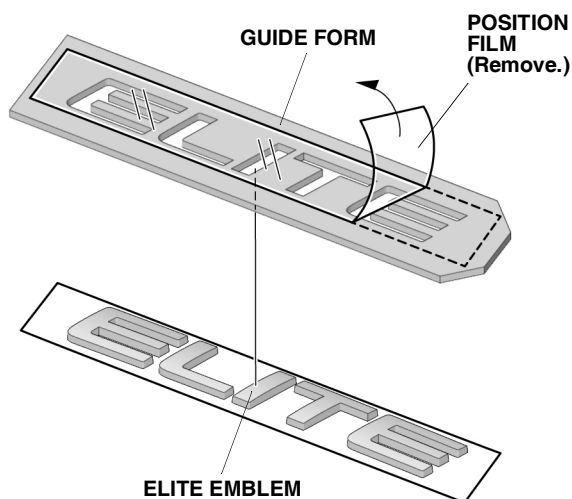


QK10318AU

36. Install the guide form to the ELITE emblem on the tailgate.




QK60201AT

37. Attach masking tape along the guide form as shown.

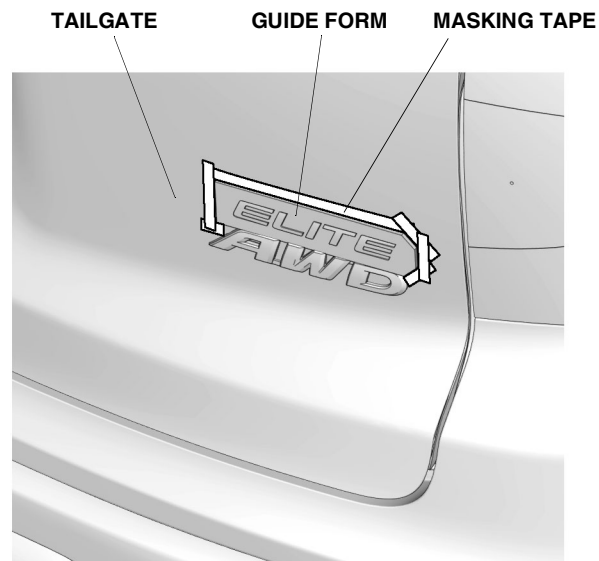

QK60202AT

38. Remove the guide form from the tailgate.

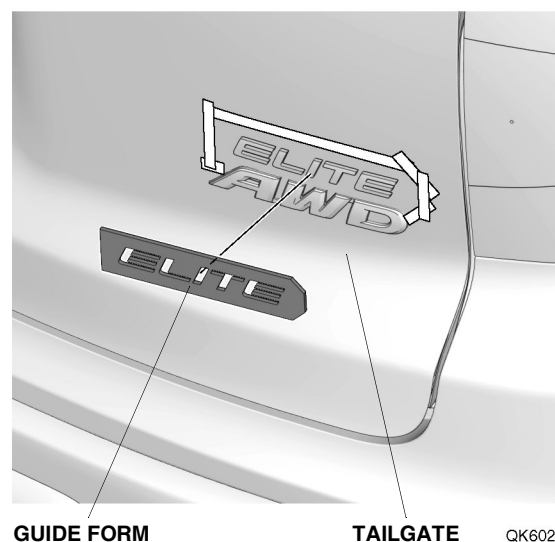


QK60203AT


39. Using a piece of string, remove the ELITE emblem by cutting along the outer edges as shown.

NOTE:

- Do not damage the vehicle body when removing the ELITE emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the vehicle body.

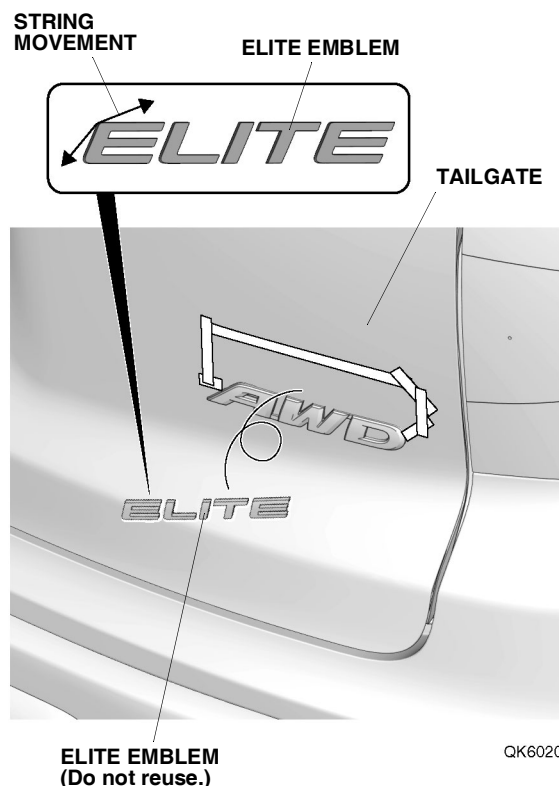


40. Install the ELITE emblem in the guide form, and temporarily secure it with masking tape.

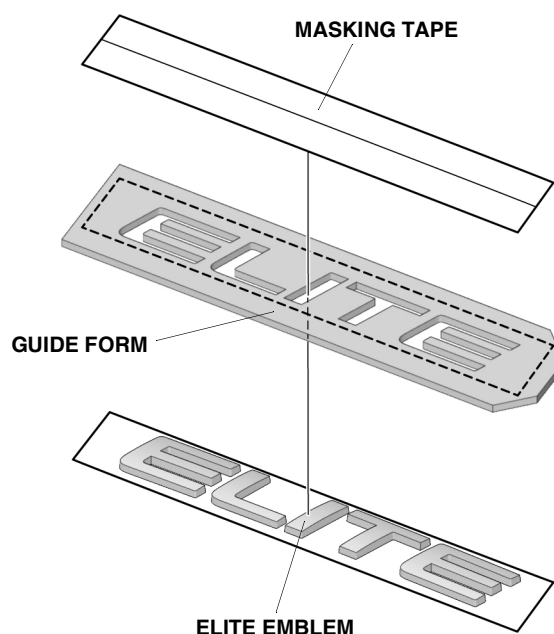


QK10323AU

41. Using an alcohol wipe, thoroughly clean the tailgate where the ELITE emblem will attach.

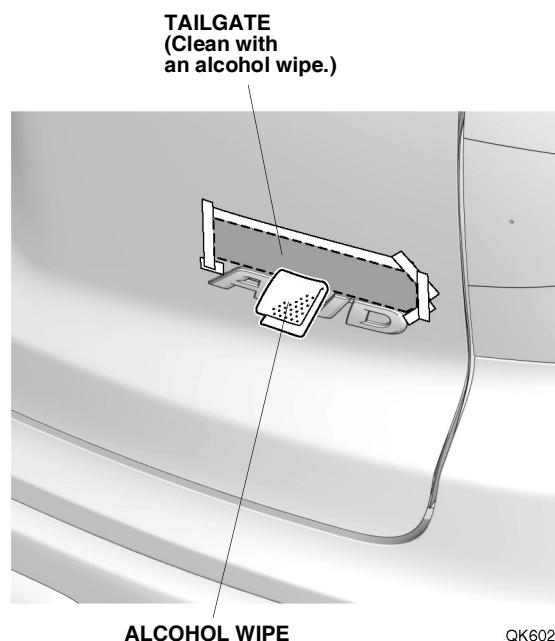


QK60205AT

42. Remove the adhesive backing from the ELITE emblem. Line up the guide form with the masking tape, and attach the ELITE emblem to the tailgate.

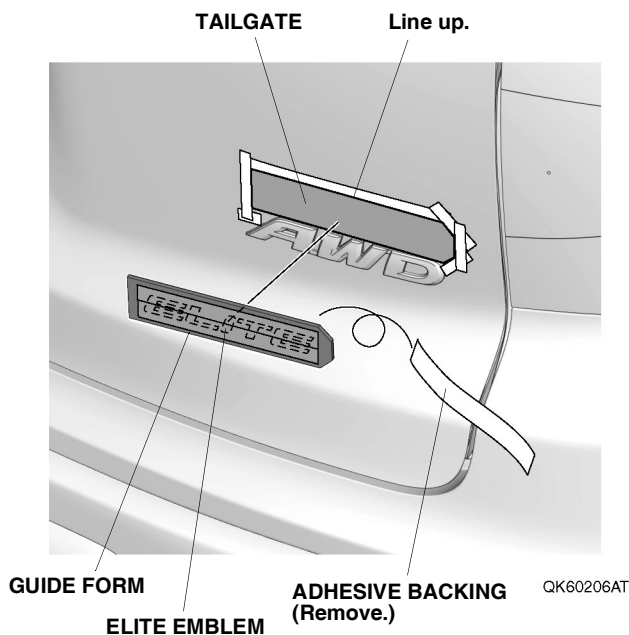


43. Remove the guide form and using the palm of your hand, firmly press the ELITE emblem against the tailgate for 30 seconds.

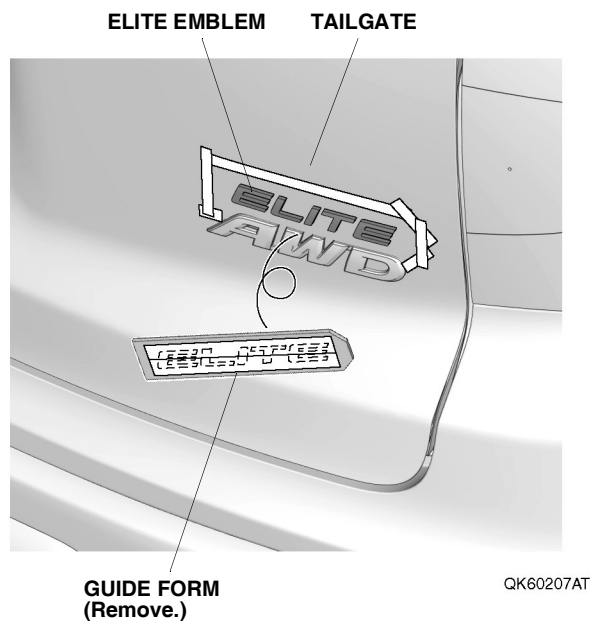


44. Remove the masking tape from the tailgate.

If the vehicle is equipped with the vehicle SPORT emblem, continue with step 45; if not, go to step 55.


45. Remove the position film from the SPORT emblem, then remove the SPORT emblem from the guide form.

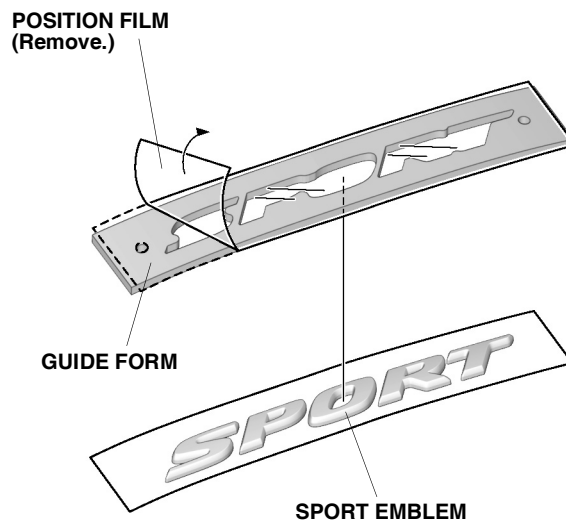

46. Install the guide form to the SPORT emblem on the tailgate.

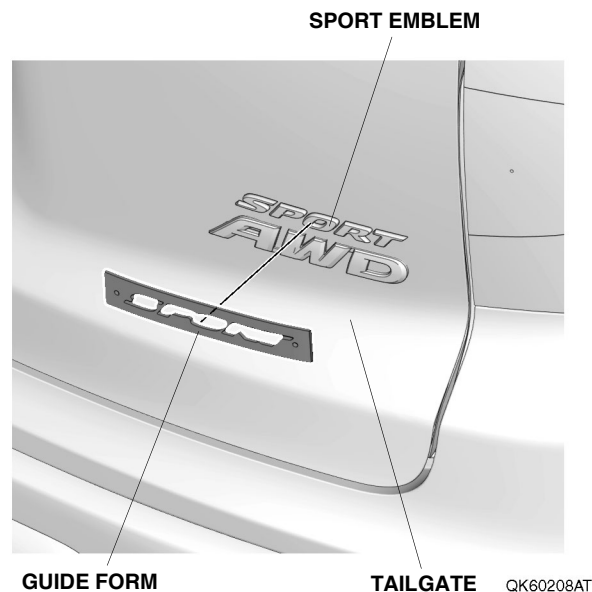


47. Attach masking tape along the guide form as shown.

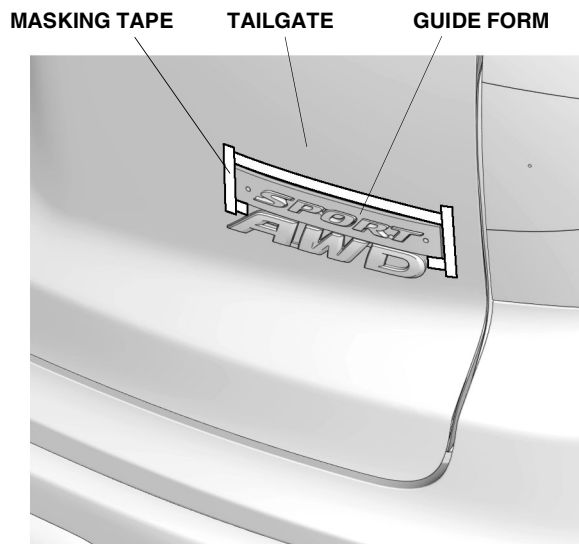

QK60209AT

48. Remove the guide form from the tailgate.


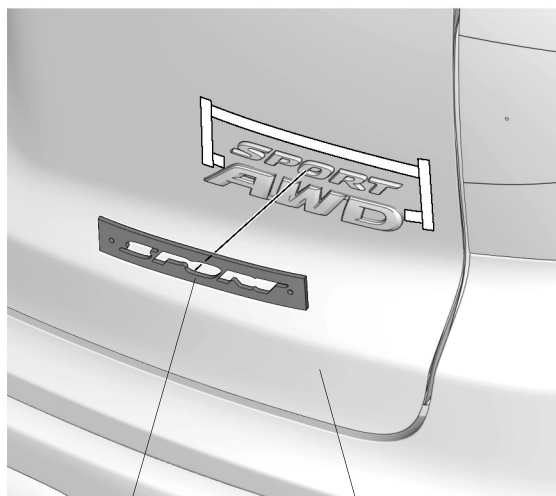


QK60210AT

49. Using a piece of string, remove the SPORT emblem by cutting along the outer edges as shown.


NOTE:

- Do not damage the vehicle body when removing the SPORT emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the vehicle body.

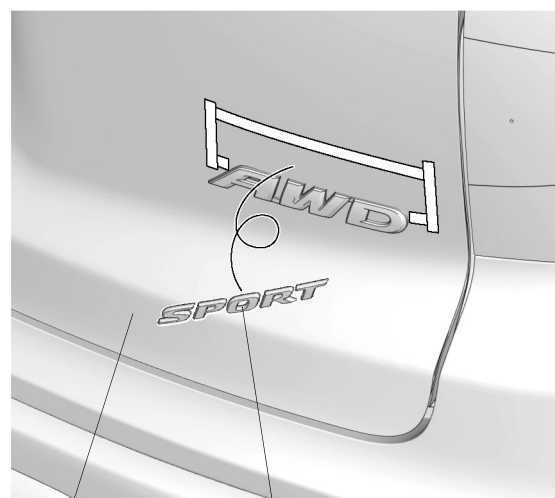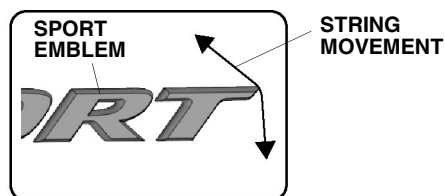


QK60211AT

50. Install the SPORT emblem in the guide form, and temporarily secure it with masking tape.

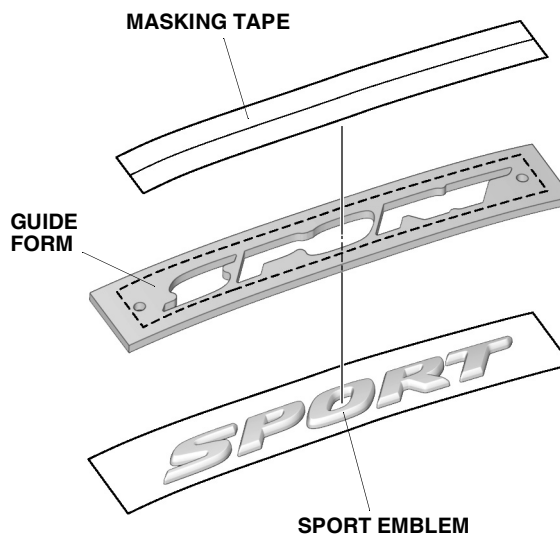


QJN1034BR


51. Using an alcohol wipe, thoroughly clean the tailgate where the SPORT emblem will attach.

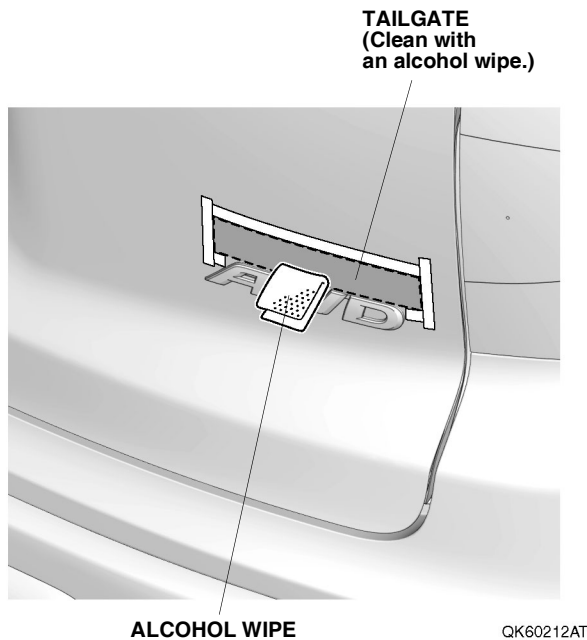

52. Remove the adhesive backing from the SPORT emblem. Line up the guide form with the masking tape, and attach the SPORT emblem to the tailgate.

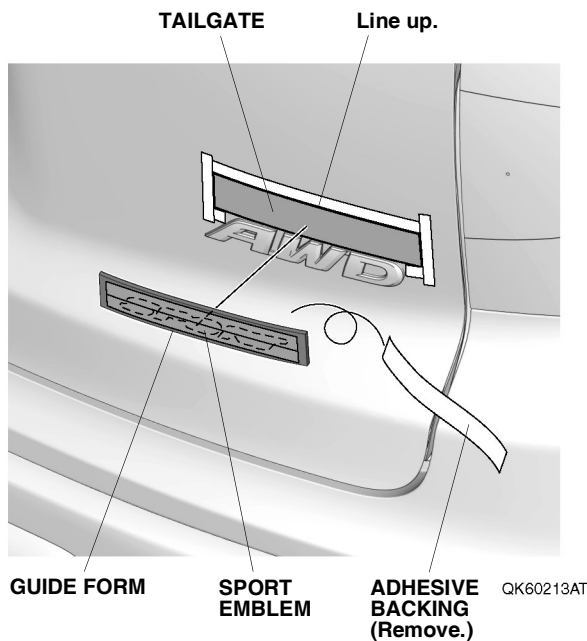

53. Remove the guide form and using the palm of your hand, firmly press the SPORT emblem against the tailgate for 30 seconds.

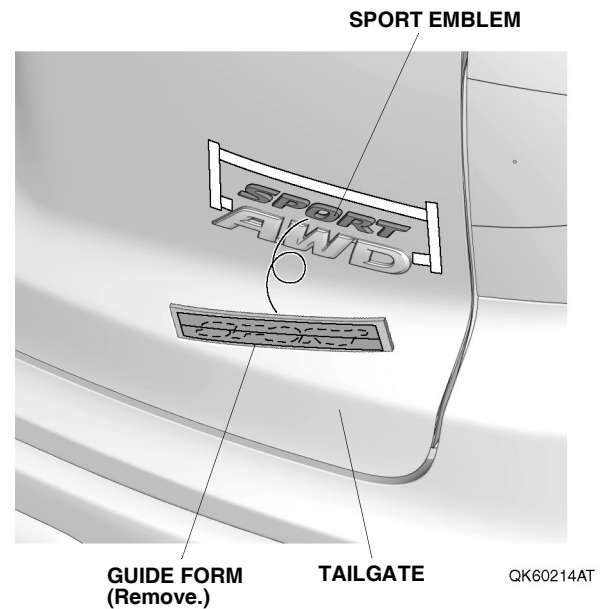

54. Remove the masking tape from the tailgate.  
55. Check that all wire harnesses are routed properly and all connectors are plugged in.  
56. Install all removed parts.  
57. Connect the negative cable to the battery.  
58. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.  
59. Set the clock on vehicles without navigation.  
60. If necessary, restore the systems back to normal operation as described in the service information.