INSTALLATION INSTRUCTIONS

REAR SIDE LINING PROTECTORS P/N 08P42-TG7-100A Application

2020 PILOT

Publications No. VERSION 1

Issue Date
JUL 2019

PARTS LIST

Left rear side lining protector



Right rear side lining protector



16 Rivets



TOOLS AND SUPPLIES REQUIRED

Flat-tip screwdriver

Drill

3 mm Drill bit

T-pin

Masking tape

File

Ruler


Utility knife

Eye protection (face shield, safety goggles, etc.)

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

Rotabroach Hole Cutting Kit (T/N BLR11201SO)

Illustration of the Rear Side Lining Protectors on the Vehicle

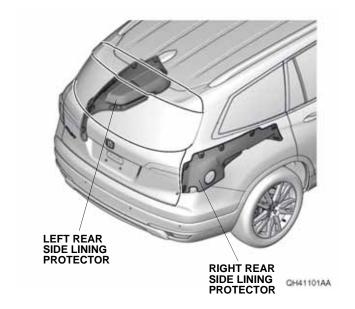


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE: Be careful not to damage the body.


With accessory parking sensors or hands-free access power tailgate

 If the vehicle is equipped with parking sensors or hands-free access, cut out the left rear side lining protector as shown.

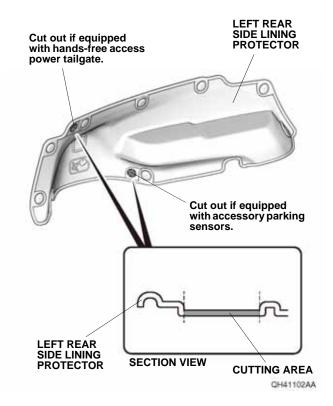

With accessory power socket


If the vehicle is equipped with accessory power socket, cut out the left rear side lining protector as shown

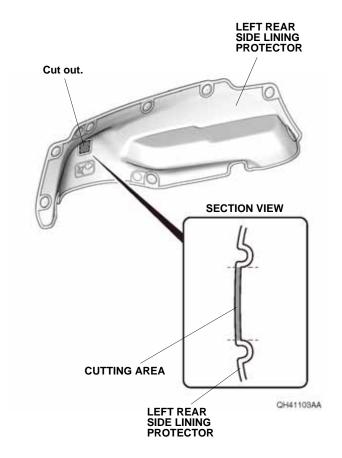


Installing the Rear Side Lining Protectors

 Center the snaps with the recesses in the left and right rear side lining protectors. Apply masking tape to the back surfaces to keep them in place during installation.


NOTE: Follow the same procedure for the differently shaped right rear side lining protector.

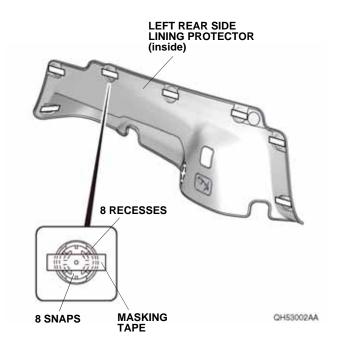


4. Pull each strap, and fold down the third row seats.

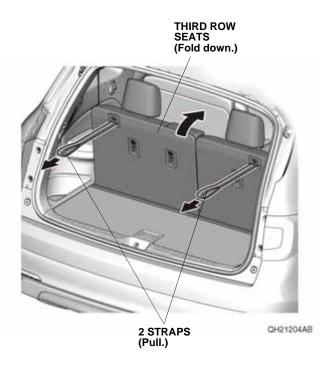

5. Line up the left rear side lining protector, temporarily attach it to the left rear side lining with masking tape as shown.

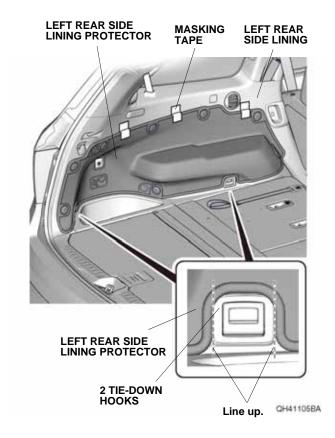

6. Using a T-pin, pierce the left rear side lining through the hole in the snap No.1 as shown. Remove the masking tape from this snap attached in step 3. NOTE: Make sure to pierce the left rear side lining perpendicular. Do not remove the masking tape from the other snaps at this time.

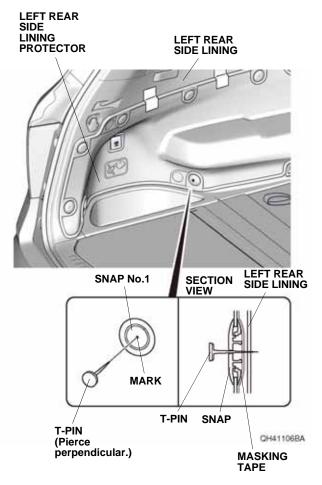


7. Remove the left rear side lining protector.

8. While wearing eye protection, drill the pierced mark in step 6 to 3 mm.

NOTE:


- Wrap masking tape around a 3 mm drill bit, 10 mm (0.39 in.) away from the tip, or use a drill stop.
- Make sure to drill perpendicular to the left rear side lining.

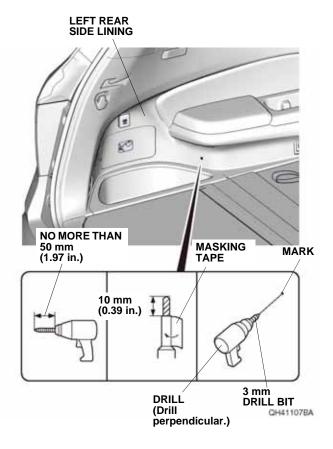


9. While wearing eye protection, enlarge the drilled hole in step 8 to 6 mm. Drill with a 6 mm Rotabroach bit.

NOTE:


 Make sure to drill perpendicular to the left rear side lining.

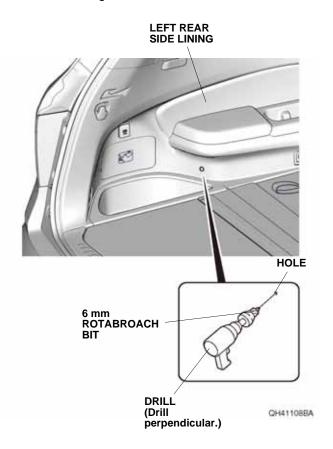


10. Install one rivet into the hole on the left rear side lining as shown.

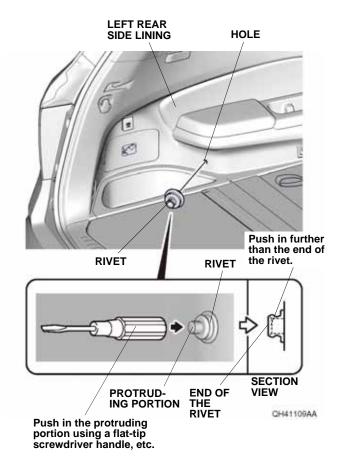

11. Line up the left rear side lining protector, and temporarily attach it to the left rear side lining with the snap No.1 and masking tape as shown.

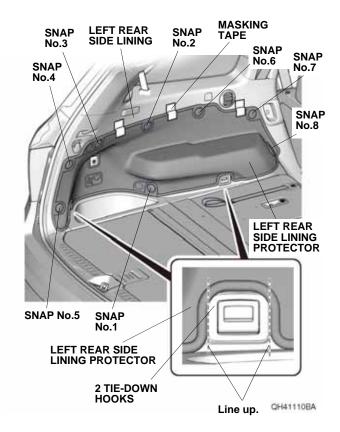

- 12. Repeat steps 6 through 10 for each of the remaining snaps, follow the pattern shown.
- 13. Fit the left rear side lining protector, and secure it to the left rear side lining with eight snaps.

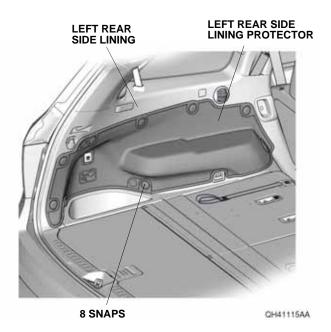

 Repeat steps 5 through 13 on the right side of the vehicle.