



INSTALLATION INSTRUCTIONS

Accessory
BODY SIDE MOLDINGS
 P/N 08P05-TVA-100

Application
2018 ACCORD

Publications No.
VERSION 2

Issue Date
OCT 2017

PARTS LIST

Left front body side molding



Right front body side molding



Left rear body side molding



Right rear body side molding



Front template



Middle template



Rear template



4 Alcohol wipes




TOOLS AND SUPPLIES REQUIRED

Masking tape


The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.
 Rubber Roller (T/N MHLE54D)

Illustration of the Body Side Moldings on the Vehicle

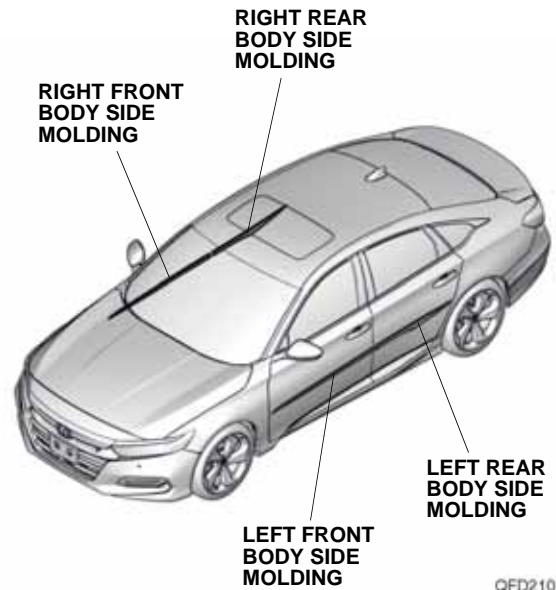


QFD2101AC


3. Line up the rear template with the left rear door edge and curve end. Tape the rear template to the left rear door with masking tape as shown.

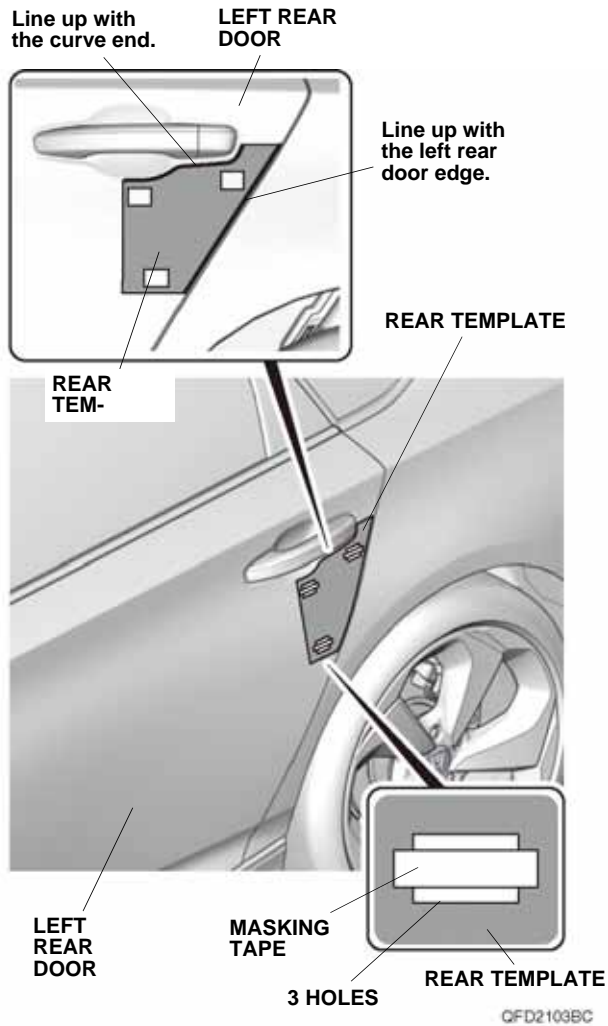


4. Using an alcohol wipe, thoroughly clean the left front door where the left front body side molding will attach.

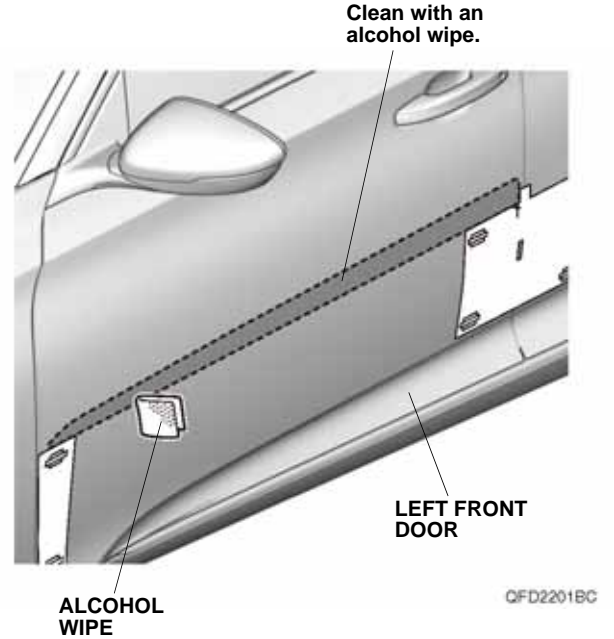

5. Using an alcohol wipe, thoroughly clean the left rear door where the left rear body side molding will attach.

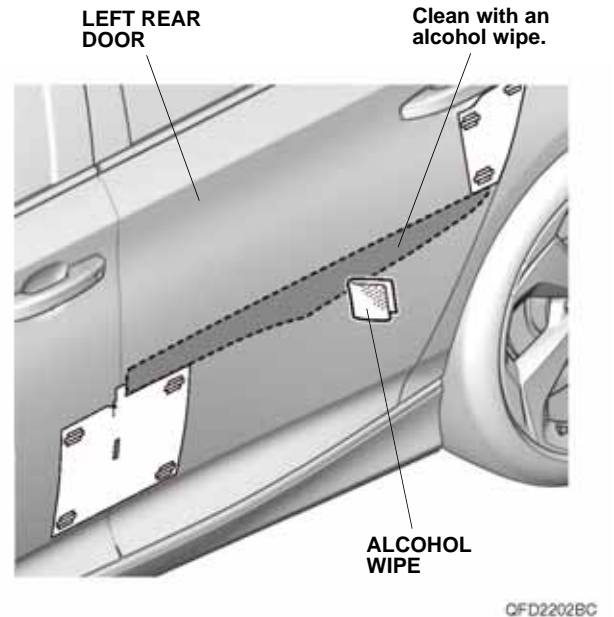


6. Peel back the adhesive backings, and tape them to the front surface of the left front body side molding with masking tape. Remove the remaining adhesive backings.

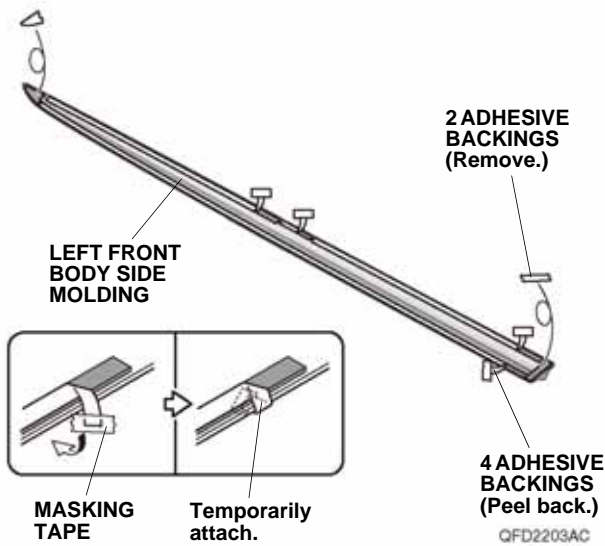


7. Line up the left front body side molding with the front template and middle template, and attach it to the left front door as shown.


NOTE: If the vehicle will be equipped with a door edge guard, attach the left front body side molding at the arrow mark on the middle template shown.

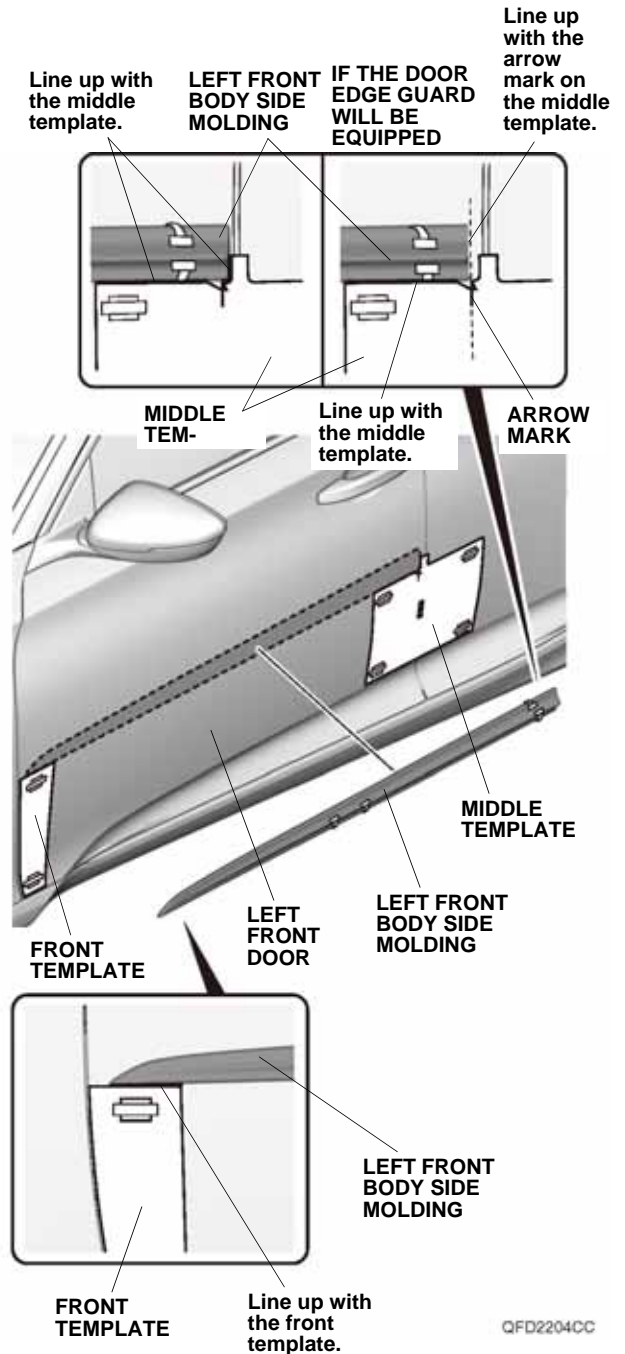


8. While applying light pressure against the left front body side molding, carefully remove the taped adhesive backings.

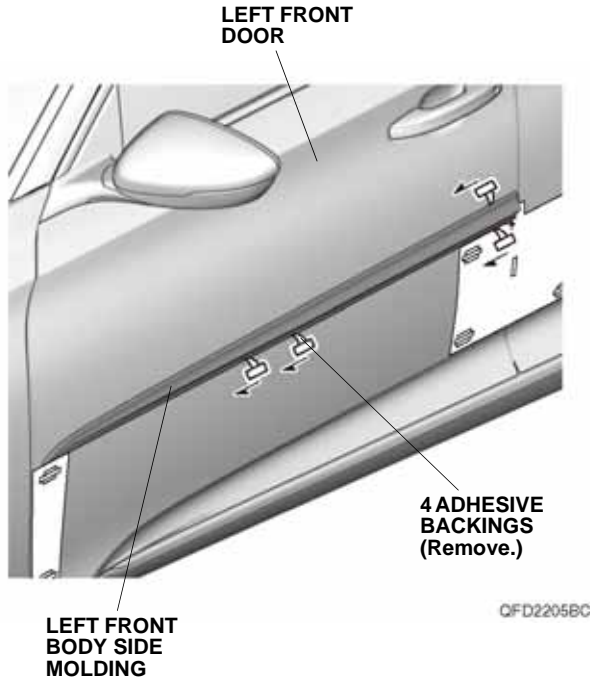


9. Using a rubber roller, apply firm pressure against the left front body side molding and roll from one end to the other.
NOTE: Apply firm pressure, especially at the ends.

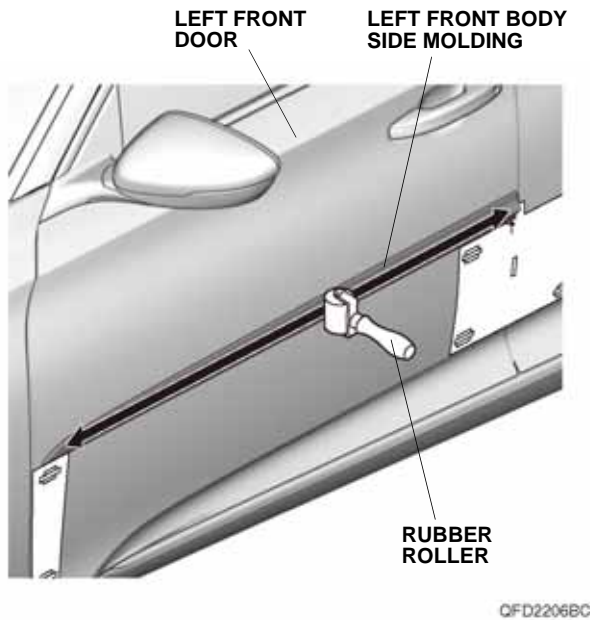

10. Peel back the adhesive backings, and tape them to the front surface of the left rear body side molding with masking tape. Remove the remaining adhesive backings.

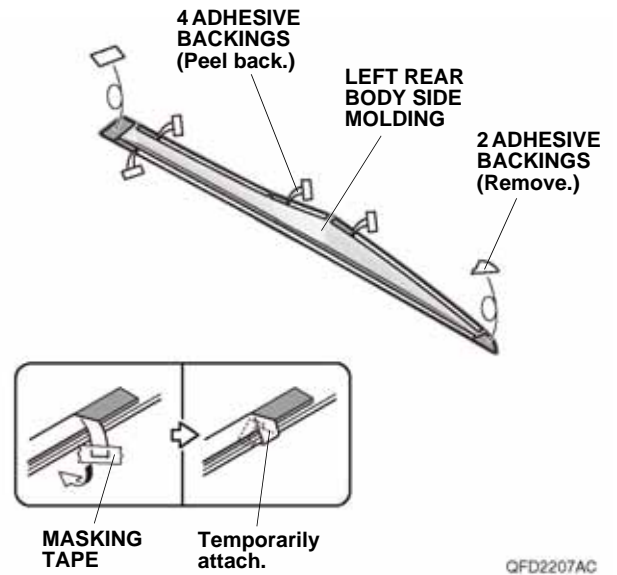


11. Line up the left rear body side molding with the middle template and rear template, and attach it to the left rear door as shown.

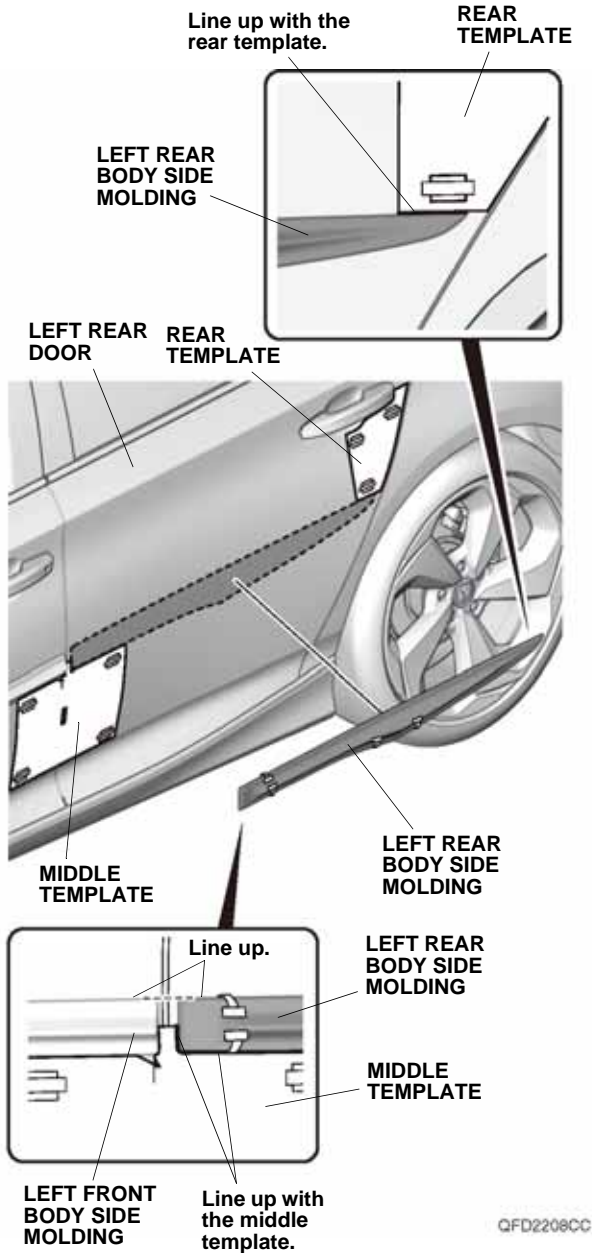


12. Make sure the edges of the left front body side molding and left rear body side molding are lined up.

13. While applying light pressure against the left rear body side molding, carefully remove the taped adhesive backings.

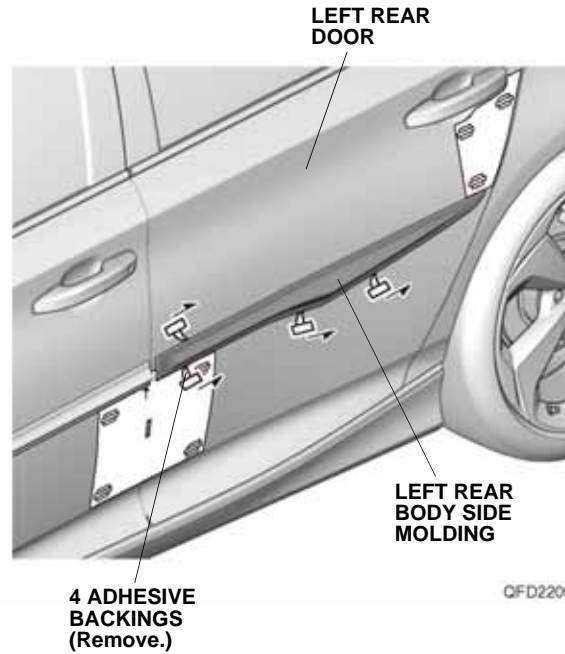

14. Using a rubber roller, apply firm pressure against the left rear body side molding and roll from one end to the other. Remove the templates. NOTE: Apply firm pressure, especially at the ends.

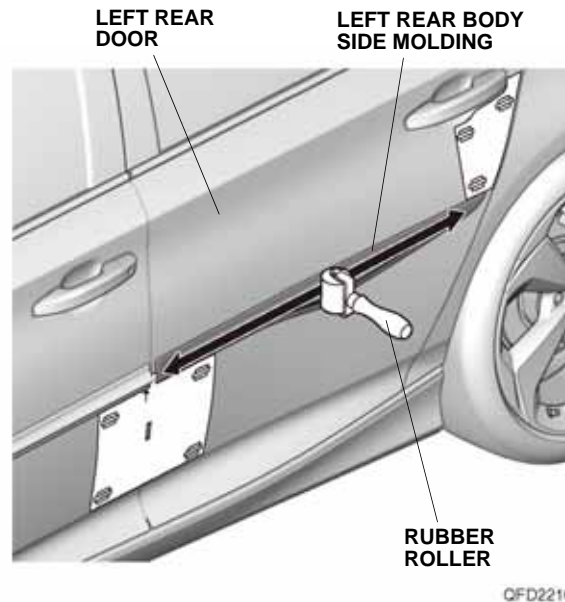

15. Turn the templates over, and repeat steps 1 through 14 on the right side of the vehicle.