



INSTALLATION INSTRUCTIONS

Accessory
BLACK EMBLEMS

Application
2020 ACCORD
2020 ACCORD HYBRID

Publications No.
VERSION 1
Issue Date
MAY 2020

PARTS LIST

Car Set Name + H-mark Emblem Kit
P/N 08F20-TVA-100

Front H emblem



Rear H emblem



ACCORD emblem



4 Push nuts



3 Alcohol wipes



2.0T Emblem Kit
P/N 08F20-TVA-100B

2.0T emblem



Alcohol wipe



SPORT Emblem Kit
P/N 08F20-TVA-100C

SPORT emblem



Alcohol wipe



2.0T SPORT Emblem Kit
P/N 08F20-TVA-100D

2.0T SPORT emblem



Alcohol wipe




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
10 mm Open end wrench
6 mm, 8 mm, and 10 mm Sockets
Ratchet
Torque wrench
Masking tape
Blanket
String
Shop towel
Diagonal cutters


The following tools are available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Push Pin Pliers (T/N 07AAC-001A101)

Illustration of the Black Emblems Installed on the Vehicle

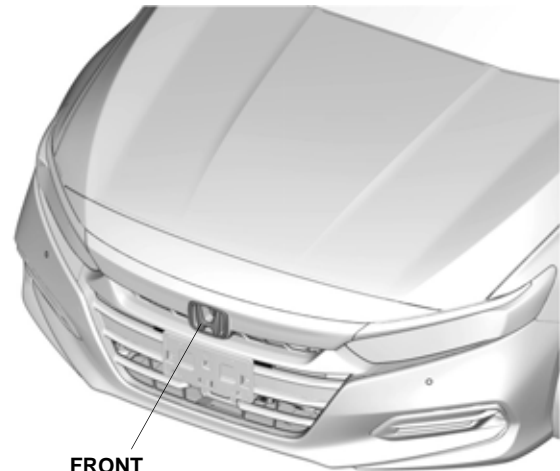

FRONT
H EMBLEM

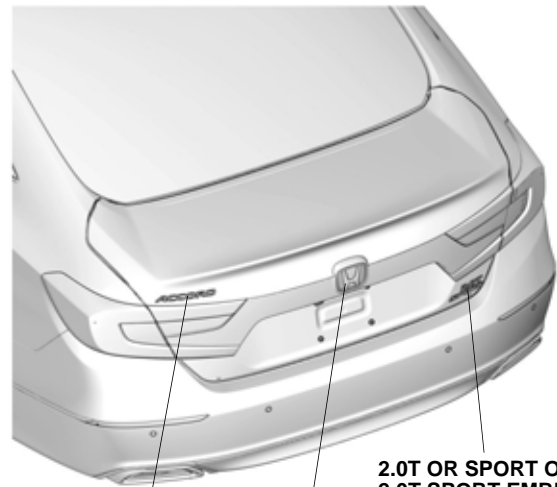

ACCORD
EMBLEM

REAR
H EMBLEM

2.0T OR SPORT OR
2.0T SPORT EMBLEM


QJN1001AR

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery, then wait at least 3 minutes before starting work.


2. Remove the left and right front grille cover.

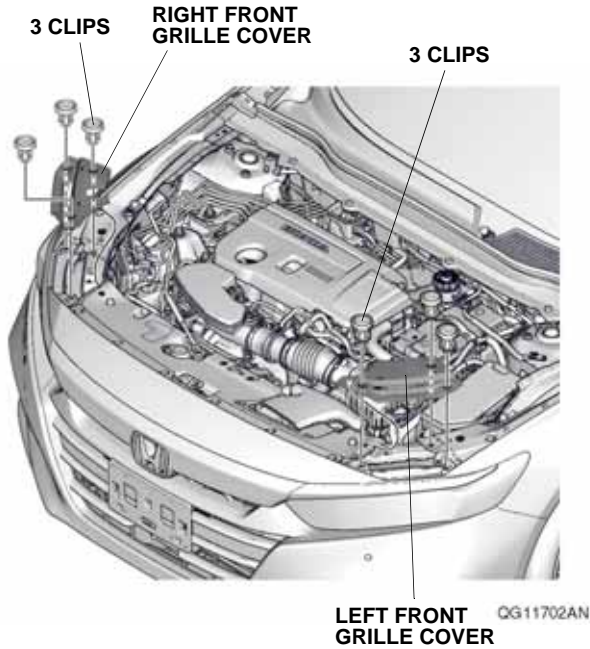


3. Remove the front bumper:
- Apply masking tape as shown.

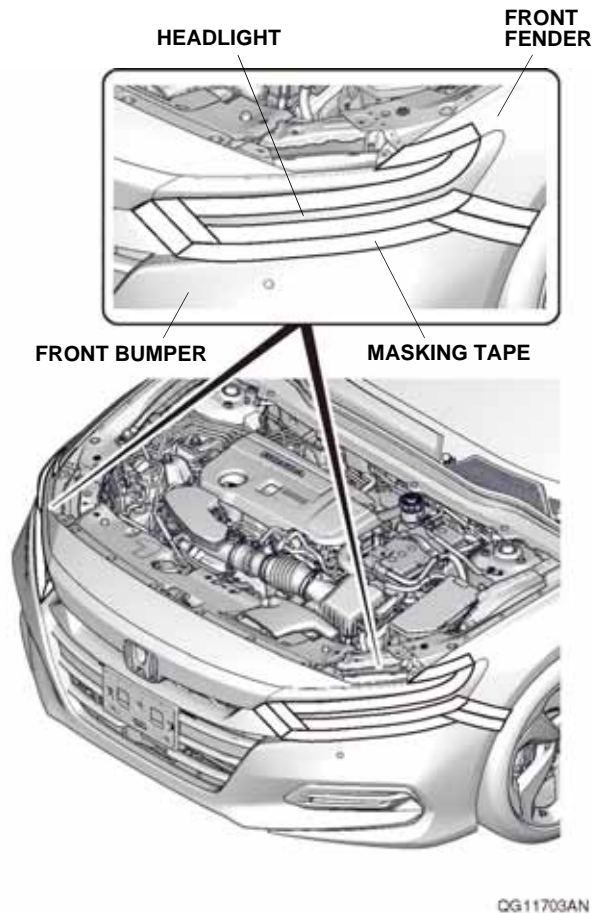


- Remove the six self-tapping screws and 17 clips as shown.

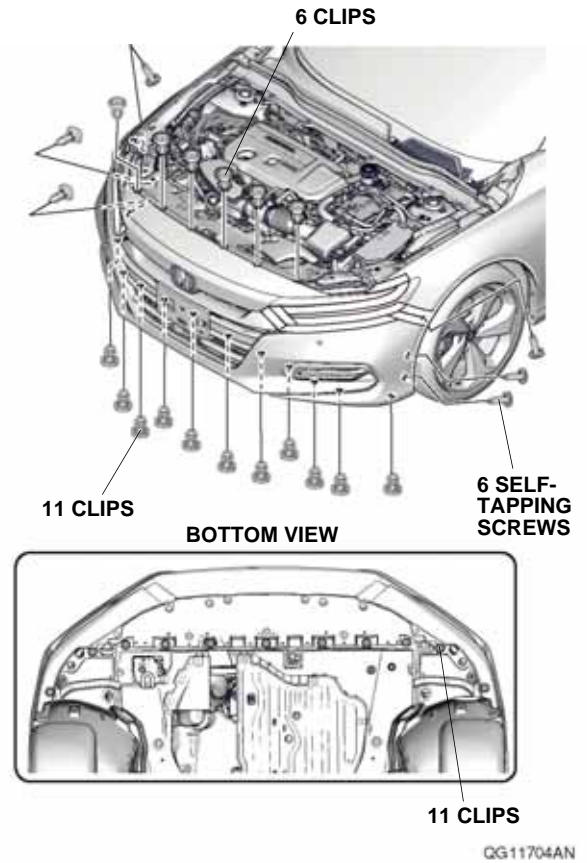


- With the help of an assistant, release the seven retaining tabs on each side.

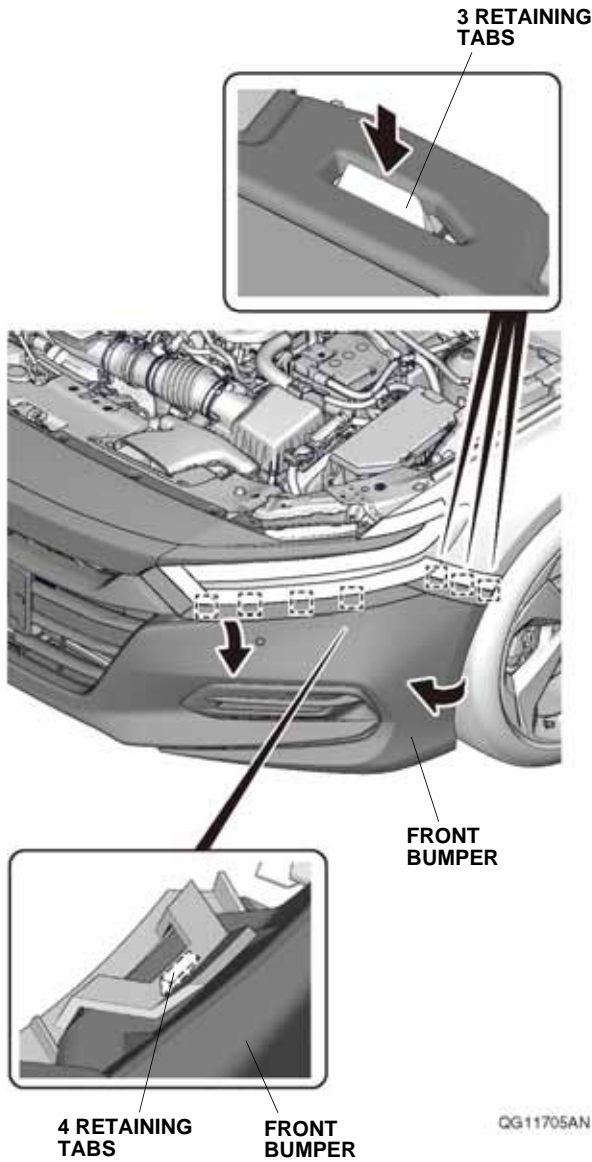


- With the help of an assistant, remove the front bumper, and unplug the vehicle connectors (if equipped).
- Place the front bumper on a blanket.

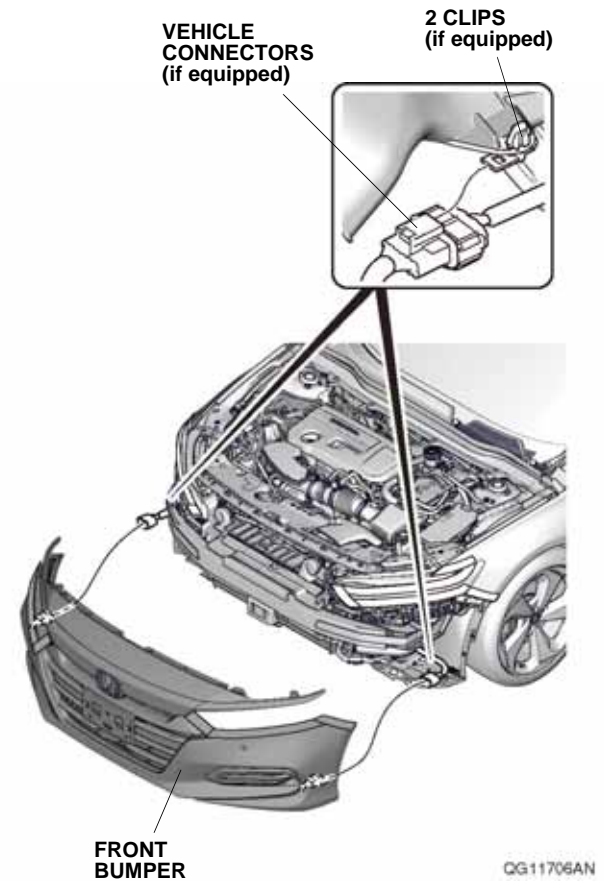


4. Open the trunk lid. Remove the trunk lid trim panel.

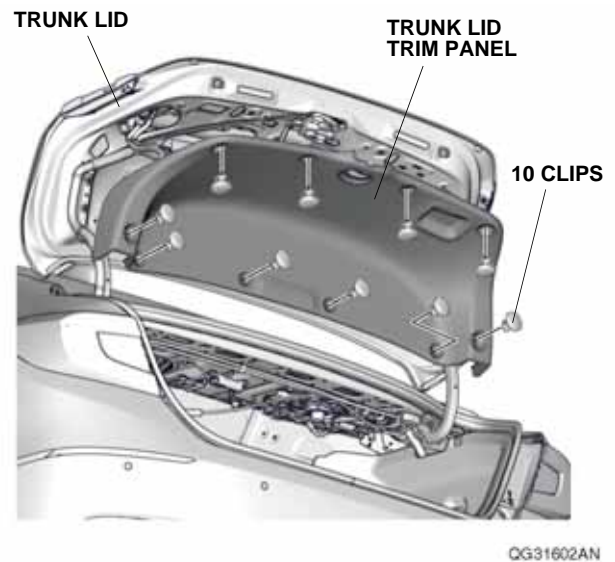


5. To prevent clips from falling, carefully insert a shop towel as shown.

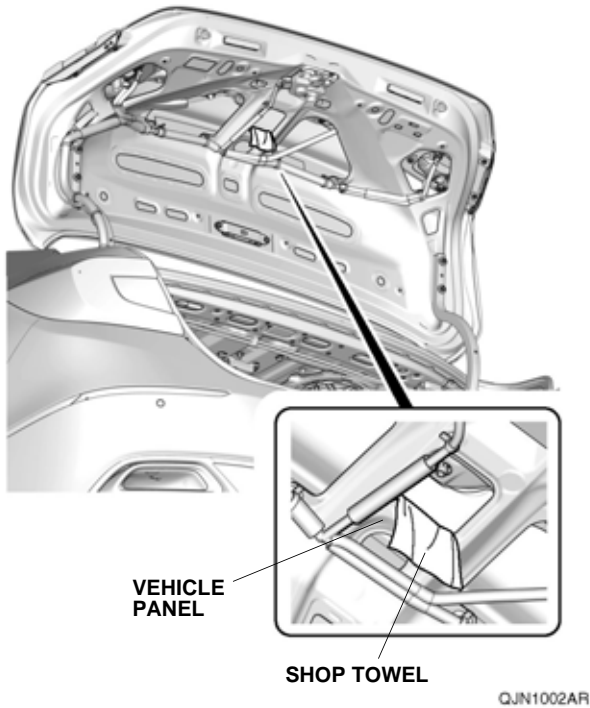


6. Remove the bolts and self-tapping screw.

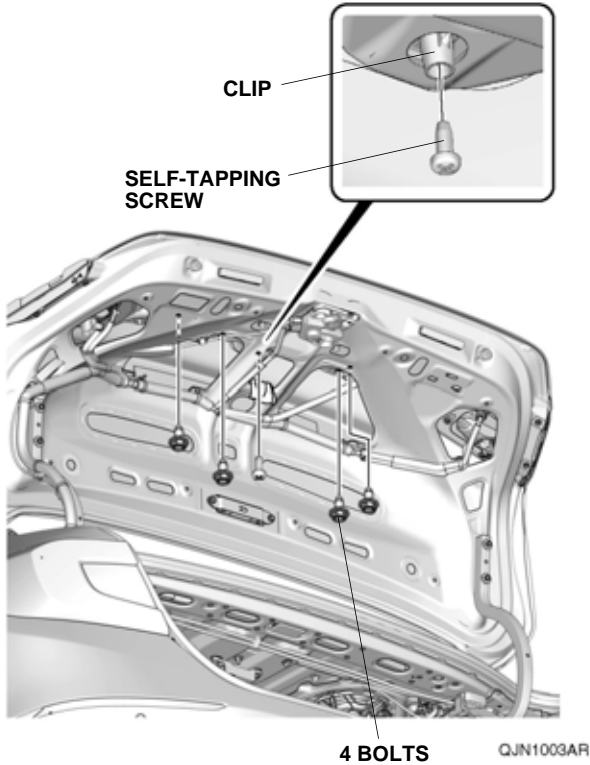

7. Remove the rear license plate trim.

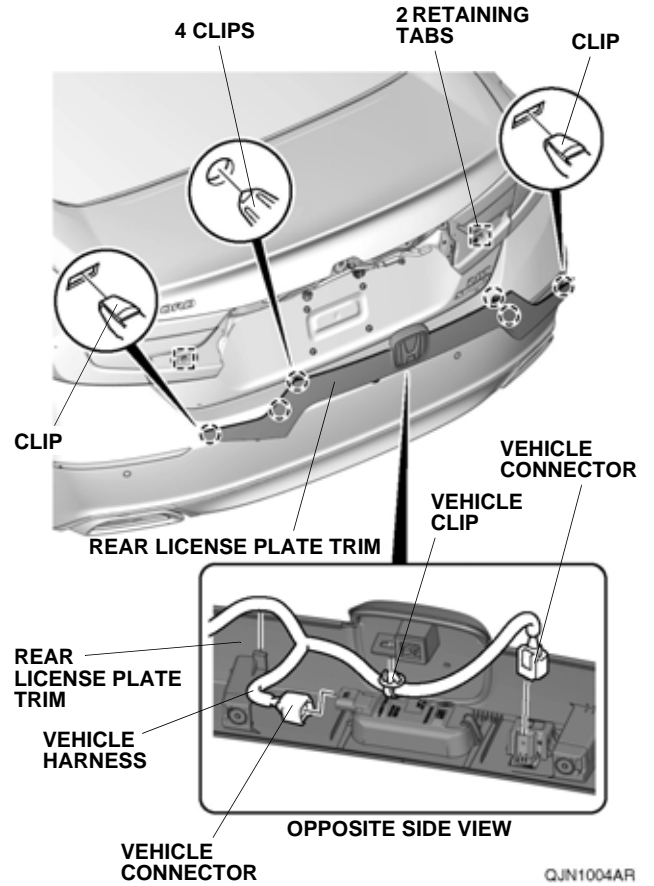


8. Remove the clip.

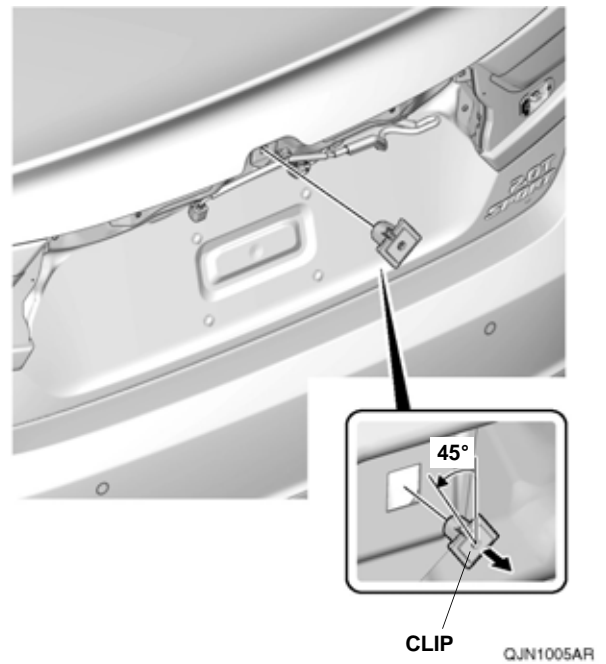


Installing the Black Emblems


9. Remove the front grille from the front bumper.

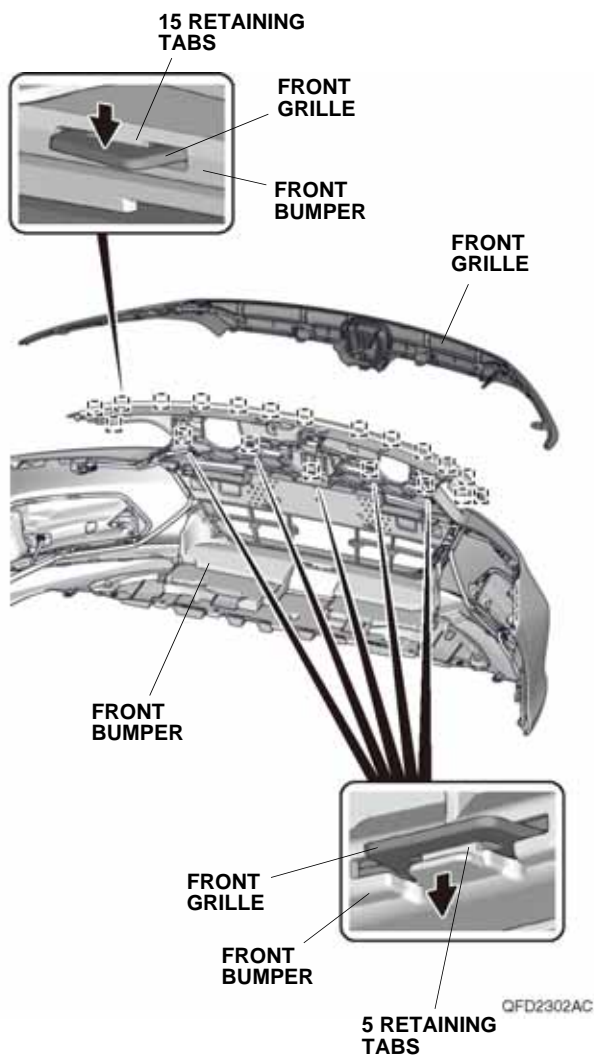


10. Remove the front H emblem from the front grille.

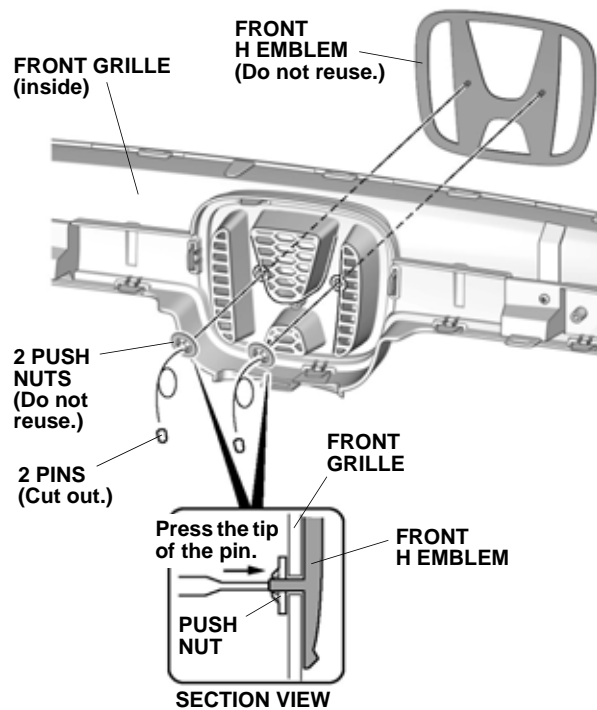

11. Using an alcohol wipe, thoroughly clean the front grille where the front H emblem will attach.

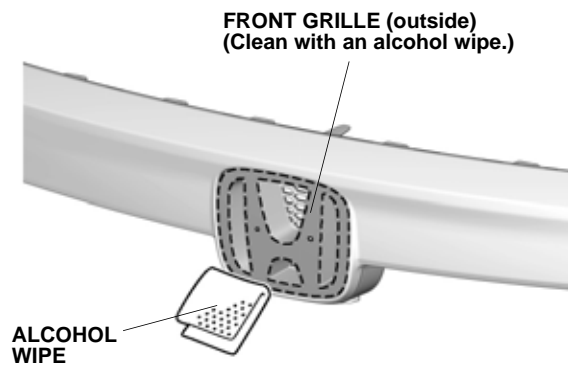


12. Remove the adhesive backings from the front H emblem. Install the front H emblem to the front grille as shown.
NOTE: Check the orientation of the push nuts.

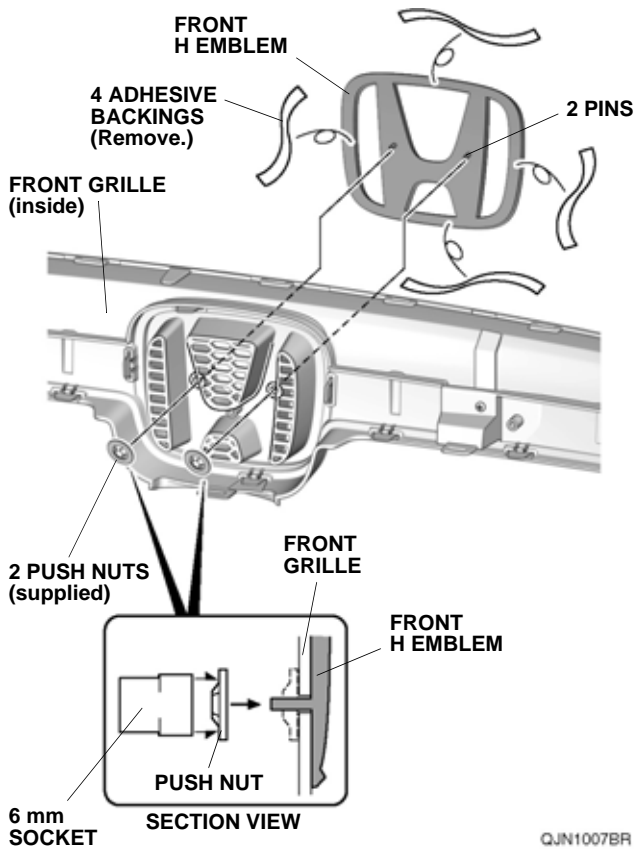


13. Using the palm of your hand, firmly press the front H emblem against the front grille.


14. Remove the rear H emblem from the rear license plate trim.

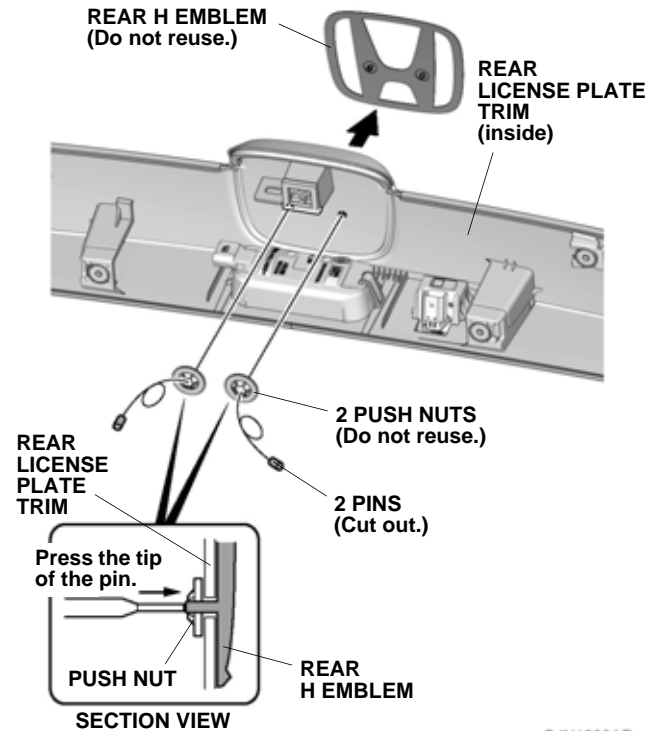

15. Using an alcohol wipe, thoroughly clean the rear license plate trim where the rear H emblem will attach.

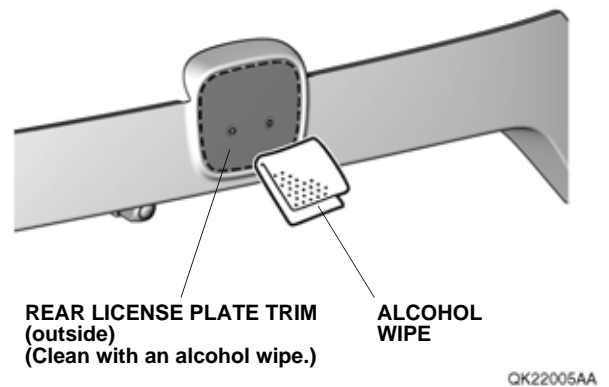


16. Install the clip to the rear license plate trim.

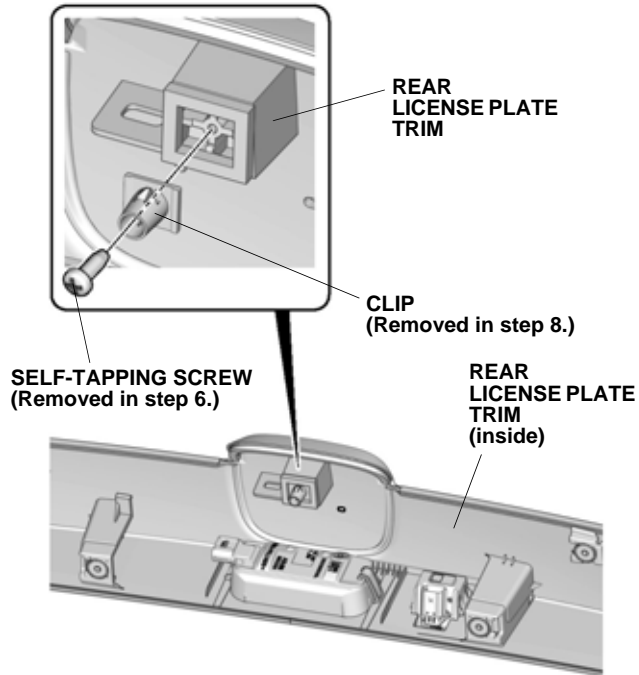


QJN1009AR

17. Remove the adhesive backings from the rear H emblem. Install the rear H emblem to the rear license plate trim as shown.

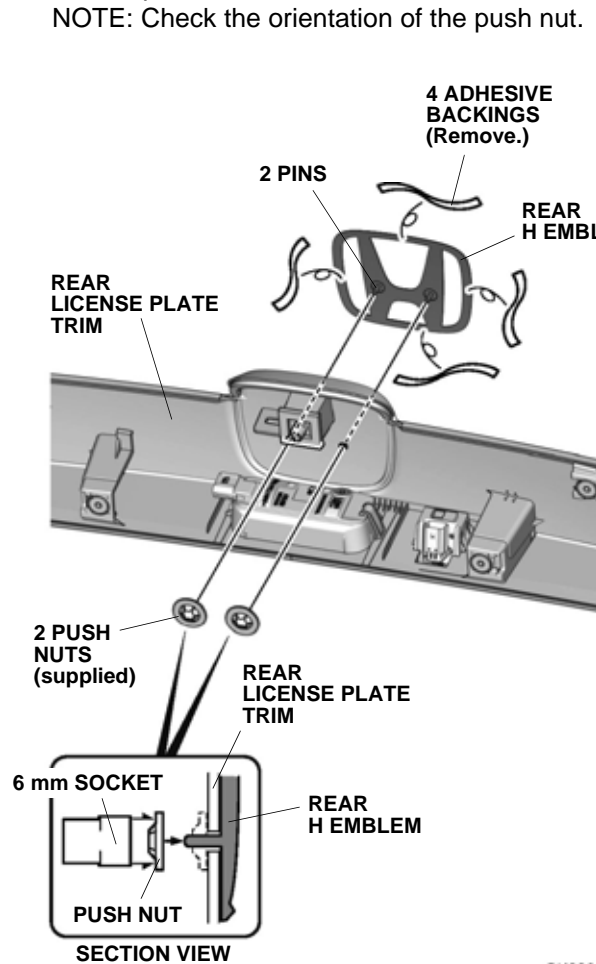


QK22006AA

18. Using the palm of your hand, firmly press the rear H emblem against the rear license plate trim.
19. Remove the position film from the ACCORD emblem, then remove the ACCORD emblem from the guide form.

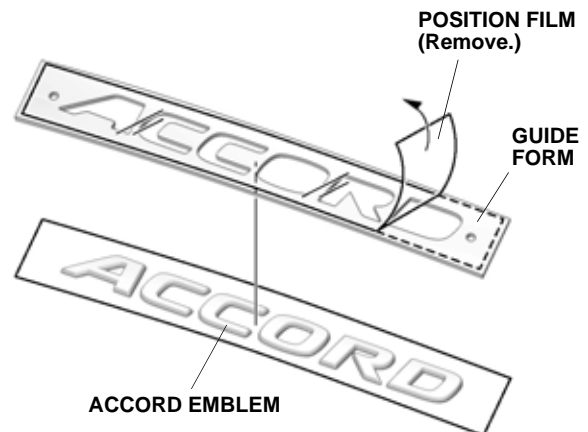


QJN1011BR


20. Install the guide form to the ACCORD emblem on the trunk lid.

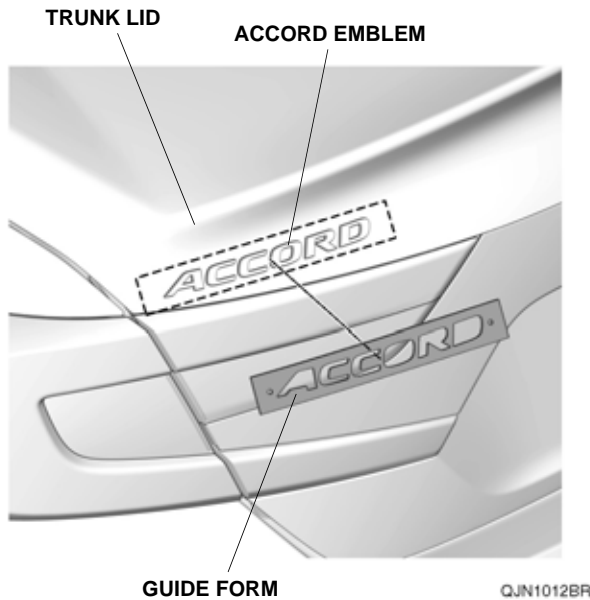

21. Attach masking tape along the guide form as shown.

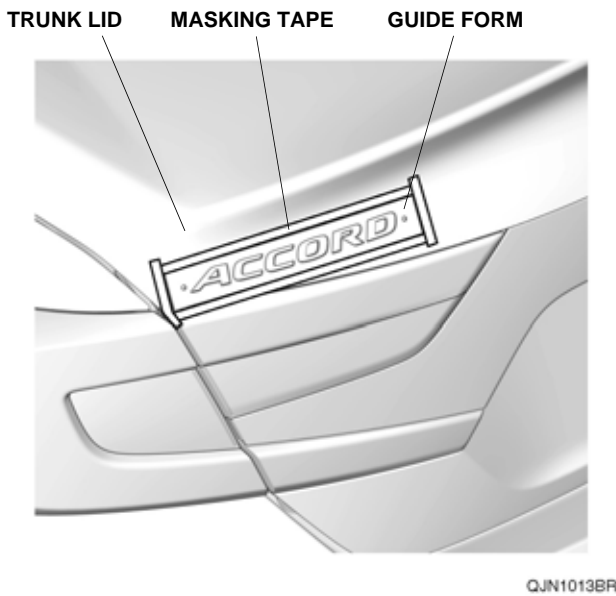


22. Remove the guide form from the trunk lid.

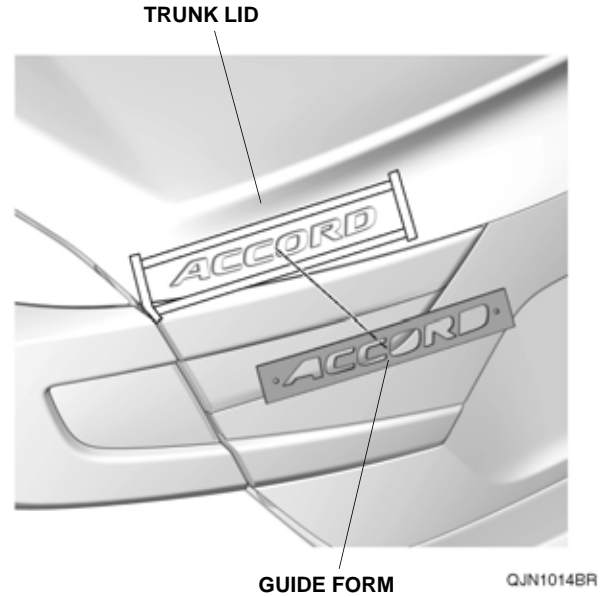


23. Using a piece of string, remove the ACCORD emblem by cutting along the outer edges as shown. NOTE:


- Do not damage the trunk lid when removing the ACCORD emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the trunk lid.

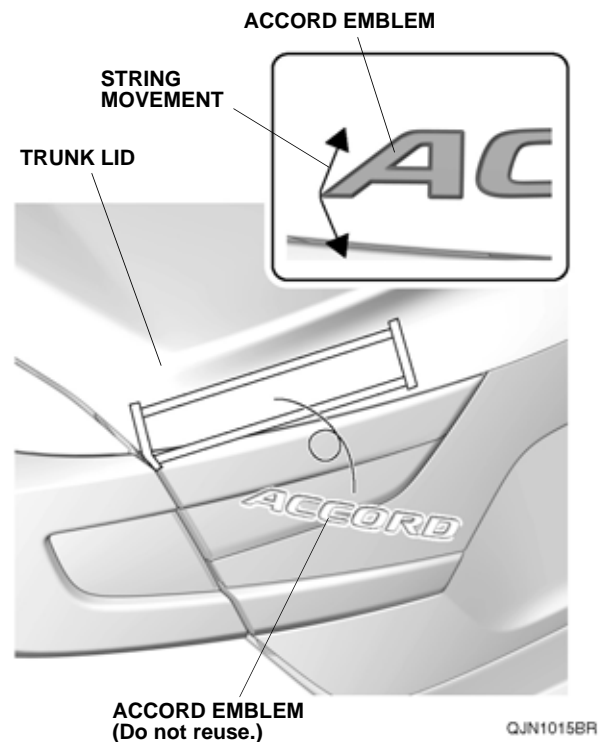


24. Install the ACCORD emblem in the guide form, and temporarily secure it with masking tape.

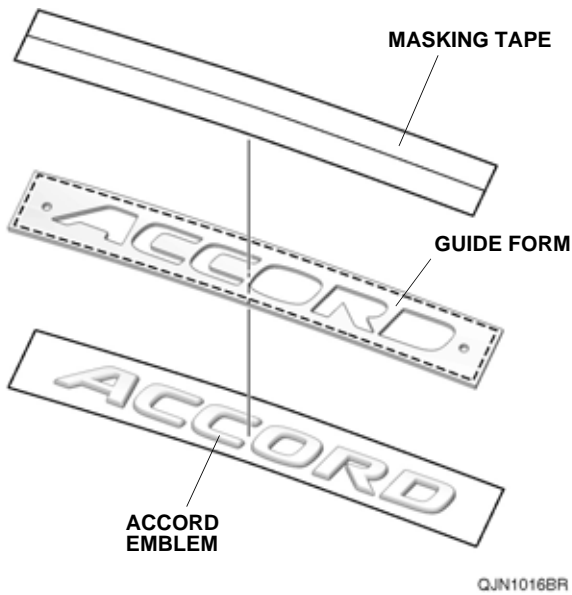


25. Using an alcohol wipe, thoroughly clean the trunk lid where the ACCORD emblem will attach.

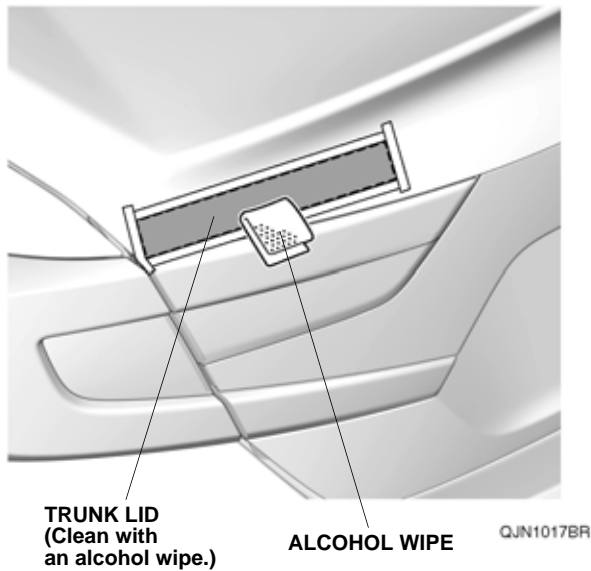

26. Remove the adhesive backing from the ACCORD emblem. Line up the guide form with masking tape, and attach the ACCORD emblem to the trunk lid.

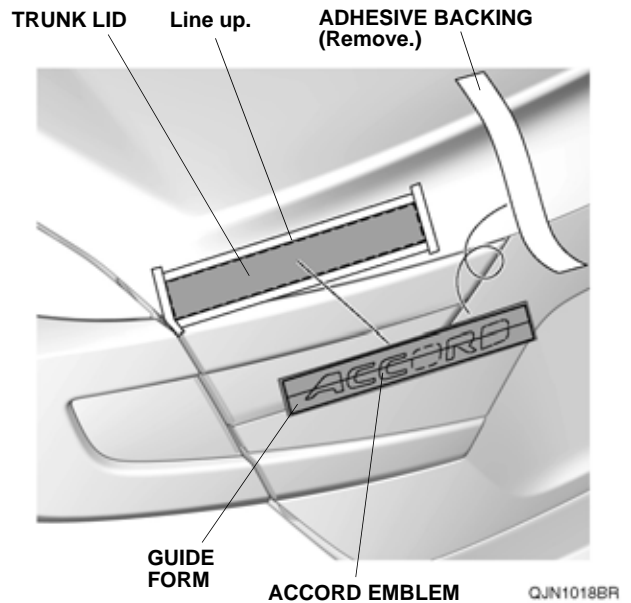

27. Remove the guide form and using the palm of your hand, firmly press the ACCORD emblem against the trunk lid.

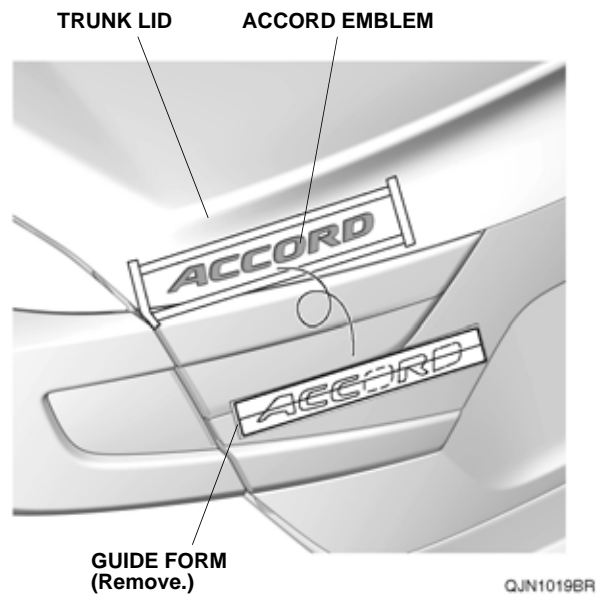


28. Remove the masking tape from the trunk lid.


If the vehicle is equipped with the rear 2.0T emblem, go to step 29; If the vehicle is equipped with the rear SPORT emblem, go to step 39; If the vehicle is equipped with the rear 2.0T SPORT emblem, go to step 49; if not, go to step 59.

With 2.0T emblem


29. Remove the position film from the 2.0T emblem, then remove the 2.0T emblem from the guide form.

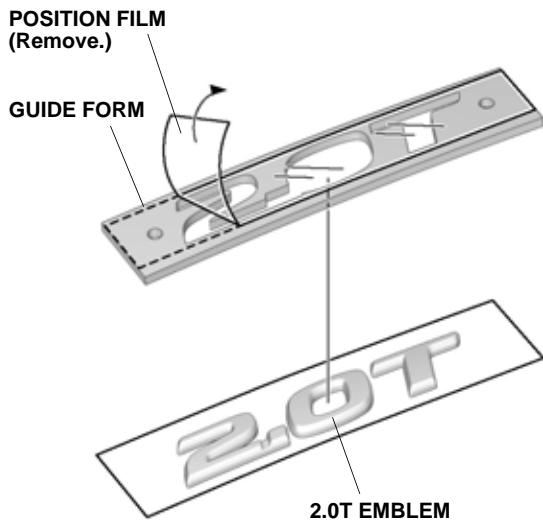


30. Install the guide form to the 2.0T emblem on the trunk lid.

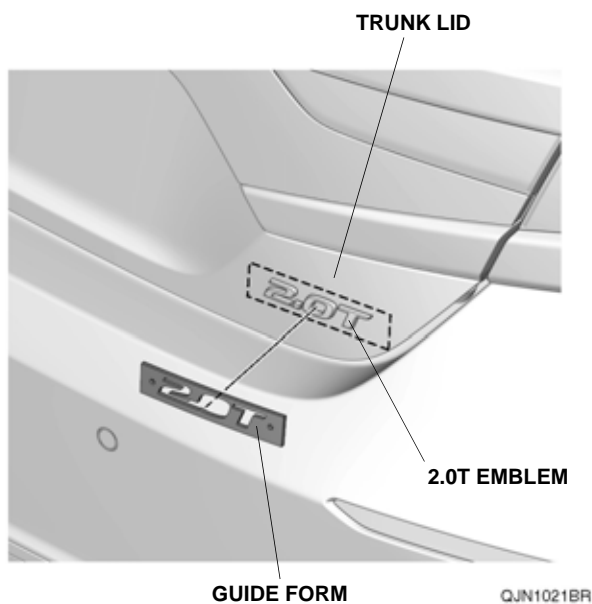

31. Attach masking tape along the guide form as shown.

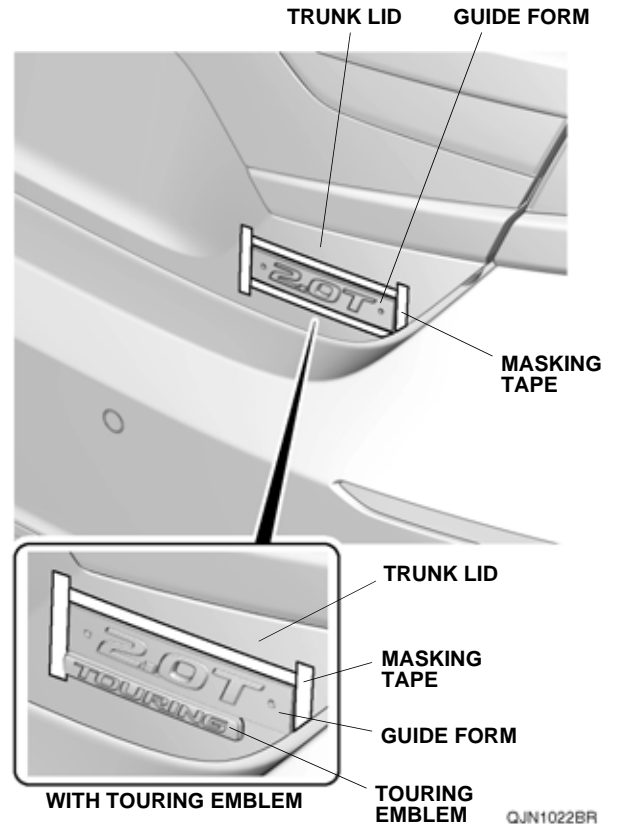


32. Remove the guide form from the trunk lid.

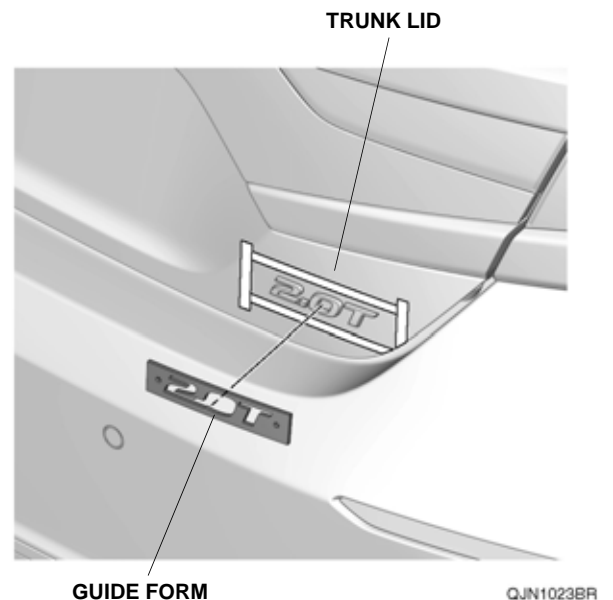


33. Using a piece of string, remove the 2.0T emblem by cutting along the outer edges as shown.
NOTE:


- Do not damage the trunk lid when removing the 2.0T emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the trunk lid.

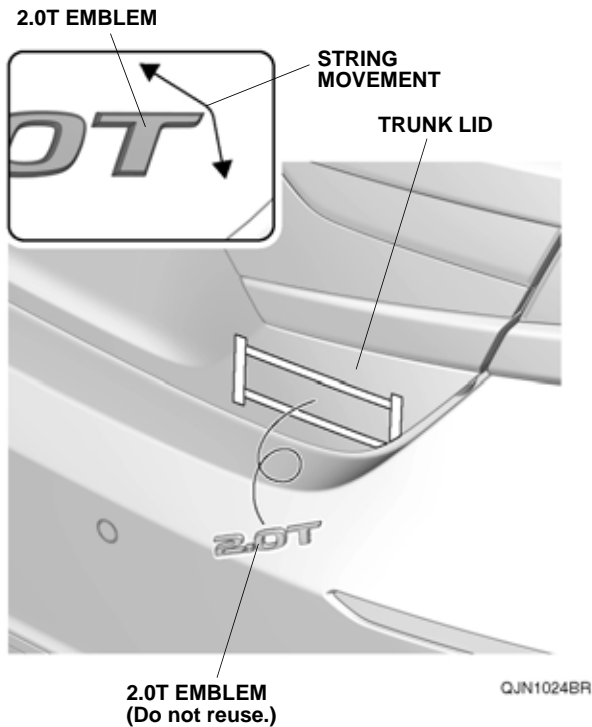


34. Install the 2.0T emblem in the guide form, and temporarily secure it with masking tape.

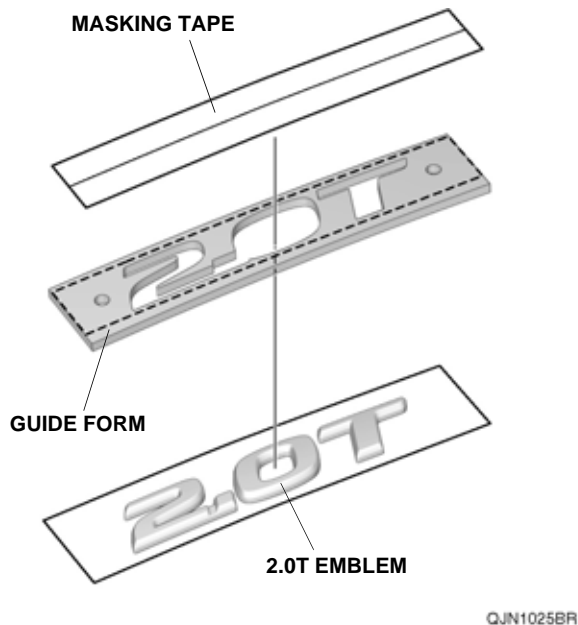


35. Using an alcohol wipe, thoroughly clean the trunk lid where the 2.0T emblem will attach.

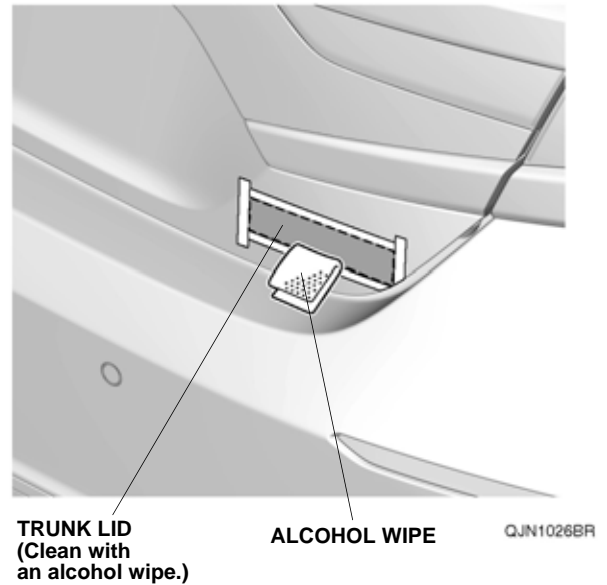

36. Remove the adhesive backing from the 2.0T emblem. Line up the guide form with masking tape, and attach the 2.0T emblem to the trunk lid.

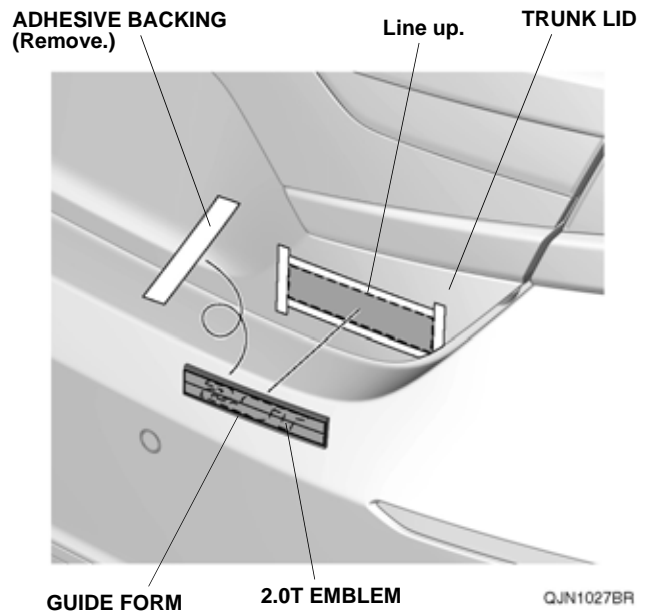


37. Remove the guide form and using the palm of your hand, firmly press the 2.0T emblem against the trunk lid.

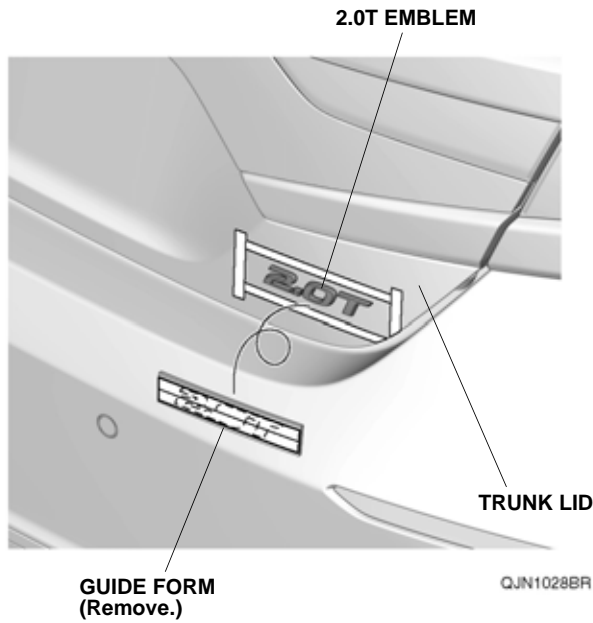


38. Remove the masking tape from the trunk lid. Go to step 59.

With SPORT emblem


39. Remove the position film from the SPORT emblem, then remove the SPORT emblem from the guide form.

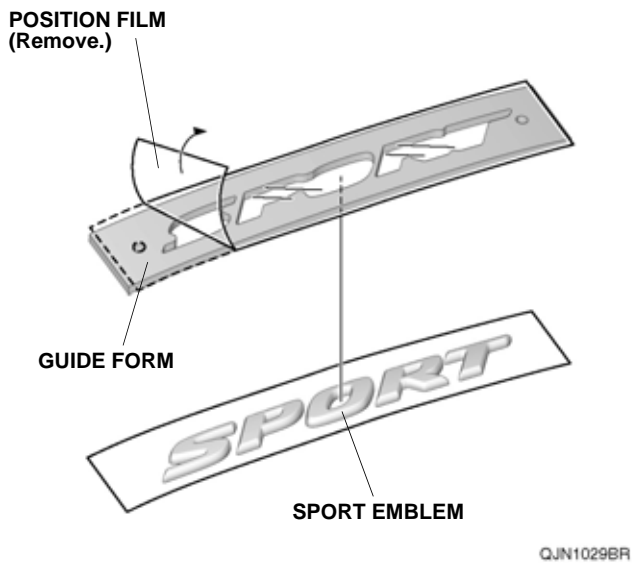


40. Install the guide form to the SPORT emblem on the trunk lid.

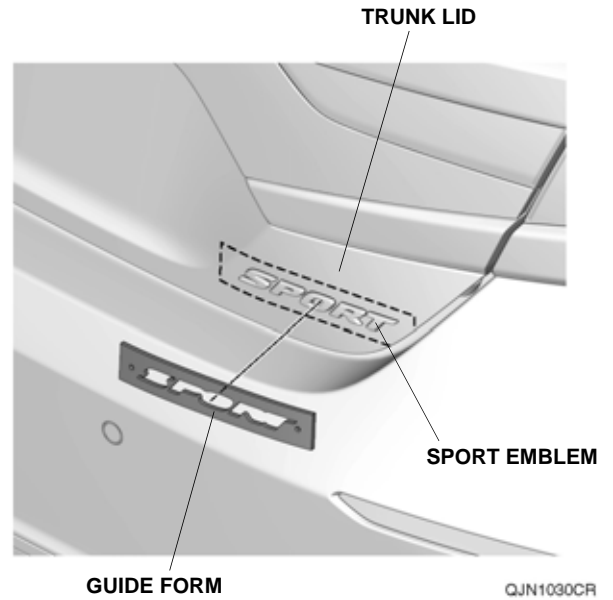

41. Attach masking tape along the guide form as shown.

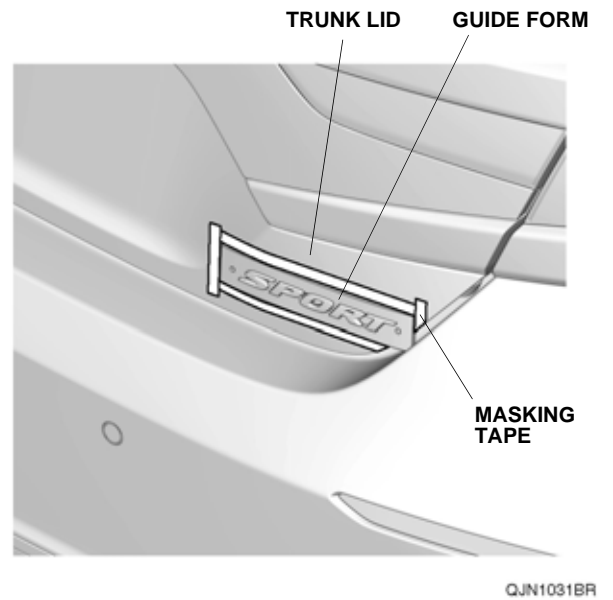


42. Remove the guide form from the trunk lid.

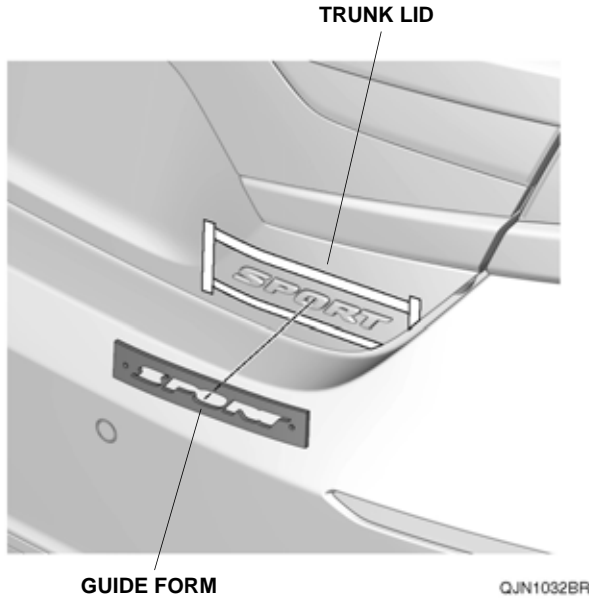


43. Using a piece of string, remove the SPORT emblem by cutting along the outer edges as shown.
NOTE:


- Do not damage the trunk lid when removing the SPORT emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the trunk lid.

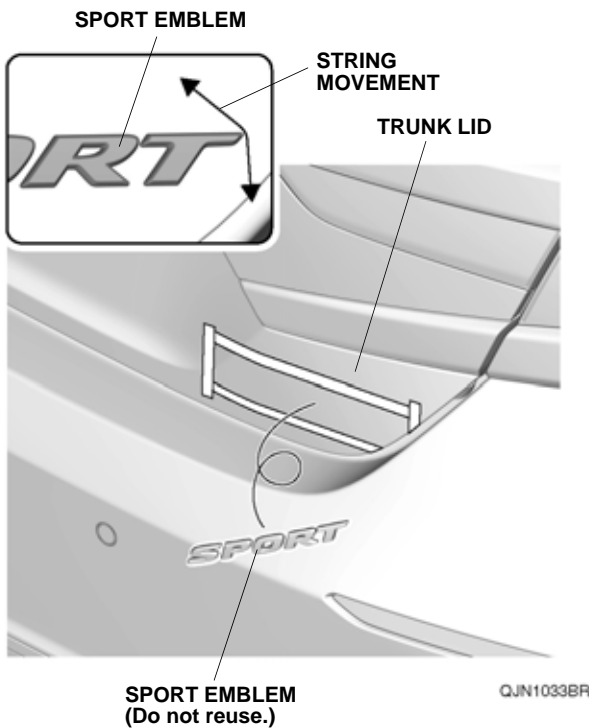


44. Install the SPORT emblem in the guide form, and temporarily secure it with masking tape.

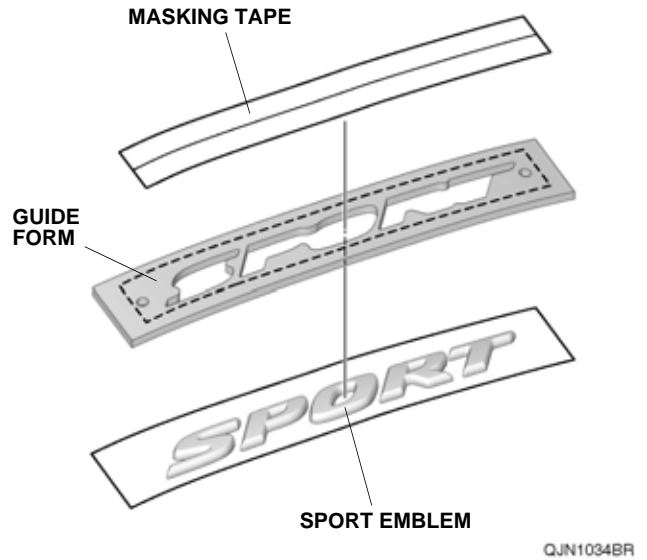


45. Using an alcohol wipe, thoroughly clean the trunk lid where the SPORT emblem will attach.

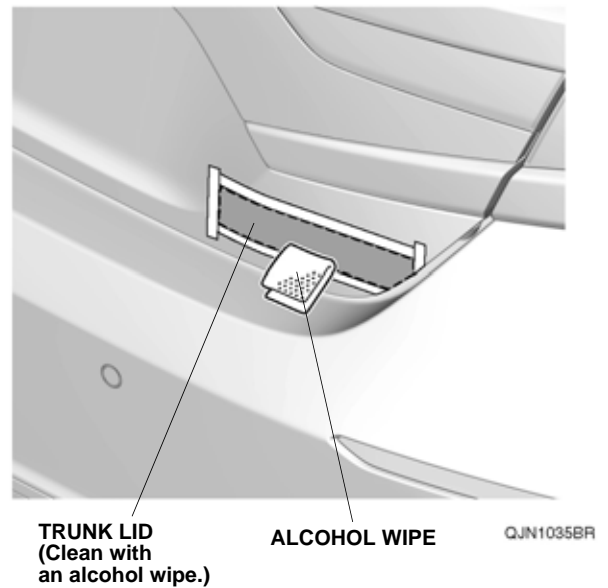

46. Remove the adhesive backing from the SPORT emblem. Line up the guide form with masking tape, and attach the SPORT emblem to the trunk lid.

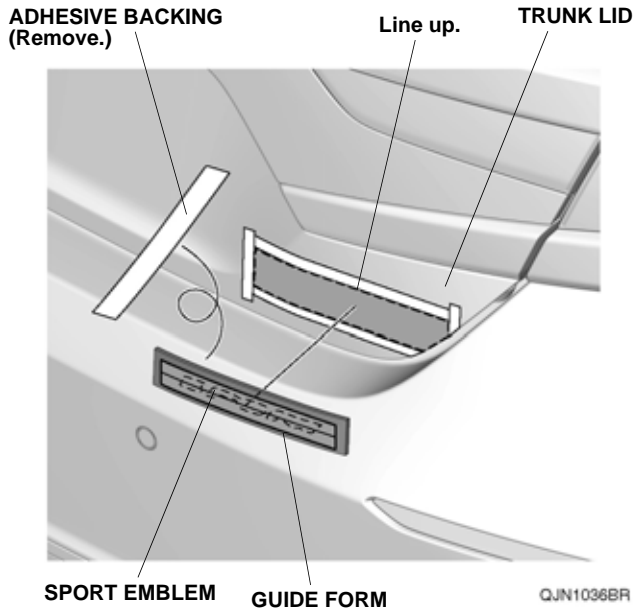


47. Remove the guide form and using the palm of your hand, firmly press the SPORT emblem against the trunk lid.

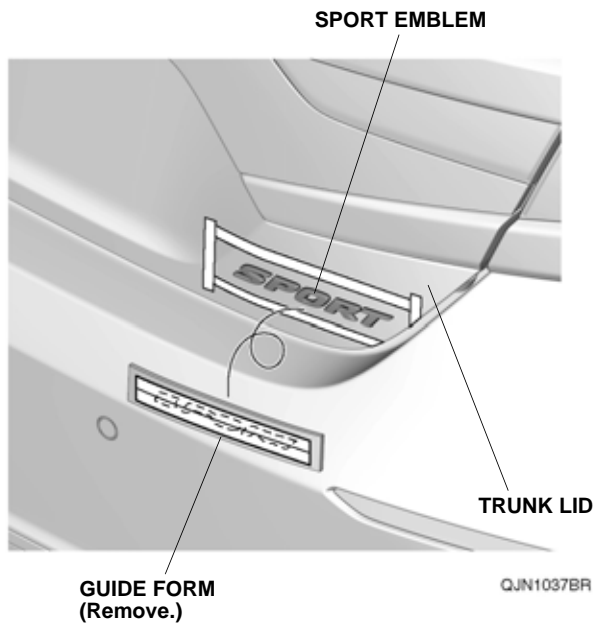


48. Remove the masking tape from the trunk lid. Go to step 59.

With 2.0T SPORT emblem


49. Remove the position film from the 2.0T SPORT emblem, then remove the 2.0T SPORT emblem from the guide form.

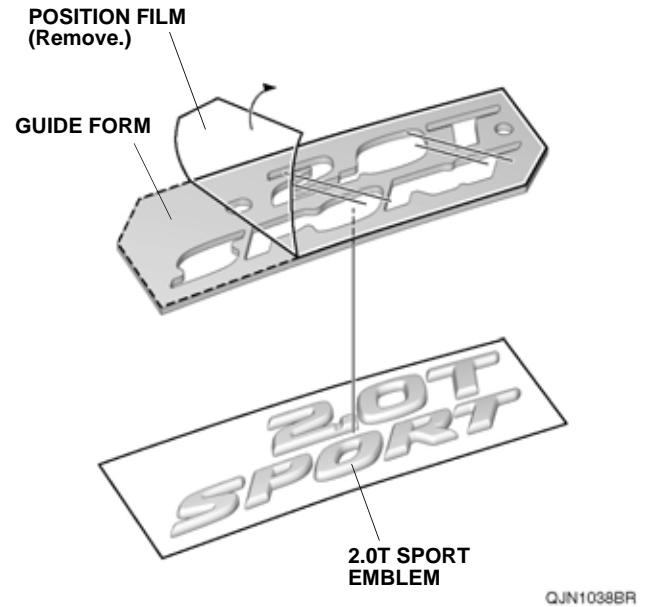

50. Install the guide form to the 2.0T SPORT emblem on the trunk lid.

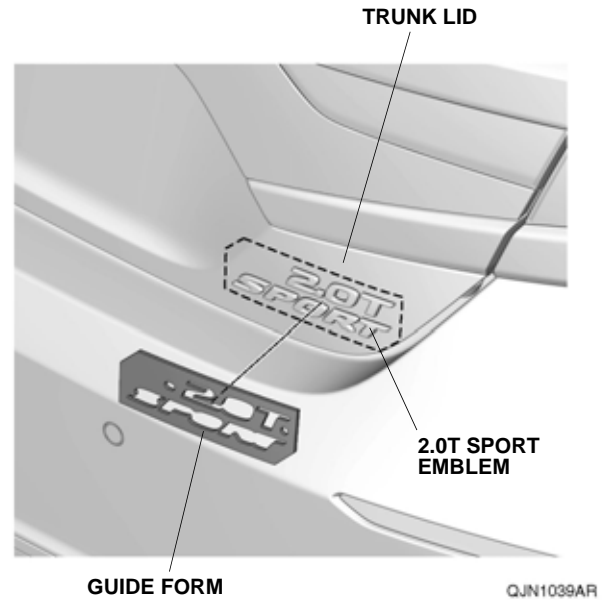


51. Attach masking tape along the guide form as shown.

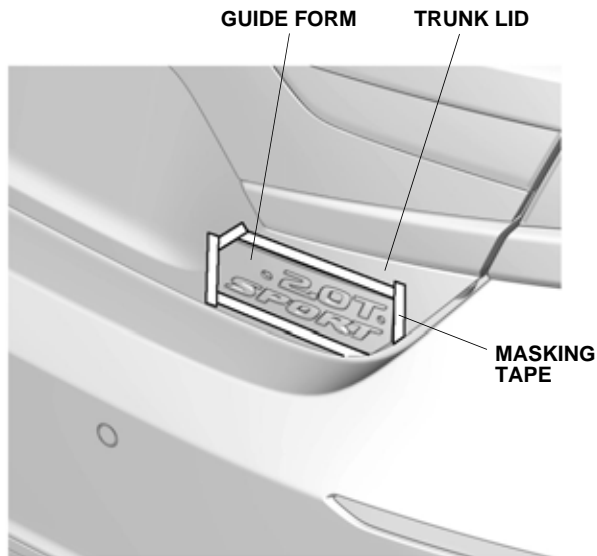

QJN1040AR

52. Remove the guide form from the trunk lid.

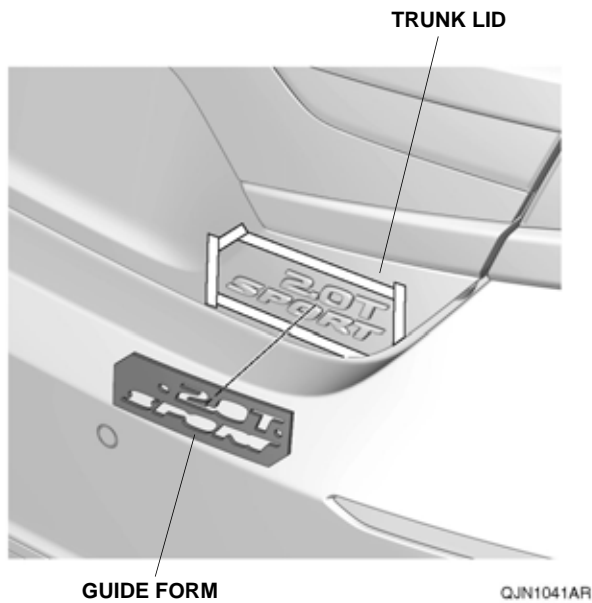


QJN1041AR

53. Using a piece of string, remove the 2.0T SPORT emblem by cutting along the outer edges as shown.
NOTE:

- Do not damage the trunk lid when removing the 2.0T SPORT emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the trunk lid.


2.0T SPORT EMBLEM

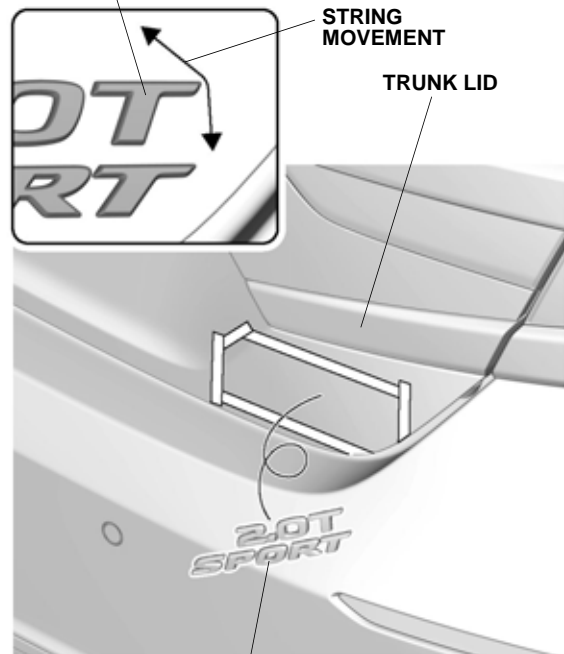


2.0T SPORT EMBLEM
(Do not reuse.)

QJN1042AR


54. Install the 2.0T SPORT emblem in the guide form, and temporarily secure it with masking tape.

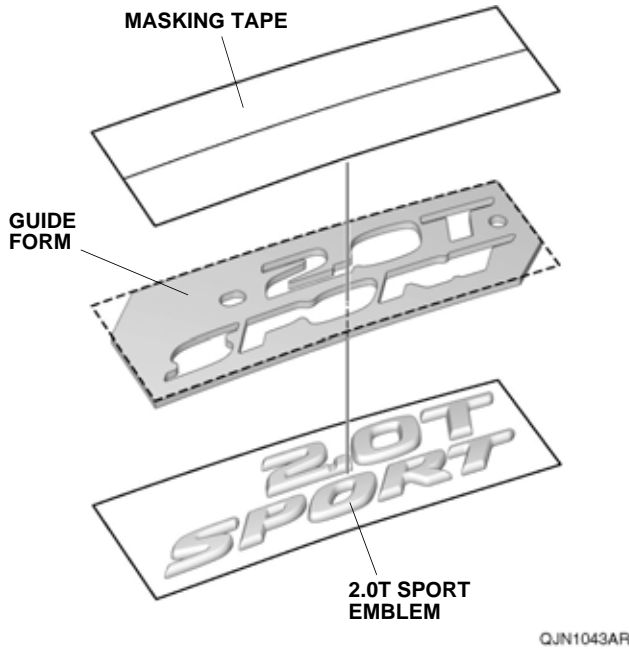


55. Using an alcohol wipe, thoroughly clean the trunk lid where the 2.0T SPORT emblem will attach.

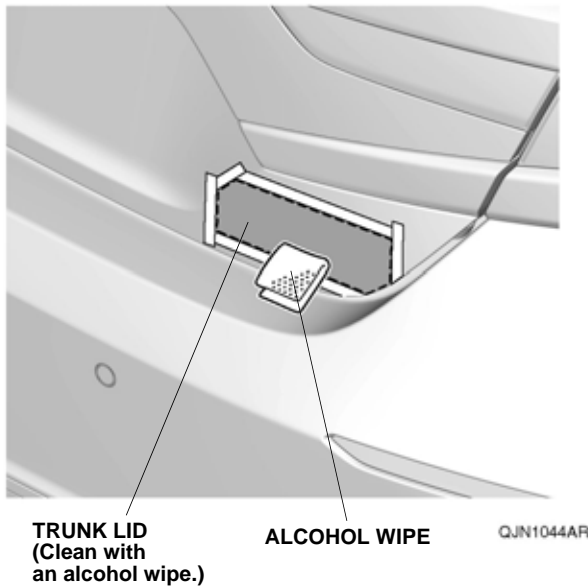

56. Remove the adhesive backing from the 2.0T SPORT emblem. Line up the guide form with masking tape, and attach the 2.0T SPORT emblem to the trunk lid.

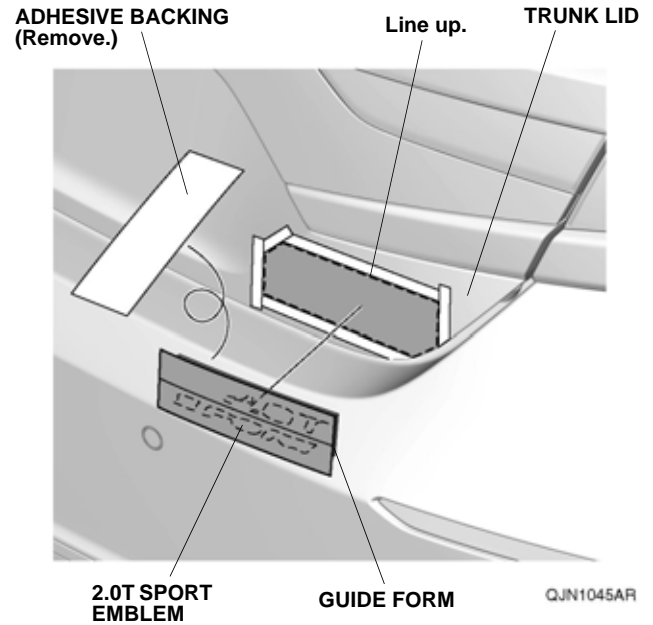

57. Remove the guide form and using the palm of your hand, firmly press the 2.0T SPORT emblem against the trunk lid.

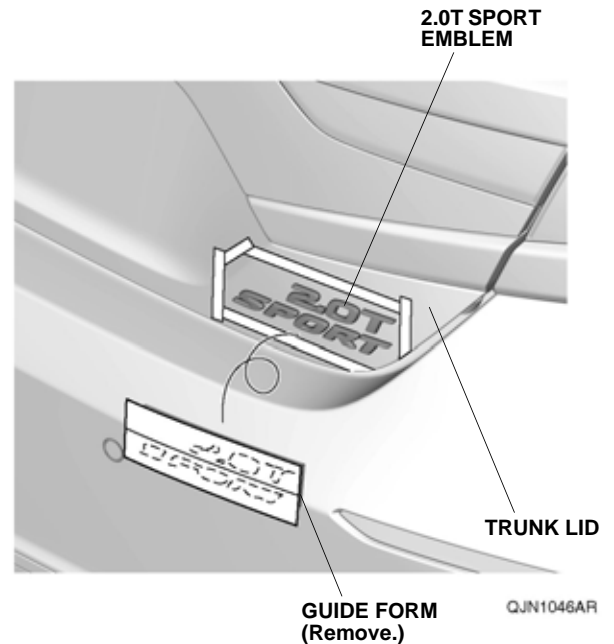

58. Remove the masking tape from the trunk lid.

59. Check that all wire harnesses are routed properly and all connectors are plugged in.
60. Install all removed parts.
61. Connect the negative cable to the battery.
62. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
63. Set the clock on vehicles without navigation.
64. If necessary, restore the systems back to normal operation as described in the service information.