



HONDA INSTALLATION INSTRUCTIONS

Accessory
FRONT GRILLE

Application
2021 ACCORD
2021 ACCORD HYBRID

Publications No.
VERSION 1
Issue Date
SEP 2020

PARTS LIST

Front Grille Kits
P/N 08F21-TVA-100D
P/N 08F21-TVA-100E

Front grille trim



Left front grille extension molding



Right front grille extension molding




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
10 mm Open end wrench
Masking tape
Blanket

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Front Grille on the Vehicle

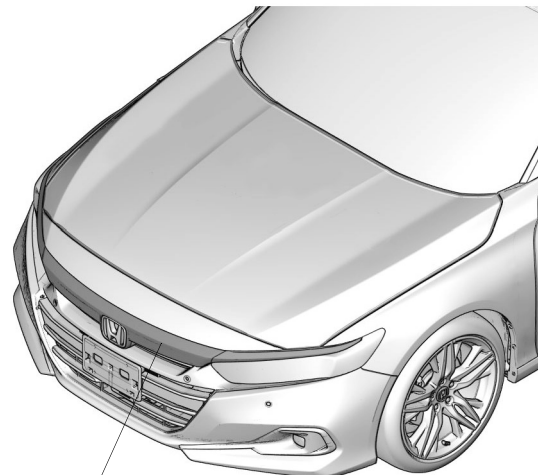

FRONT GRILLE


QK13101AG

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery, then wait at least 3 minutes before starting work.


2. Remove the left front grille cover and right front grille cover.

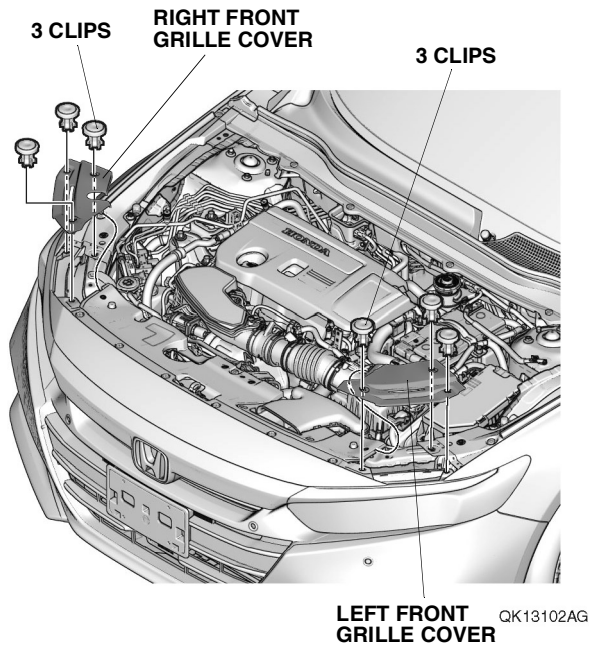


3. Remove the front bumper:
 - Apply masking tape as shown.

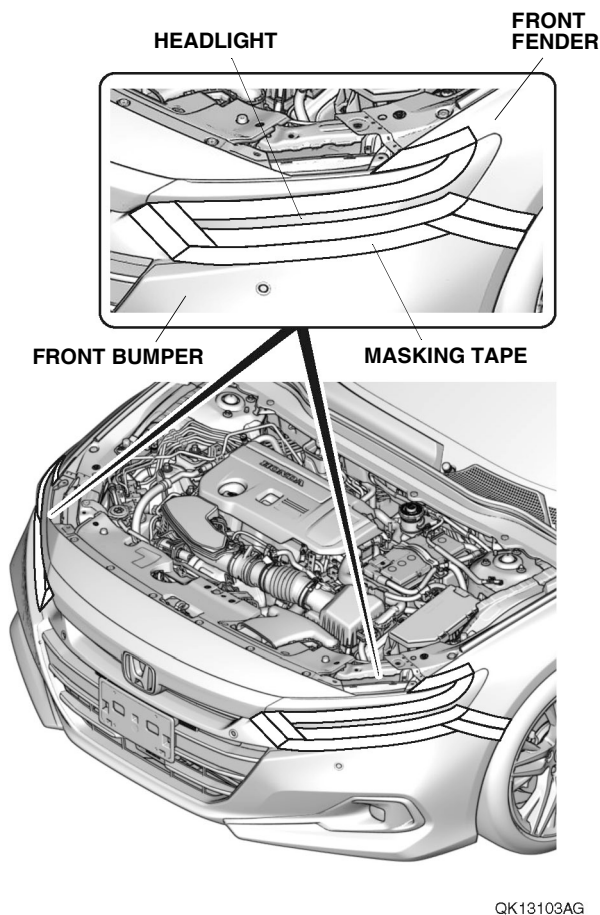


- Remove the six self-tapping screws and 17 clips as shown.

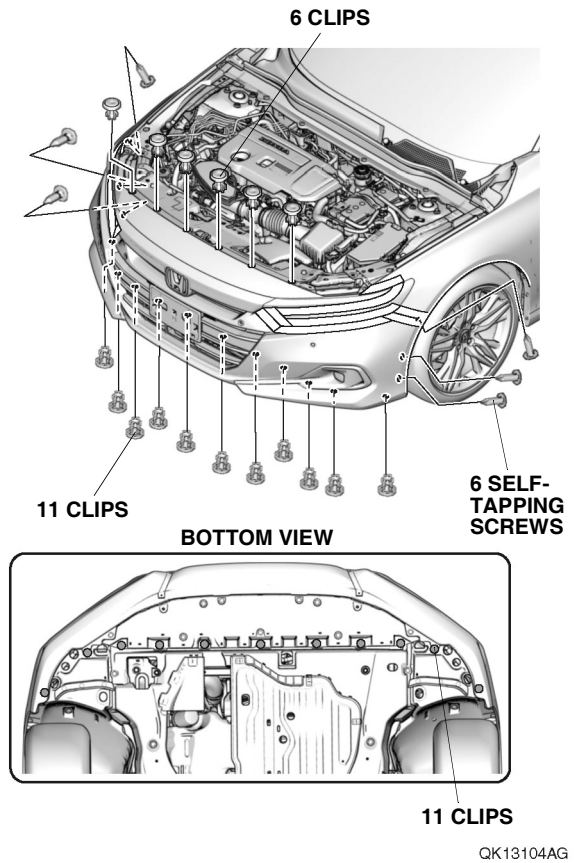


- With the help of an assistant, release the seven retaining tabs on each side.

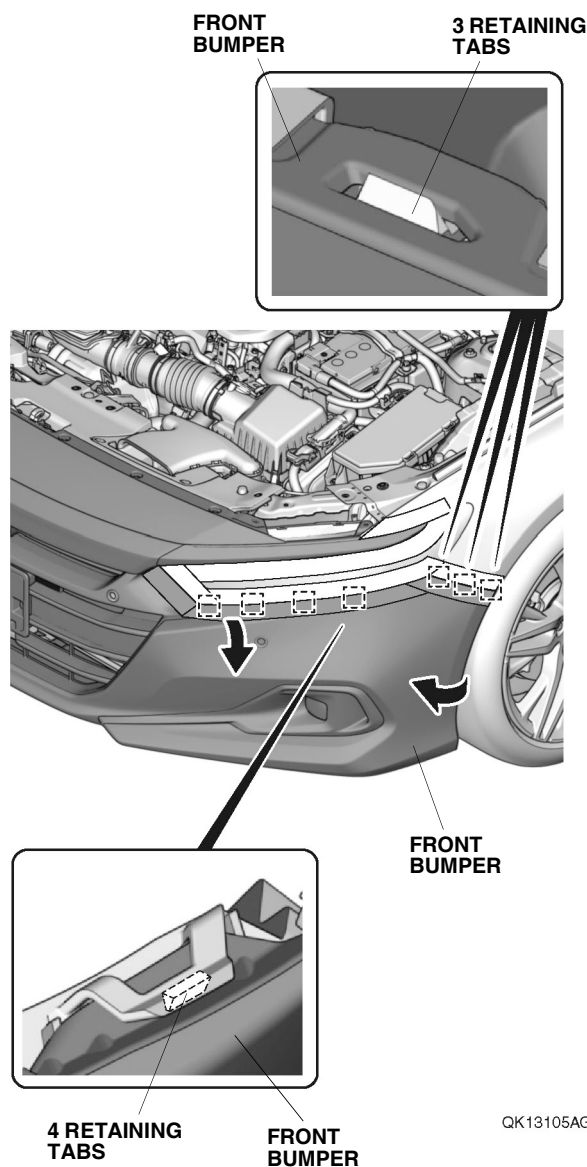


- With the help of an assistant, remove the front bumper, and unplug the vehicle connectors (if equipped).
- Place the front bumper on a blanket.

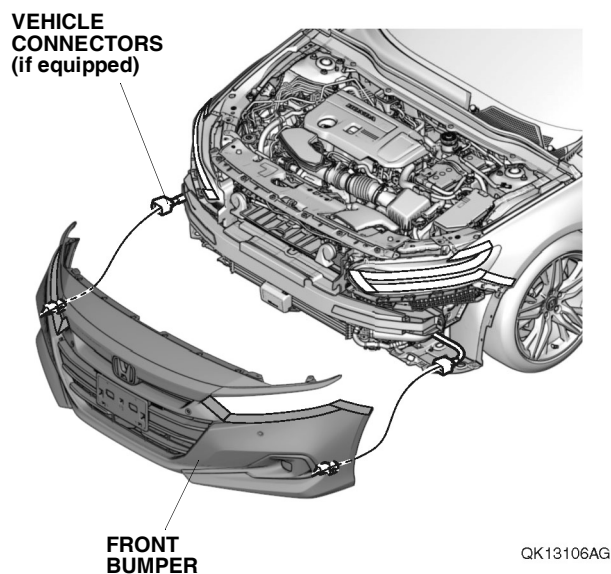


4. Remove the front grille.

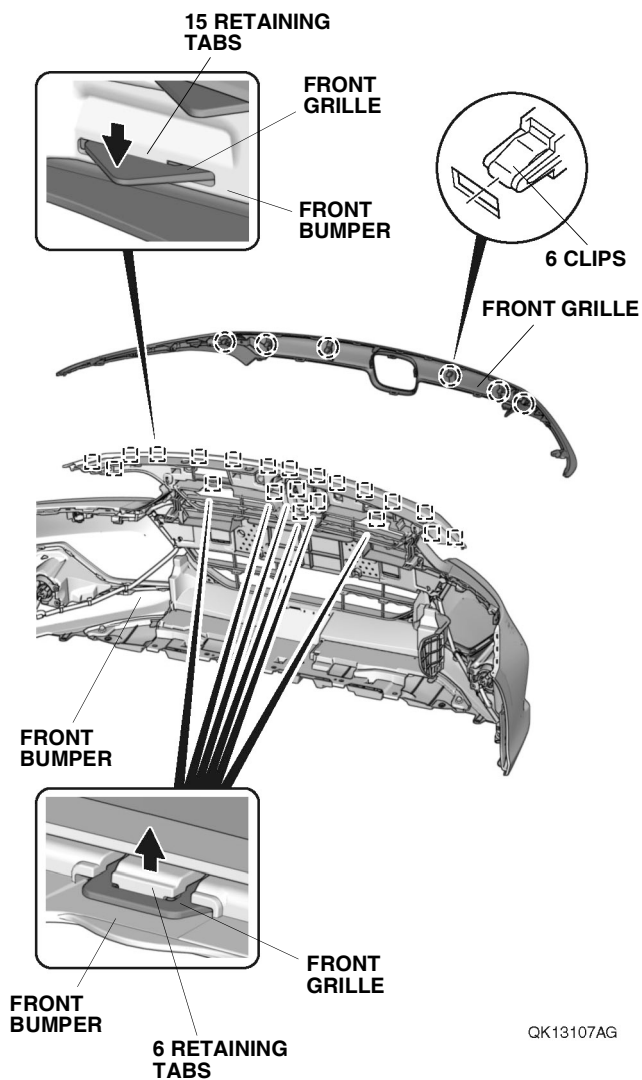


5. Remove the left front grille extension base and right front grille extension base.

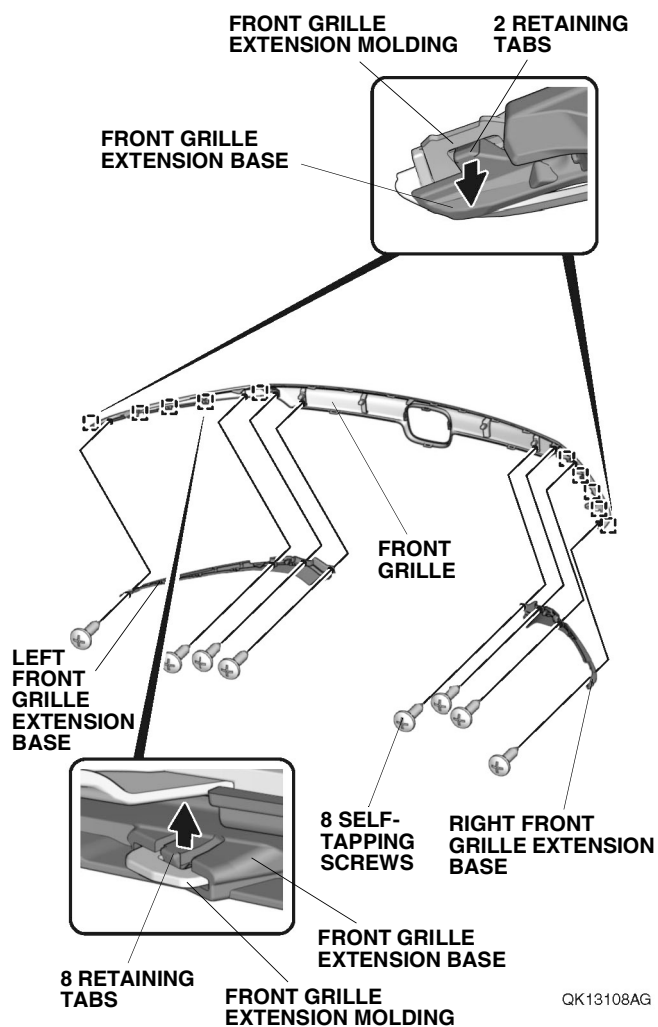

6. Remove the four clips.

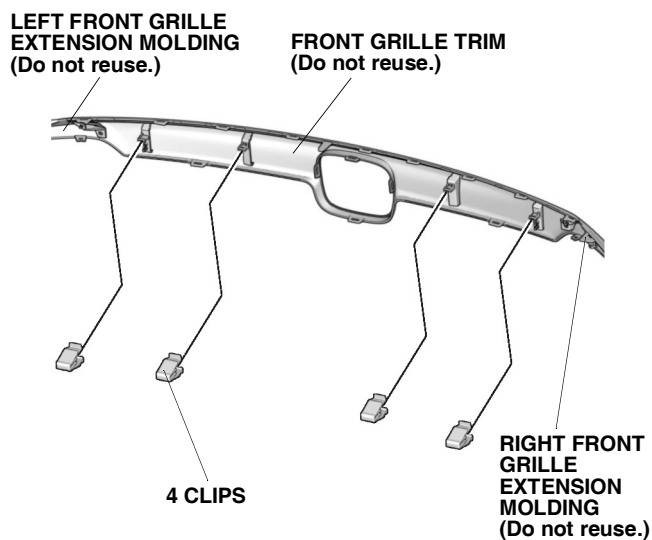


7. Install the four clips removed in step 6 to the front grille trim.

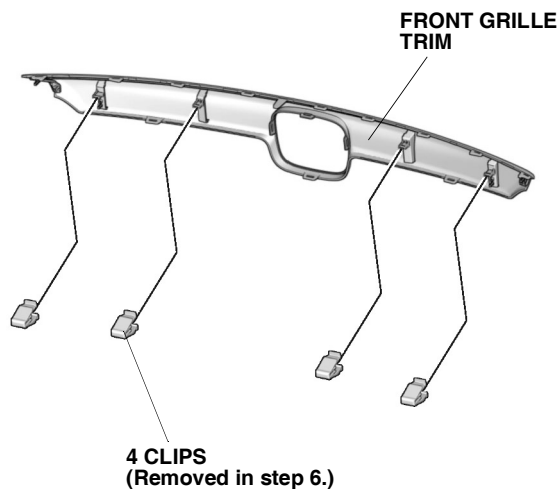


QK13110AG

8. Install the left front grille extension molding to the left front grille extension base with five retaining tabs and two self-tapping screws. Repeat same procedure to install the right front grille extension molding to the right front grille extension base.

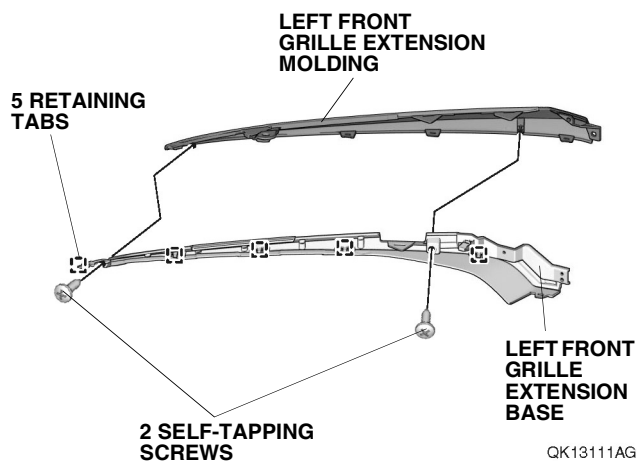


QK13111AG

9. Install the left front grille extension to the front grille trim with two self-tapping screws. Repeat same procedure to install the right front grille extension to the front grille trim.

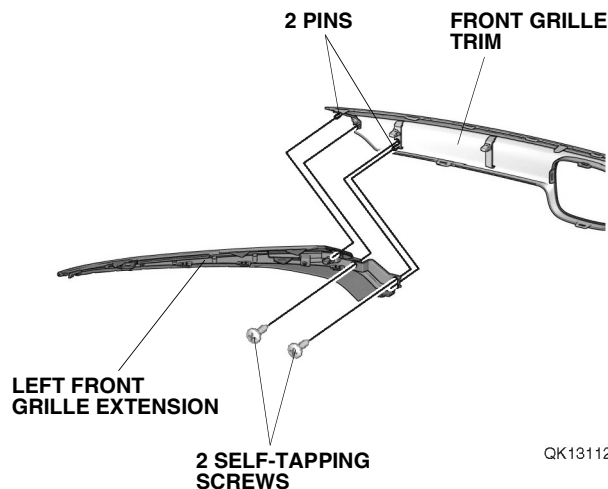


QK13112AG

10. Install the front grille to the front bumper with six clips and 21 retaining tabs.

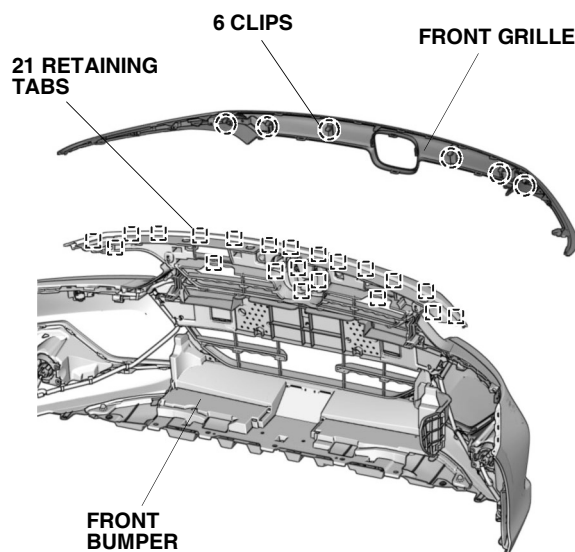

QK13113AG

11. Check that all wire harnesses are routed properly and all connectors are plugged in.
12. Install all removed parts.
13. Check that the left front grille extension and right front grille extension are properly secured to the headlights. If not secured, press the edges of the left front grille extension and right front grille extension to fit the pins of the headlights as shown.

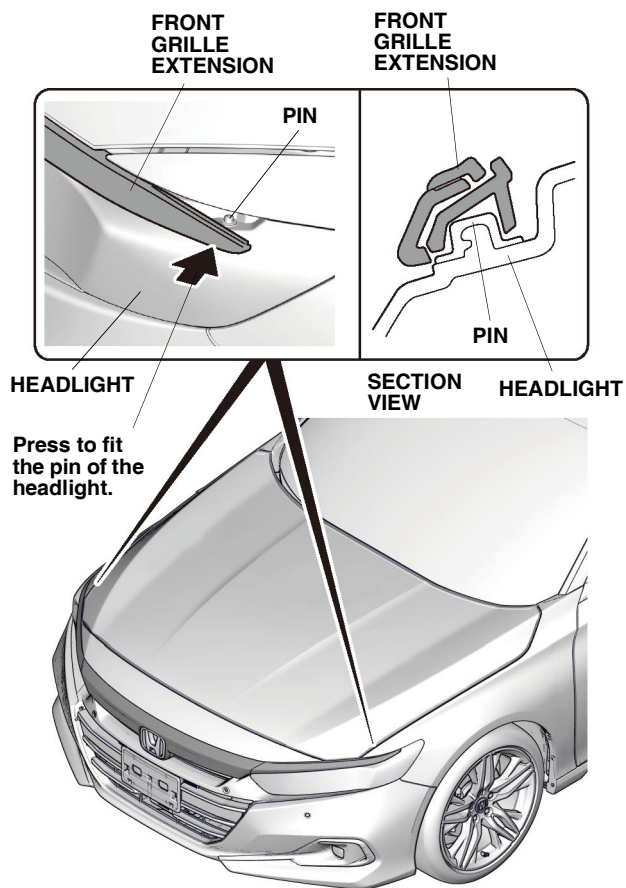

QK13101BG

14. Connect the negative cable to the battery.
15. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
16. Set the clock on vehicles without navigation.
17. If necessary, restore the systems back to normal operation as described in the service information.