INSTALLATION INSTRUCTIONS

Accessory

BLACK EMBLEMS

Application

2022 ACCORD 2022 ACCORD HYBRID Publications No. VERSION 1

Issue Date
OCT 2021

PARTS LIST

ACCORD Emblem + H-mark Emblem Kit P/N 08F20-TVA-100

Front H emblem



Rear H emblem



ACCORD emblem



4 Push nuts



3 Alcohol wipes



2.0T Emblem Kit P/N 08F20-TVA-100B

2.0T emblem



Alcohol wipe



SPORT Emblem Kit P/N 08F20-TVA-100C

SPORT emblem



Alcohol wipe



2.0T SPORT Emblem Kit P/N 08F20-TVA-100D

2.0T SPORT emblem



Alcohol wipe



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

10 mm Open end wrench

6 mm, 8 mm, and 10 mm Sockets

Ratchet

Masking tape

Blanket

String


Shop towel


Diagonal cutters

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Push Pin Pliers (T/N 07AAC-001A101)

Illustration of the Black Emblems Installed on the Vehicle

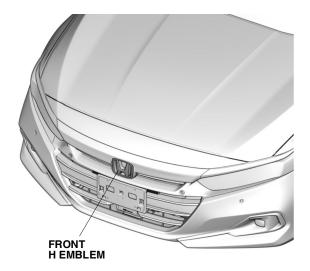

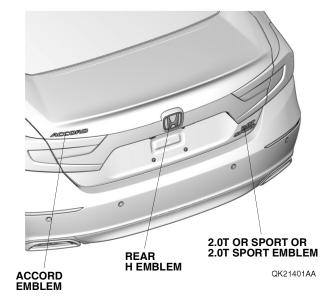


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- Be careful not to damage the body paint finish.
- This kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure the your customer is aware of
- 1. Open the trunk lid.
- 2. Disconnect the negative cable from the battery, then wait at least 3 minutes before starting work.
- 3. Remove the left front grille cover and right front grille cover.

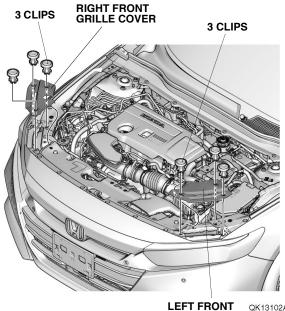


QK13102AG GRILLE COVER

- Remove the front bumper:
 - Apply masking tape as shown.

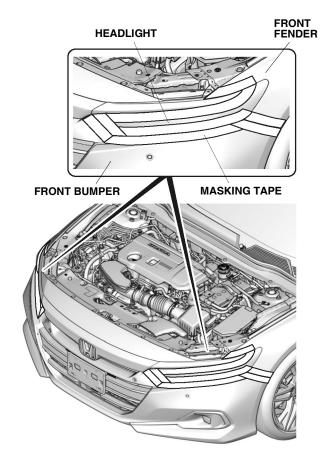


OK13103AG


 Remove the six self-tapping screws and 17 clips as shown.

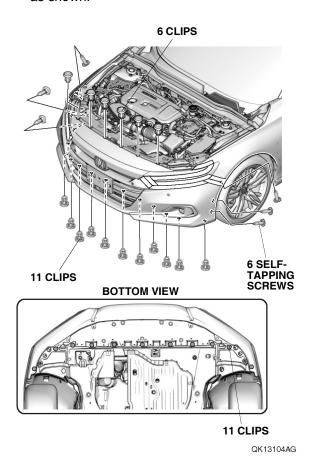


• With the help of an assistant, release the seven retaining tabs on each side.

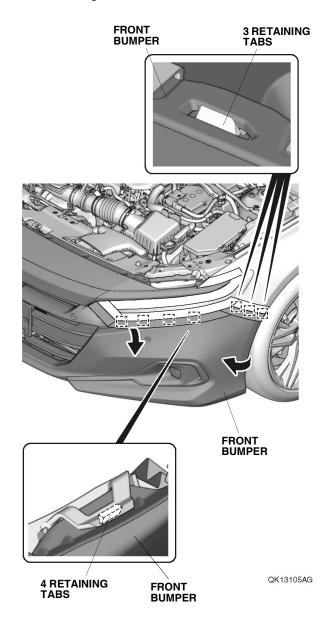

- With the help of an assistant, remove the front bumper, and unplug the vehicle connectors (if equipped).
- Place the front bumper on a blanket.

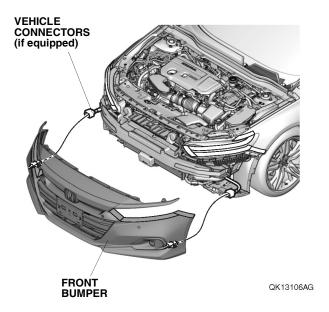


5. Remove the trunk lid trim panel.

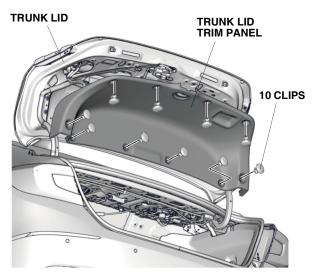


QG31602AN

6. To prevent the self-tapping screw from falling, carefully insert a shop towel as shown.

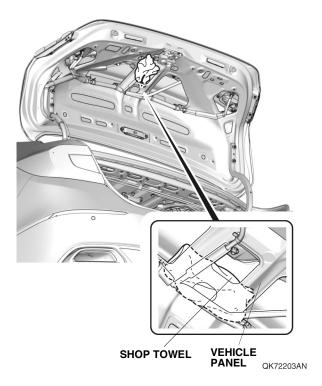


7. Remove the bolts and self-tapping screw.

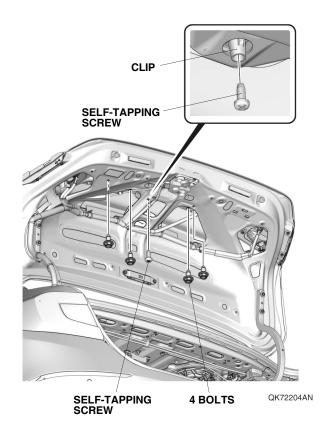


8. Remove the shop towel.

9. Release the clips, unplug the vehicle connectors, and remove the rear license plate trim.

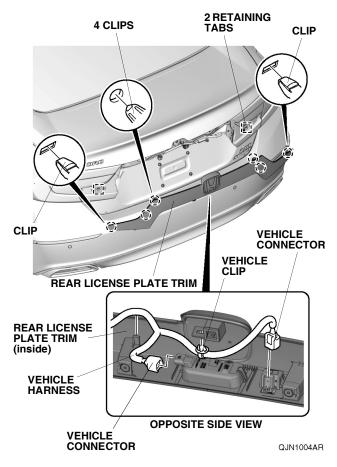


10. Remove the clip.

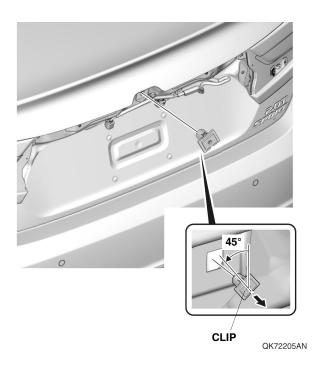


Installing the Black Emblems

11. Remove the front H emblem from the front grille.

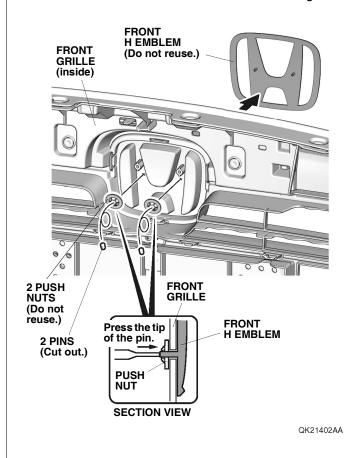


12. Using an alcohol wipe, thoroughly clean the front grille where the front H emblem will attach.

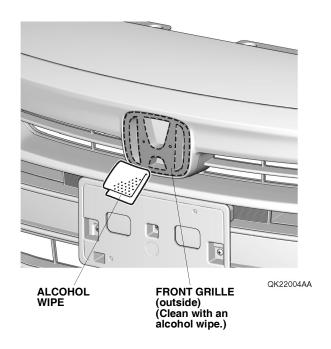


13. Remove the adhesive backings from the front H emblem. Install the front H emblem to the front grille as shown.

NOTE: Check the orientation of the push nuts.

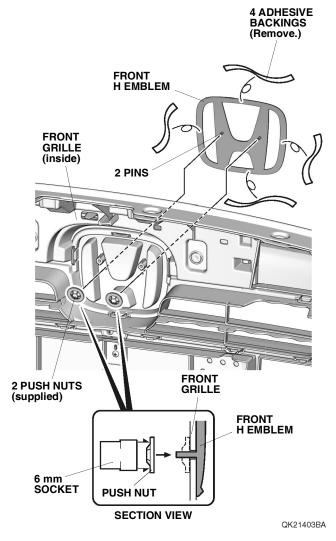


14. Using the palm of your hand, firmly press the front H emblem against the front grille for 30 seconds.

15. Remove the rear H emblem from the rear license plate trim.

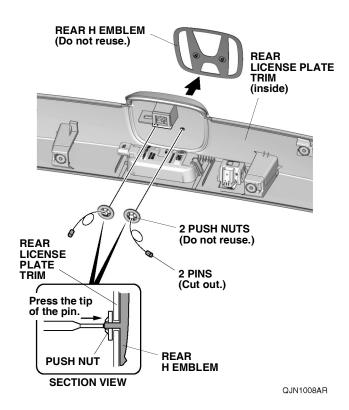


 Using an alcohol wipe, thoroughly clean the rear license plate trim where the rear H emblem will attach.

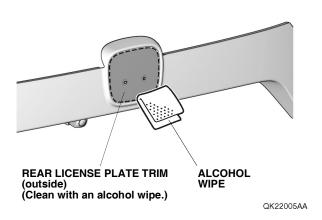

17. Install the clip removed in step 10 to the rear license plate trim with one self-tapping screw removed in step 7.


NOTE: Check the orientation of the clip.

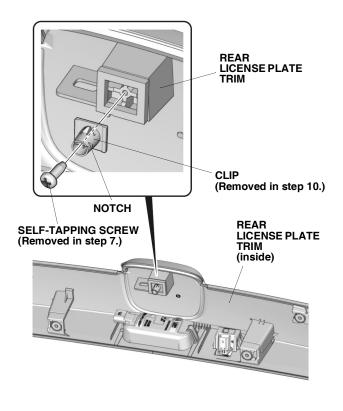

QK72206AN


18. Remove the four adhesive backings from the rear H emblem. Install the rear H emblem to the rear license plate trim as shown.

NOTE: Check the orientation of the push nut.

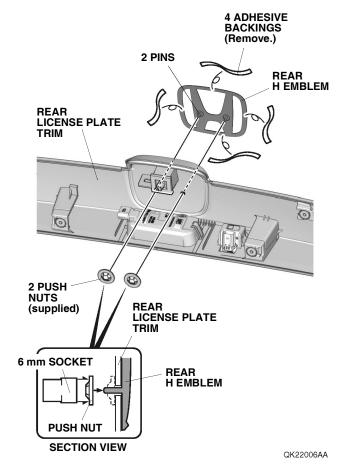

 Using the palm of your hand, firmly press the rear H emblem against the rear license plate trim for 30 seconds.


20. Remove the position film from the ACCORD emblem, then remove the ACCORD emblem from the guide form.

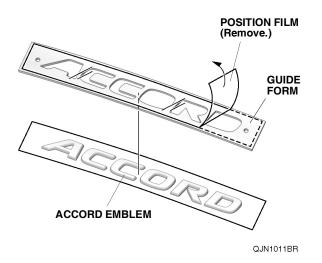

21. Install the guide form to the ACCORD emblem on the trunk lid.



22. Attach masking tape along the guide form as shown.

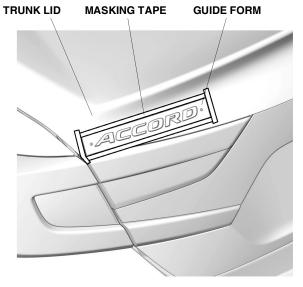


QJN1013BR


23. Remove the guide form the trunk lid.



- 24. Using a piece of string, remove the ACCORD emblem by cutting along the outer edges as shown. NOTE:
 - Do not damage the trunk lid when removing the ACCORD emblem with the string.
 - Make sure to thoroughly remove the adhesive tape from the trunk lid.

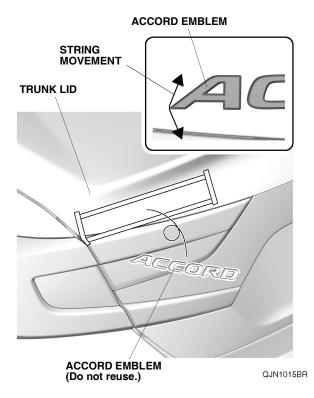


25. Install the ACCORD emblem in the guide form, and temporarily secure it with masking tape.

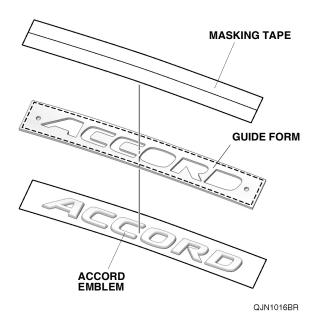

26. Using an alcohol wipe, thoroughly clean the trunk lid where the ACCORD emblem will attach.



27. Remove the adhesive backing from the ACCORD emblem. Line up the guide form with the masking tape, and attach the ACCORD emblem to the trunk lid.

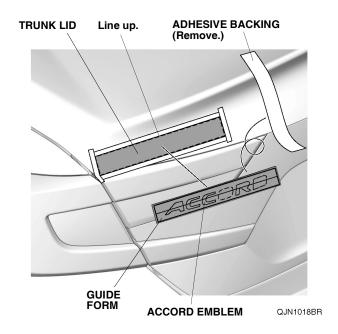

28. Remove the guide form and using the palm of your hand, firmly press the ACCORD emblem against the trunk lid for 30 seconds.




29. Remove the masking tape from the trunk lid.

If the vehicle is equipped with the 2.0T emblem, continue with step 30; If the vehicle is equipped with the SPORT emblem, go to step 40; If the vehicle is equipped with the 2.0T SPORT emblem, go to step 51; otherwise, go to step 61.

With 2.0T emblem


30. Remove the position film from the 2.0T emblem, then remove the 2.0T emblem from the guide form.

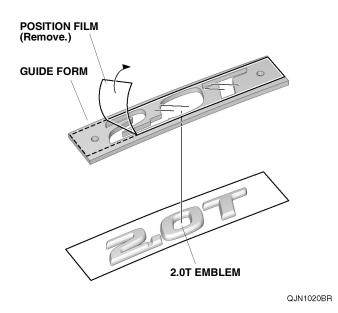

31. Install the guide form to the 2.0T emblem on the trunk lid.




32. Attach masking tape along the guide form as shown. If the vehicle is equipped with the TOURING emblem, attach masking tape as shown.

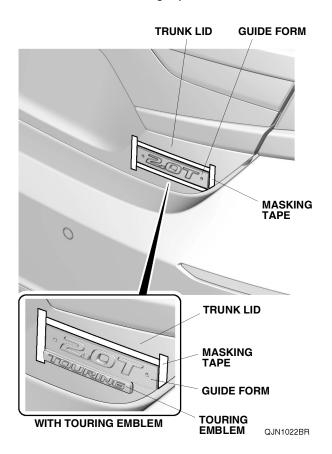


33. Remove the guide form from the trunk lid.



- 34. Using a piece of string, remove the 2.0T emblem by cutting along the outer edges as shown.
 NOTE:
 - Do not damage the trunk lid when removing the 2.0T emblem with the string.
 - Make sure to thoroughly remove the adhesive tape from the trunk lid.

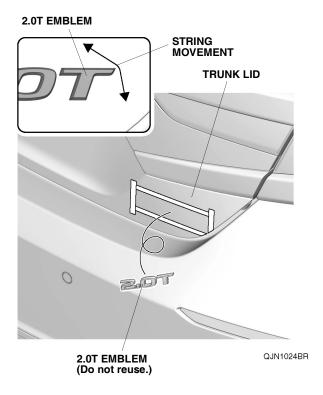


35. Install the 2.0T emblem in the guide form, and temporarily secure it with masking tape.

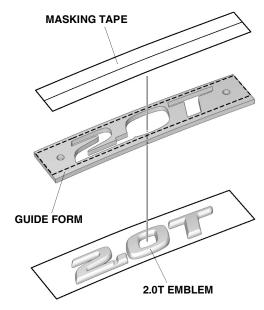


QJN1025BR


 Using an alcohol wipe, thoroughly clean the trunk lid where the 2.0T emblem will attach.

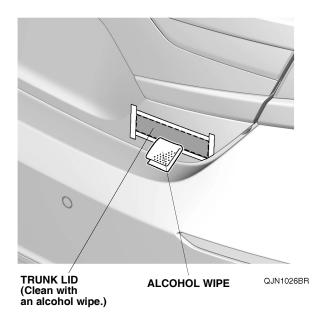

37. Remove the adhesive backing from the 2.0T emblem. Line up the guide form with the masking tape, and attach the 2.0T emblem to the trunk lid.

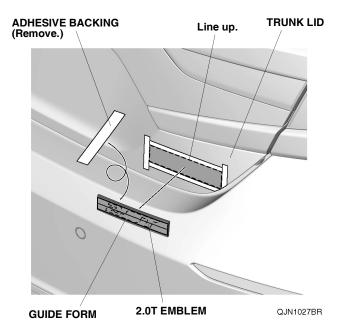


38. Remove the guide form and using the palm of your hand, firmly press the 2.0T emblem against the trunk lid for 30 seconds.

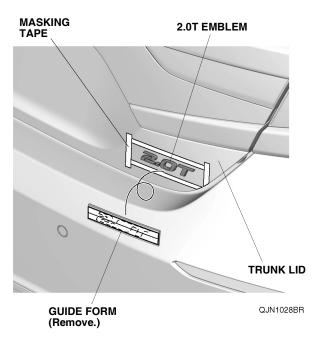

39. Remove the masking tape from the trunk lid. Go to step 61.

With SPORT emblem


 Remove the position film from the SPORT emblem, then remove the SPORT emblem from the guide form

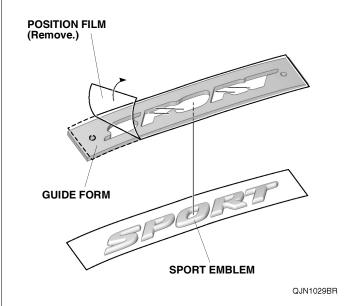


If the vehicle is equipped with the SPECIAL EDITION emblem, continue with step 41; otherwise, go to step 42.

With SPECIAL EDITION emblem


41. Cut off the guide form as shown.

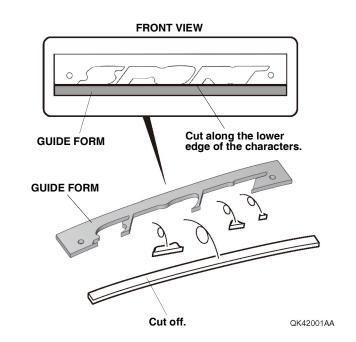


 Install the guide form to the SPORT emblem on the trunk lid.

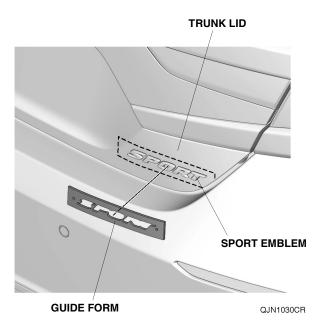

43. Attach masking tape along the guide form as shown. If the vehicle is equipped with the SPECIAL EDITION emblem, attach masking tape as shown.

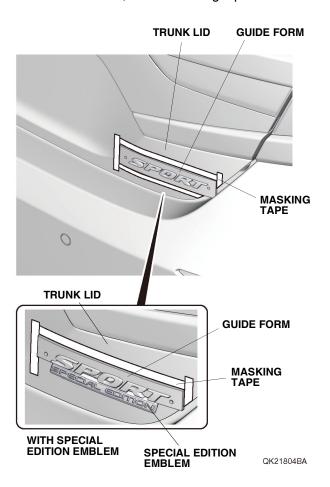


44. Remove the guide form from the trunk lid.

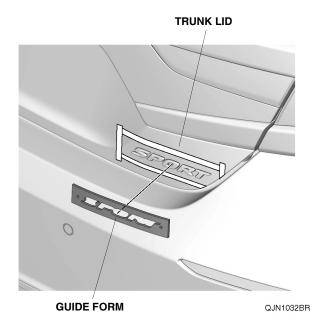


- 45. Using a piece of string, remove the SPORT emblem by cutting along the outer edges as shown.

 NOTE:
 - Do not damage the trunk lid when removing the SPORT emblem with the string.
 - Make sure to thoroughly remove the adhesive tape from the trunk lid.

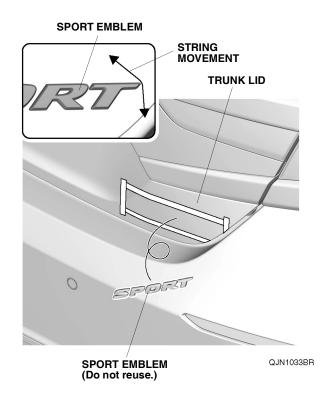


46. Install the SPORT emblem in the guide form, and temporarily secure it with masking tape.

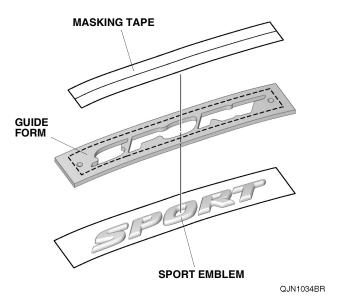


47. Using an alcohol wipe, thoroughly clean the trunk lid where the SPORT emblem will attach.



48. Remove the adhesive backing from the SPORT emblem. Line up the guide form with the masking tape, and attach the SPORT emblem to the trunk lid.

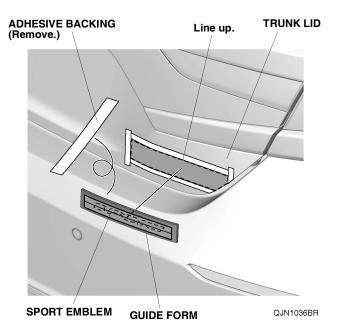


49. Remove the guide form and using the palm of your hand, firmly press the SPORT emblem against the trunk lid for 30 seconds.

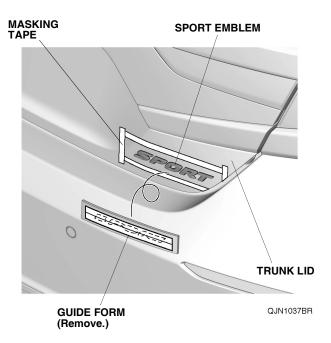


50. Remove the masking tape from the trunk lid. Go to step 61.

With 2.0T SPORT emblem

51. Remove the position film from the 2.0T SPORT emblem, then remove the 2.0T SPORT emblem from the guide form.

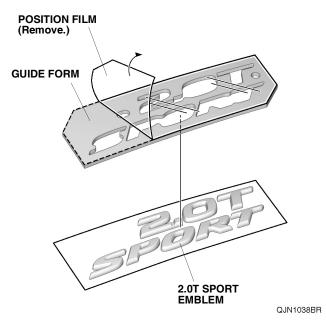


52. Install the guide form to the 2.0T SPORT emblem on the trunk lid.

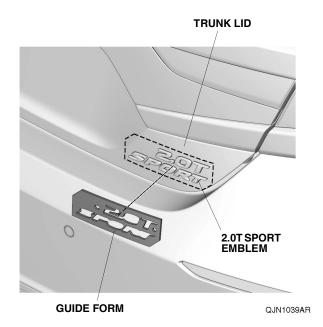

53. Attach masking tape along the guide form as shown.




54. Remove the guide form from the trunk lid.

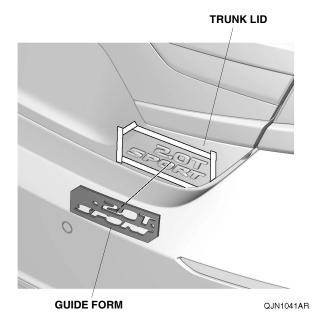


- 55. Using a piece of string, remove the 2.0T SPORT emblem by cutting along the outer edges as shown. NOTE:
 - Do not damage the trunk lid when removing the 2.0T SPORT emblem with the string.
 - Make sure to thoroughly remove the adhesive tape from the trunk lid.


2.0T SPORT EMBLEM

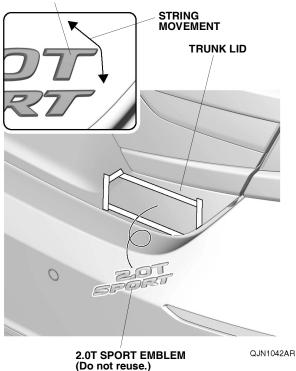


56. Install the 2.0T SPORT emblem in the guide form, and temporarily secure it with masking tape.

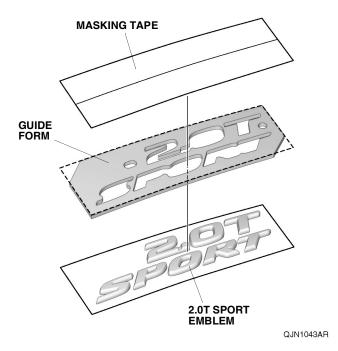


57. Using an alcohol wipe, thoroughly clean the trunk lid where the 2.0T SPORT emblem will attach.

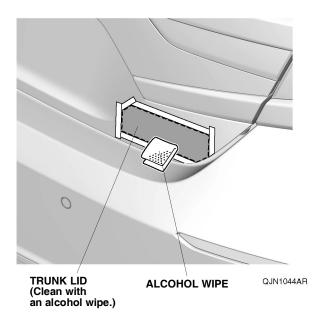

58. Remove the adhesive backing from the 2.0T SPORT emblem. Line up the guide form with the masking tape, and attach the 2.0T SPORT emblem to the trunk lid.

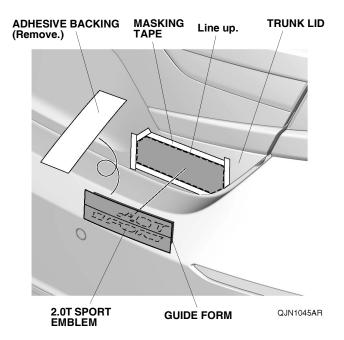


59. Remove the guide form and using the palm of your hand, firmly press the 2.0T SPORT emblem against the trunk lid for 30 seconds.

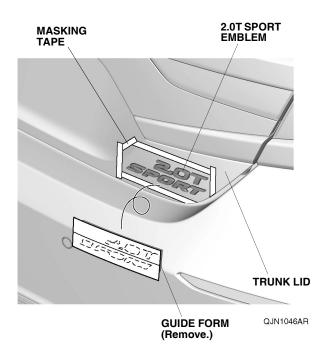

60. Remove the masking tape from the trunk lid.

- 61. Check that all wire harnesses are routed properly and all connectors are plugged in.
- 62. Install all removed parts.
- 63. Check that the left front grille extension and right front grille extension are properly secured to the headlights. If not secured, press the edges of the left front grille extension and right front grille extension to fit the pins of the headlights as shown.

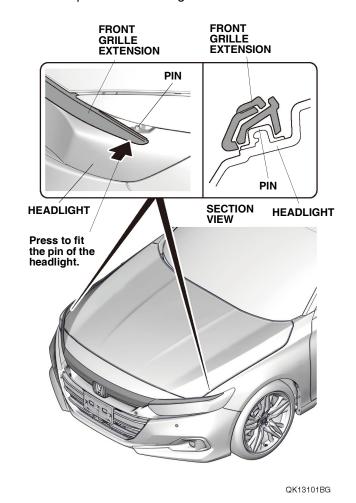

- 64. Connect the negative cable to the battery.
- 65. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
- 66. Set the clock on vehicles without navigation.
- 67. If necessary, restore the systems back to normal operation as described in the service information.