

# Germain Honda of College Hills



## INSTALLATION INSTRUCTIONS

### Accessory

LOWER GRILLE MOLDINGS  
P/N 08F21-TVA-100G

### Application

2022 ACCORD  
2022 ACCORD HYBRID

### Publications No.

VERSION 1

### Issue Date

OCT 2021

## PARTS LIST

Upper molding (long)



Middle molding (medium)



Left lower molding (short)



Right lower molding (short)



## TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

10 mm Open end wrench


Blanket

Masking tape

*The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.*

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

## Illustration of the Lower Grille Moldings on the Vehicle

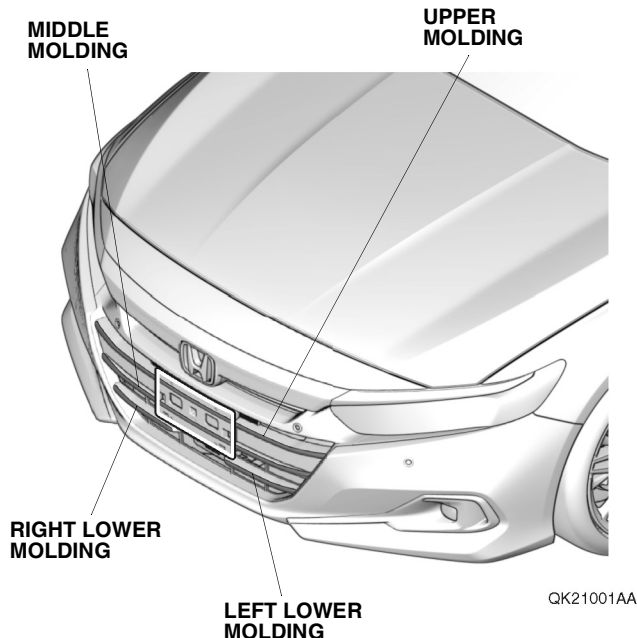


## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


1. Disconnect the negative cable from the battery, then wait at least 3 minutes before starting work.

# Germain Honda of College Hills


2. Remove the left front grille cover and right front grille cover.

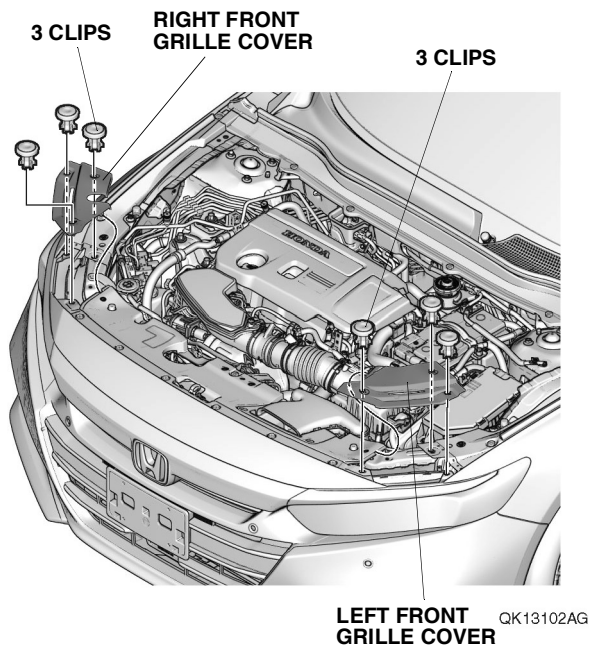

3. Remove the front bumper:
  - Apply masking tape as shown.

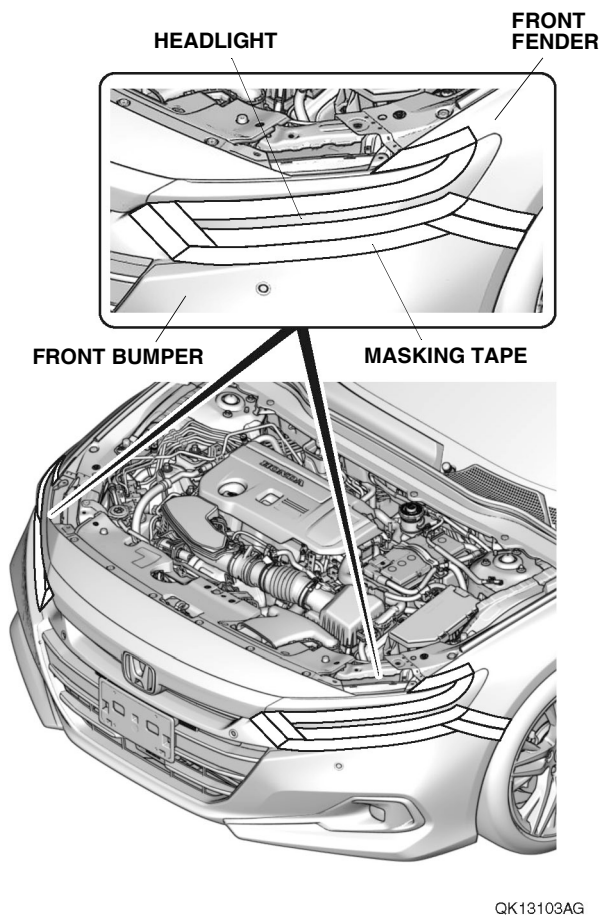


- Remove the six self-tapping screws and 17 clips as shown.

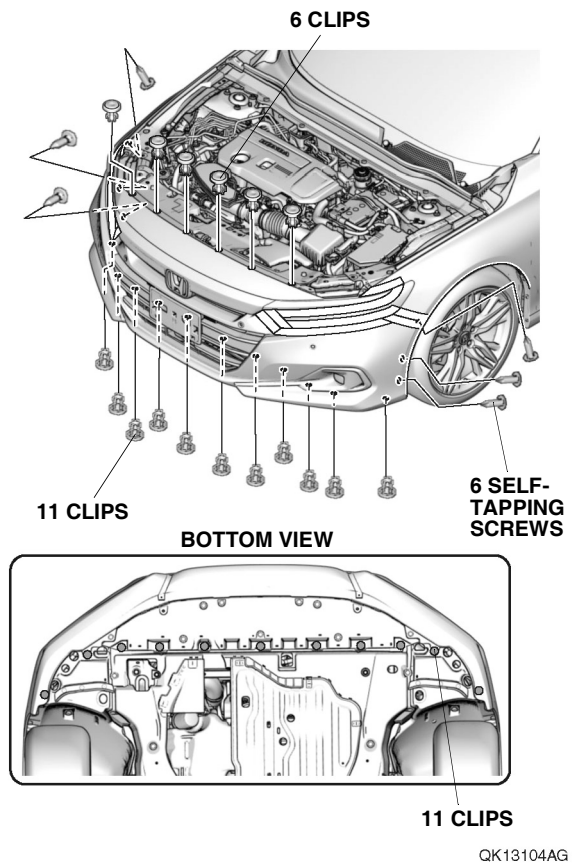


# Germain Honda of College Hills


- With the help of an assistant, release the seven retaining tabs on each side.

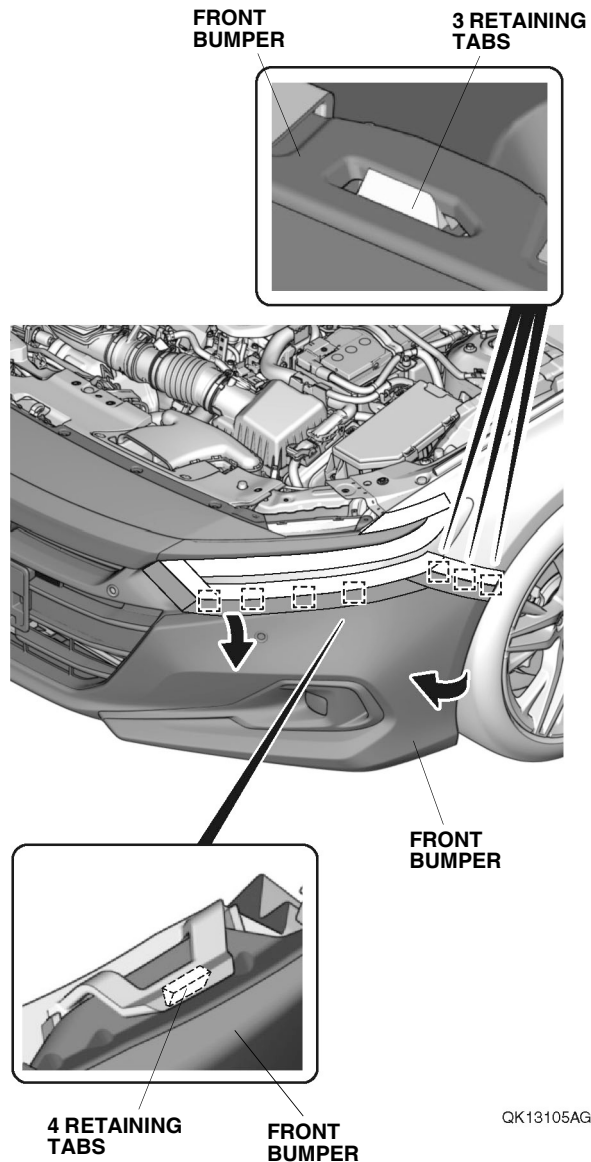

- With the help of an assistant, remove the front bumper, and unplug the vehicle connectors (if equipped).
- Place the front bumper on a blanket.

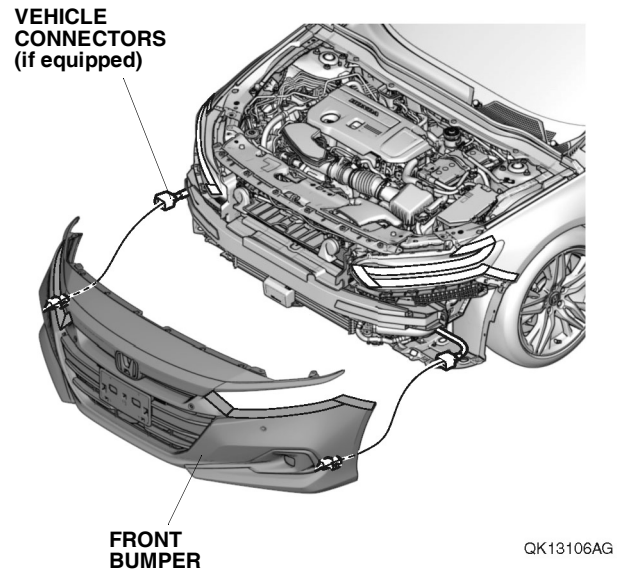


4. Remove the license base.

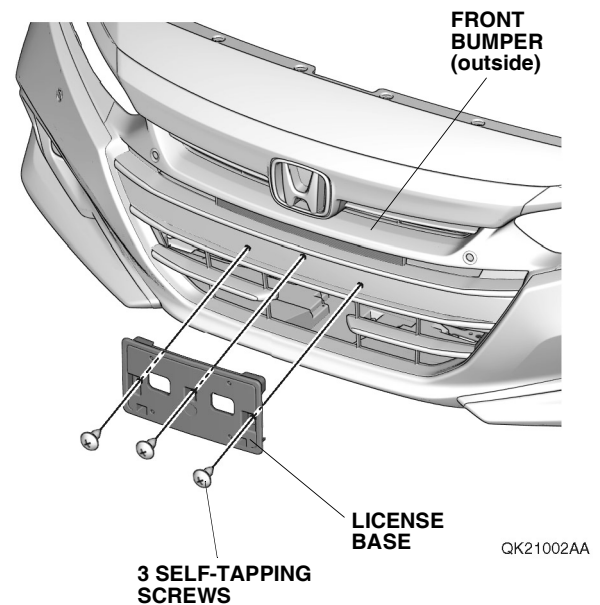


# Germain Honda of College Hills


5. Remove the front bumper beam cover.

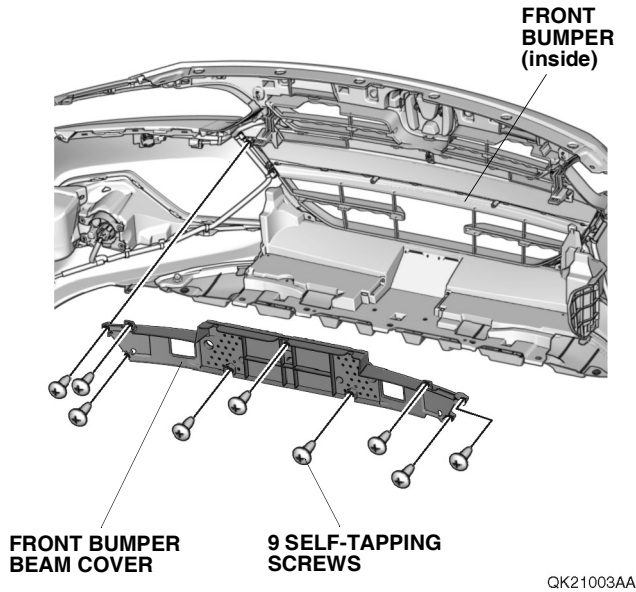

6. Remove the upper molding, middle molding, left lower molding, and right lower molding.

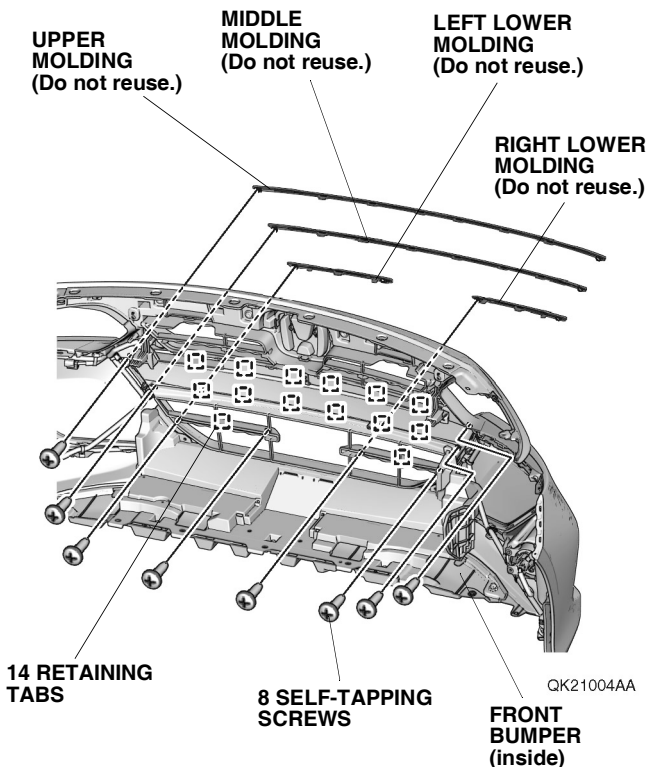


7. Install the upper molding, middle molding, left lower molding, and right lower molding to the front bumper with 14 retaining tabs and the eight self-tapping screws, removed in step 6.

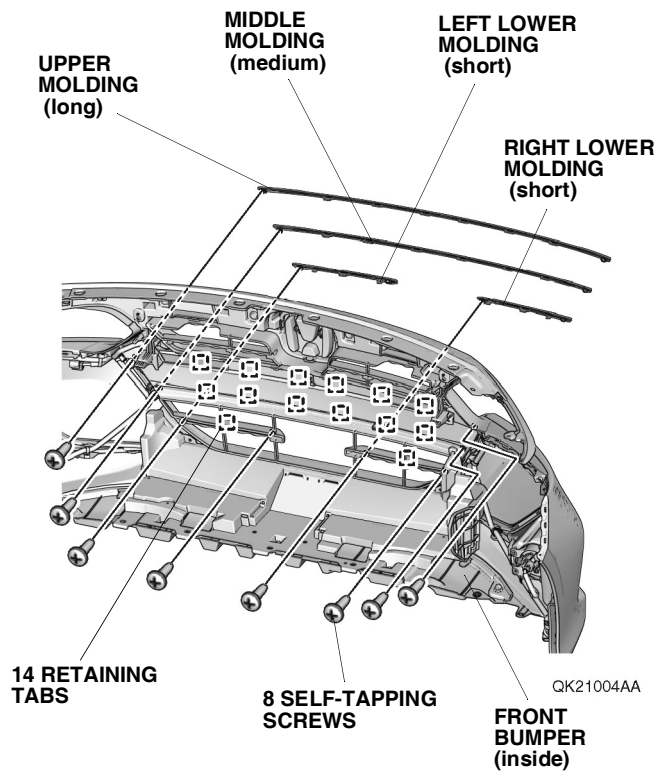

# Germain Honda of College Hills

8. Check that all wire harnesses are routed properly and all connectors are plugged in.
9. Install all removed parts.
10. Check that the left front grille extension and right front grille extension are properly secured to the headlights. If not secured, press the edges of the left front grille extension and right front grille extension to fit the pins of the headlights as shown.

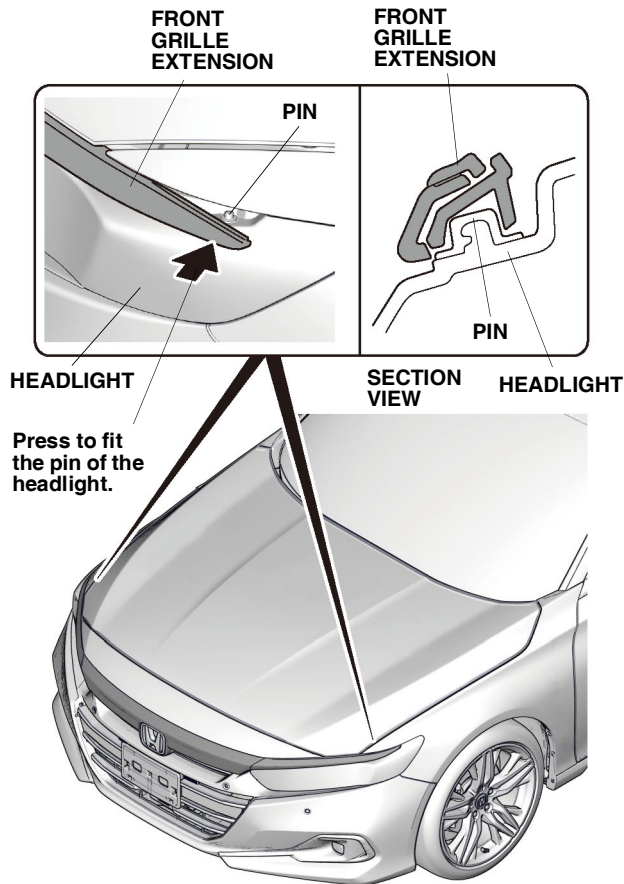

QK13101BG

11. Connect the negative cable to the battery.
12. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
13. Set the clock on vehicles without navigation.
14. If necessary, restore the systems back to normal operation as described in the service information.