

Germain Honda of College Hills



HONDA INSTALLATION INSTRUCTIONS

Accessory

REAR UNDER SPOILERS
P/N 08F03-TVA-100

Application

2022 ACCORD
2022 ACCORD HYBRID

Publications No.

VERSION 1

Issue Date

OCT 2021

PARTS LIST

Left rear under spoiler



Right rear under spoiler



4 Female clips



3 Long clips
(Some may not be used)




Short clip




2 Self-tapping screws



Washer
(May not be used)



2 Alcohol wipes



TOOLS AND SUPPLIES REQUIRED

10 mm Open end wrench

Phillips screwdriver

5 mm Hex wrench

Pushpin

Drill

File

Masking tape

3 mm, 6 mm, 8 mm, and 10 mm Drill bits

Eye protection (face shield, safety goggles, etc.)

Blanket


Diagonal cutters

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)

Germain Honda of College Hills

Illustration of the Rear Under Spoilers Installed on the Vehicle

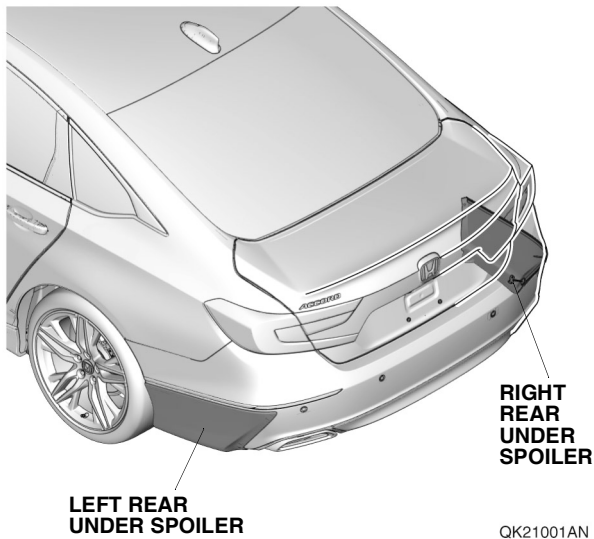


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- Be careful not to damage the body paint finish.
 - This kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
 - To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure the customer is aware of this.
1. Open the trunk lid.
 2. Disconnect the negative cable from the battery, then wait at least 3 minutes before starting work.

3. Remove the rear bumper:
 - Apply masking tape as shown.

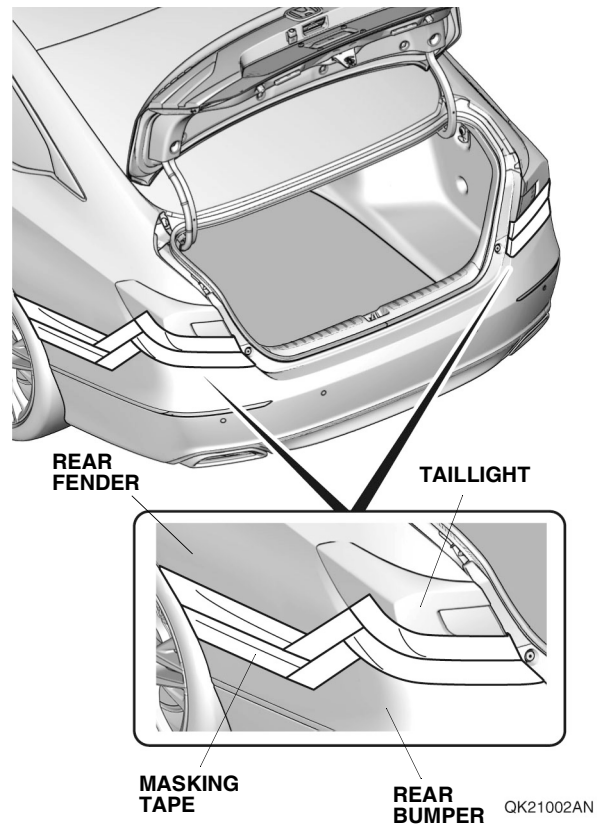


Germain Honda of College Hills

- Remove the six self-tapping screws, six clips, and two bolts as shown.

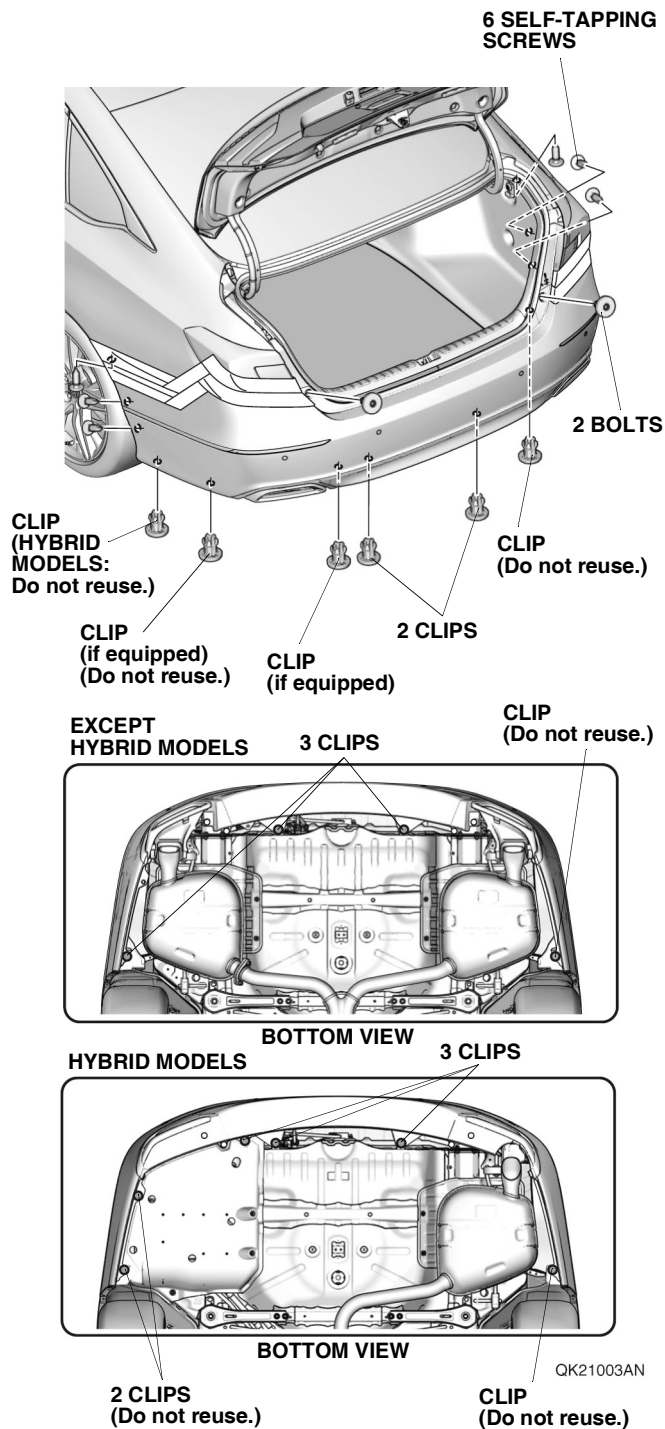


- With the help of an assistant, release the nine retaining tabs on each side.

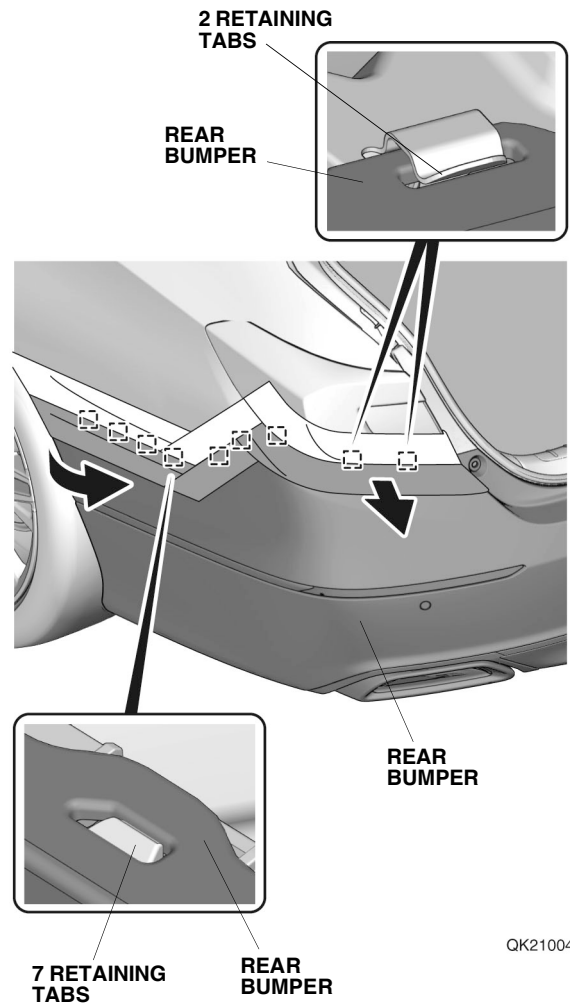


Germain Honda of College Hills

- With the help of an assistant, remove the rear bumper and unplug the vehicle connector (if equipped).
- Place the rear bumper on a blanket.

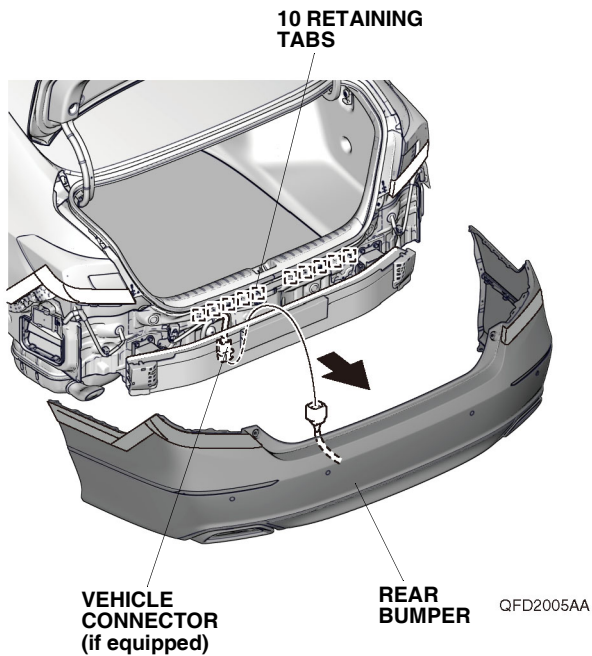


4. Using a pushpin, pierce the inside of the rear bumper at the center of the three scribe marks.
NOTE: Make sure to pierce the scribe marks perpendicular to the rear bumper.

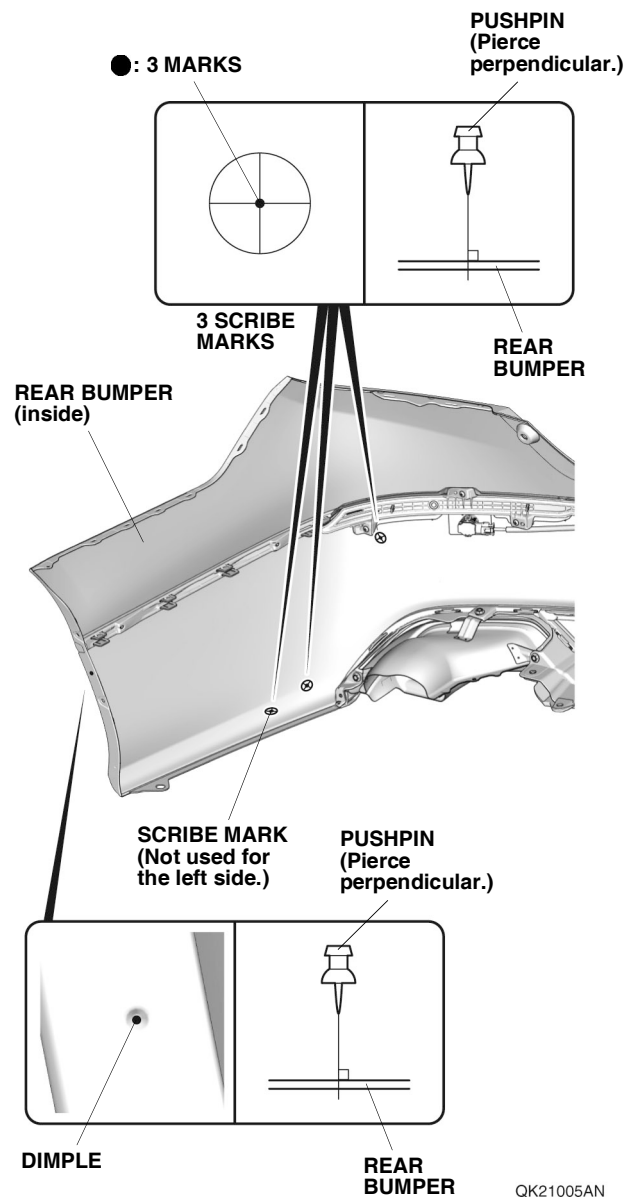


5. Using a pushpin, pierce the rear bumper at the dimple.
NOTE: Make sure to pierce the rear bumper perpendicular.

Germain Honda of College Hills


6. While wearing eye protection, drill the pierced mark on the rear bumper to 6 mm. First, drill with a 3 mm drill bit, then finish with a 6 mm drill bit. Remove any burrs.
NOTE: Make sure to drill perpendicular to the rear bumper.

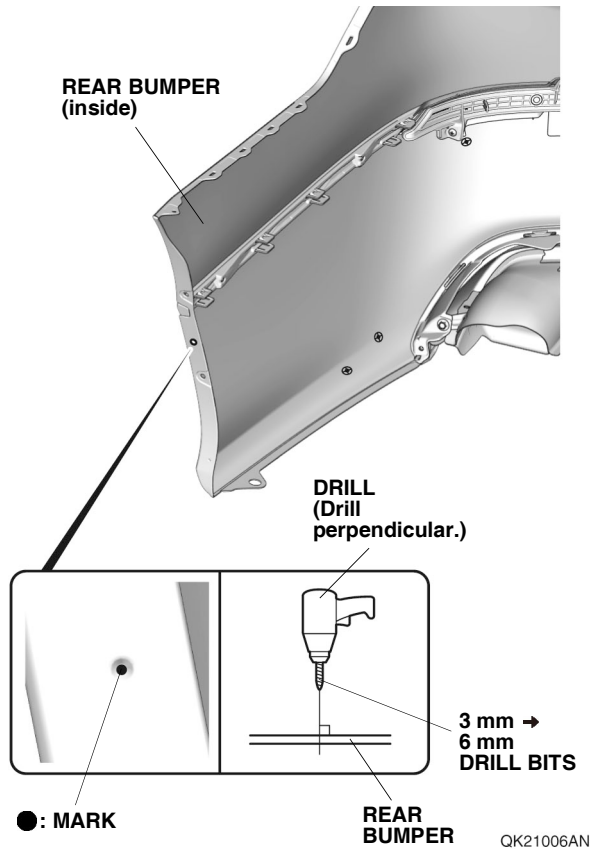

7. While wearing eye protection, drill the three pierced marks on the rear bumper to 10 mm. First, drill with a 3 mm drill bit, next, with a 6 mm drill bit, then with an 8 mm drill bit, and finish with a 10 mm drill bit. Remove any burrs.
NOTE: Make sure to drill perpendicular to the rear bumper.

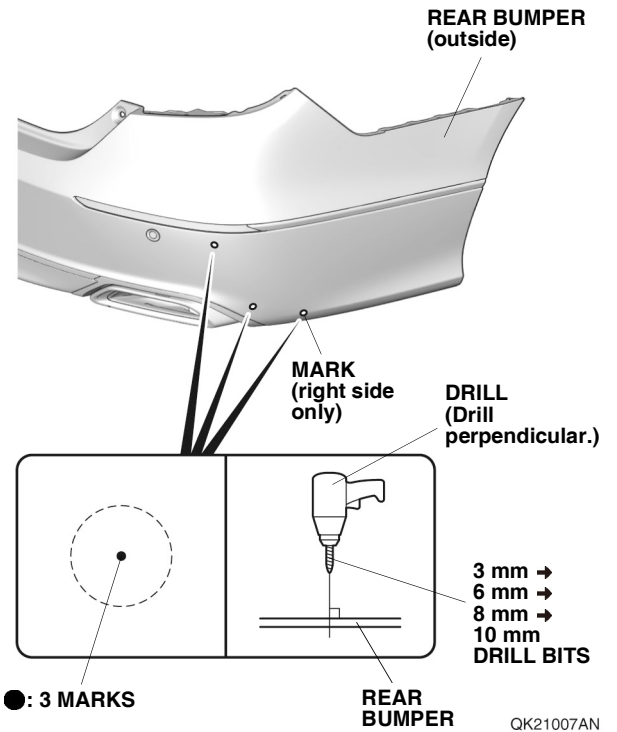


8. Using an alcohol wipe, thoroughly clean the rear bumper where the right rear under spoiler will attach.

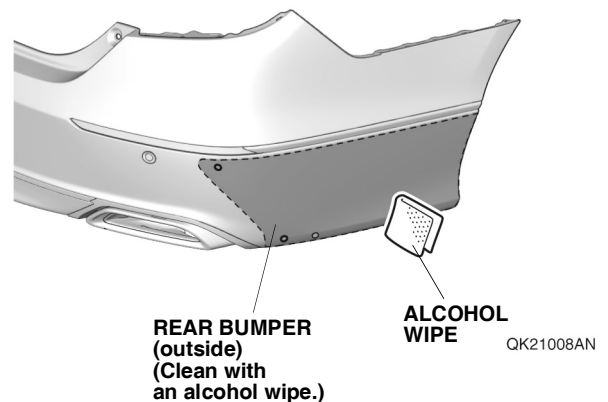


Germain Honda of College Hills

9. Peel back the adhesive backings, and tape them to the front surface of the right rear under spoiler with masking tape.

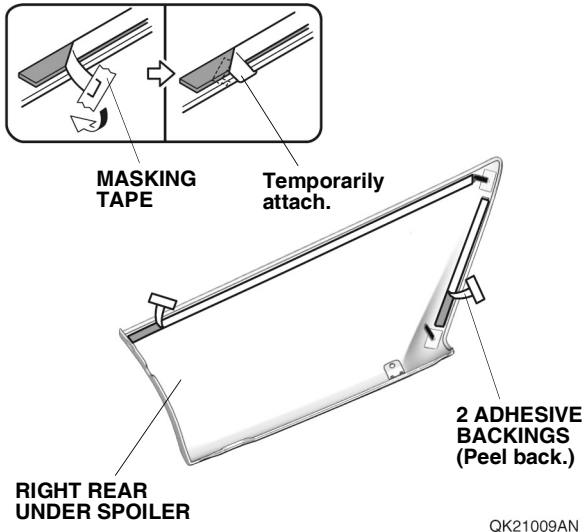


10. Install the right rear under spoiler to the rear bumper.

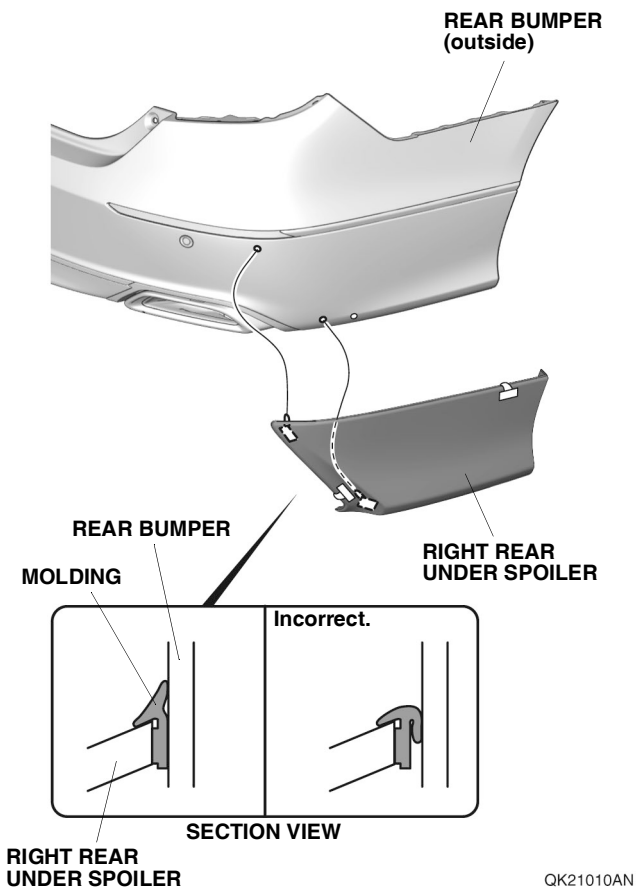

11. Secure the right rear under spoiler to the rear bumper with one short clip and two female clips into each male clip as shown.


NOTE:

- Make sure to install the female clips in the correct orientation.
- Do not push the female clips too tight; you could deform the right rear under spoiler. If necessary, readjust the female clips.

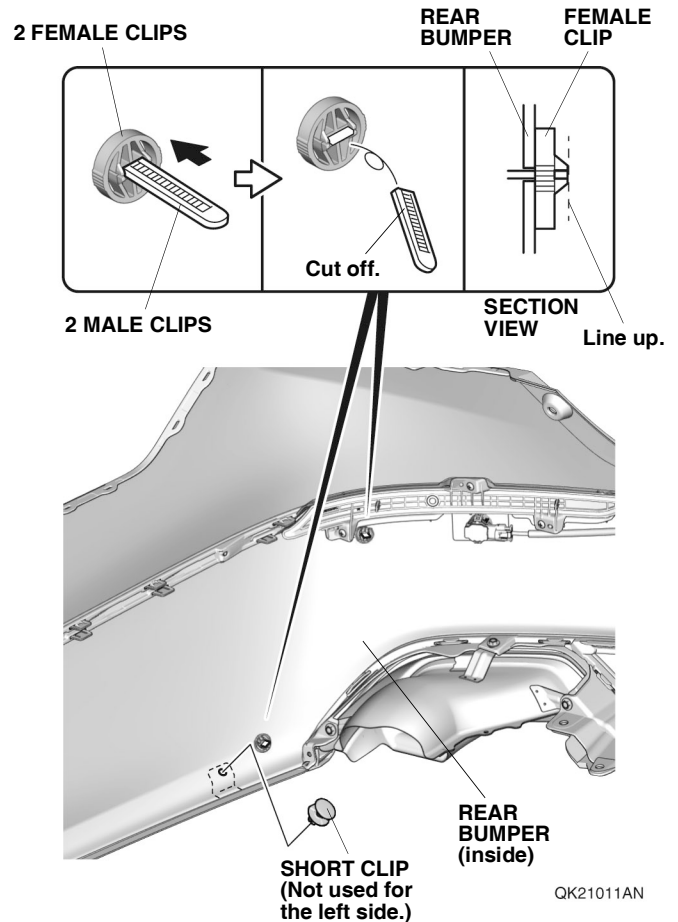


Germain Honda of College Hills

12. While applying light pressure against the right rear under spoiler, carefully remove the adhesive backings.

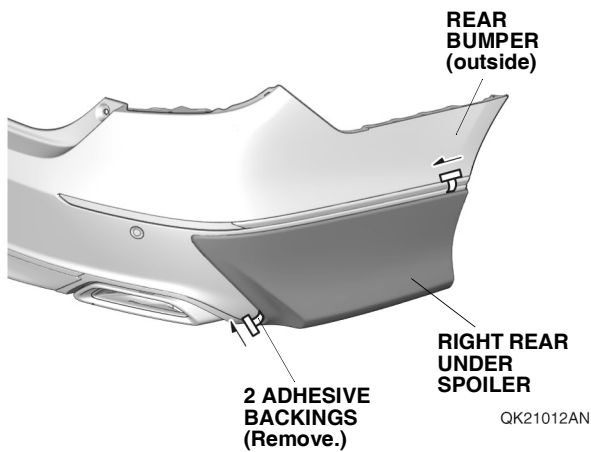

13. Using a rubber roller, apply firm pressure against the right rear under spoiler and roll from one end to the other.
NOTE: Apply firm pressure, especially at the ends.

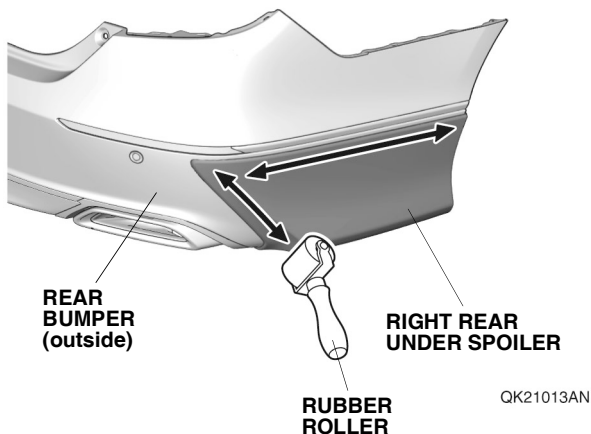


14. Repeat steps 4 through 13 on the left side of the rear bumper.

If the vehicle is hybrid models, go to step 17; otherwise, continue with step 15.

Except hybrid models

15. With the help of an assistant, install the rear bumper.

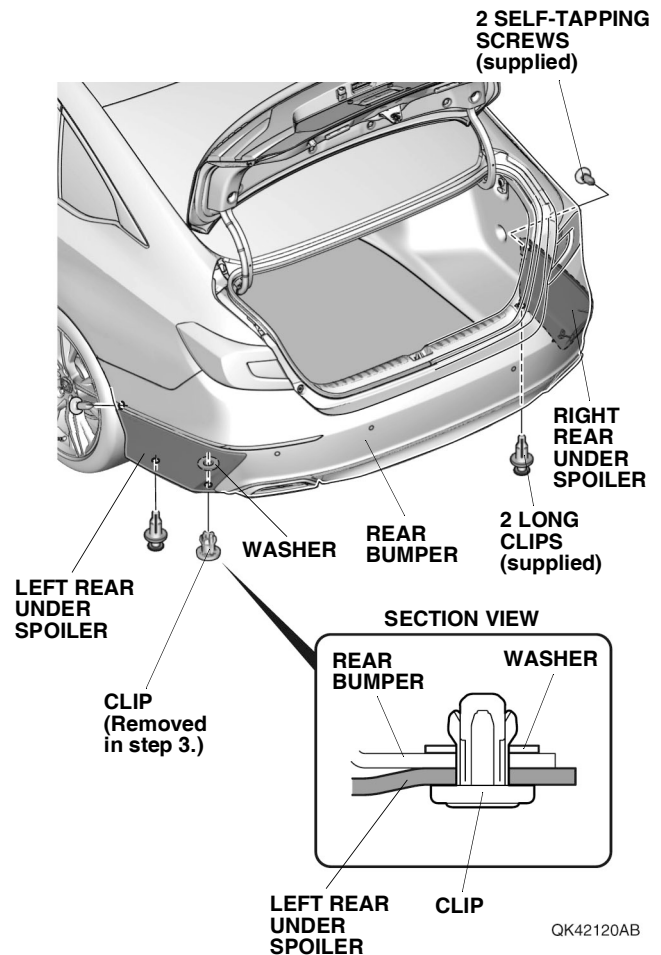


16. Secure the left and right rear under spoilers to the rear bumper with the two self-tapping screws, two long clips, clip, and washer as shown. Go to step 19.

Germain Honda of College Hills

Hybrid models

17. With the help of an assistant, install the rear bumper.

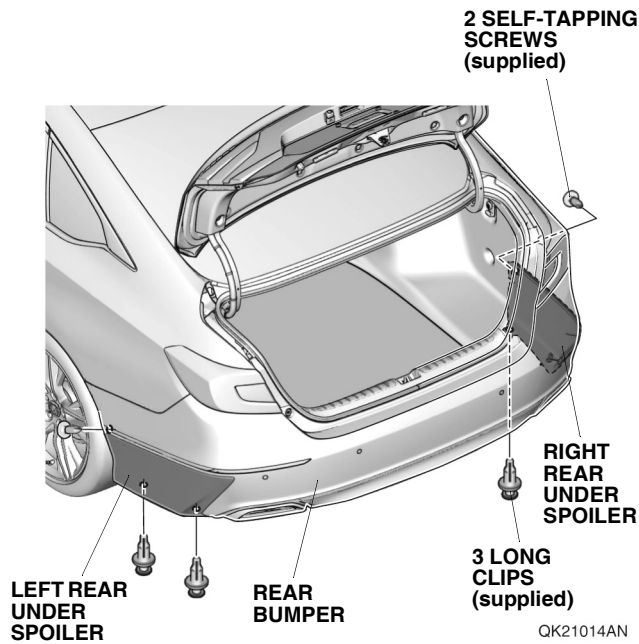

18. Secure the left and right rear under spoilers to the rear bumper with the two self-tapping screws and three long clips as shown.
19. Check that all wire harnesses are routed properly and all connectors are plugged in.
20. Connect the negative cable to the battery.
21. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
22. Set the clock on vehicles without navigation.
23. If necessary, restore the systems back to normal operation as described in the service information.