

Germain Honda of College Hills



INSTALLATION INSTRUCTIONS

Accessory
SPLASH GUARDS

Application
2022 ACCORD
2022 ACCORD HYBRID

Publications No.
VERSION 1
Issue Date
OCT 2021

PARTS LIST

Splash Guards Kit
P/N 08P00-TVA-100
P/N 08P00-TVA-100A

Left front splash guard



Right front splash guard




Left rear splash guard



Right rear splash guard



2 Spring nuts

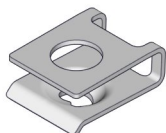

Clip
(May not be used)



6 Self-tapping screws




TOOLS AND SUPPLIES REQUIRED

- Phillips screwdriver
- Stubby Phillips screwdriver
- Pushpin
- Ruler
- Utility knife

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Splash Guards on the Vehicle

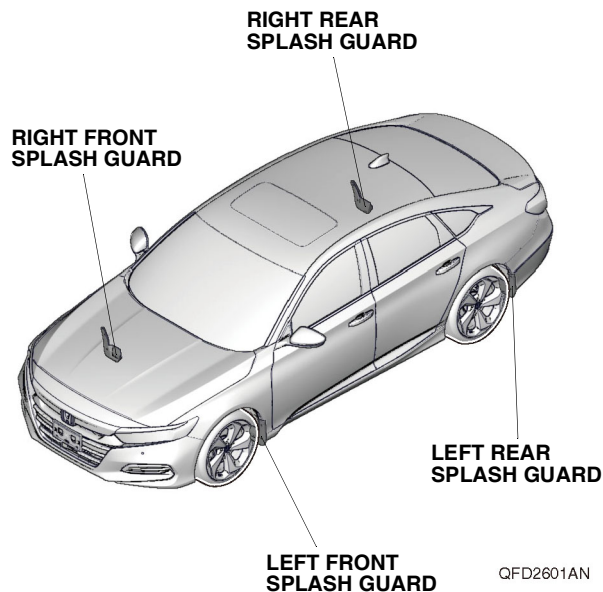

Germain Honda of College Hills

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:

- Be careful not to damage the body paint finish.
- Clean the areas to be covered.

Installing the Front Splash Guards


1. Turn the steering wheel fully counterclockwise.

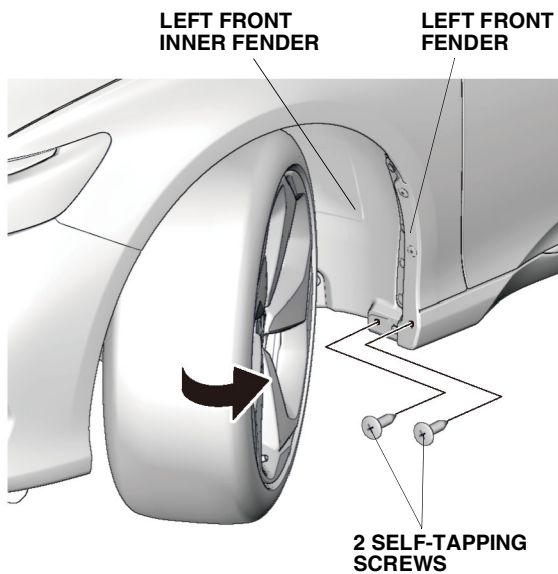

QFD2602AN

2. Remove the two self-tapping screws from the left front inner fender and left front fender.


3. Using a pushpin, pierce the center of the clip on the left front fender.
NOTE: Make sure to pierce the clip perpendicular.

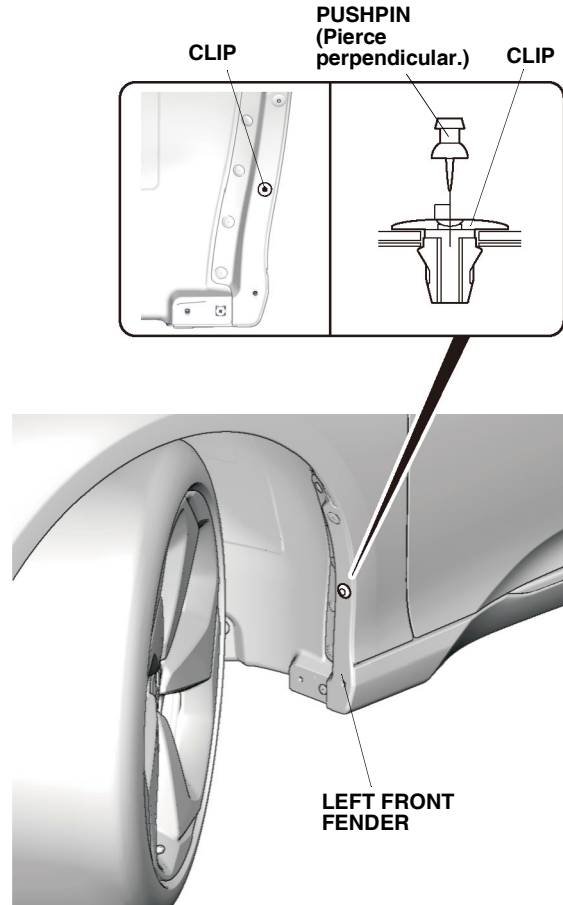

QFD2603AN

Germain Honda of College Hills


- Loosely install the left front splash guard on the left front inner fender and left front fender with one self-tapping screw supplied and two self-tapping screws removed in step 2.

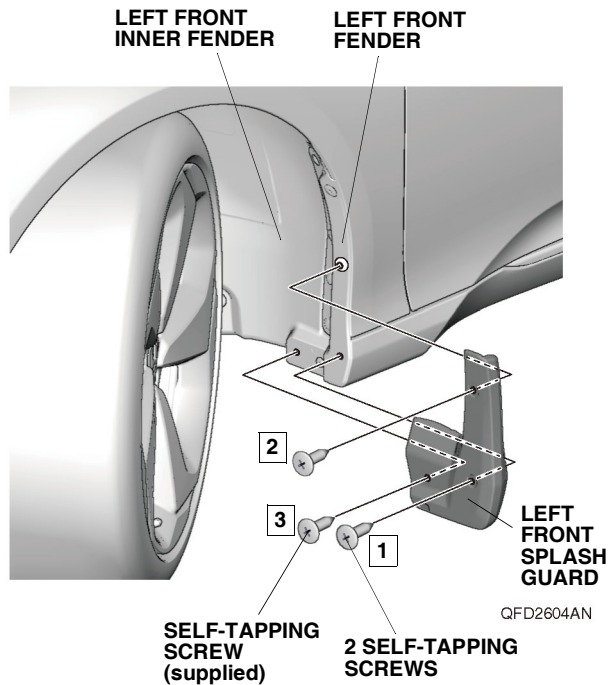

- While holding the left front splash guard against the left front inner fender and left front fender, tighten the three self-tapping screws in the order shown.
NOTE: Make sure there are no gaps between the left front splash guard and the vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the body, and tighten the screws.
- Turn the steering wheel fully clockwise, and repeat steps 2 through 5 on the right side of the vehicle.


Installing the Rear Splash Guards

- Remove the two self-tapping screws and one clip from the rear bumper.
NOTE: Do not reuse the clip for the hybrid models.

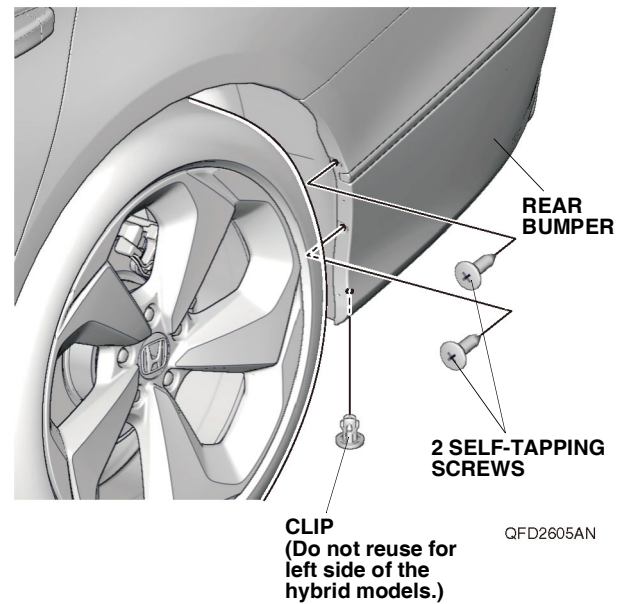


Germain Honda of College Hills

8. Locate the two dimples. Using a pushpin, pierce the rear bumper at the dimples.
NOTE: Make sure to pierce the rear bumper perpendicular.

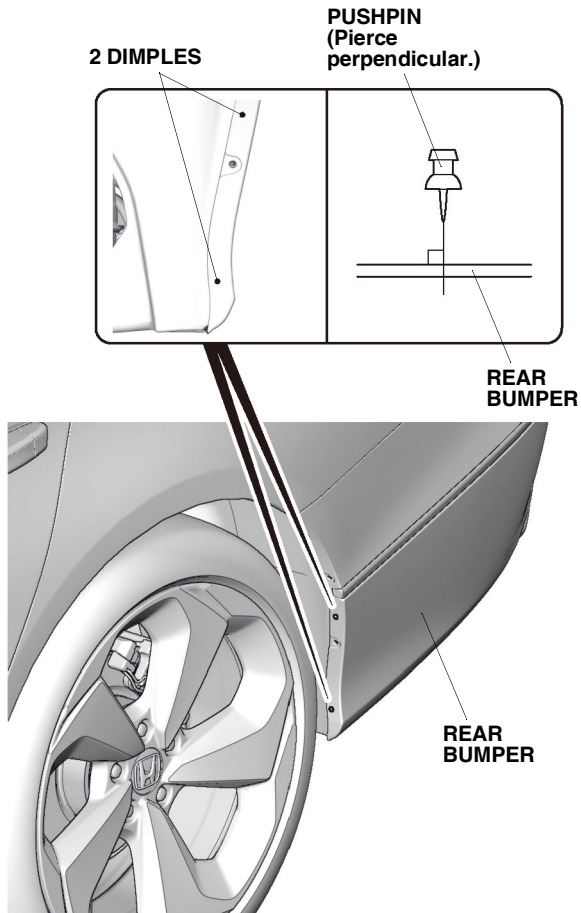

QFD2606AN

9. Pull away the rear bumper. Using a utility knife, cut off the left rear inner fender at the measurements shown.

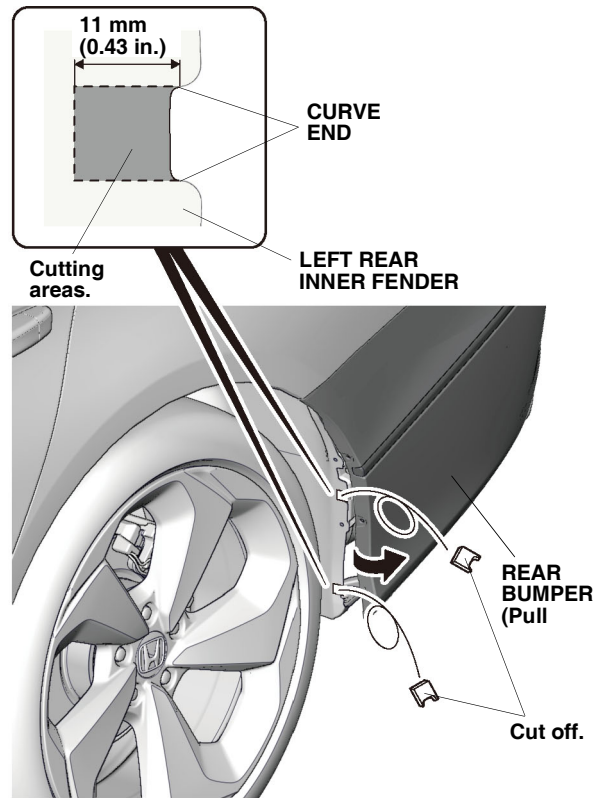


QFD2607BN

10. Install the rear bumper back into its original position with two self-tapping screws removed in step 7.

Germain Honda of College Hills


11. Install one spring nut to the rear bumper as shown.
NOTE: Make sure to install the spring nut in the correct position and orientation.

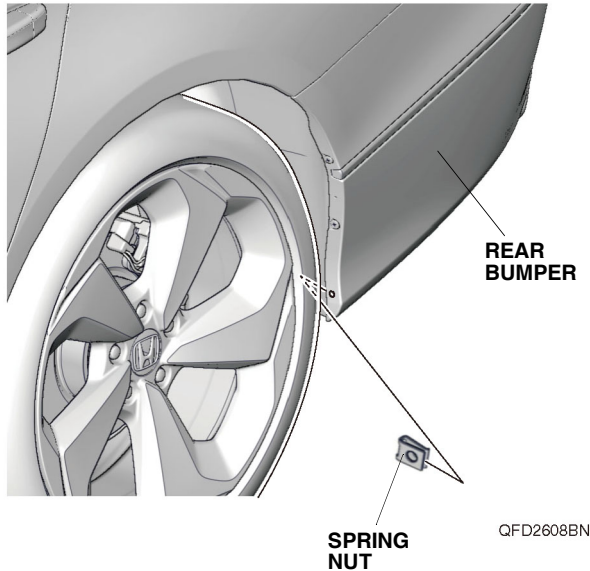

Except hybrid models, go to step 12; hybrid models, go to step 13.

Except hybrid models



12. Install the left rear splash guard to the rear bumper with two self-tapping screws supplied and one clip removed in step 7 in the order shown. Go to step 14.
NOTE: Make sure there are no gaps between the left rear splash guard and vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the body, and tighten the screws.

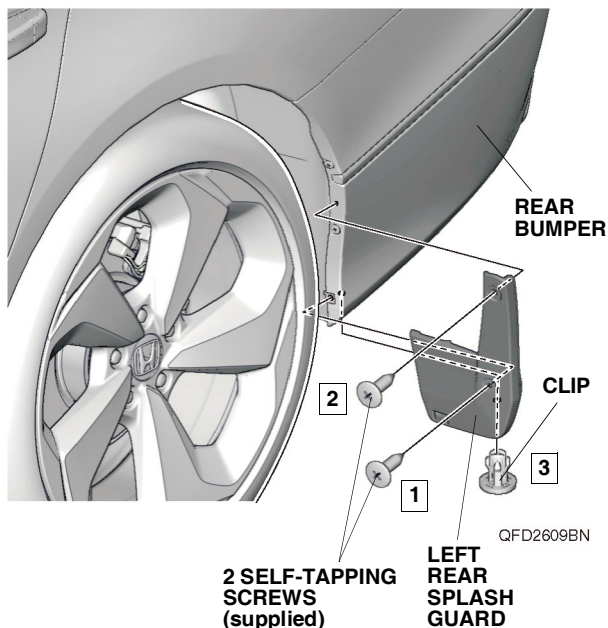

Hybrid models

13. Install the left rear splash guard to the rear bumper with two self-tapping screws and one clip supplied in the order shown. For right side, use the two self-tapping screws supplied and one clip removed in step 7.

NOTE: Make sure there are no gaps between the rear splash guard and vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the body, and tighten the screws.

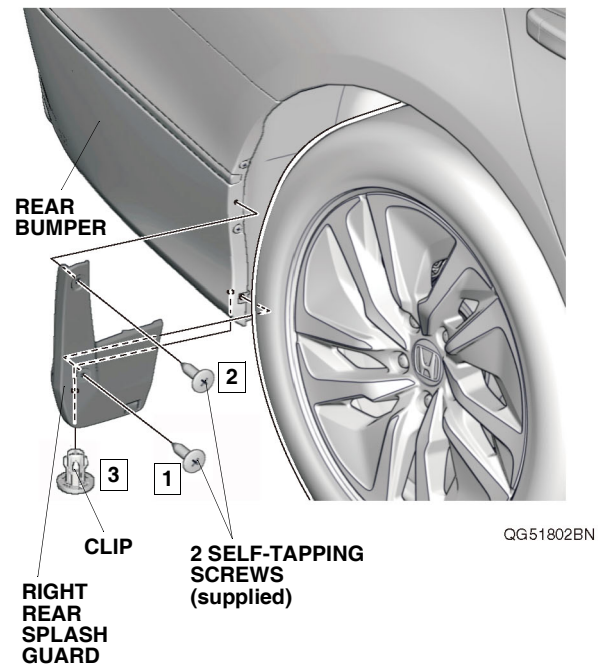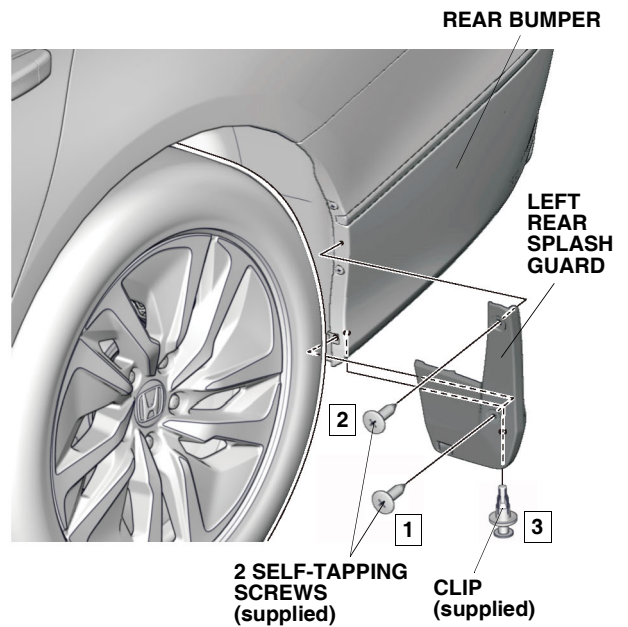

14. Repeat steps 7 through 13 on the right side of the vehicle.