

# Germain Honda of College Hills




## INSTALLATION INSTRUCTIONS

Accessory  
**BLACK EMBLEMS**

Application  
**2023 ACCORD  
MODEL SERIES**

Publications No.  
**VERSION 1**  
Issue Date  
**DEC 2022**

### GENERAL VIEW

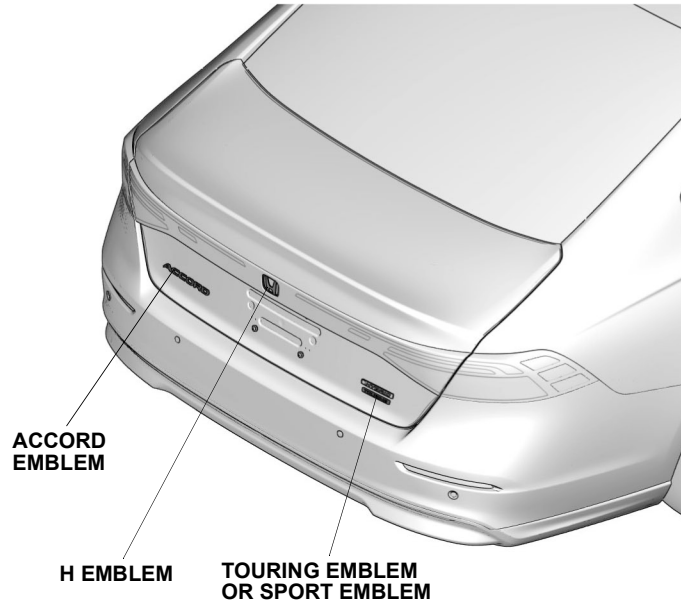

QM30303AB

### FOR YOUR SAFETY (Read carefully.)

#### Warning Symbols

**Safety:** Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

**⚠ DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

**⚠ WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

**⚠ CAUTION**

You can be hurt if you do not follow the instructions.

**NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

**NOTE**

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.

# Germain Honda of College Hills


## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.

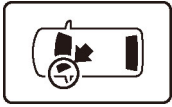

The location on the vehicle.

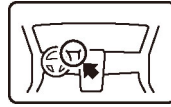

The location in the vehicle.  
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.  
(Do not reuse.)


## Wire Harness Routing Precaution

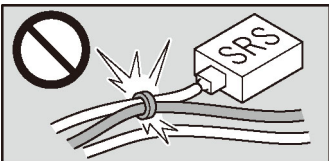


Do not secure the  
accessory harness to the  
SRS harness.  
(except for instruction  
cases.)

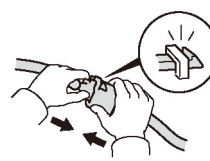


Push the connectors and  
terminals together until  
they lock.

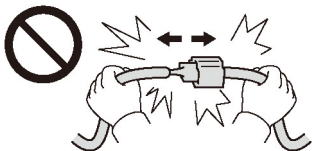

Do not pull the harness to  
unplug the connectors.



Install removed  
connectors in their original  
location.

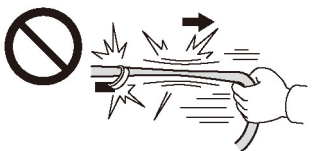


Do not pull the harness.



Secure the accessory  
harness as shown.



Do not pinch the harness.

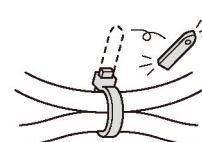

Cut off the excess wire tie.

# Germain Honda of College Hills

## Safety: General


- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

## Safety: Accessory


- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

## PARTS LIST


### Emblems Kit (P/N 08F20-30A-100)

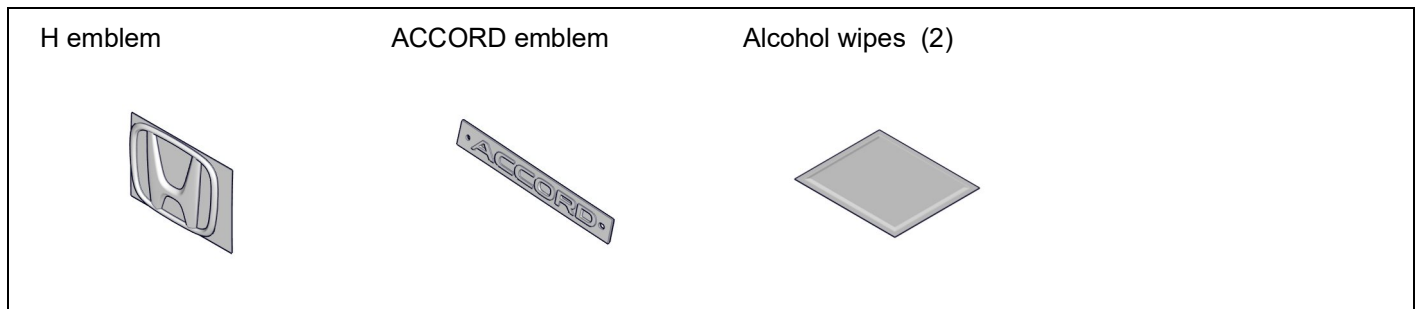

### SPORT Emblem Kit (P/N 08F20-TVA-100C)

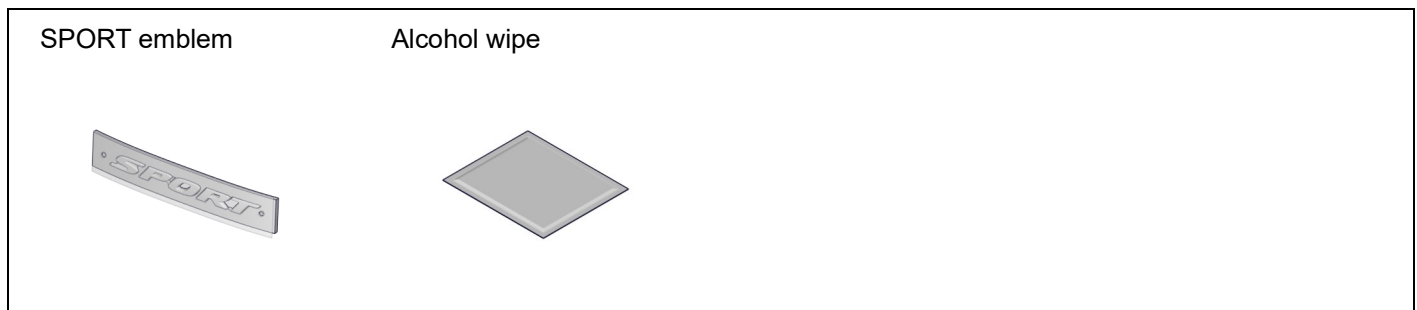

### TOURING Emblem Kit (P/N 08F20-3A0-100C)

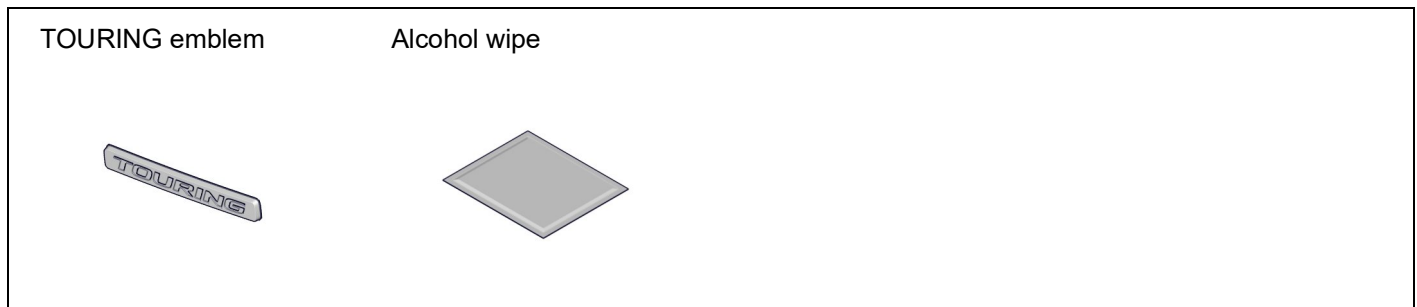

# Germain Honda of College Hills

## REQUIRED TOOLS AND SUPPLIES

- Ruler
- Utility knife
- Masking tape
- Nylon string



The following tools are available through the Honda Tool and Equipment Program:

- Rubber Roller (T/N MHLE54D)
- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

# Germain Honda of College Hills


## INSTALLATION

1. Attach masking tape.

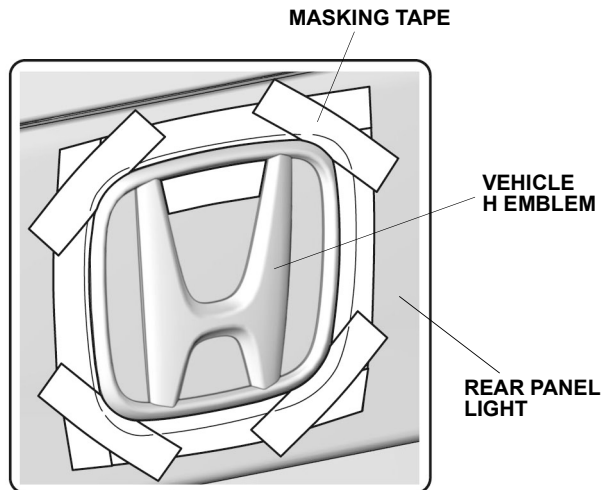

QM92101AG

2. Pry up the vehicle H emblem and insert the nylon string.

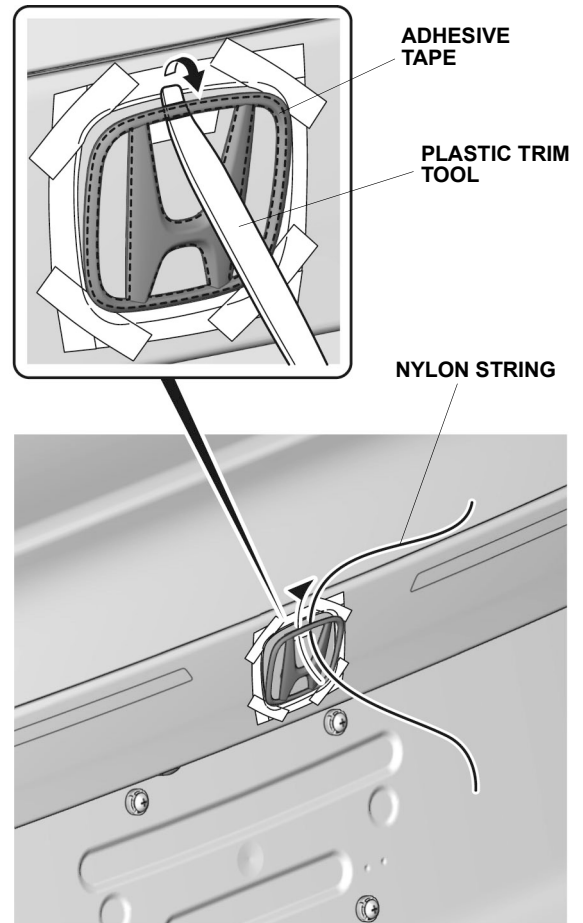

QM92102AG



# Germain Honda of College Hills

3. Remove the vehicle H emblem.

## NOTE

- Do not damage the rear panel light when removing the vehicle H emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the rear panel light.

NYLON STRING  
MOVEMENT

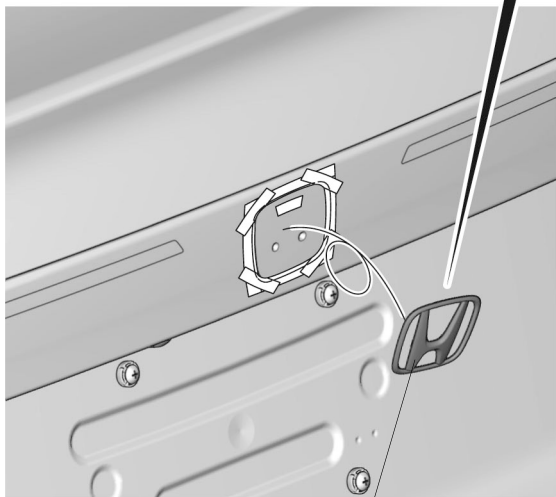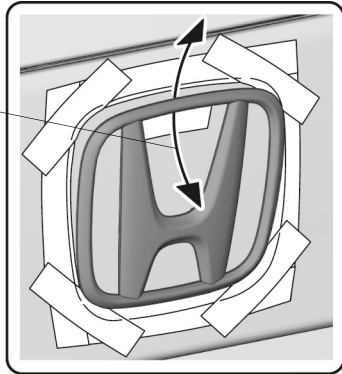

Do not reuse.


QM30304BB

4. Remove the masking tape.

5. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

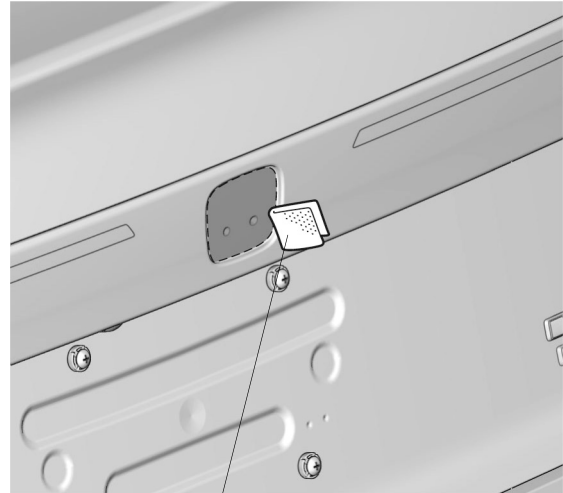

ALCOHOL  
WIPE

QM30305AB


6. Install the new H emblem.

## NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

NEW H EMBLEM

2 PINS

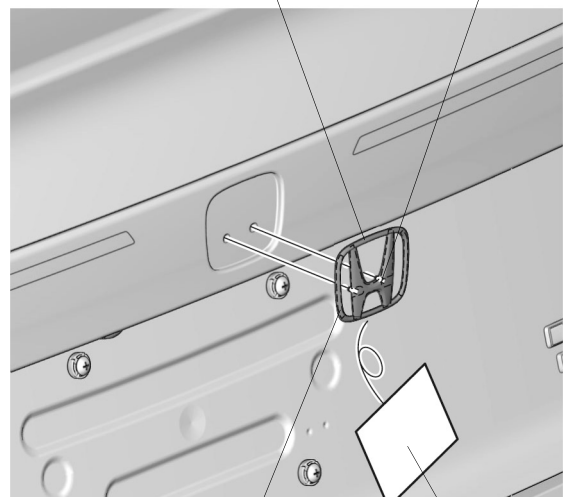

3 DOUBLE-SIDED  
ADHESIVE TAPES

QM30306BB

ADHESIVE  
BACKING  
(Remove.)




# Germain Honda of College Hills

7. Secure the new H emblem.





QM30307BB

8. Remove the guide form.

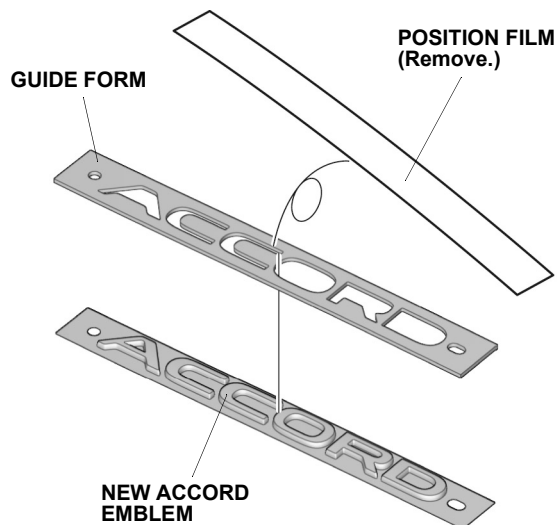

QM30308AB

9. Install the guide form.

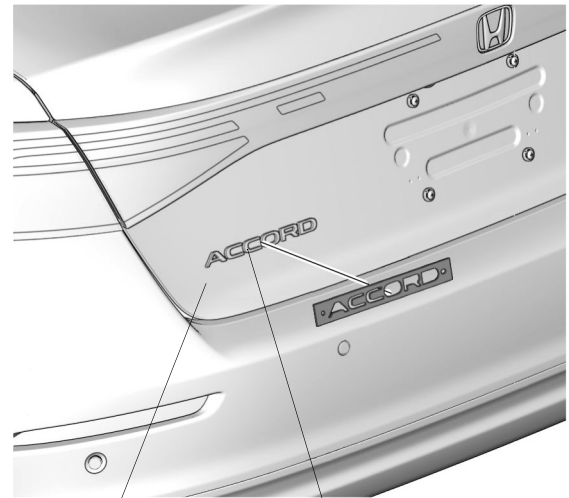


TRUNK LID

VEHICLE ACCORD EMBLEM

QM30309AB


10. Attach masking tape.

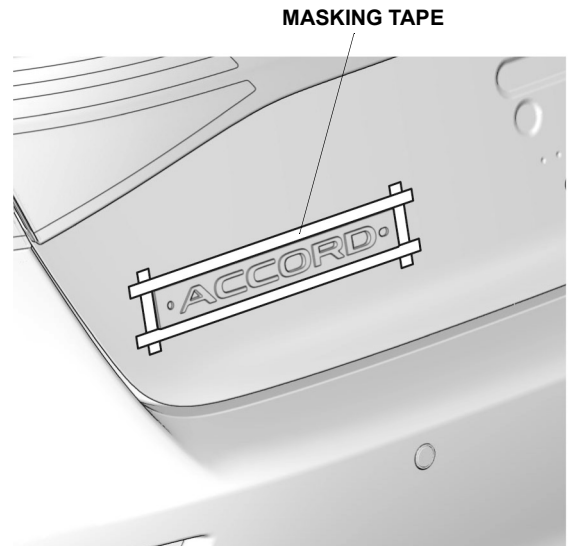

QM30701AB

# Germain Honda of College Hills

11. Remove the guide form.

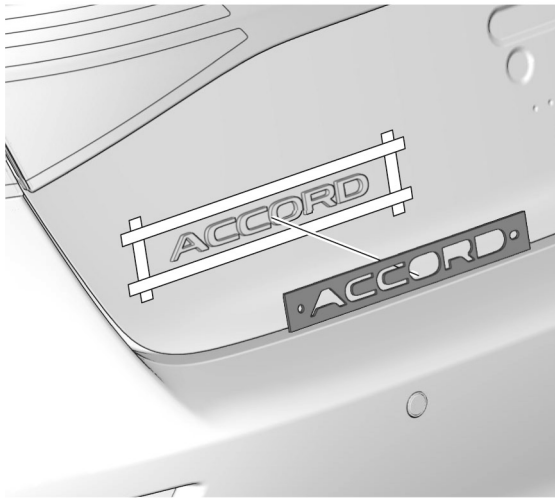


QM30702AB

12. Remove the vehicle ACCORD emblem.

## NOTE

- Do not damage the trunk lid when removing the vehicle ACCORD emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tapes from the trunk lid.

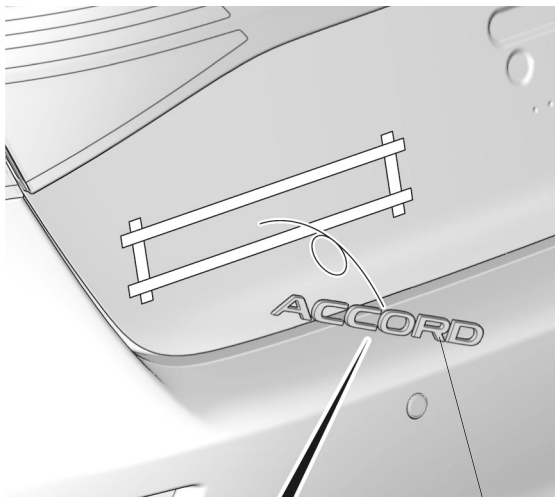


Do not reuse.



NYLON STRING  
MOVEMENT

QM30703AB

13. Install the guide form.

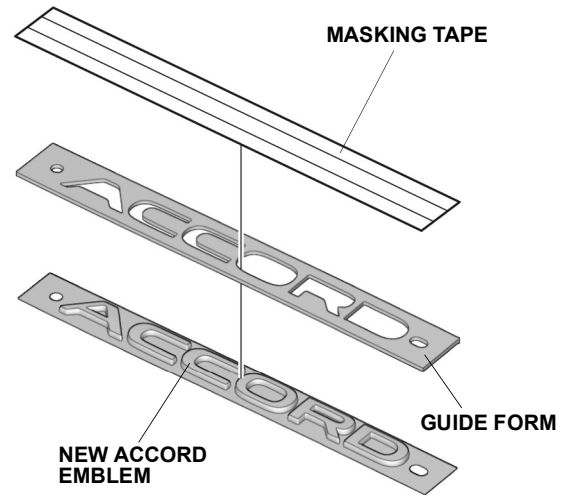


QM30704AB

14. Attach masking tape.

15. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

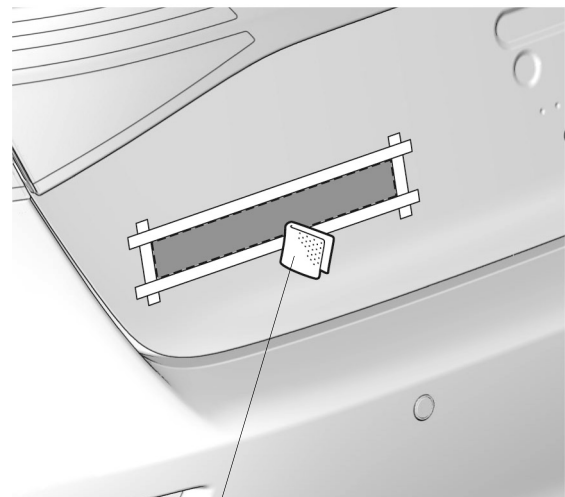

ALCOHOL WIPE

QM30705AB




# Germain Honda of College Hills


16. Attach the new ACCORD emblem.

## NOTE


Check the position of the double-sided adhesive tapes and make sure to press firmly.

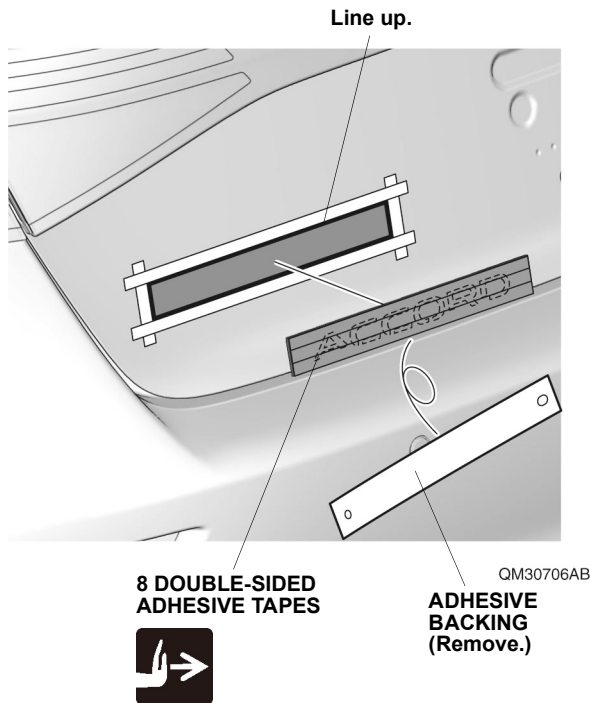

17. Secure the new ACCORD emblem.

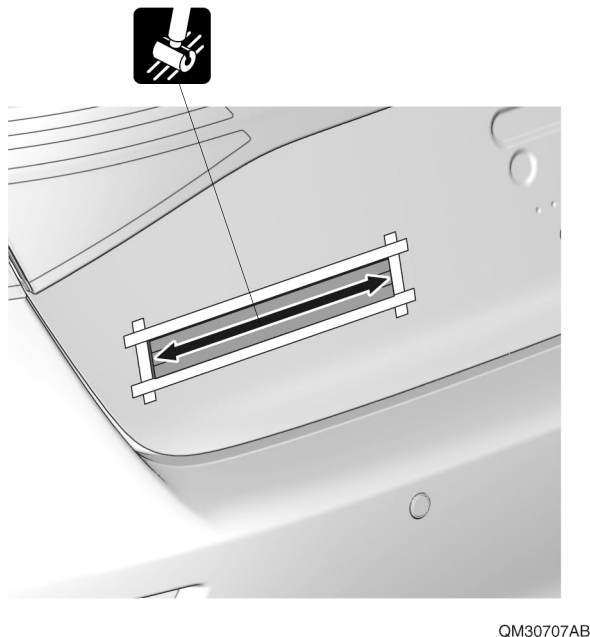

18. Remove the guide form.

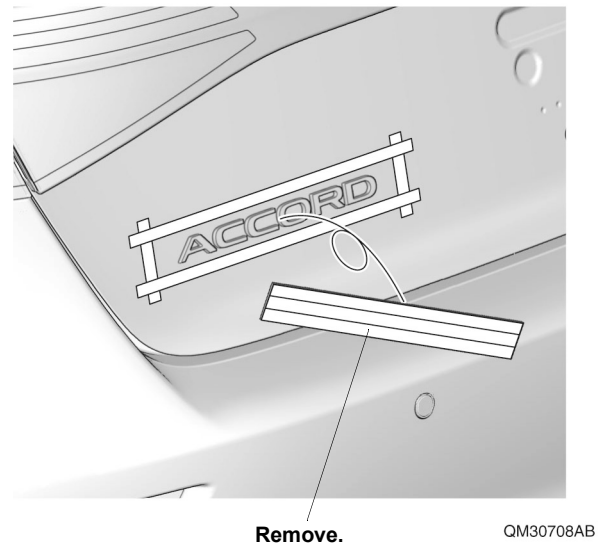

19. Remove the masking tape.

20. Choose one of these options.


- Replace the SPORT emblem

Go to step 21

- Do not replace the SPORT emblem


Go to step 34

21. Remove the guide form.

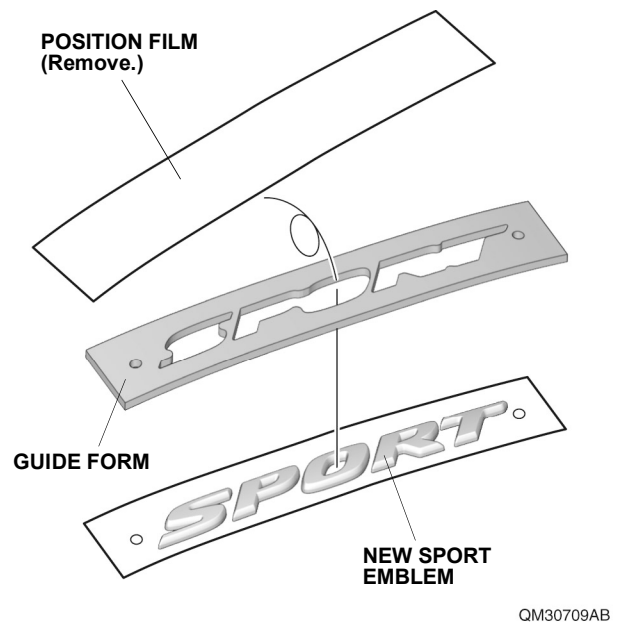



# Germain Honda of College Hills

22. Cut off the guide form.

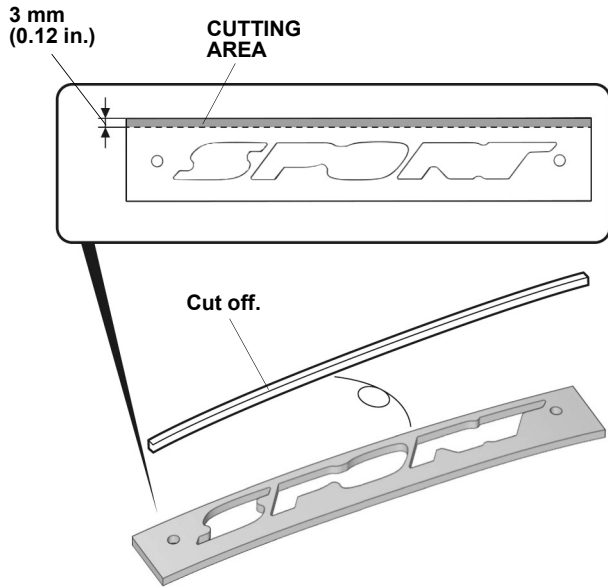

QM30710AB

23. Install the guide form.

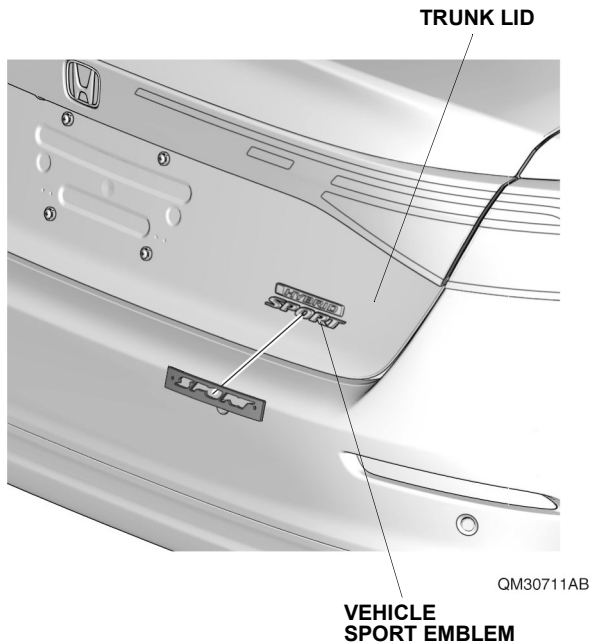

QM30711AB


24. Attach masking tape.



MASKING TAPE

QM30712AB

25. Remove the guide form.

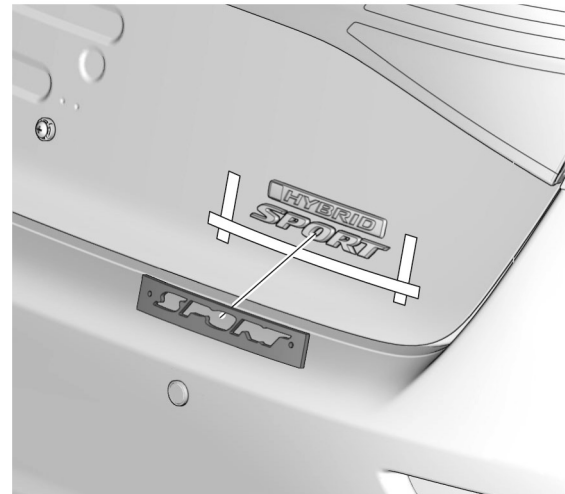

QM30713AB

# Germain Honda of College Hills

26. Remove the vehicle SPORT emblem.

## NOTE

- Do not damage the trunk lid when removing the vehicle SPORT emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tapes from the trunk lid.



Do not reuse.




NYLON STRING  
MOVEMENT

QM30714AB

27. Install the guide form.

MASKING TAPE

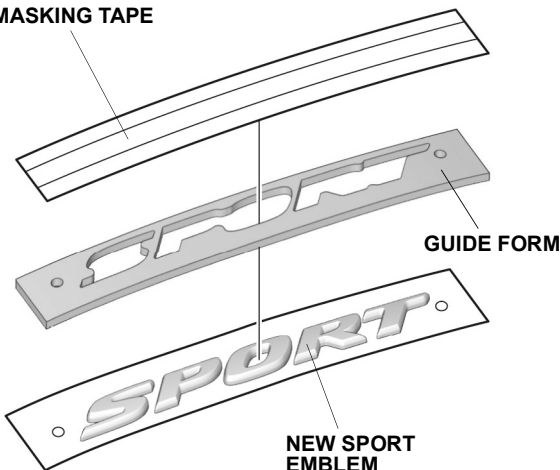

GUIDE FORM

NEW SPORT  
EMBLEM


QM30715AB

28. Attach masking tape.

29. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

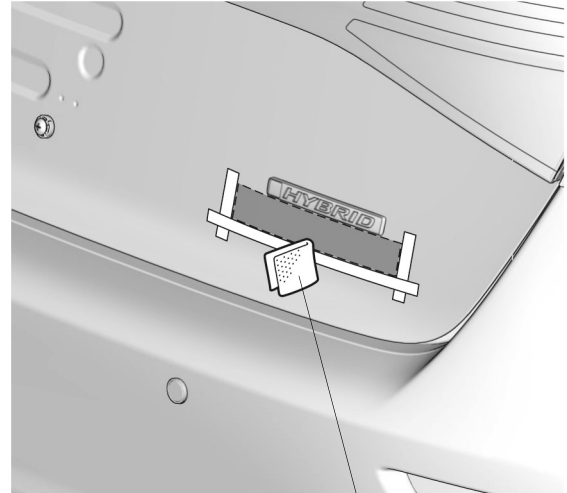


ALCOHOL  
WIPE

QM30716AB

30. Attach the new SPORT emblem.

## NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

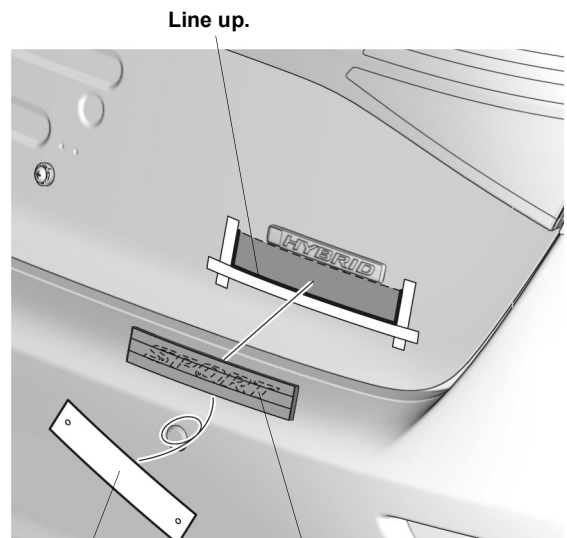

Line up.

ADHESIVE BACKING  
(Remove.)


5 DOUBLE-SIDED  
ADHESIVE TAPES

QM30717AB




# Germain Honda of College Hills

31. Secure the new SPORT emblem.

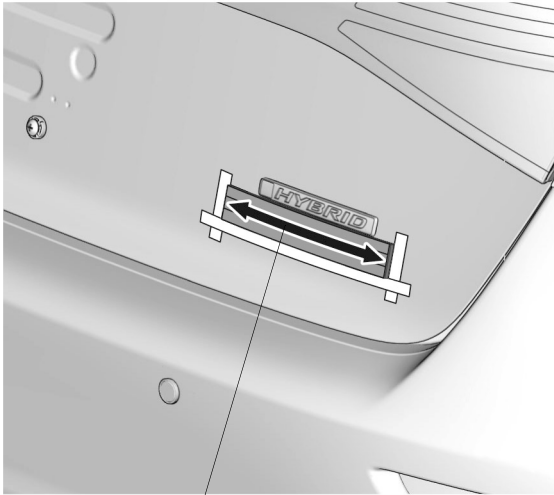

QM30718AB

32. Remove the guide form.

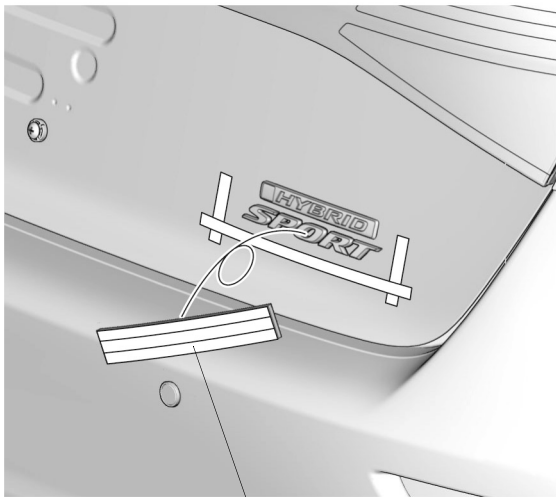

Remove.

QM30719AB

33. Remove the masking tape.

34. Choose one of these options.



• Replace the TOURING emblem

Go to step 35

• Do not replace the TOURING emblem

Go to step 41

35. Attach masking tape.

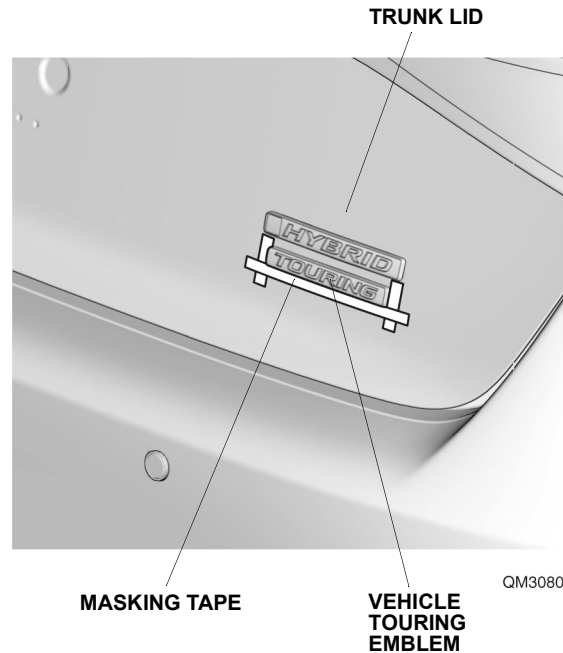


QM30801AB

# Germain Honda of College Hills


36. Remove the vehicle TOURING emblem.

## NOTE

- Do not damage the trunk lid when removing the vehicle TOURING emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the trunk lid.

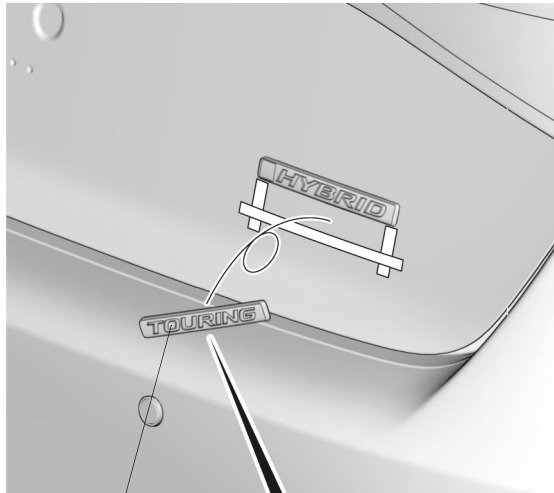

Do not reuse.

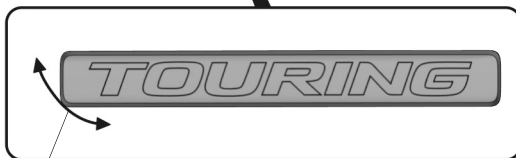


NYLON STRING  
MOVEMENT

QM30802AB

37. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

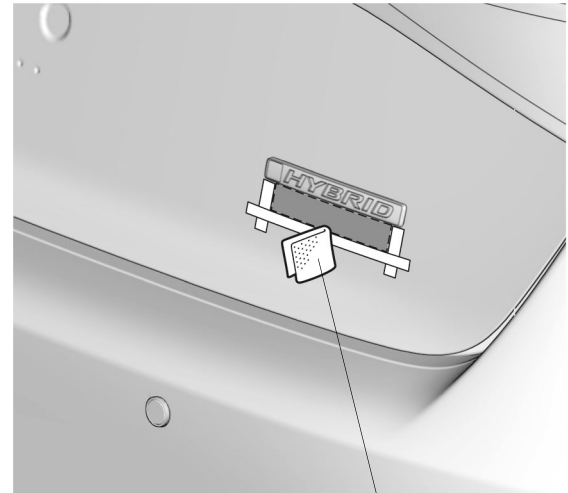

ALCOHOL  
WIPE

QM30803AB


38. Attach the new TOURING emblem.

## NOTE

Check the position of the double-sided adhesive tape and make sure to press firmly.

NEW TOURING  
EMBLEM

Line up.

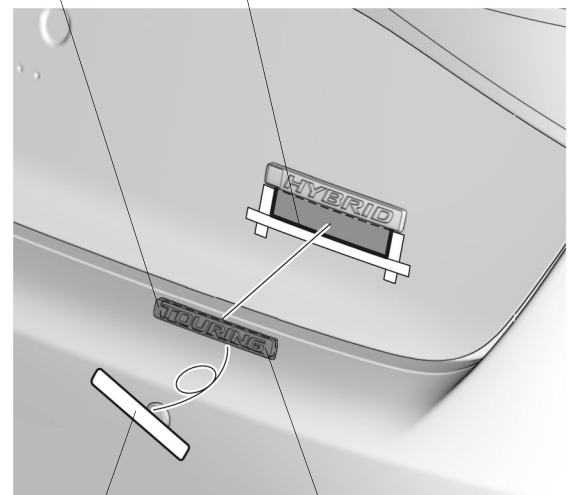

ADHESIVE  
BACKING  
(Remove.)


DOUBLE-SIDED  
ADHESIVE TAPE

QM30804AB



# Germain Honda of College Hills

39. Secure the new TOURING emblem.

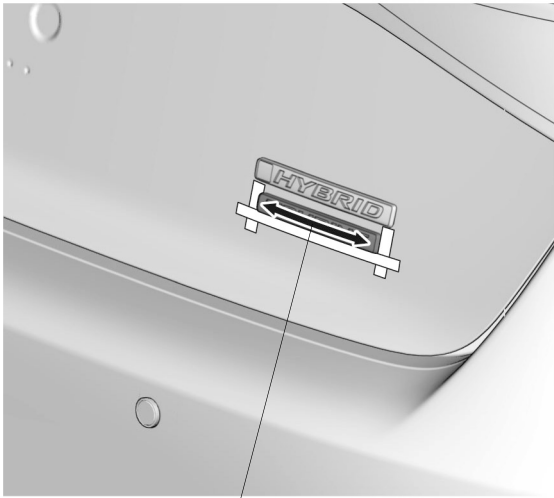

QM30805AB

40. Remove the masking tape.  
41. Check that all parts are installed properly.