

Germain Honda of College Hills



INSTALLATION INSTRUCTIONS

Accessory

DOOR SILL
PROTECTION FILMS

Application

2023 ACCORD
MODEL SERIES


Publications No.

VERSION 1

Issue Date

DEC 2022

GENERAL VIEW

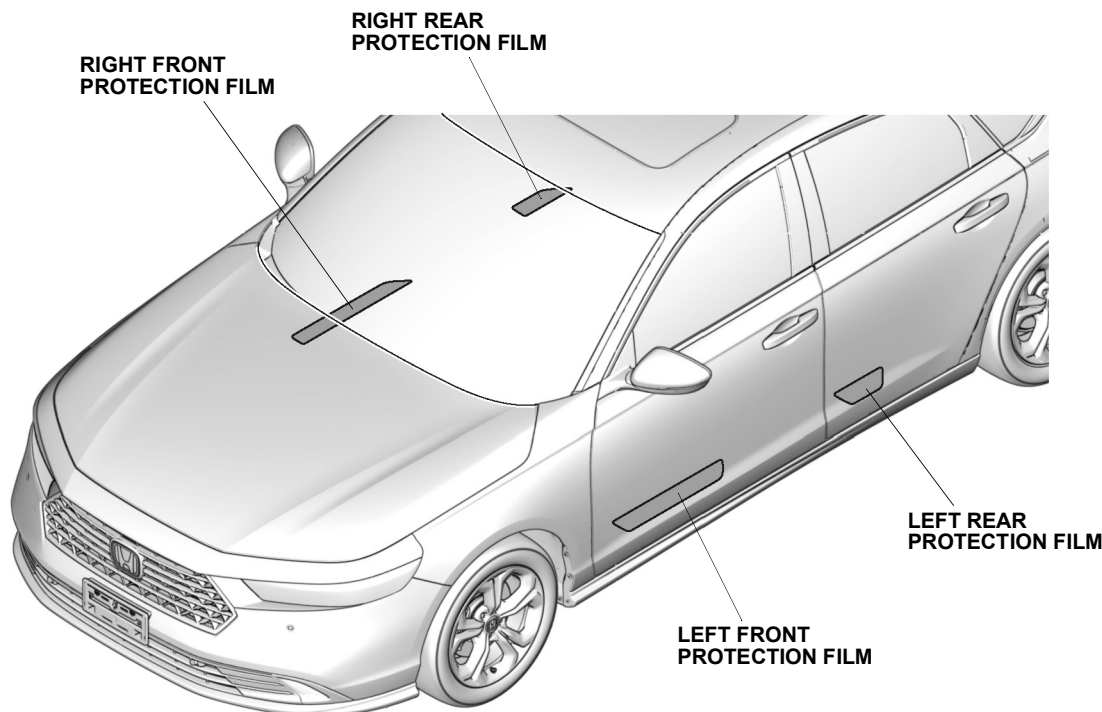

QM30203AA

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

 **DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

 **WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

 **CAUTION**

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Germain Honda of College Hills

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.


Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Cover nearby parts with a shop towel to prevent getting them wet.
- Always wear gloves when working with 3M protective tape application solution.
- Use 3M protective tape application solution with a spray bottle.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

Germain Honda of College Hills

PARTS LIST

Door Sill Protection Films Kit (P/N 08P04-30A-100)

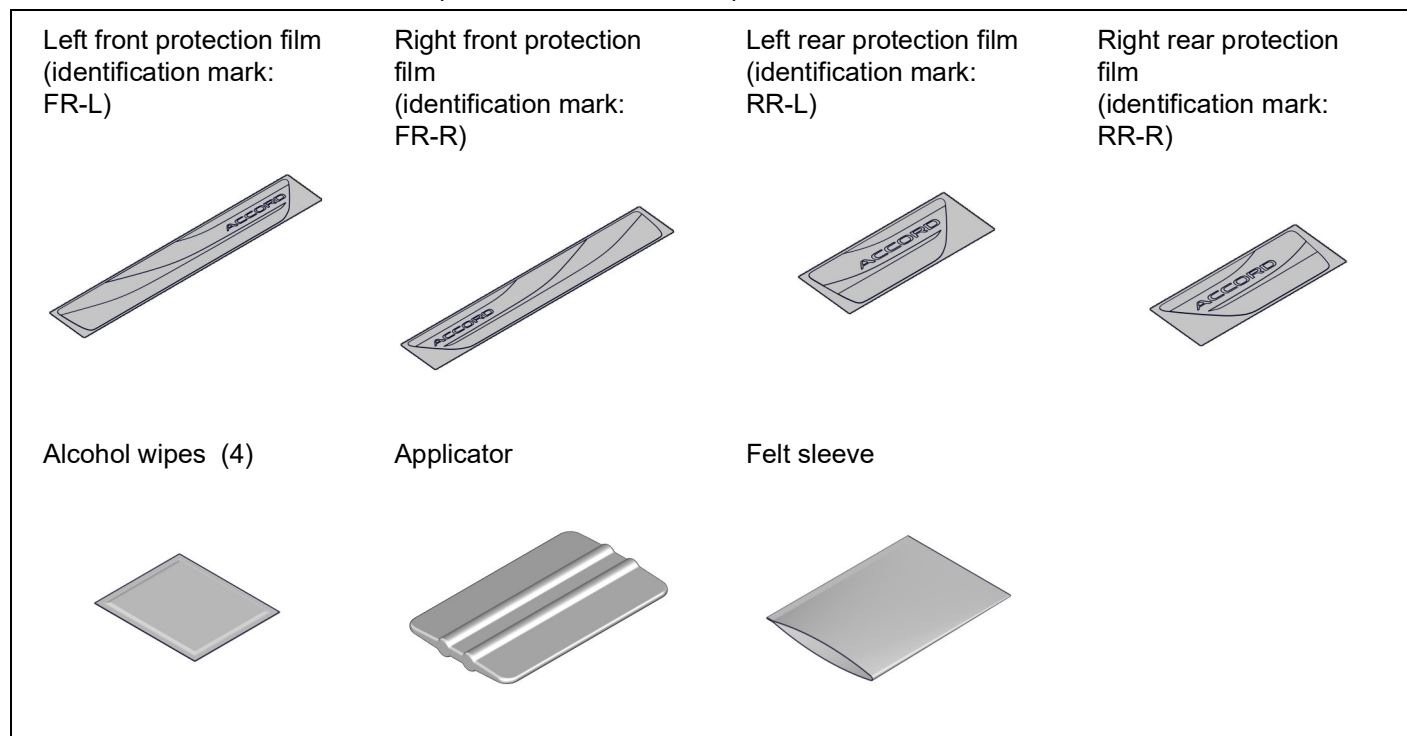


REQUIRED TOOLS AND SUPPLIES

- Shop towel
- Masking tape
- Ruler
- Gloves
- 3M Protective tape application solution

Germain Honda of College Hills


INSTALLATION

1. Open the left front door.
2. Attach masking tape.



DRIVER'S
KICK PANEL

DRIVER'S
DOOR SILL TRIM

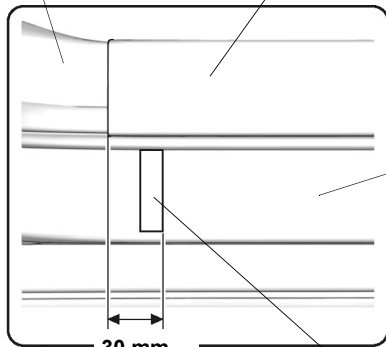

VEHICLE
PANEL

30 mm
(1.18 in.)

MASKING TAPE




QM30204AA

3. Clean the attaching area.

NOTE


Allow to dry thoroughly.

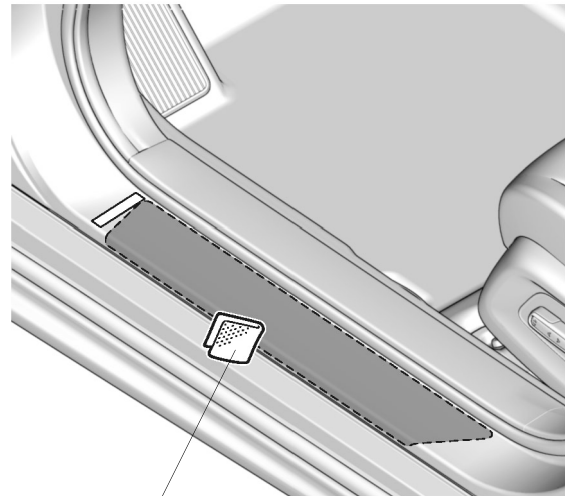

ALCOHOL
WIPE

QM30205AA

4. Spray the vehicle panel.

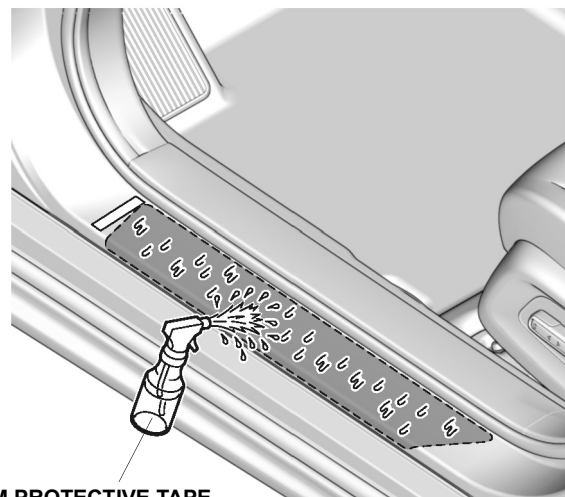

3M PROTECTIVE TAPE
APPLICATION SOLUTION


QM30206AA

Germain Honda of College Hills


5. Remove the adhesive backing.

NOTE


Make sure to check the identification mark before installation.

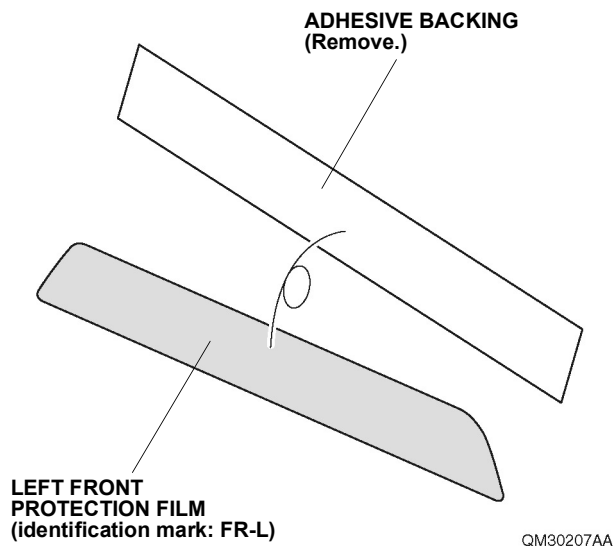

6. Spray the left front protection film.

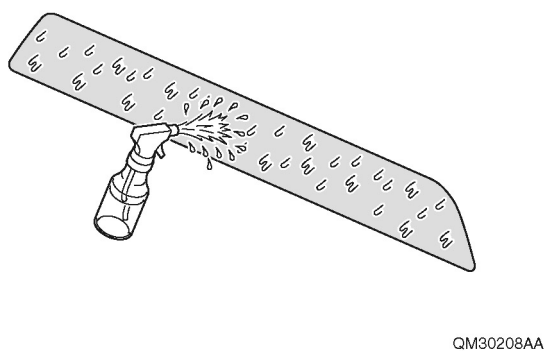

7. Line up the left front protection film.

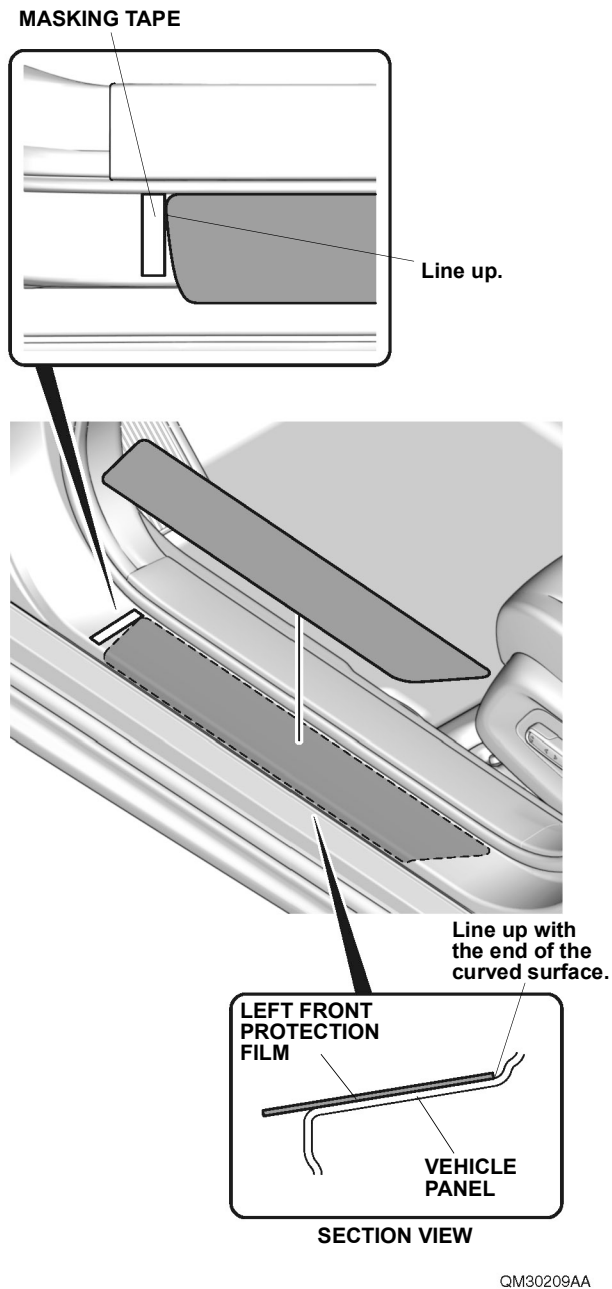



Germain Honda of College Hills

8. Secure the left front protection film.


NOTE

Move the felt sleeve in one direction only.

APPLICATOR FELT SLEEVE

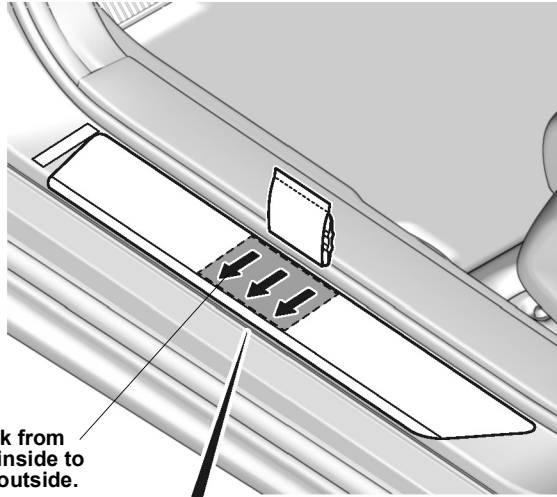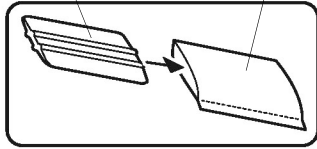

Work from the inside to the outside.

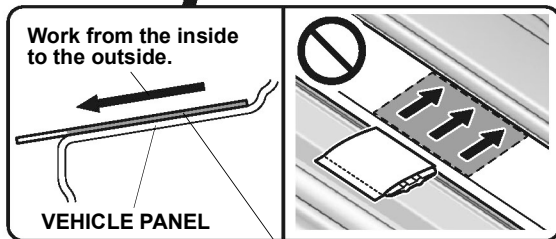

Work from the inside to the outside.

VEHICLE PANEL

SECTION VIEW



LEFT FRONT PROTECTION FILM

QM30210AA

9. Secure the left front protection film.

NOTE

Move the felt sleeve in one direction only.

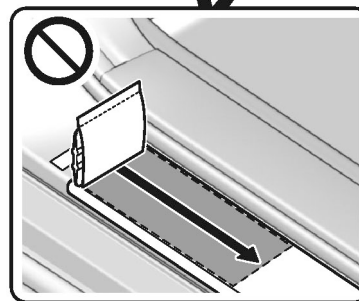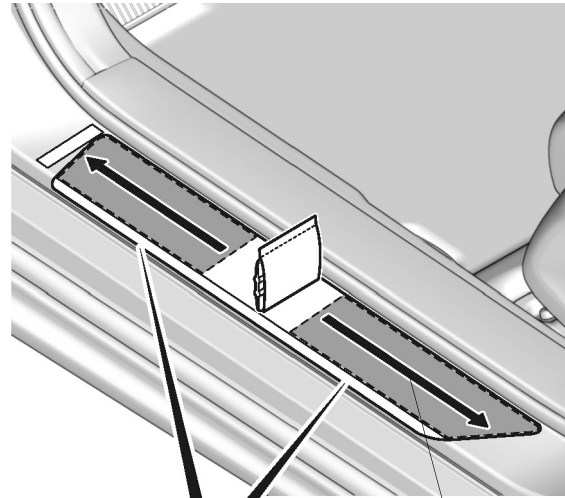

Work from the center to the outside.


QM30211AA

Germain Honda of College Hills


10. Secure the left front protection film.

NOTE

Move the felt sleeve in one direction only.

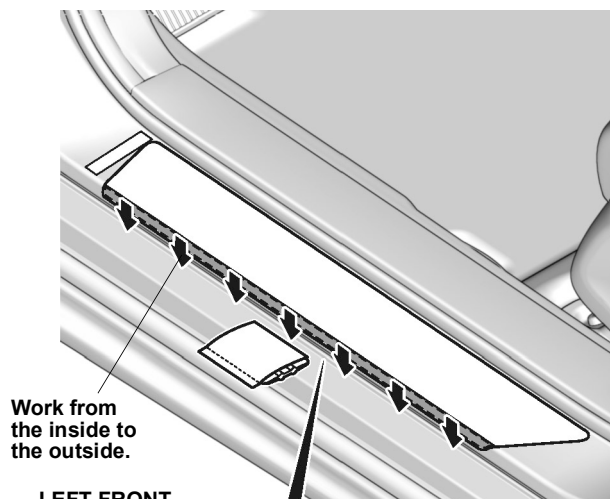

LEFT FRONT PROTECTION FILM

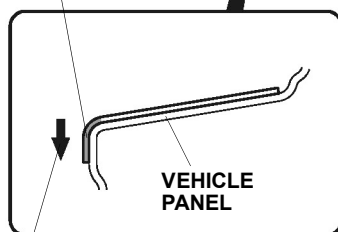

SECTION VIEW


Work from the inside to the outside.

QM30212AA


11. Secure the left front protection film.

NOTE

Move the felt sleeve in one direction only.

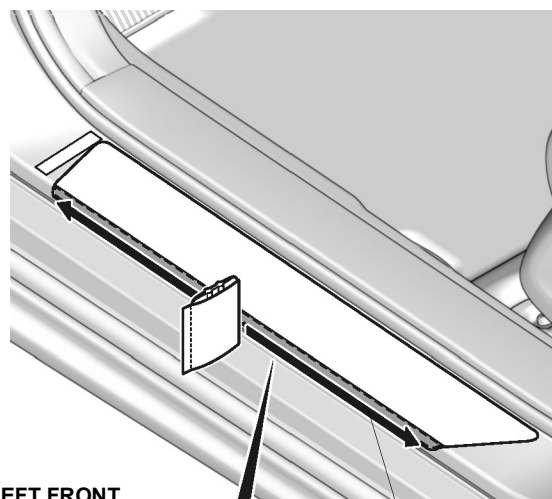

LEFT FRONT PROTECTION FILM

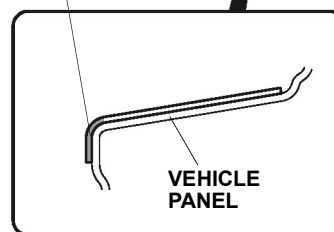

SECTION VIEW

Work from the center to the outside.


QM30213AA

Germain Honda of College Hills

12. Wipe off the 3M protective tape application solution.

NOTE

Allow to dry thoroughly.

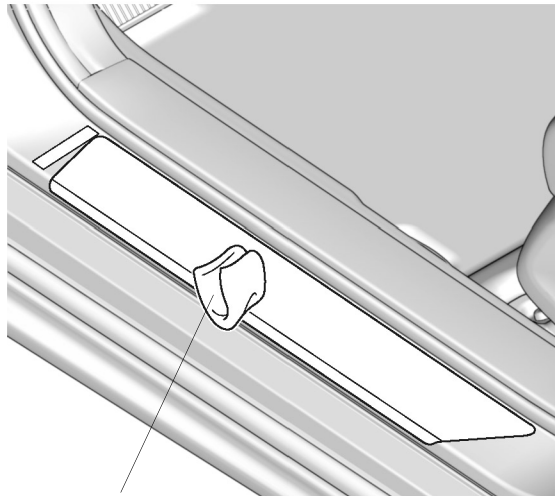


SHOP TOWEL

QM30214AA

13. Remove the masking tape.


14. Open the left rear door.

15. Attach masking tape.




LEFT B-PILLAR
LOWER TRIM

LEFT REAR
DOOR SILL TRIM

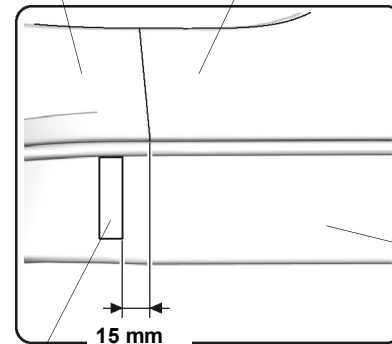

VEHICLE
PANEL

MASKING
TAPE

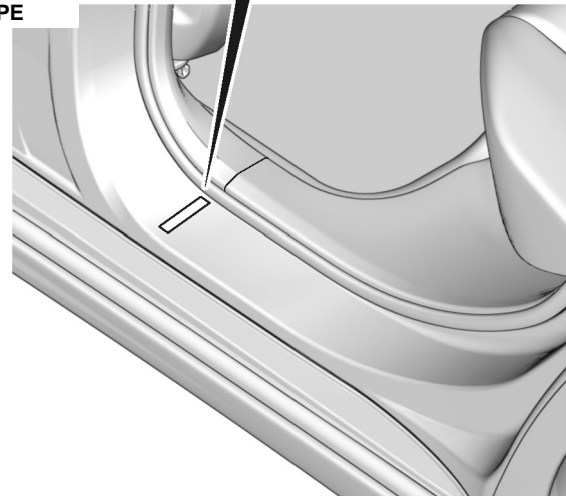


QM30215AA

Germain Honda of College Hills

16. Clean the attaching area.


NOTE
Allow to dry thoroughly.

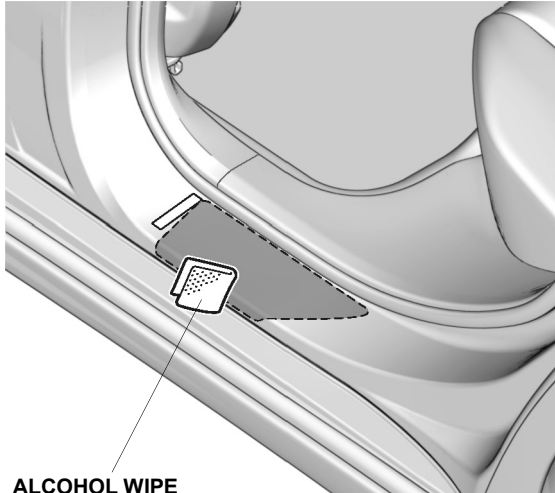

ALCOHOL WIPE

QM30216AA

17. Spray the vehicle panel.

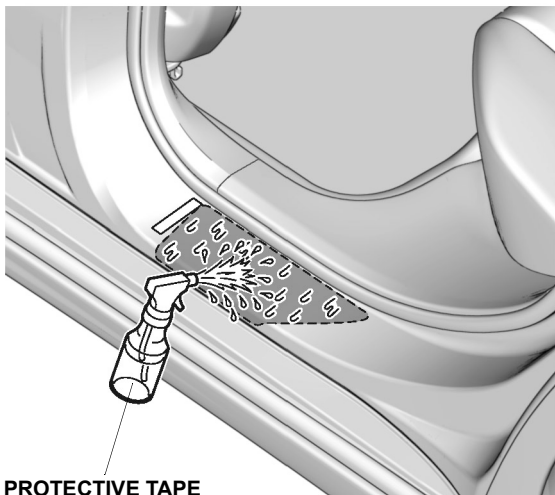


3M PROTECTIVE TAPE
APPLICATION SOLUTION

QM30217AA

18. Remove the adhesive backing.

NOTE
Make sure to check the identification mark before installation.

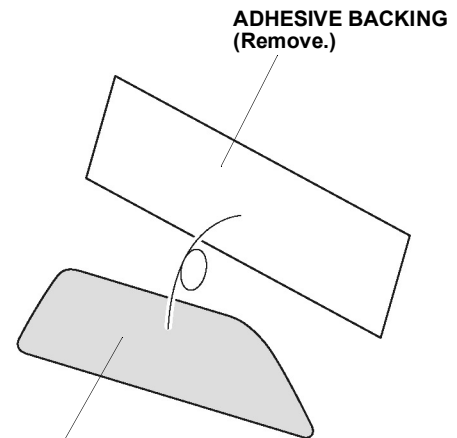


ADHESIVE BACKING
(Remove.)

LEFT REAR
PROTECTION FILM
(identification mark: RR-L)

QM30301AA

19. Spray the left rear protection film.

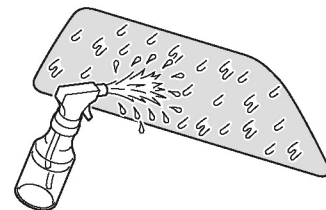


QM30302AA


Germain Honda of College Hills

20. Line up the left rear protection film.


MASKING TAPE

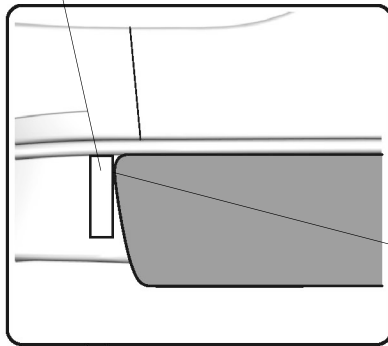

Line up.

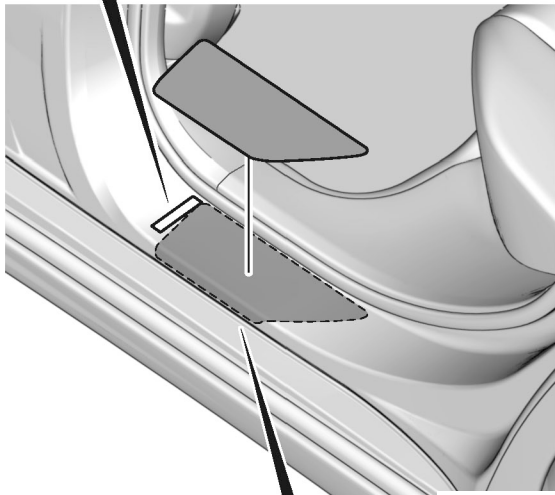

Line up with the end of the curved surface.

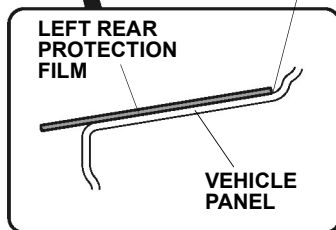

SECTION VIEW


QM30303AA

21. Secure the left rear protection film.


NOTE

Move the felt sleeve in one direction only.

FELT SLEEVE

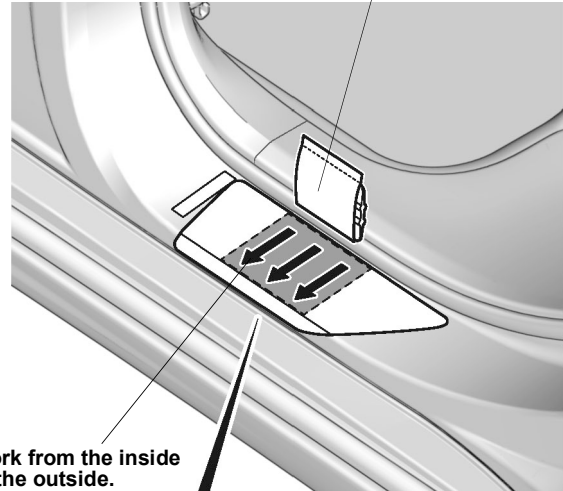

Work from the inside to the outside.

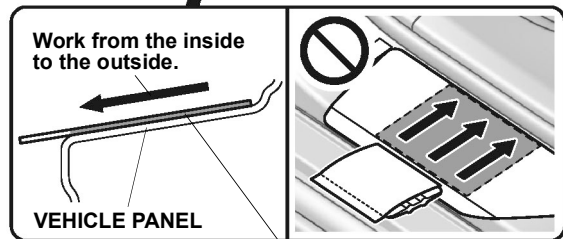

Work from the inside to the outside.

VEHICLE PANEL

SECTION VIEW

LEFT REAR PROTECTION FILM



QM30304AA

Germain Honda of College Hills

22. Secure the left rear protection film.

NOTE

Move the felt sleeve in one direction only.

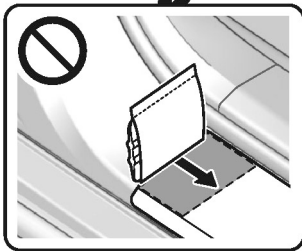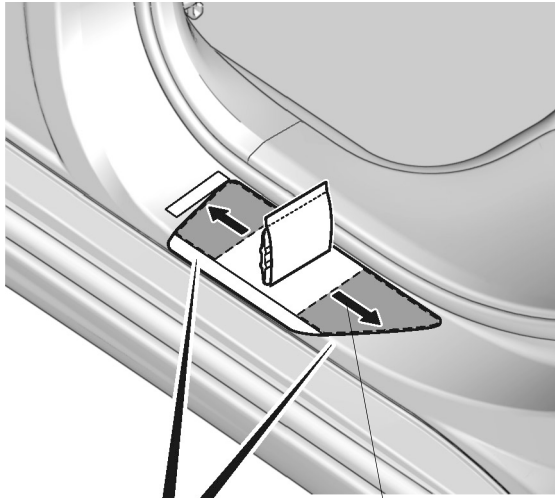


Work from the center
to the outside.

QM30305AA


23. Secure the left rear protection film.

NOTE

Move the felt sleeve in one direction only.

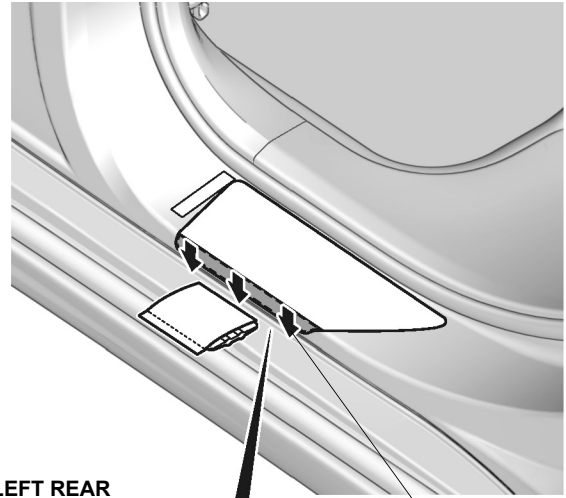

LEFT REAR
PROTECTION FILM

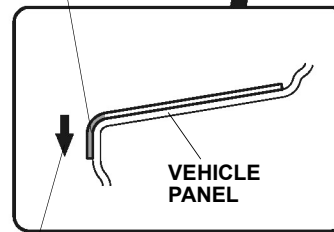

Work from the inside
to the outside.

SECTION VIEW

Work from the inside
to the outside.


QM30306AA

Germain Honda of College Hills


24. Secure the left rear protection film.

NOTE

Move the felt sleeve in one direction only.

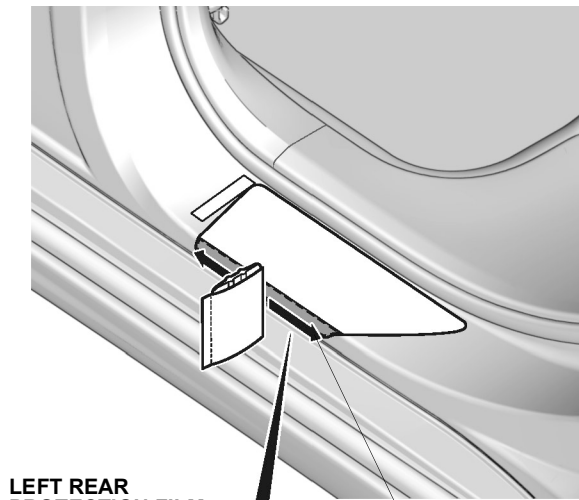

LEFT REAR
PROTECTION FILM

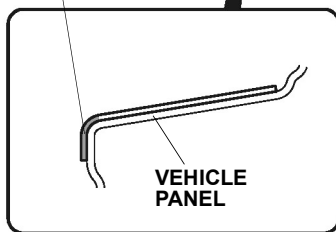

SECTION VIEW


Work from
the center to
the outside.

QM30307AA

25. Wipe off the 3M protective tape application solution.

NOTE


Allow to dry thoroughly.

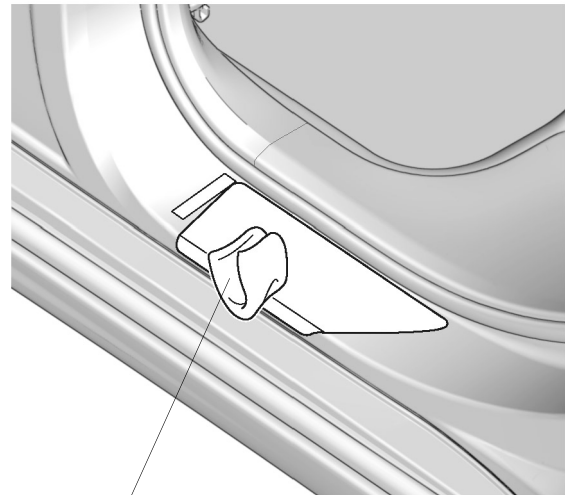

SHOP TOWEL

QM30308AA

26. Remove the masking tape.
27. Repeat the same procedures on the other side.

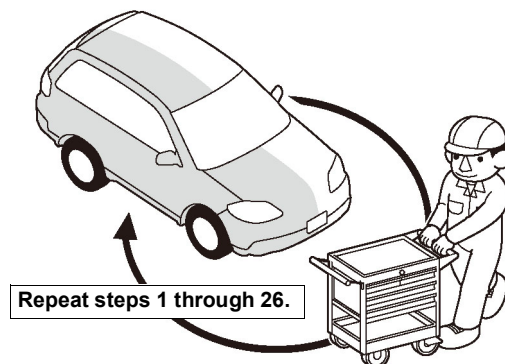

Repeat steps 1 through 26.

Q9D1014AM

28. Check that all parts are installed properly.