

# Germain Honda of College Hills




## INSTALLATION INSTRUCTIONS

Accessory  
**ILLUMINATED  
DOOR SILL TRIMS**

Application  
**2023 ACCORD  
MODEL SERIES**

Publications No.  
**VERSION 1**  
Issue Date  
**DEC 2022**

## GENERAL VIEW

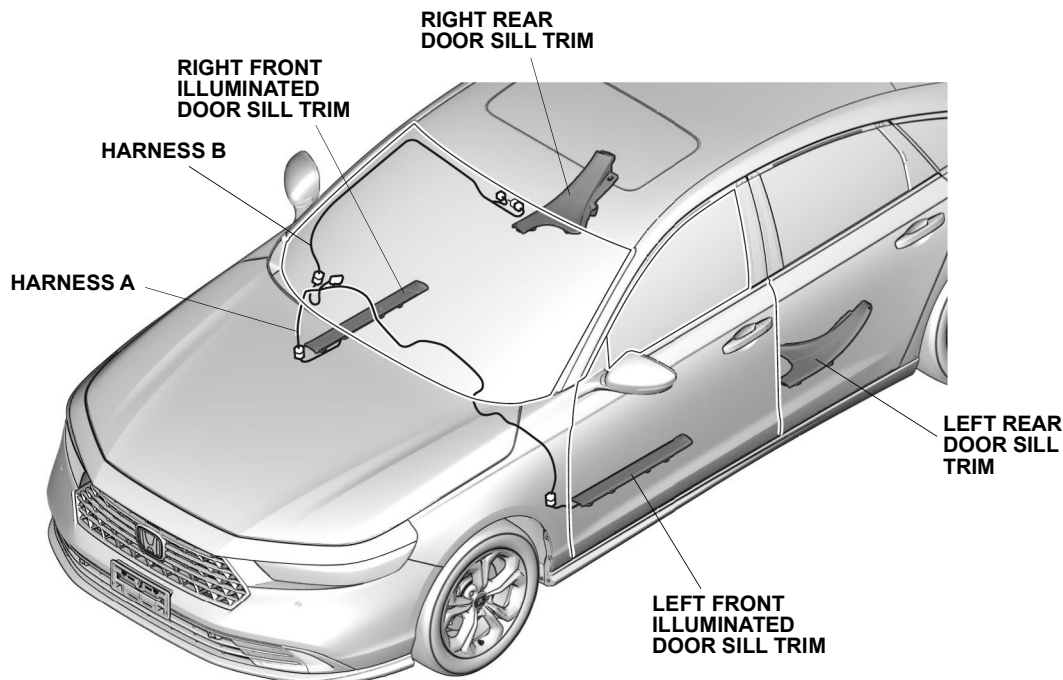

QM31701AG

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

**Safety:** Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.



**DANGER**

You will be killed or seriously hurt if you do not follow the instructions.



**WARNING**

You can be killed or seriously hurt if you do not follow the instructions.



**CAUTION**

You can be hurt if you do not follow the instructions.

**NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

**NOTE**

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.

# Germain Honda of College Hills


## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.

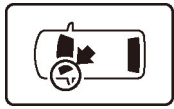

The location on the vehicle.

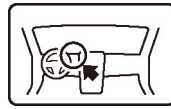

The location in the vehicle.  
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.  
(Do not reuse.)


## Wire Harness Routing Precaution

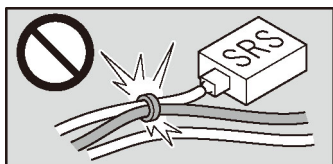


Do not secure the  
accessory harness to the  
SRS harness.  
(except for instruction  
cases.)

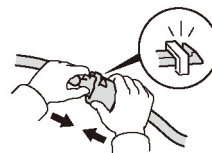


Push the connectors and  
terminals together until  
they lock.

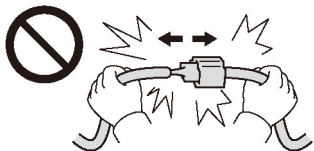

Do not pull the harness to  
unplug the connectors.

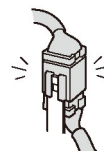

Install removed  
connectors in their original  
location.

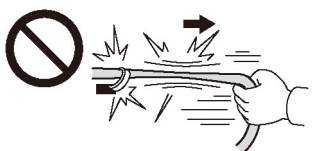


Do not pull the harness.



Secure the accessory  
harness as shown.



Do not pinch the harness.

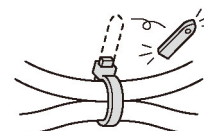

Cut off the excess wire tie.

# Germain Honda of College Hills

## Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

## Safety: Electric Parts


Always disconnect the negative cable from the battery before beginning work.

## Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.


## PARTS LIST

### Illuminated Door Sill Trims Kit (P/N 08E12-30A-100)

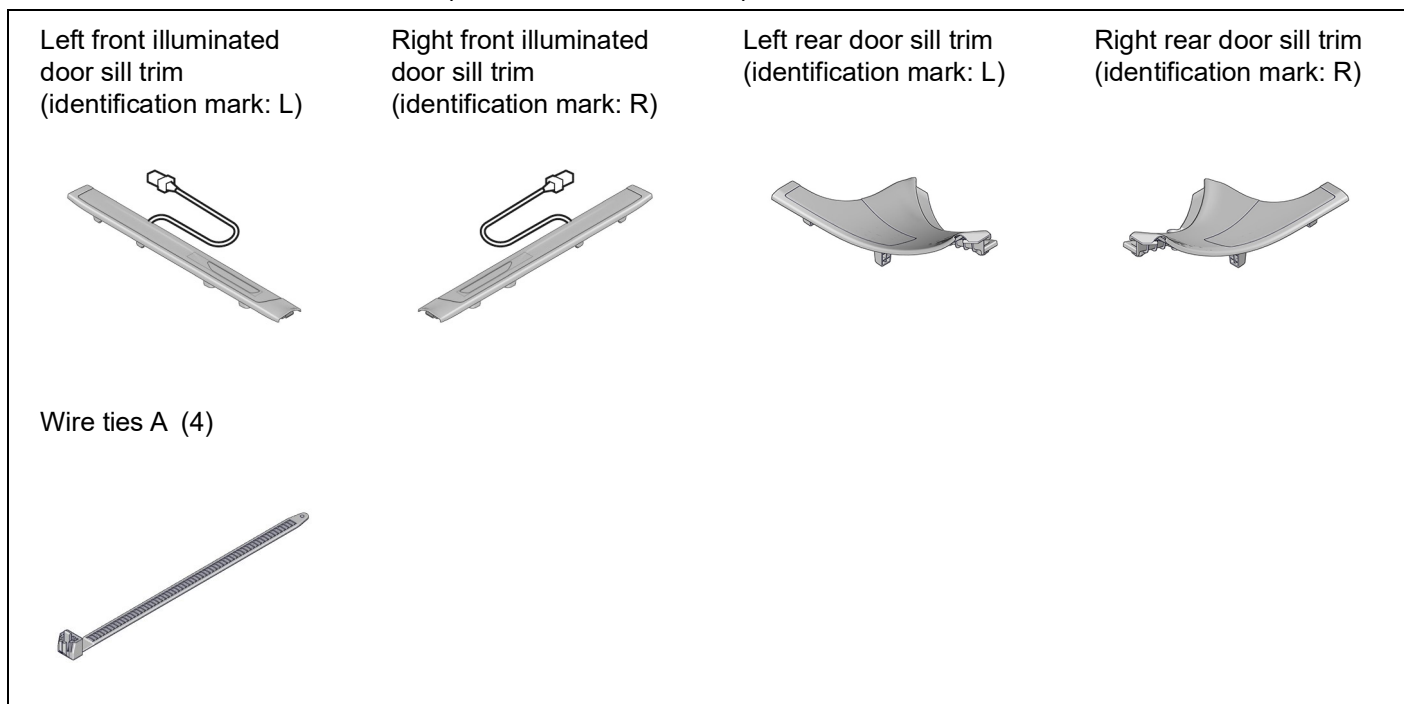

# Germain Honda of College Hills

## Attachment Kit (P/N 08E12-30A-100A)

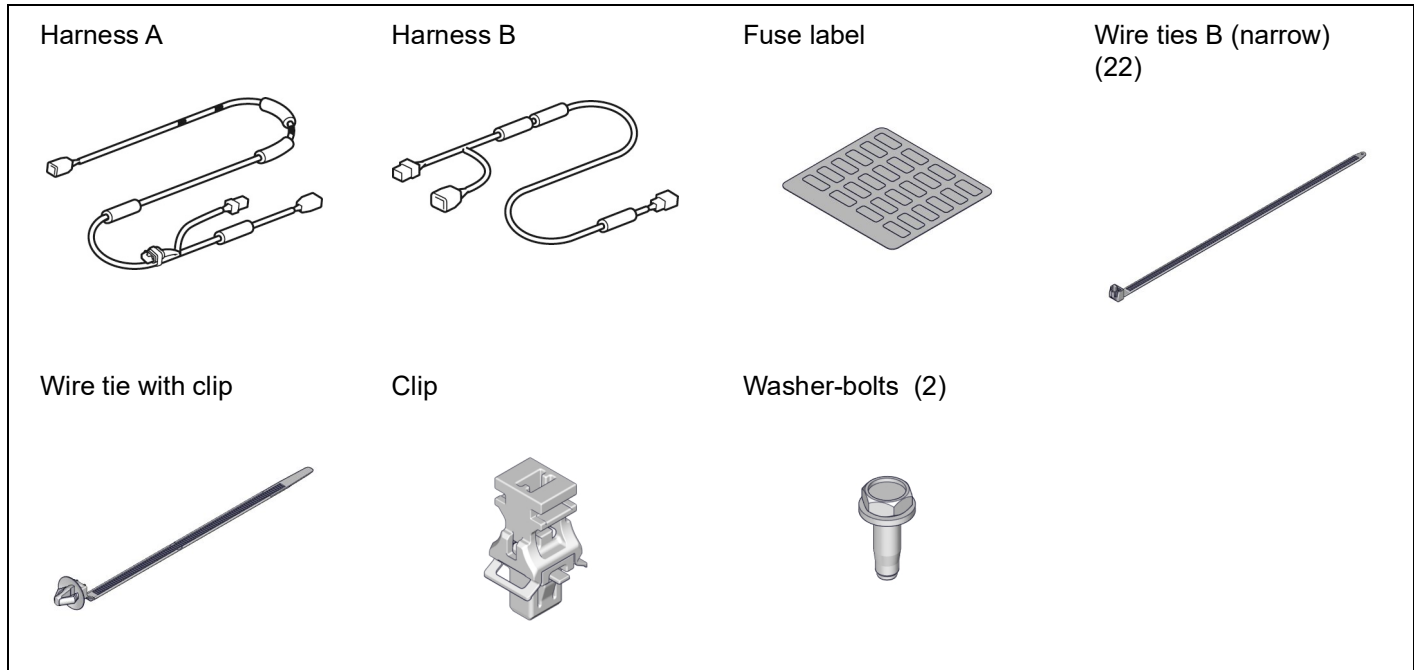

## REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- Phillips screwdriver
- Ratchet
- Ruler
- Isopropyl alcohol
- Diagonal cutters
- 10 mm Socket
- Shop towel
- Masking tape
- Torque wrench

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)




# Germain Honda of College Hills

## INSTALLATION

1. Disconnect the negative cable from the battery.


### NOTE

With the driver's door open, turn the vehicle to the OFF (LOCK) mode, then wait at least 3 minutes before disconnecting the 12 volt negative battery cable.

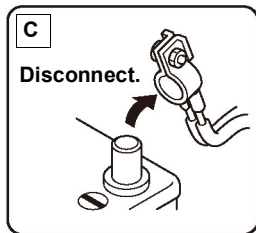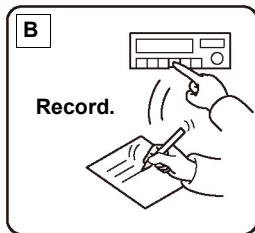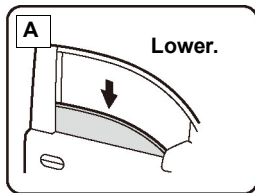


QCD0502BM

2. Move the select knob to the "D" position.

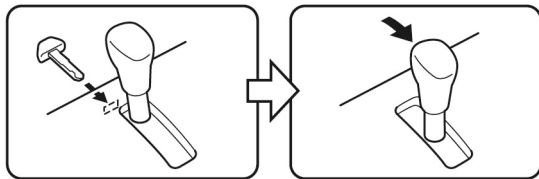


QM22301AB

3. Remove the self-tapping screws.

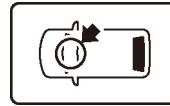


SUNGLASS  
HOLDER

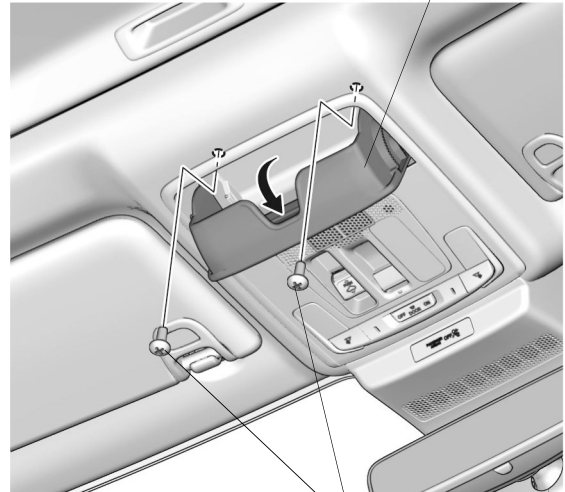

QM32001AB

2 SELF-TAPPING  
SCREWS


4. Remove the roof module.

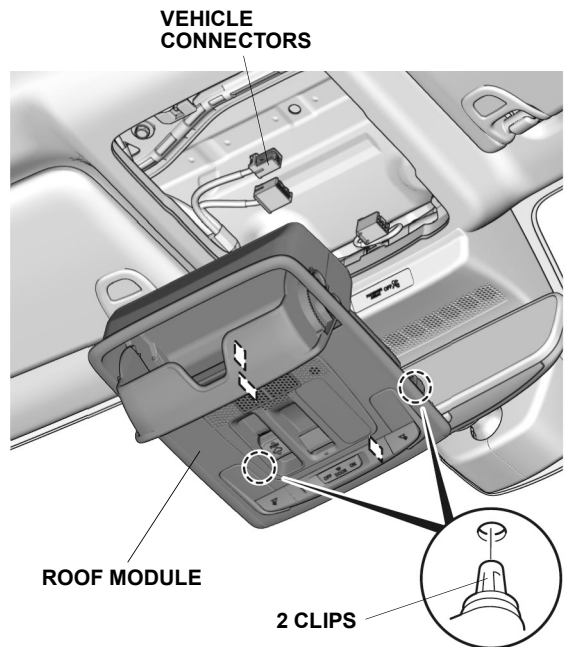


QM32002AB

# Germain Honda of College Hills


5. Release the clips.

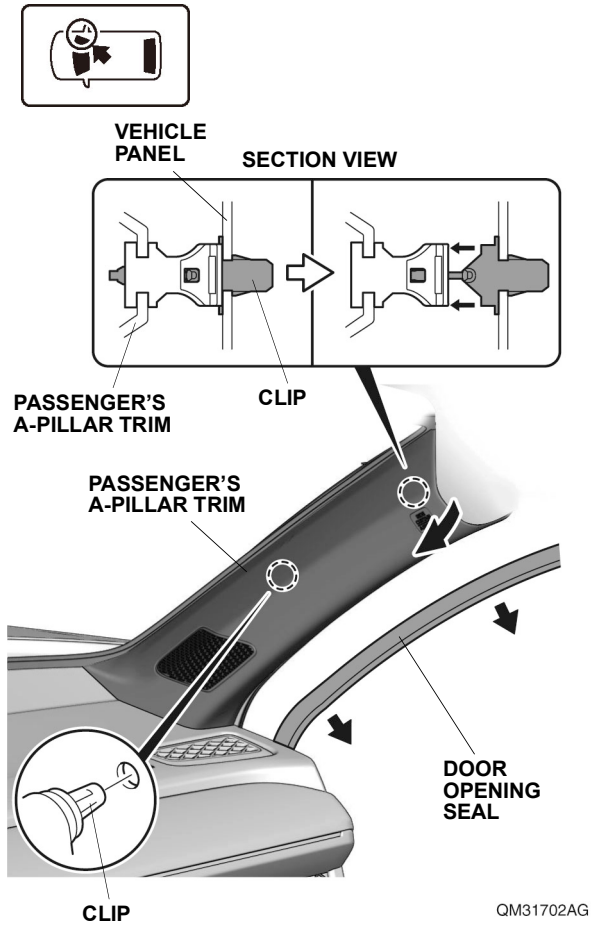

6. Insert the shop towel.

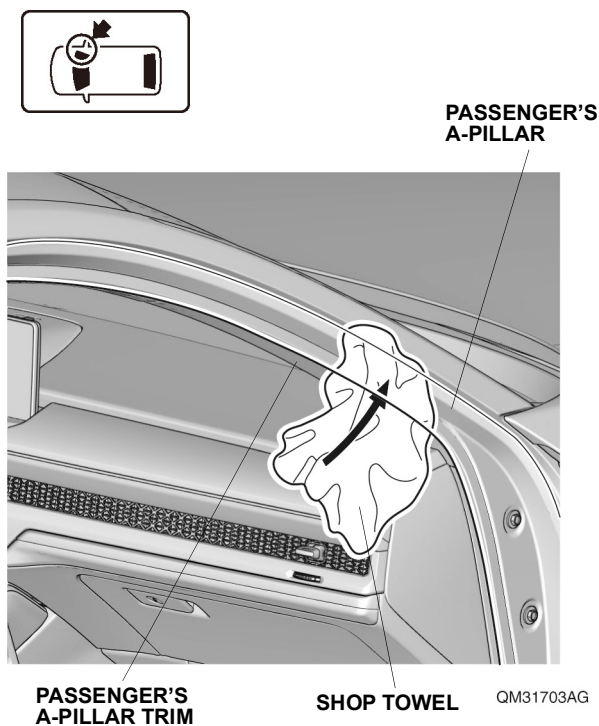



7. Remove the passenger's A-pillar trim.

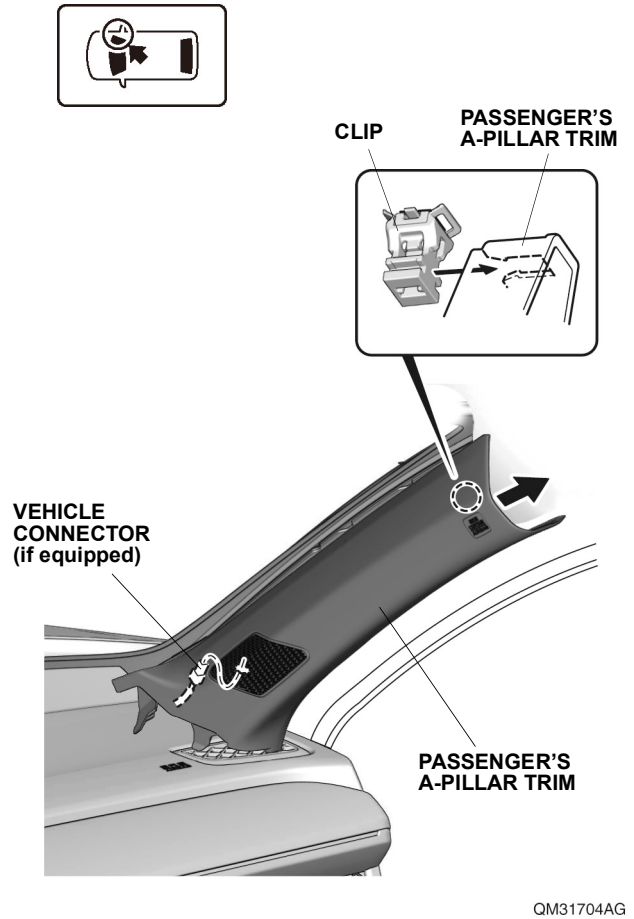

# Germain Honda of College Hills

8. Remove the clip.

2 RETAINING TABS

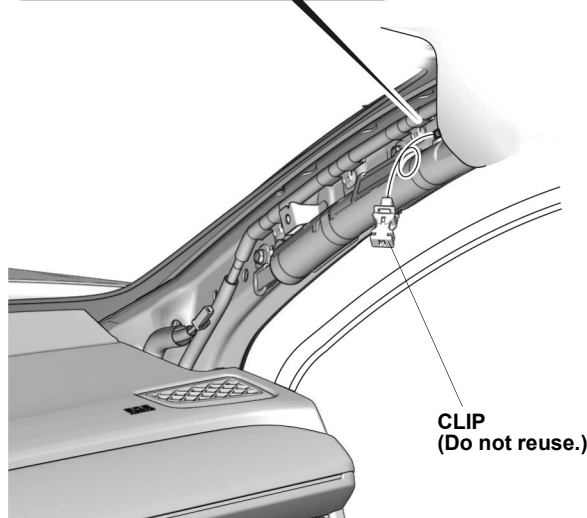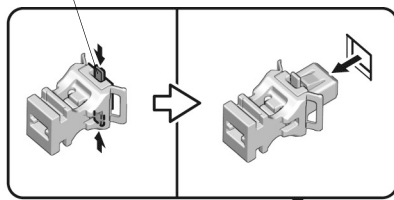

CLIP  
(Do not reuse.)


QM31705AG

9. Remove the passenger's dashboard side lid.



3 RETAINING TABS

PASSENGER'S  
DASHBOARD  
SIDE LID

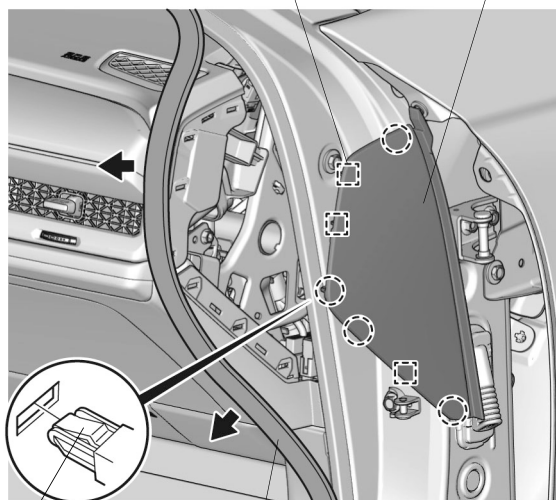

4 CLIPS


DOOR OPENING  
SEAL

QM31706AG

10. Attach masking tape to protect the vehicle.


## NOTE

Do not remove the masking tape until after the parts are installed.

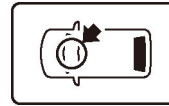

METER VISOR

OPPOSITE SIDE VIEW

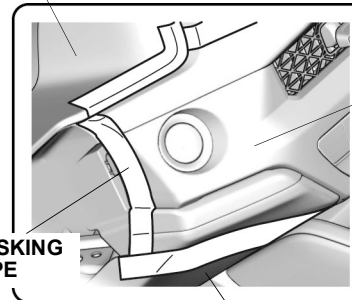


DASHBOARD  
CENTER TRIM

MASKING  
TAPE


INSTRUMENT  
PANEL

DRIVER'S INSIDE  
LOWER COVER

MASKING  
TAPE

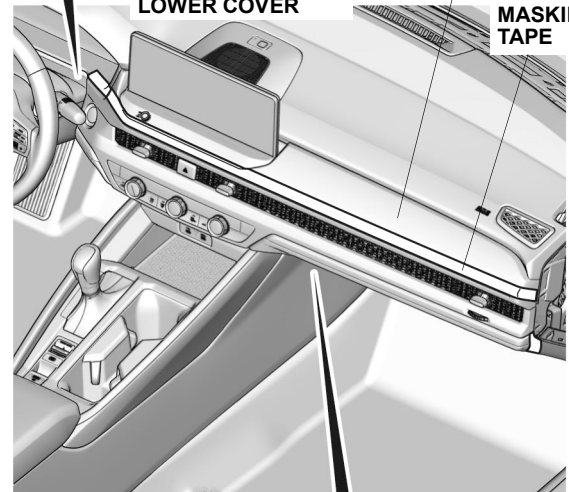

OPPOSITE SIDE VIEW

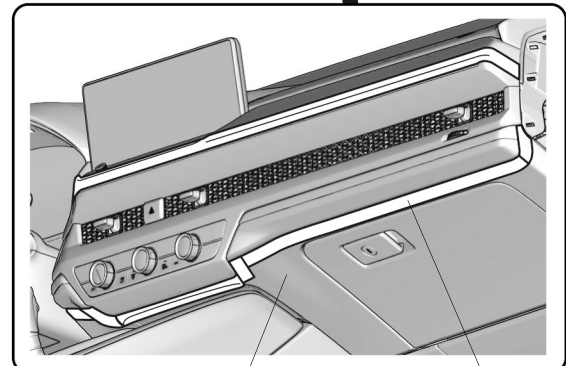


INSTRUMENT  
PANEL

MASKING TAPE  
QM31707AG

# Germain Honda of College Hills


11. Remove the dashboard center trim.

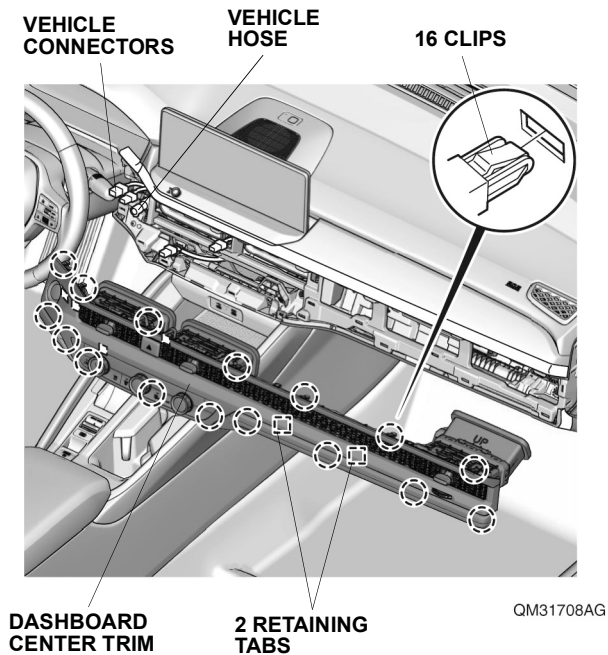

12. Attach masking tape to protect the vehicle.


## NOTE

Do not remove the masking tape until after the parts are installed.

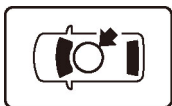


MASKING TAPE


SELECT KNOB

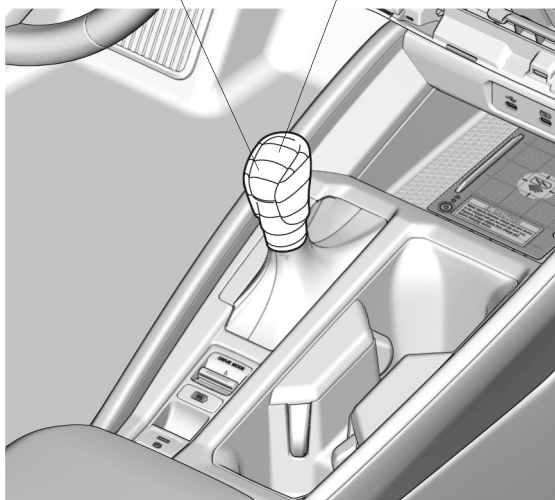

13. Release the boot.

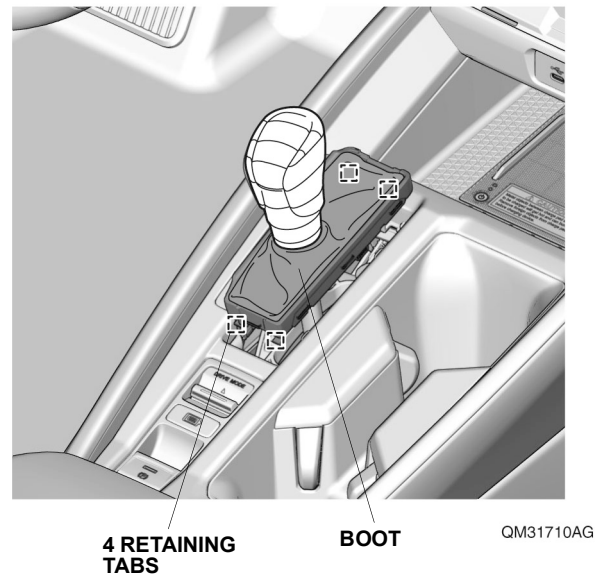

14. Open the armrest.
15. Remove the console panel.

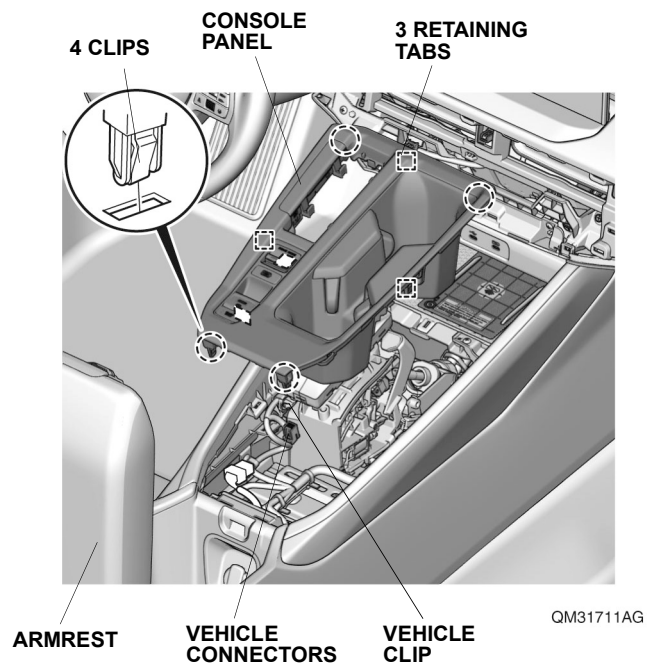


# Germain Honda of College Hills

16. Attach masking tape to protect the vehicle.

## NOTE

Do not remove the masking tape until after the parts are installed.

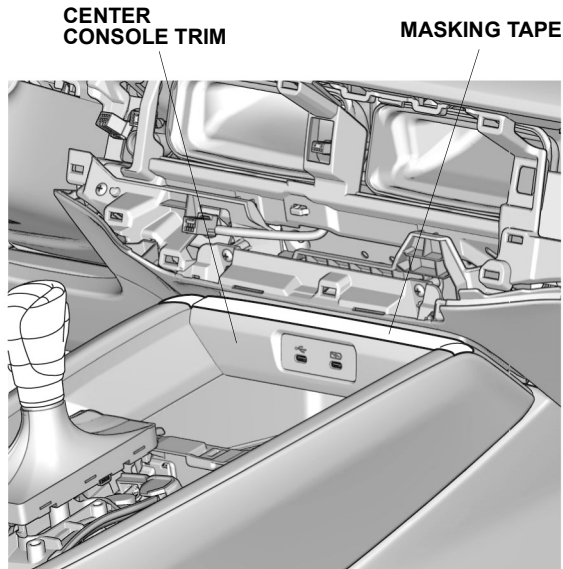


QM31501AB

17. Remove the center console trim.


## NOTE

Remove in the order shown.

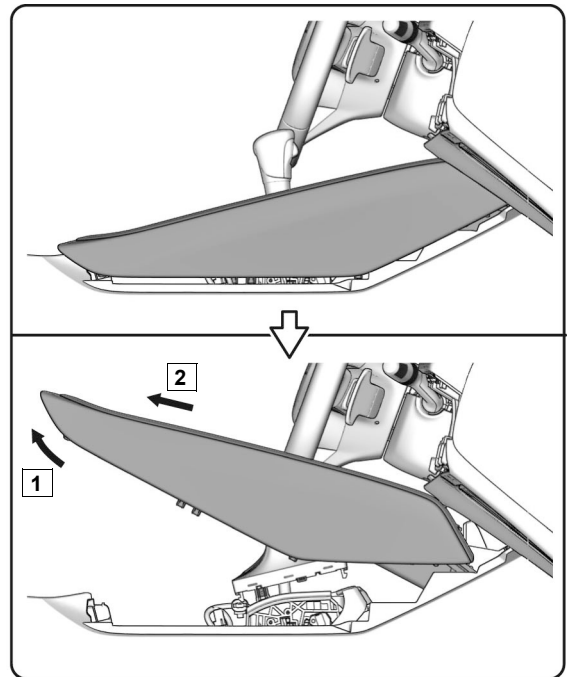

6 RETAINING  
TABS

VEHICLE  
CONNECTORS

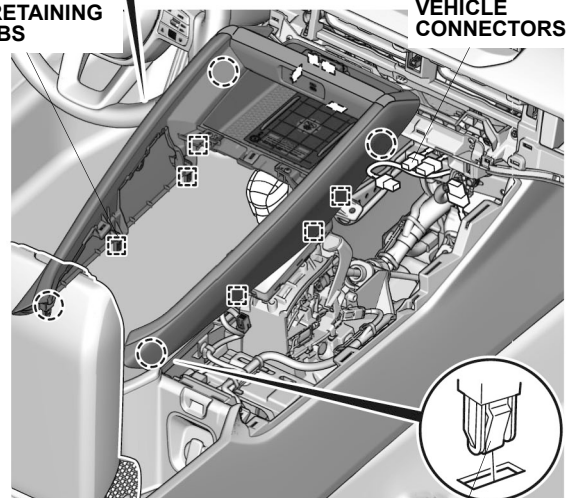


QM31712AG

4 CLIPS


# Germain Honda of College Hills

18. Remove the passenger's dashboard under cover.

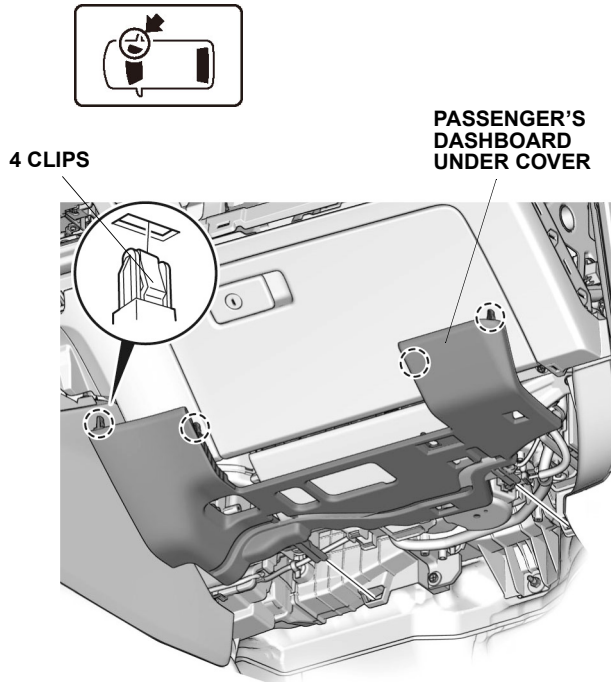


QM31713AG

19. Release the damper rod.

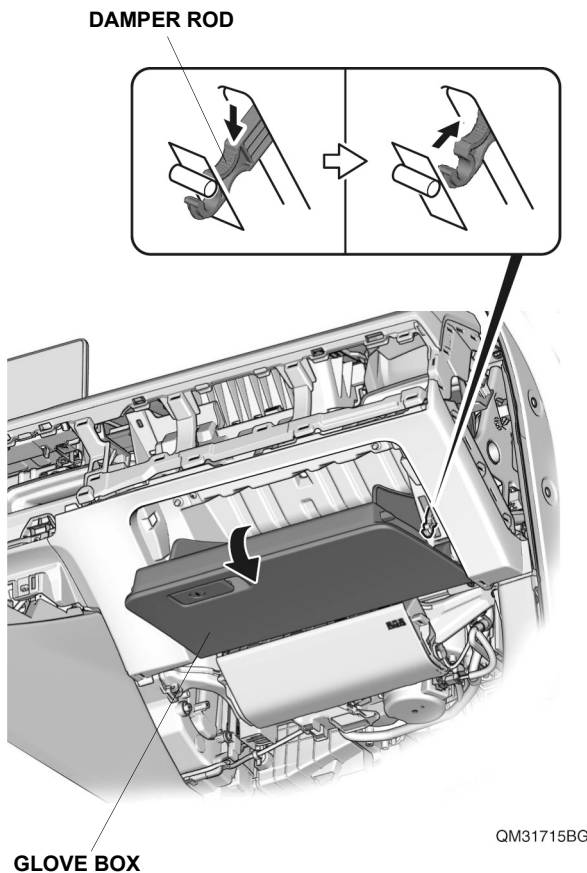


QM31715BG

20. Remove the glove box.

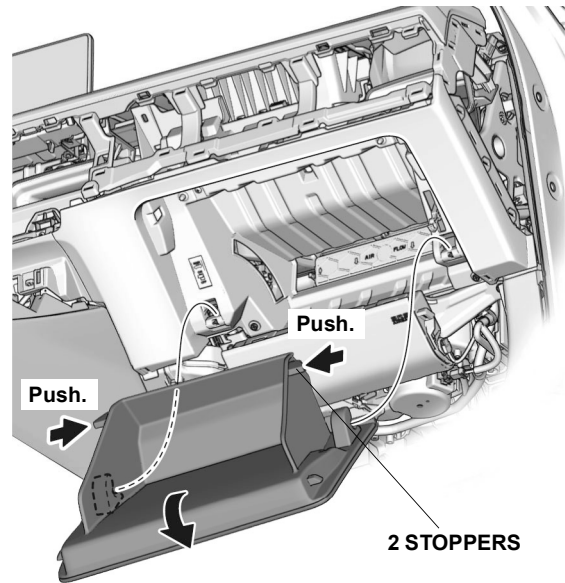

QM92615AG



21. Remove the glove box back cover.

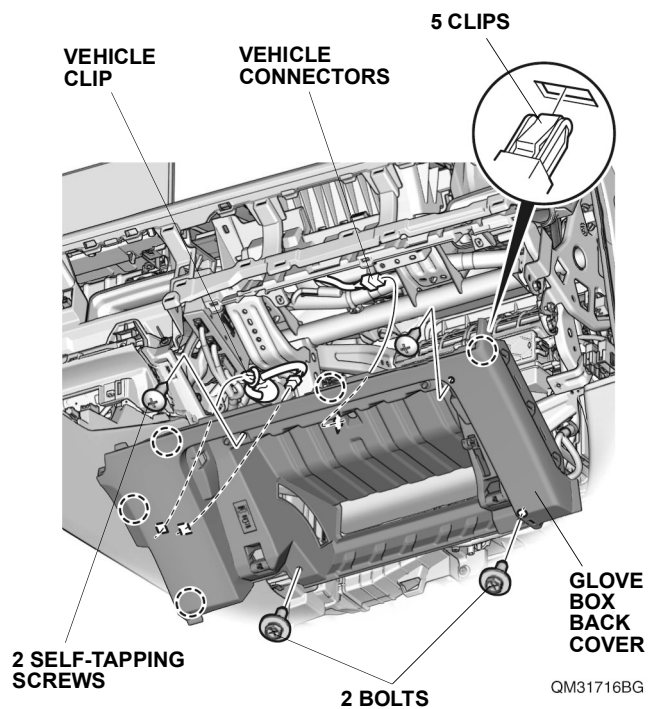


QM31716BG

# Germain Honda of College Hills

22. Remove the passenger's door sill trim.

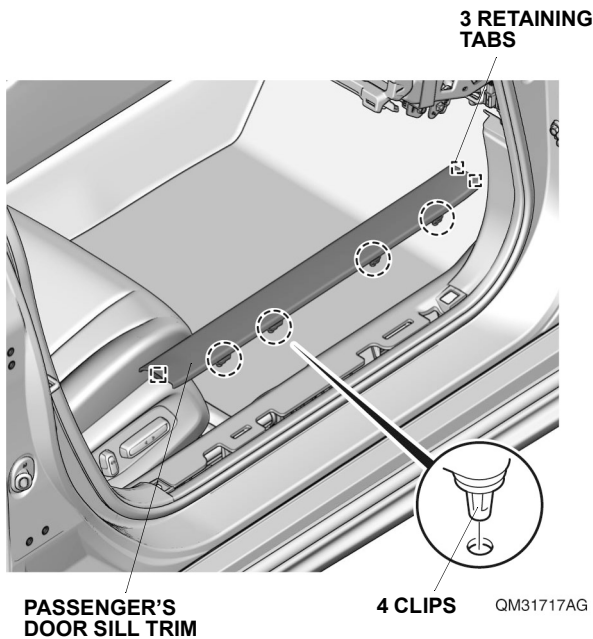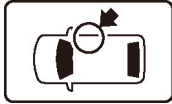



23. Remove the passenger's kick panel.

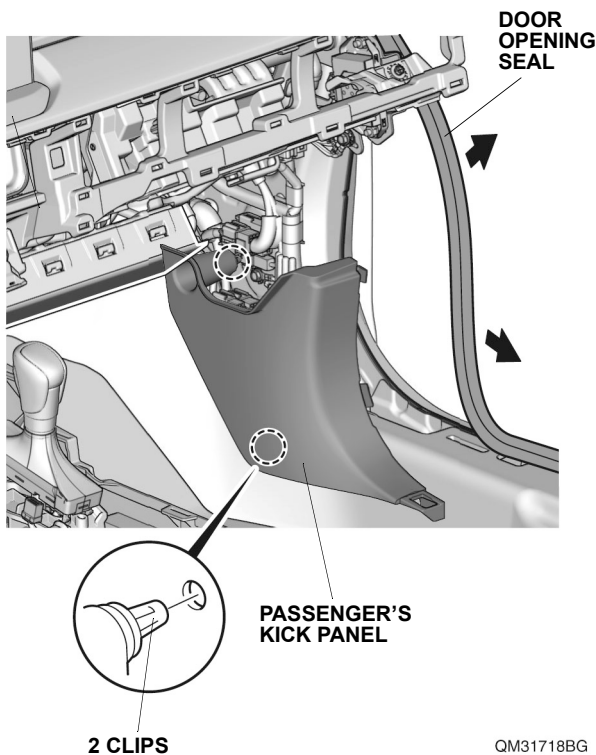


24. Release the rear seat cushion.

## NOTE

Release in the order shown.

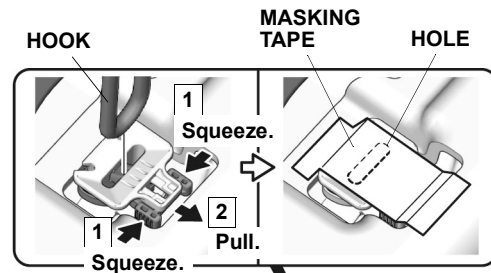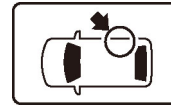

## REAR SEAT CUSHION

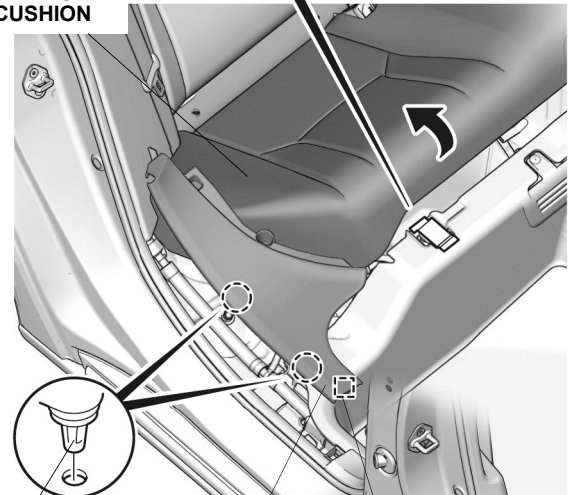


QM31719AG


25. Remove the right rear door sill trim.
26. Attach masking tape.

# Germain Honda of College Hills

27. Remove the driver's outside lower cover.

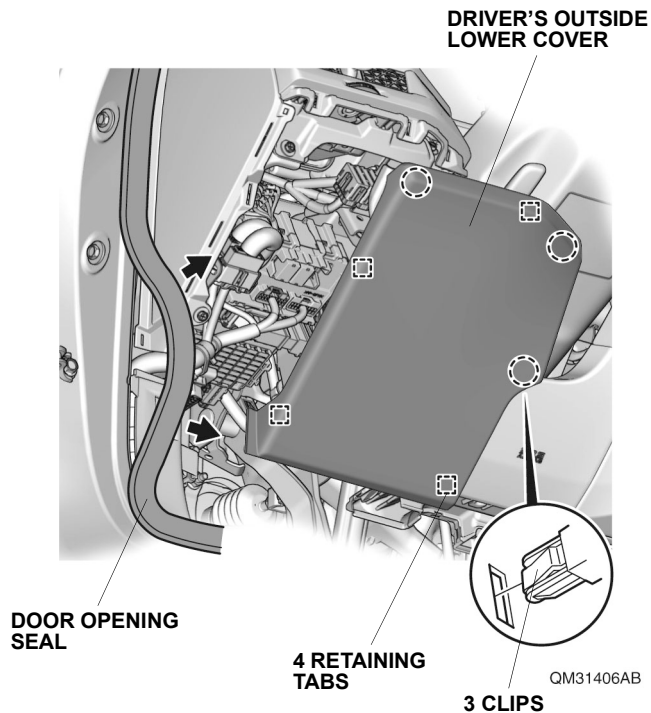




28. Remove the driver's inside lower cover.

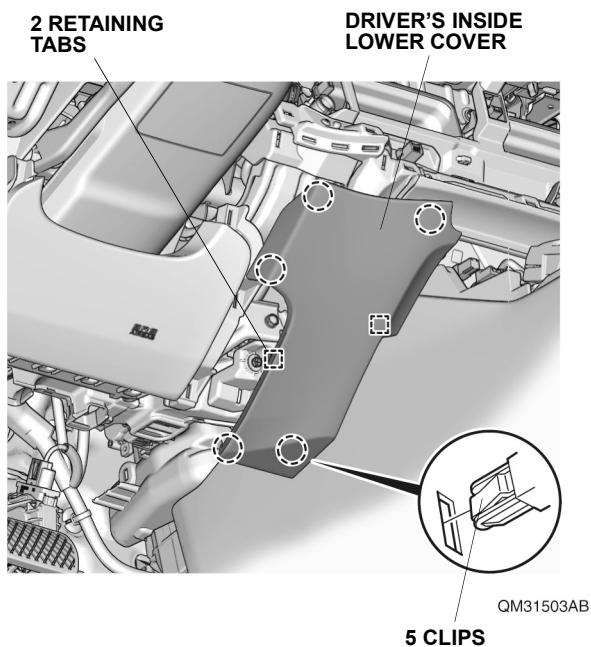

29. Remove the driver's knee airbag.



## NOTICE

- Do not drop the removed airbag or hit it on an object.
- Place the removed airbag in a safe place with the padded surface (top) facing upward.

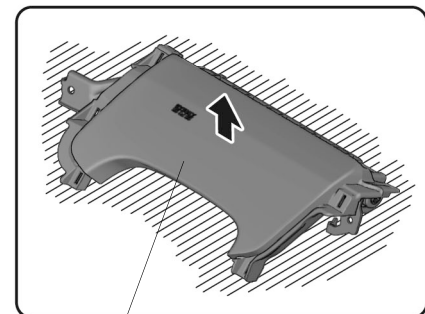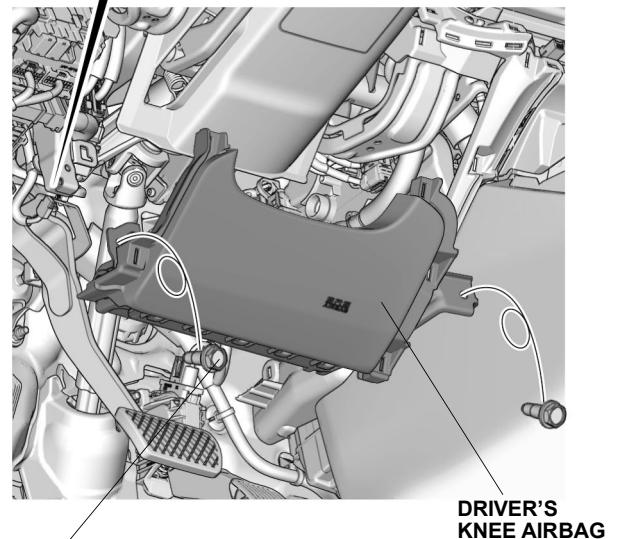
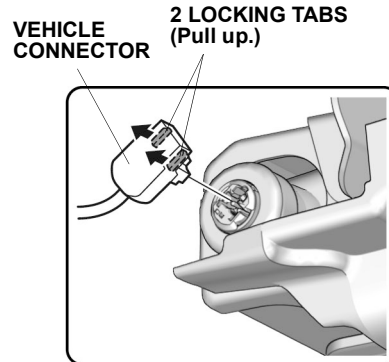


# Germain Honda of College Hills

30. Remove the driver's door sill trim.

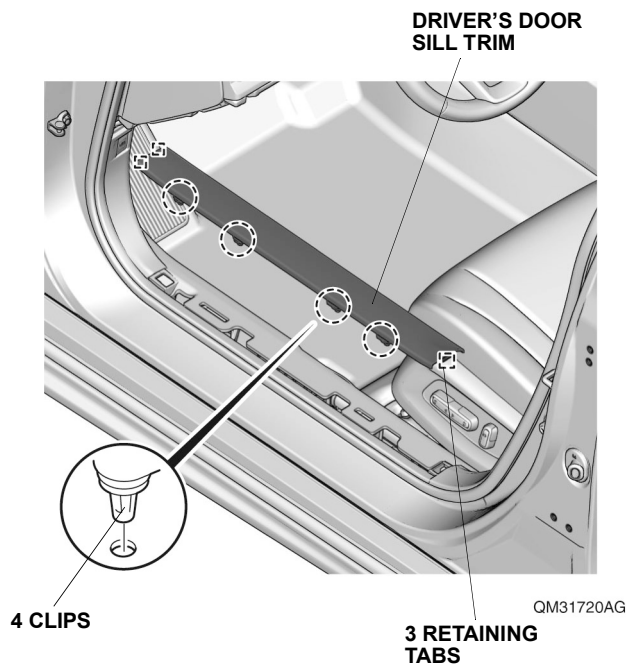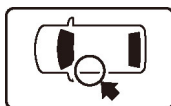




31. Remove the driver's kick panel.

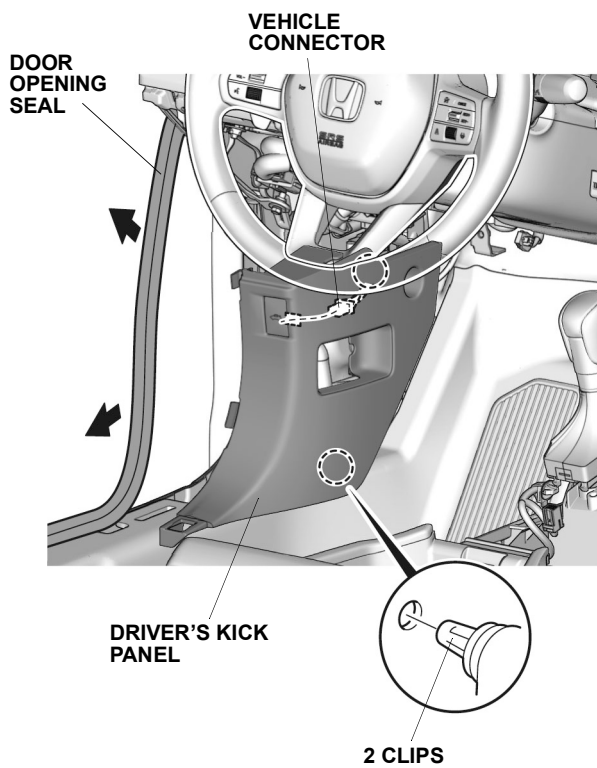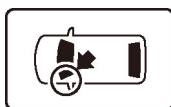

32. Release the rear seat cushion.

## NOTE

Release in the order shown.

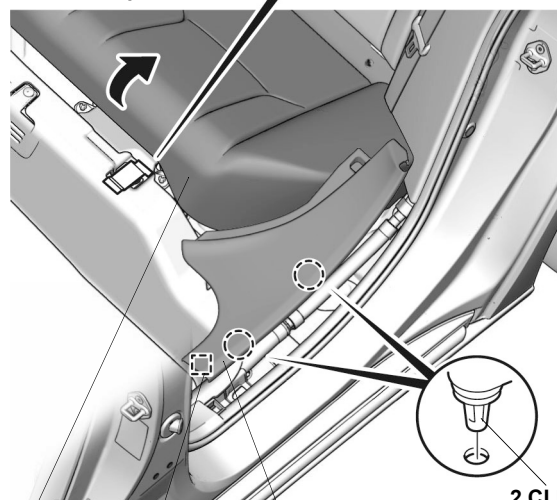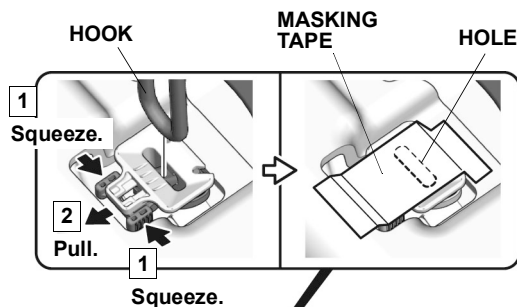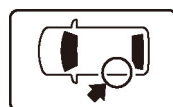


33. Remove the left rear door sill trim.


34. Attach masking tape.

# Germain Honda of College Hills

35. Attach the fuse label.


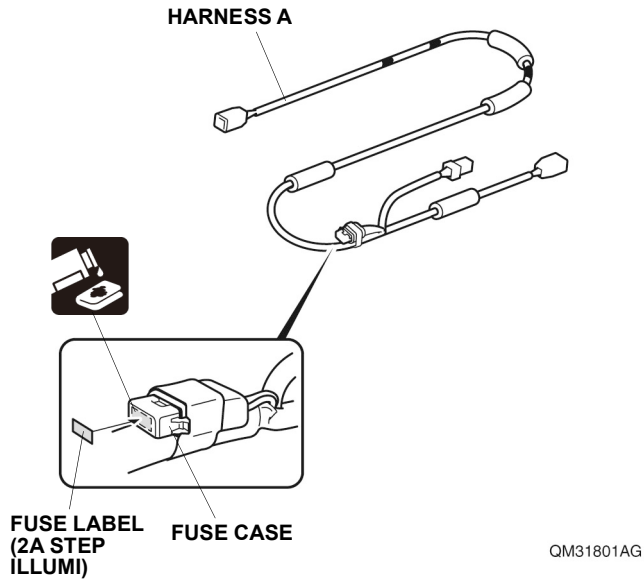


36. Secure the harness A.

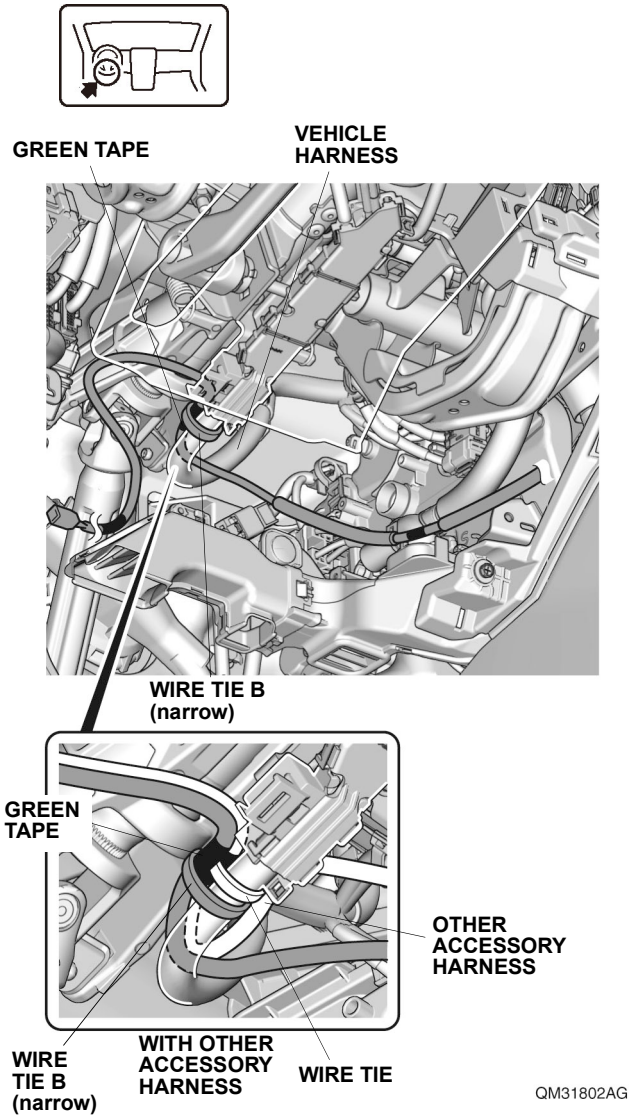



# Germain Honda of College Hills

37. Secure the harness A.

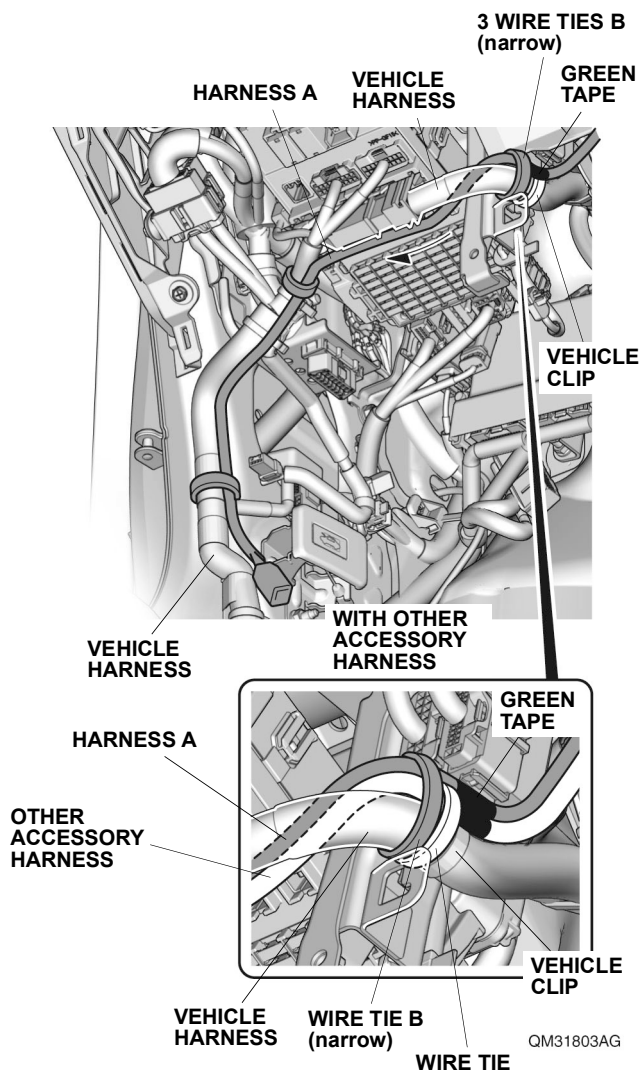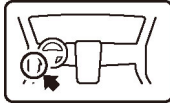


38. Secure the harness A.

NOTE
Be careful not to damage the harness.

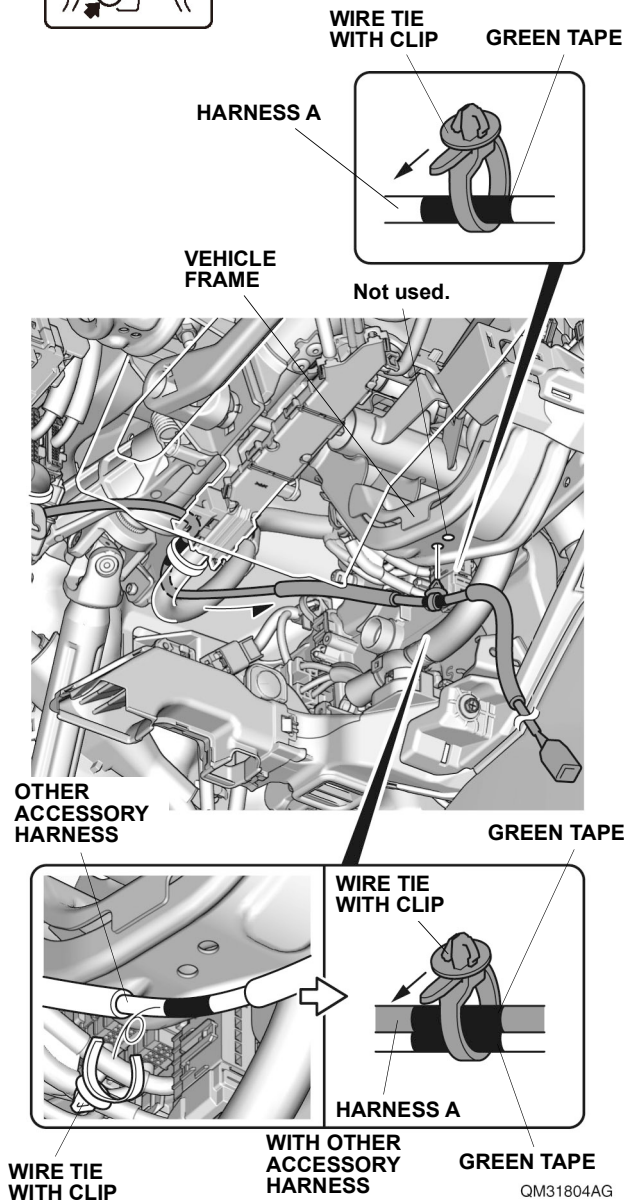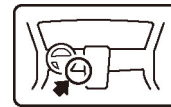


# Germain Honda of College Hills

39. Secure the harness A.

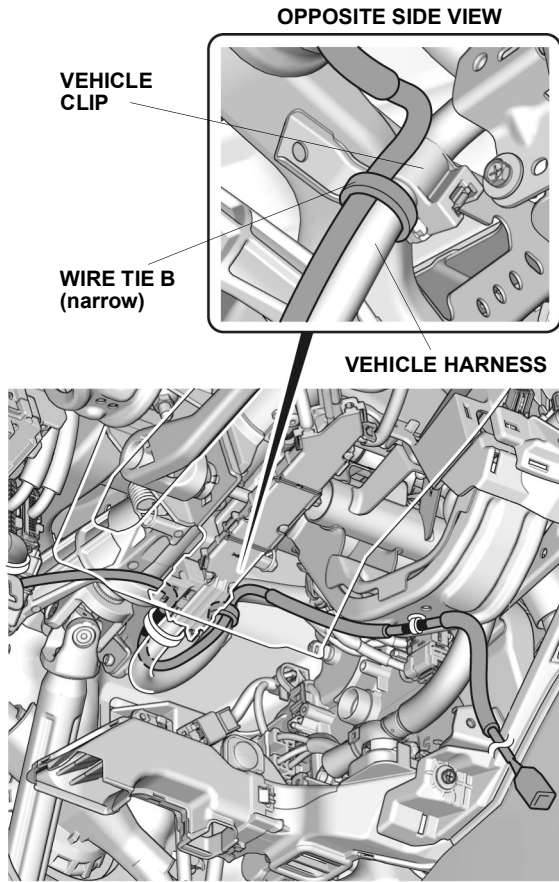

QM31805AG


40. Route the harness A.

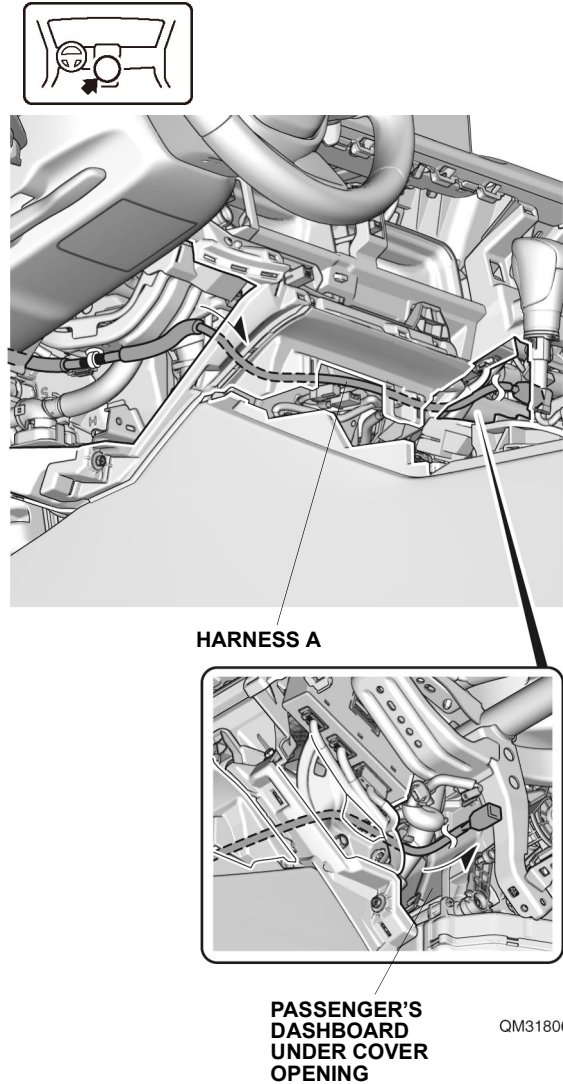

QM31806AG

# Germain Honda of College Hills


41. Secure the harness A.

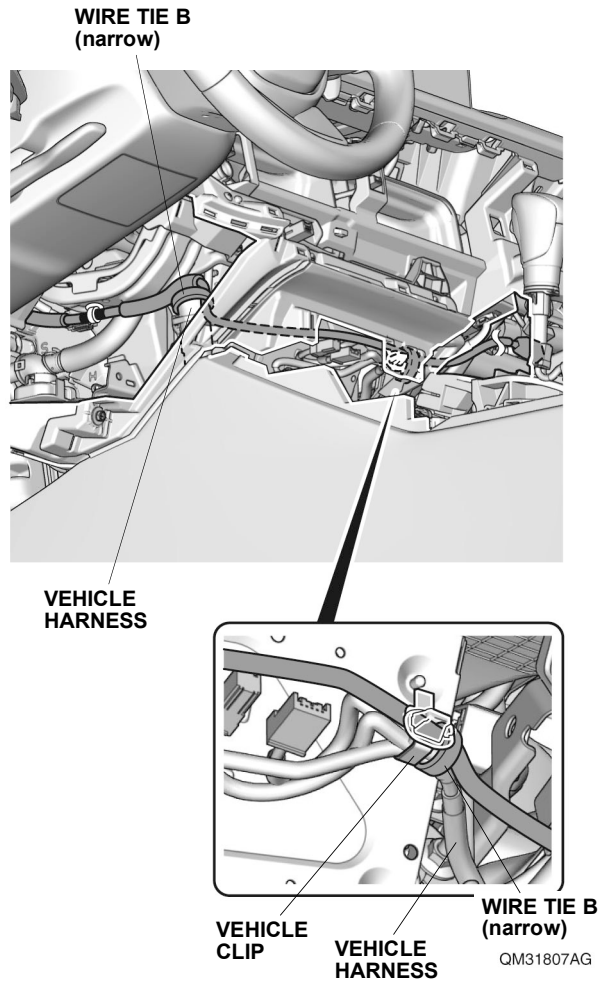

42. Secure the harness A.





43. Secure the harness A.

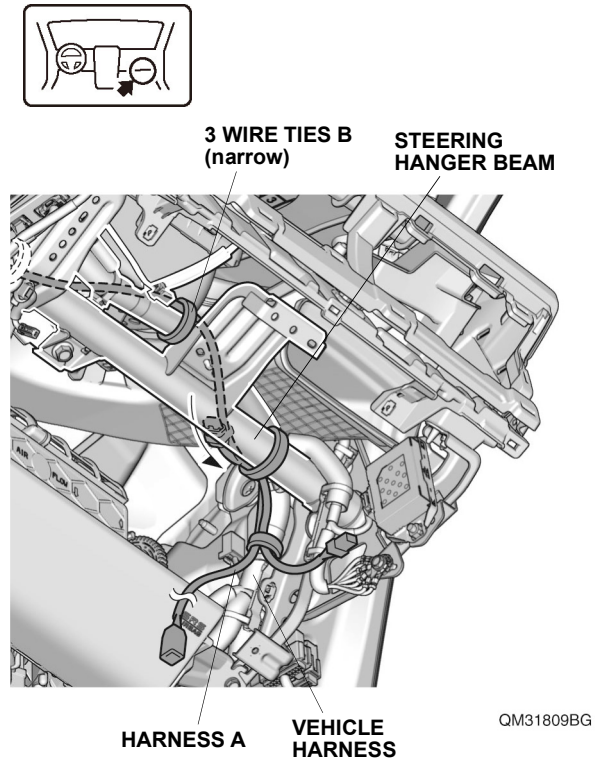

# Germain Honda of College Hills


44. Secure the harness A.

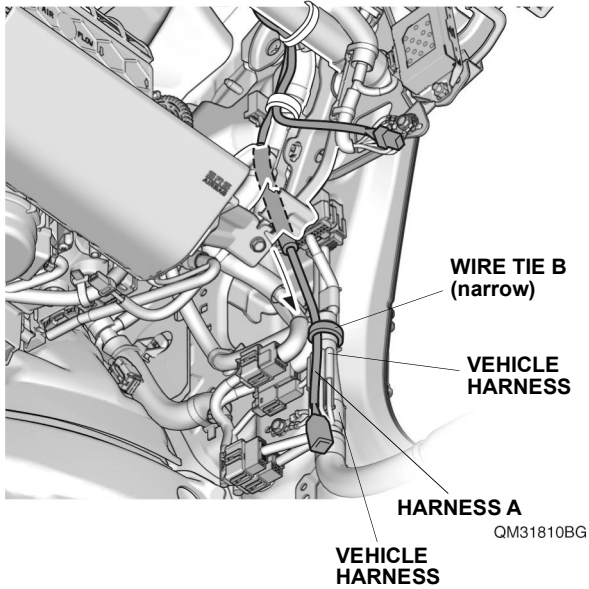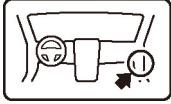


45. Attach masking tape.

## NOTE


Do not to crease the headliner.

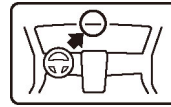

MASKING TAPE

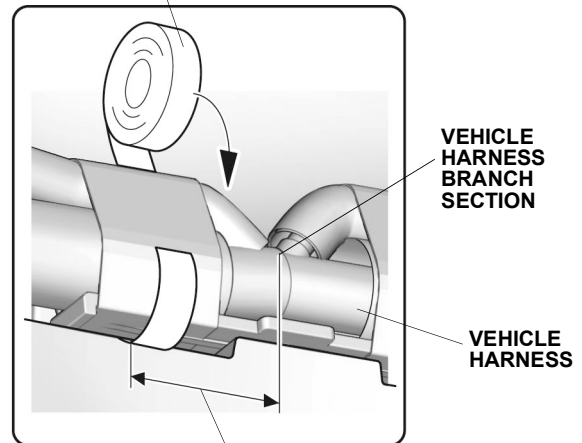

30 mm  
(1.18 in.)

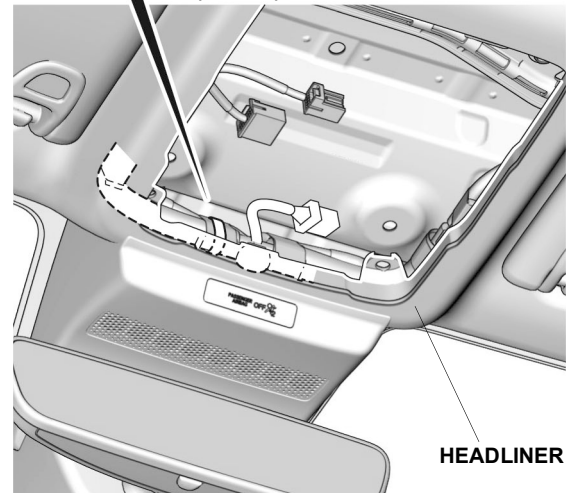


QM31811BG

# Germain Honda of College Hills

46. Plug-in the vehicle connector.

## NOTE

Do not to crease the headliner.

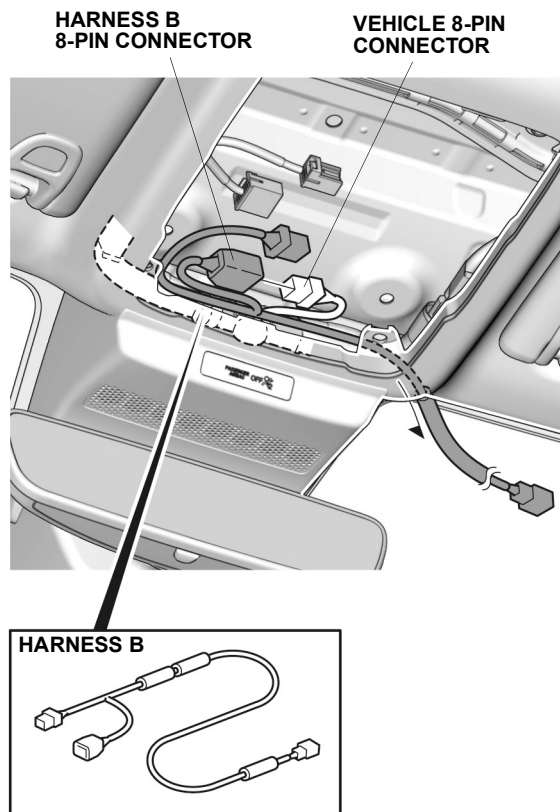


QM31812AG

47. Secure the harness B and connectors.

## NOTE

Do not to crease the headliner.

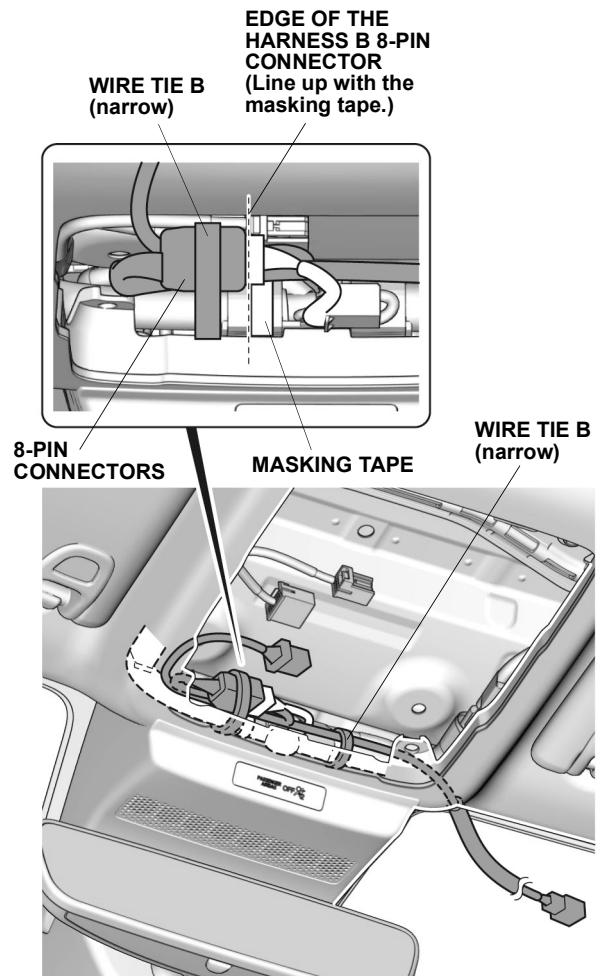



QM31813AG

# Germain Honda of College Hills



48. Push in the harness B.

## NOTE



Do not to crease the headliner.

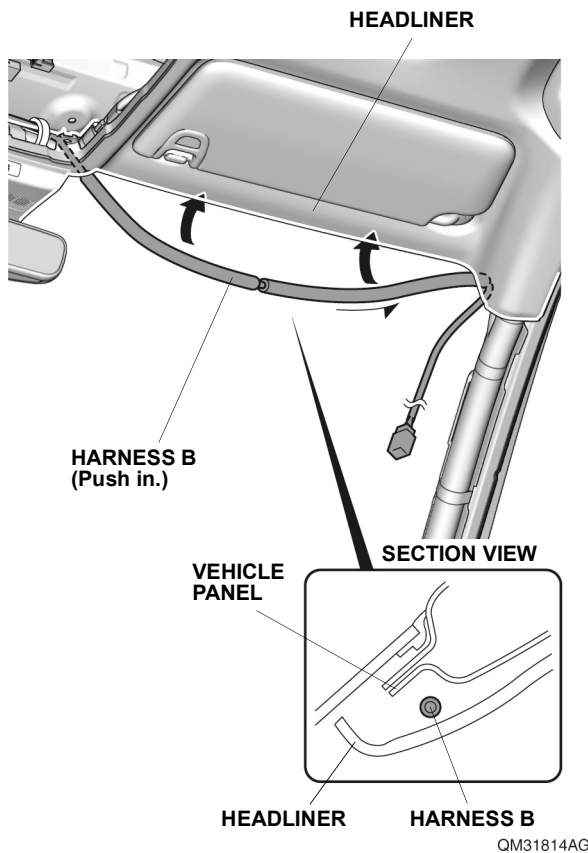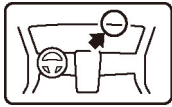

49. Secure the harness B.

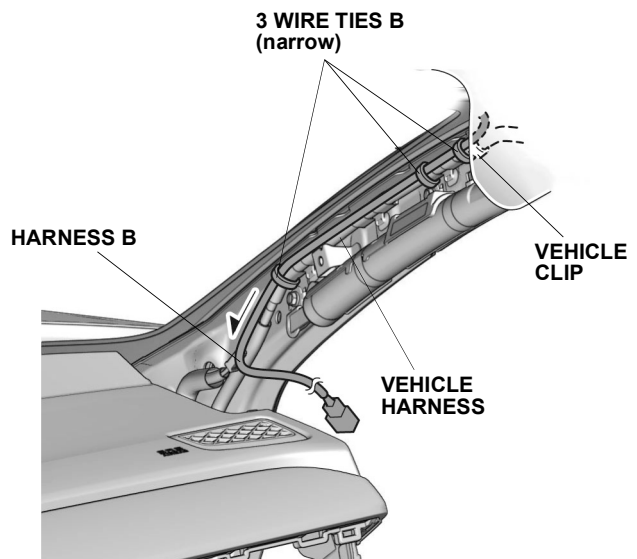
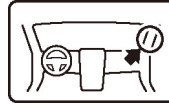


50. Secure the harness B.

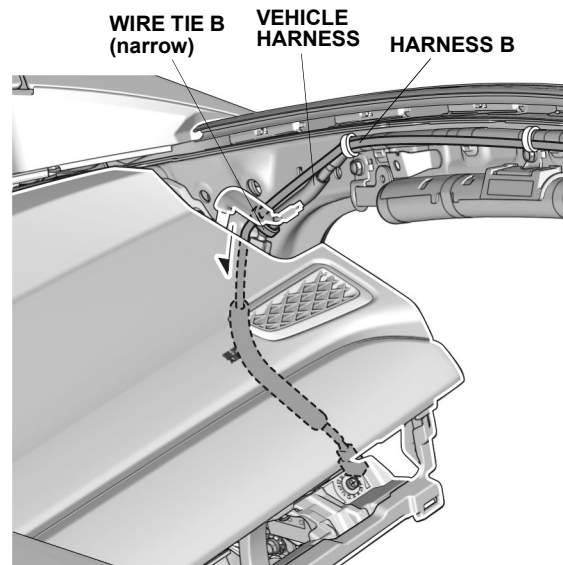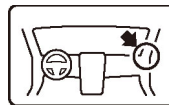

# Germain Honda of College Hills




51. Plug-in the harness A connector.

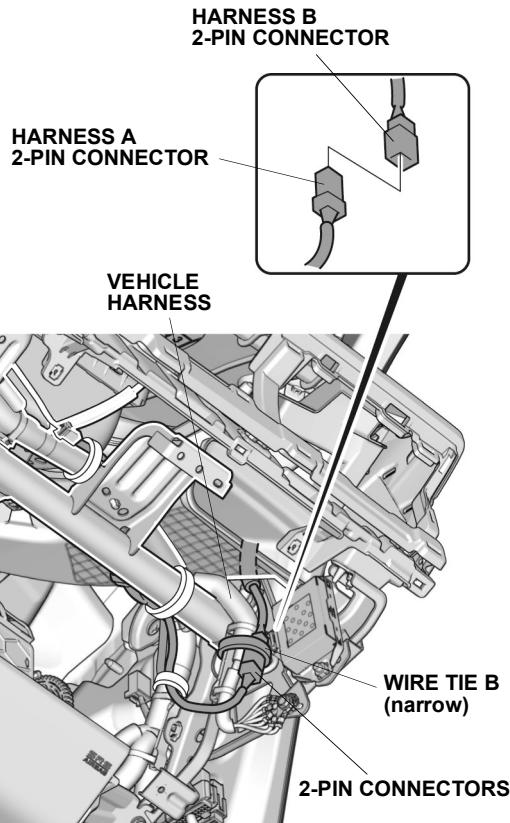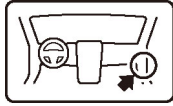

QM32002BG

52. Secure the connectors.

53. Cut the floor carpet.

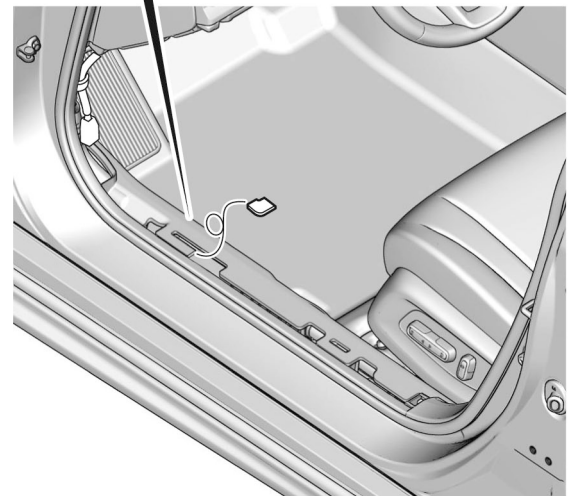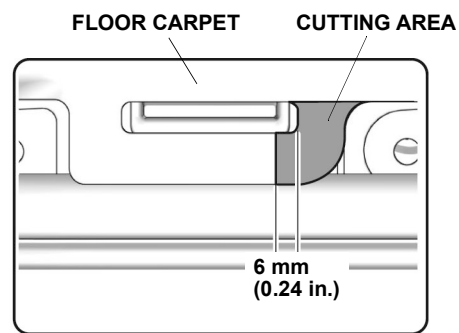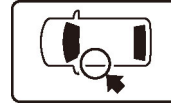


QM32003AG

# Germain Honda of College Hills



54. Install the clips.

## NOTE

Check the identification mark and the installation position of the illuminated door sill trim.

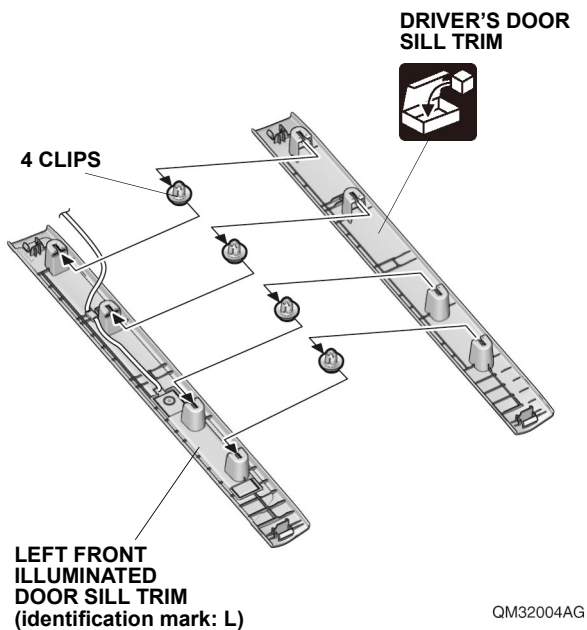


55. Position the left front illuminated door sill trim.

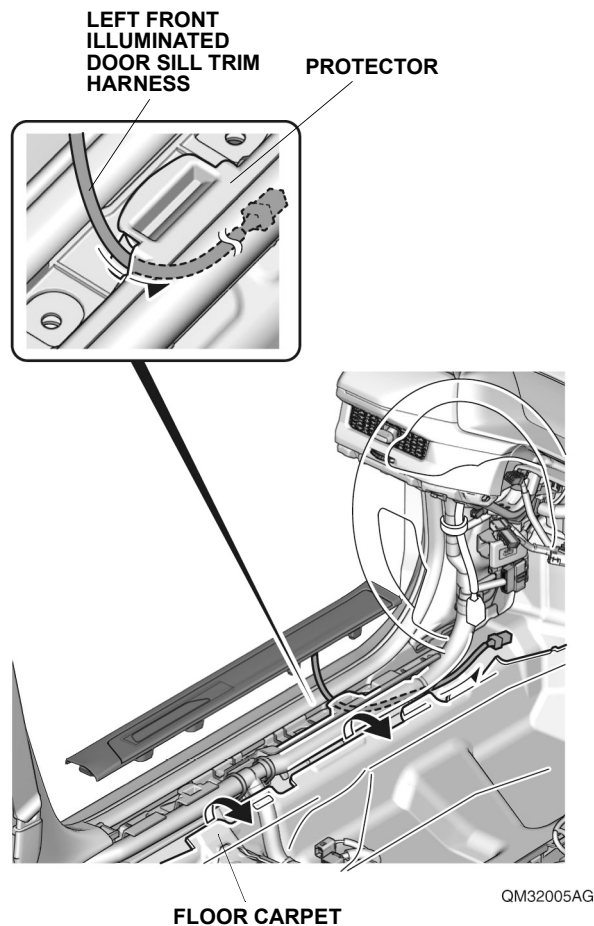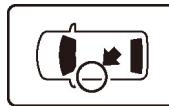


# Germain Honda of College Hills

56. Plug-in the left front illuminated door sill trim connector.

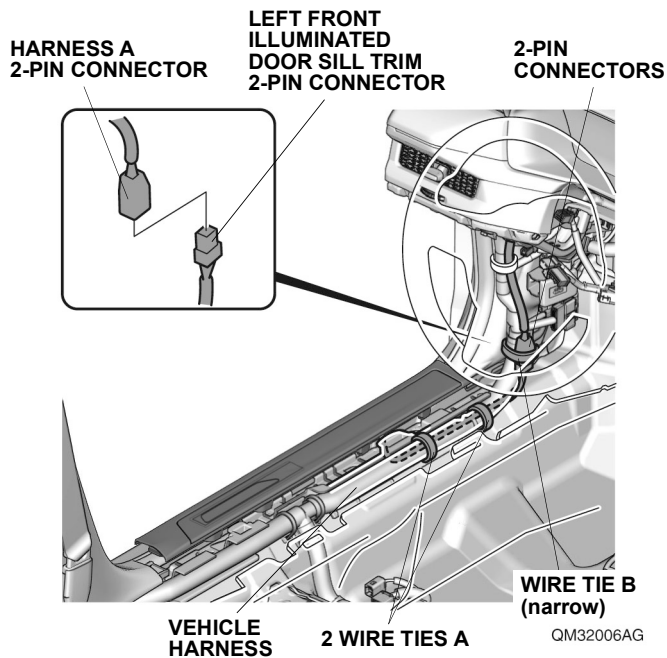


57. Secure the left front illuminated door sill trim harness and connectors.

58. Install the floor carpet, driver's kick panel, and door opening seal.
59. Install the left front illuminated door sill trim.

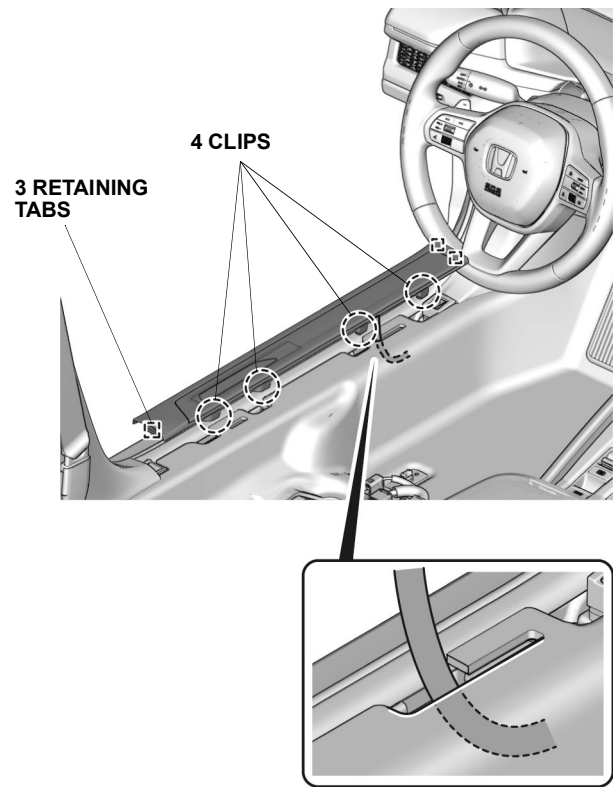

QM32007AG


60. Remove the protective film.

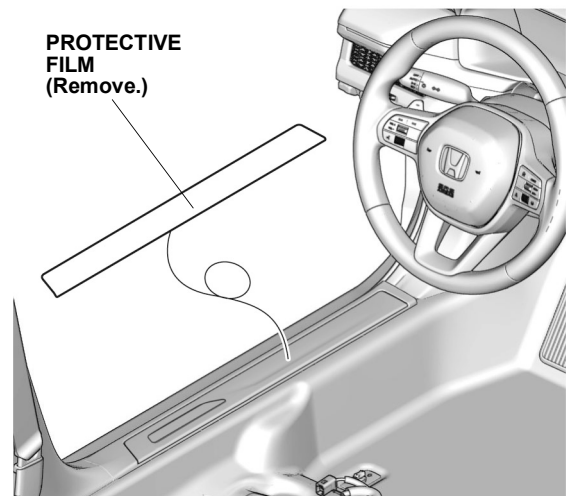

QMN0806AG

# Germain Honda of College Hills

61. Repeat the same procedures on the other side.

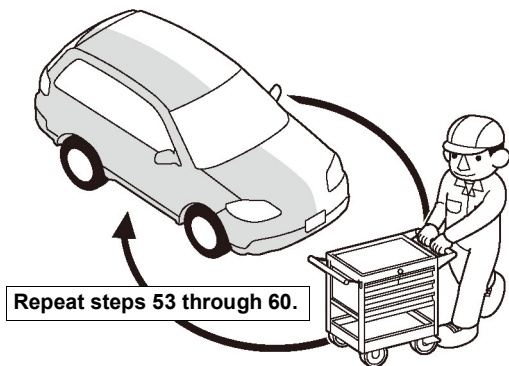

Q9D1014AM

62. Install the clips.


## NOTE

Check the identification mark and the installation position of the door sill trim.

LEFT REAR  
DOOR SILL TRIM




2 CLIPS

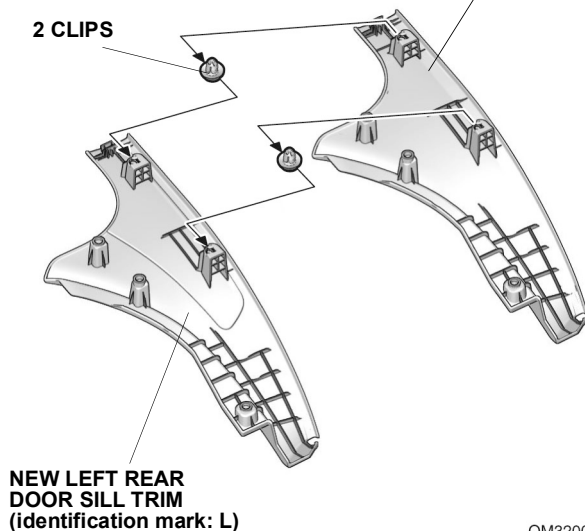


QM32008AG

63. Install the new left rear door sill trim.

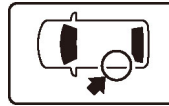

REAR SEAT  
CUSHION

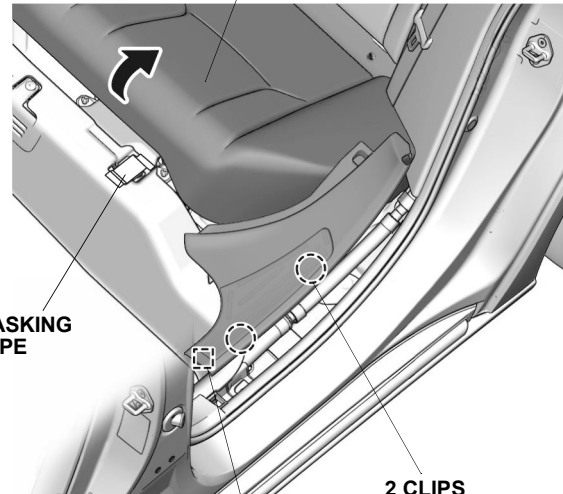


QM32009AG

64. Remove the masking tape.

65. Remove the protective film.


PROTECTIVE  
FILM  
(Remove.)

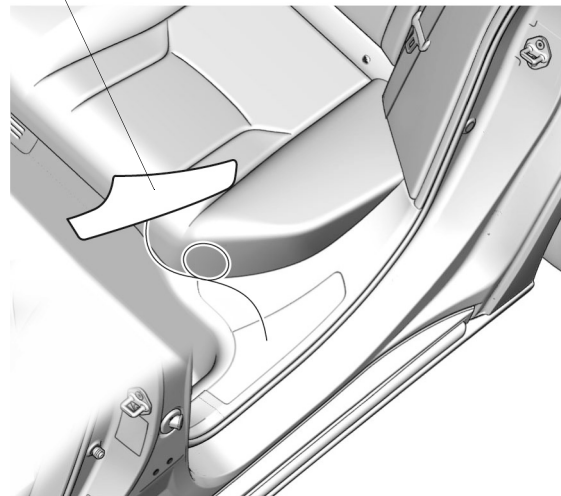

QMN0807AG

# Germain Honda of College Hills

66. Repeat the same procedures on the other side.

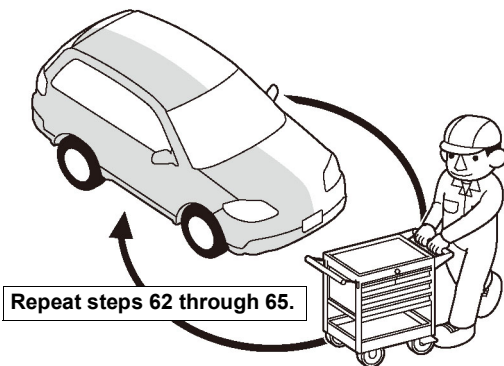

Q9D1014AM

67. Check that all parts are installed and properly routed.

## NOTE

- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.


68. Install all removed parts.

<Installing the Driver's Knee Airbag>



69. Install the driver's knee airbag.

## NOTE

Make sure to replace with the washer-bolts included in this kit.

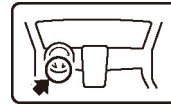

## VEHICLE CONNECTOR

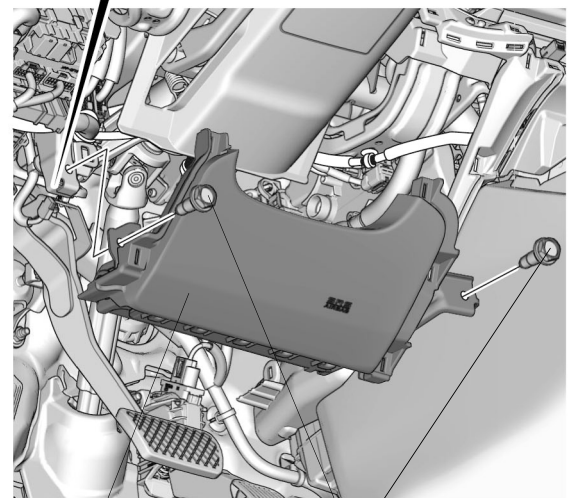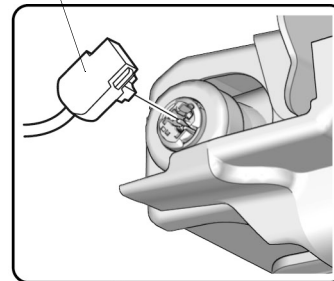

QM32010AG

**DRIVER'S  
KNEE AIRBAG**

**2 WASHER-BOLTS  
(supplied)**



**5.1-11 lb-ft  
(6.9-14.4 N·m)**

# Germain Honda of College Hills

## <Installing the A-Pillar Trim>

70. Check the overlap between the headliner and the A-pillar trim.


### NOTE

Check and adjust the overlap as described in the service information.

71. Install the clip of the A-pillar trim.

### NOTE

Make sure to use the replacement clip provided in this kit.

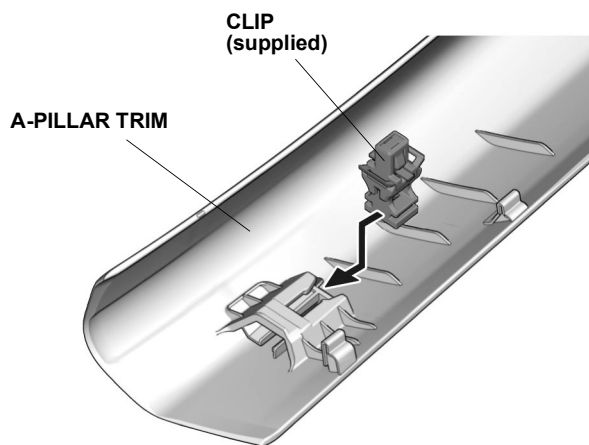


QM32302AB

72. Install the A-pillar trim.

### NOTE

- Make sure the side curtain airbag is not tucked under the clips.
- Do not push the A-pillar trim excessively.

73. Connect the negative cable to the battery.

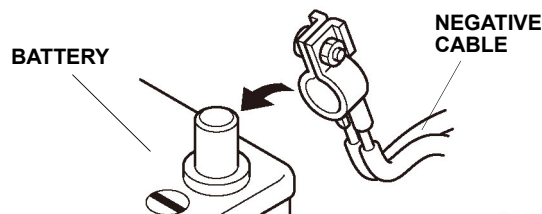

Q060702BM

74. Turn the ENGINE START/STOP button (POWER button) to ON; the SRS indicator should come on for about 6 seconds and then go off.
75. Check that the front illuminated door sill trim comes on by opening a door.
76. Make sure all accessories and systems operate properly.
77. If necessary, restore the systems back to normal operation as described in the service information.
78. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.