

# Germain Honda of College Hills



## INSTALLATION INSTRUCTIONS

### Accessory

MOONROOF VISOR

### Application

2023 ACCORD  
MODEL SERIES


### Publications No.

VERSION 1

### Issue Date

DEC 2022

## GENERAL VIEW

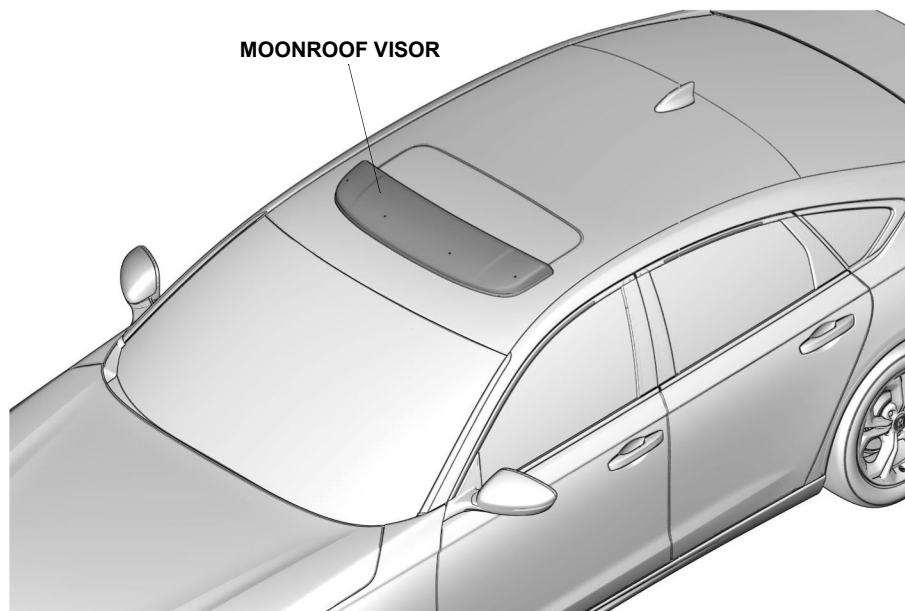

QM30701AG

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

**Safety:** Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.



### **DANGER**

You will be killed or seriously hurt if you do not follow the instructions.



### **WARNING**

You can be killed or seriously hurt if you do not follow the instructions.



### **CAUTION**

You can be hurt if you do not follow the instructions.

### **NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

### **NOTE**

Gives helpful information or instructions to be followed when installing this product.

# Germain Honda of College Hills




Indicates a prohibited action.


## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.

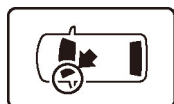

The location on the vehicle.

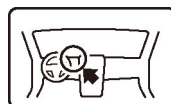

The location in the vehicle.  
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.  
(Do not reuse.)

## Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

## Safety: Accessory









- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.

# Germain Honda of College Hills

- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

## PARTS LIST

### Moonroof Visor Kit (P/N 08R01-30A-100)

Moonroof visor	Brackets A (identification mark: 30A A) (2)	Left bracket B (identification mark: 30A-L B)	Right bracket B (identification mark: 30A-R B)
			
Screws (4)	Nuts (4)	Protective films (4)	Alcohol wipes (2)
			

# Germain Honda of College Hills

## REQUIRED TOOLS AND SUPPLIES


- Phillips screwdriver
- 10 mm Offset wrench
- Shop towel
- Masking tape

The following tool is available through the Honda Tool and Equipment Program:

Torque Screwdriver (T/N CDI401SM)


## INSTALLATION

1. Open the moonroof.
2. Lower the air deflector.



Ruler

ROOF PANEL Felt-tip pen  
AIR DEFLECTOR

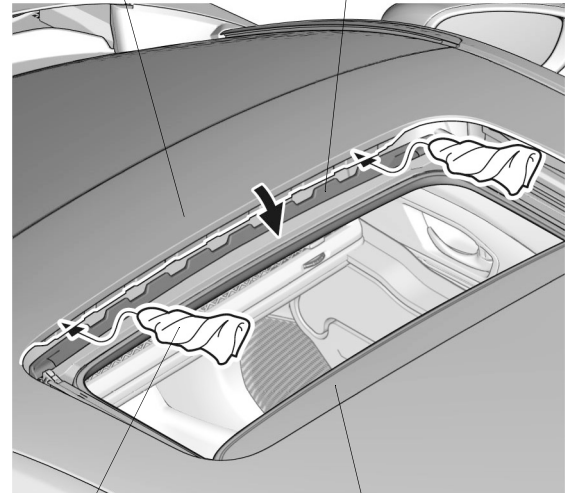


2 SHOP TOWELS  
(Roll up and insert into  
the corner.)

MOONROOF

QM30702AG

3. Mark the roof panel.

# Germain Honda of College Hills

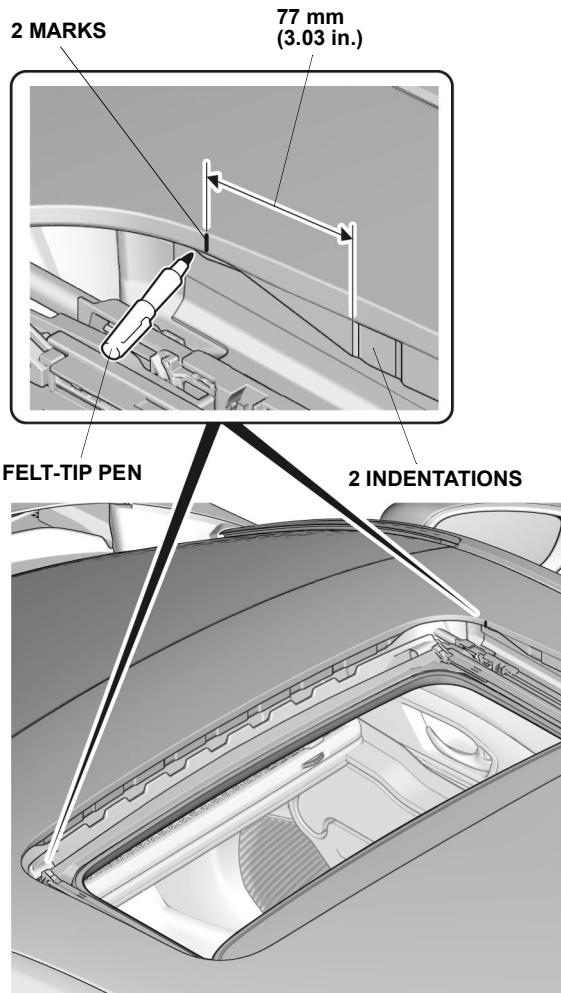


QM30703AG

4. Clean the attaching areas.

## NOTE

Allow to dry thoroughly.

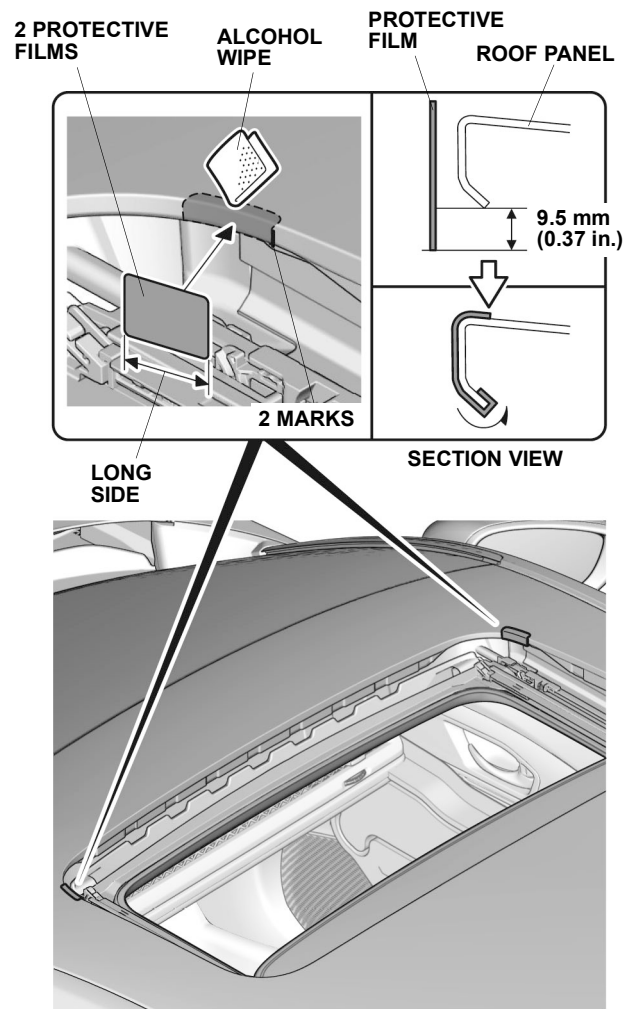


QM30704AG

5. Attach the protective films.
6. Clean the attaching areas.

## NOTE

Allow to dry thoroughly.

# Germain Honda of College Hills

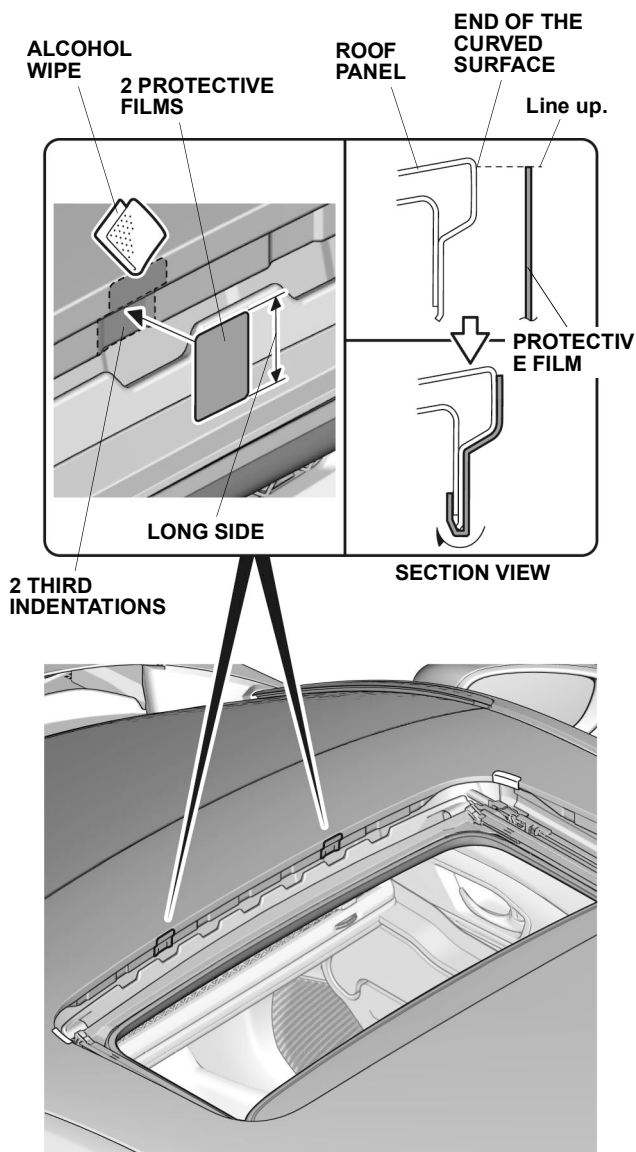


QM30705AG

7. Attach the protective films.
8. Place the left and right brackets B.

## NOTE

- Make sure to check the identification mark before installation.
- Be careful not to crease the protective films.

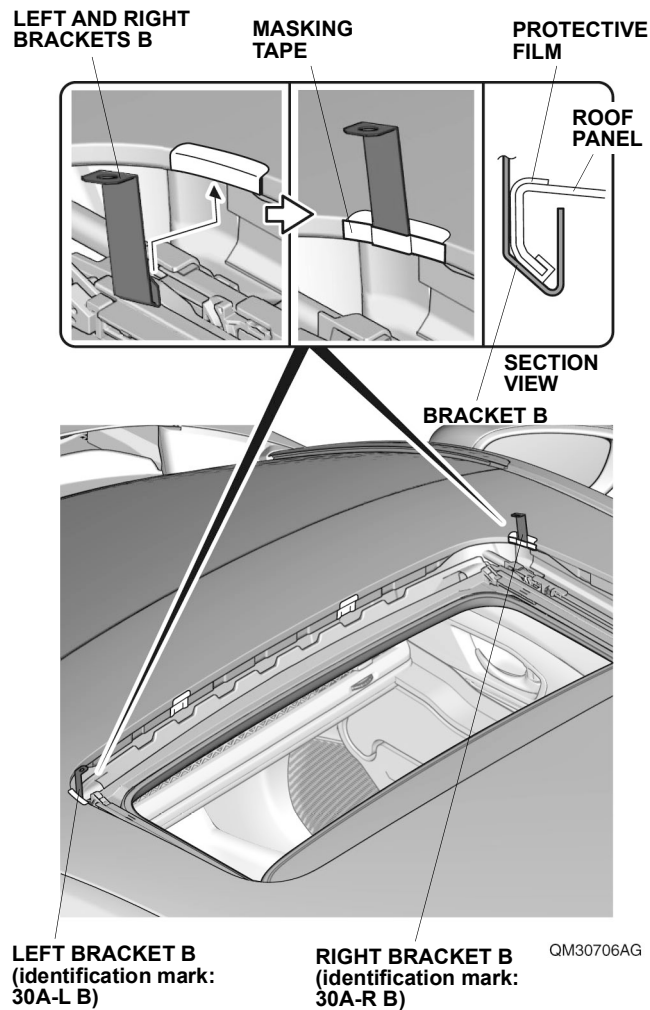


# Germain Honda of College Hills

9. Place the brackets A.


## NOTICE

- Make sure to check the identification mark before installation.
- Be careful not to crease the protective films.

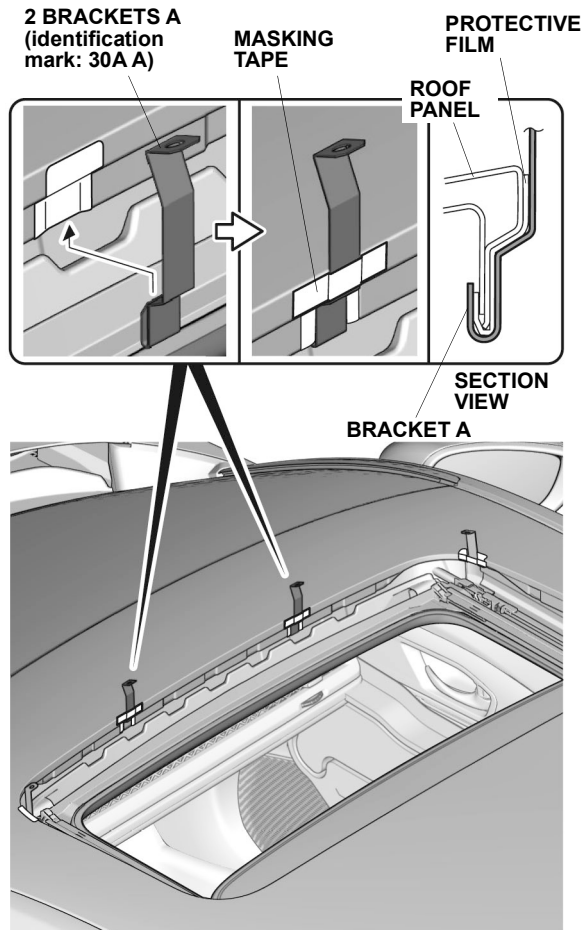


QM30707AG

10. Loosely install the moonroof visor.



2 SCREWS  
(Loosely install.)


MOONROOF VISOR

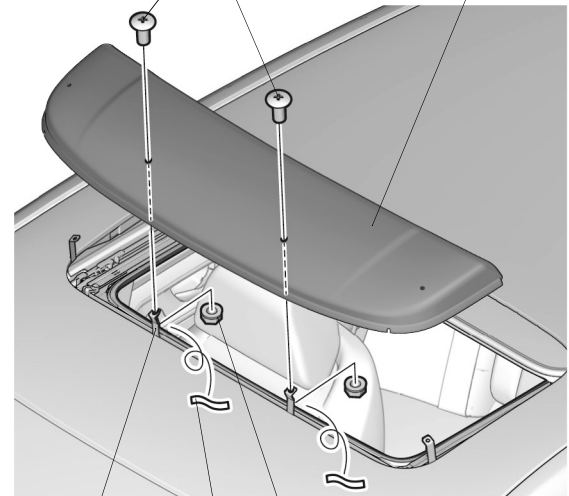

QM30708AG

11. Remove the masking tape.
12. Loosely install the moonroof visor.


# Germain Honda of College Hills

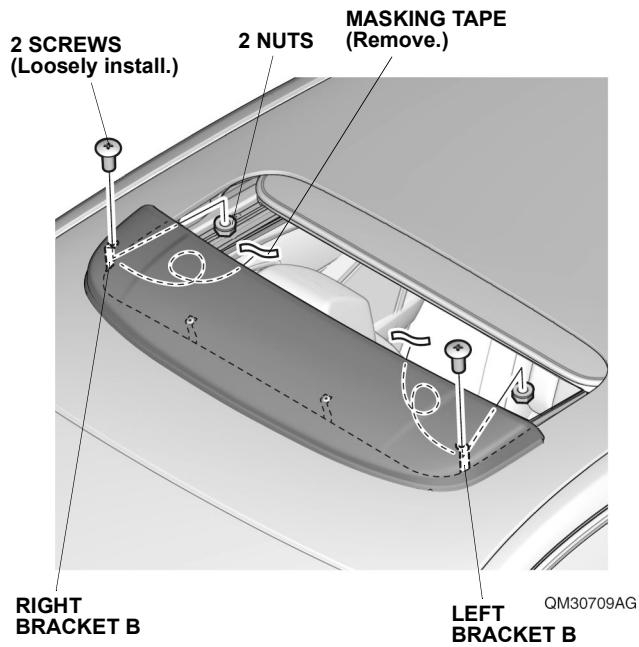

13. Remove the masking tape.
14. Check the information on the IMPORTANT INFORMATION label.




# Germain Honda of College Hills

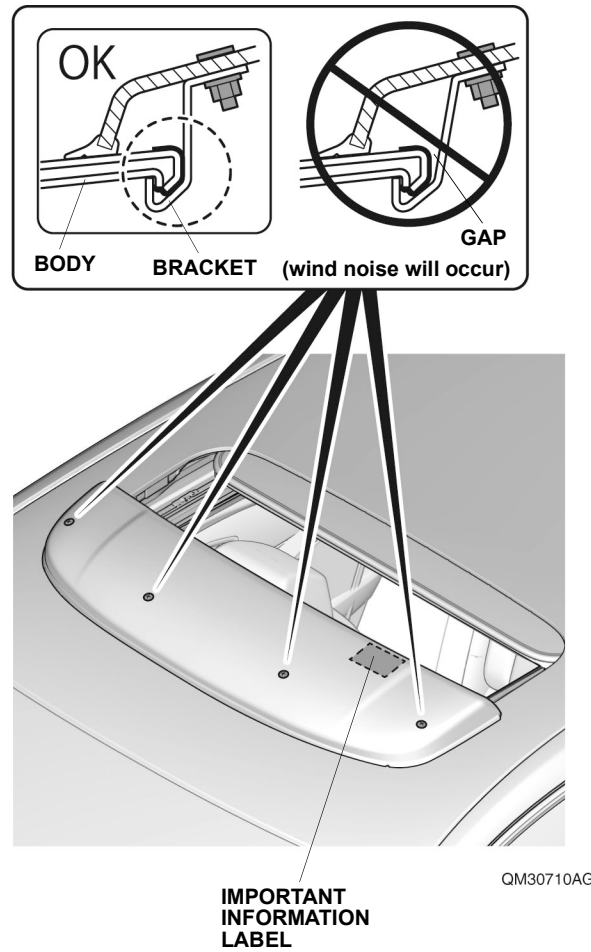


15. Secure the moonroof visor.

# Germain Honda of College Hills

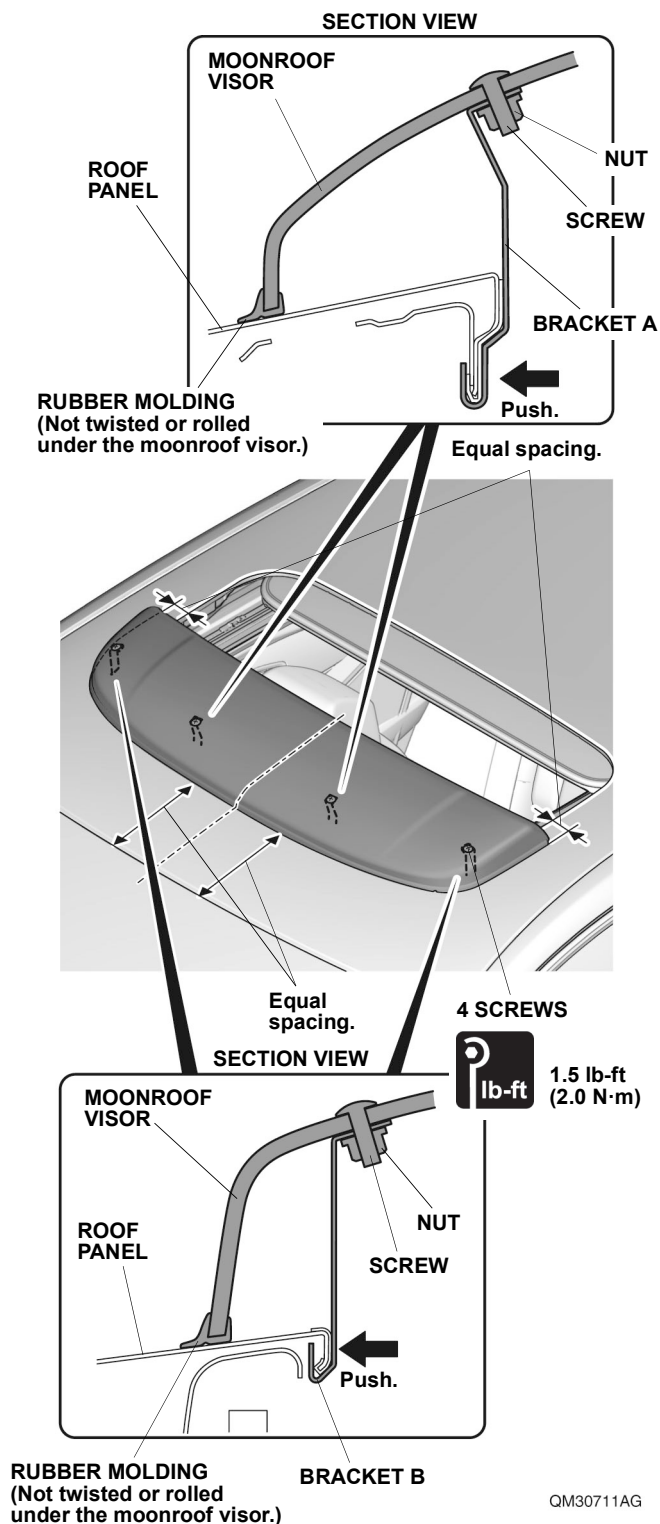

16. Remove the shop towels.
17. Remove the IMPORTANT INFORMATION label.

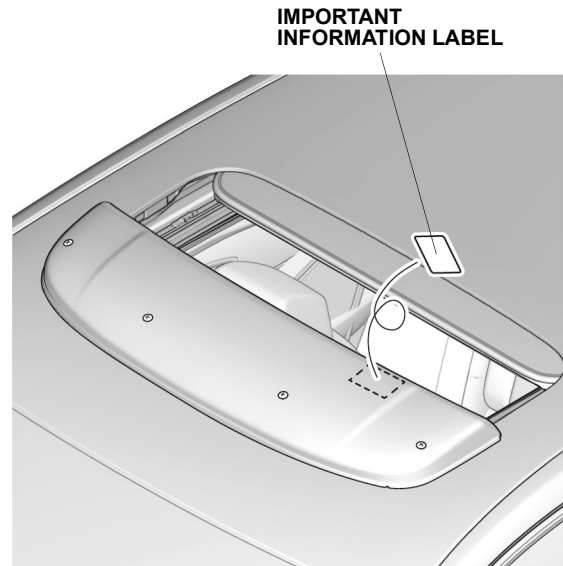

QM30712AG

18. Check that all parts are installed properly.

Please give your customer a copy of this page.

## MOONROOF VISOR

### Care of the Moonroof Visor

- To avoid damaging the surface, never use ammonia-based cleaners or solvents to clean the moonroof visor.
- Clean with a solution of mild dishwashing soap and water using a soft cloth or chamois.