

# Germain Honda of College Hills



## INSTALLATION INSTRUCTIONS

Accessory

WINDOW SHADES

Application

2023 ACCORD  
MODEL SERIES


Publications No.

VERSION 1

Issue Date

DEC 2022

## GENERAL VIEW

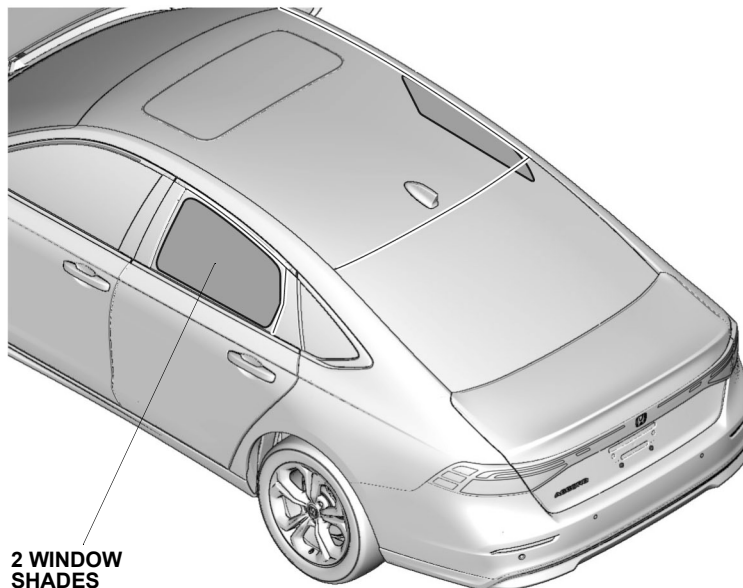

2 WINDOW  
SHADES

QM32201AN

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

**Safety:** Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

 **DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

 **WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

 **CAUTION**

You can be hurt if you do not follow the instructions.

**NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

**NOTE**

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

# Germain Honda of College Hills

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.  
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.  
(Do not reuse.)

## Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.


## Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle or moisten it for 24 hours to allow the adhesive to cure.

# Germain Honda of College Hills

## PARTS LIST

Window Shades Kit (P/N 08R13-30A-100)

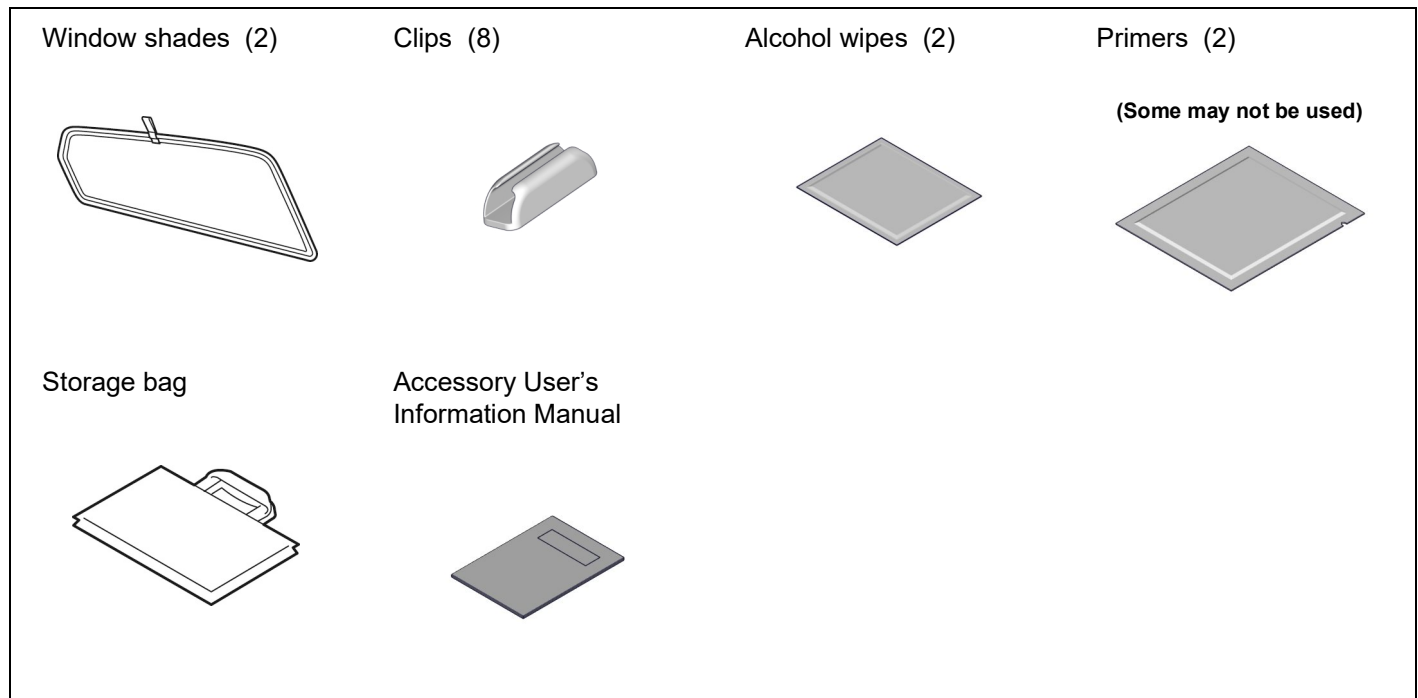


## REQUIRED TOOLS AND SUPPLIES

- Masking tape
- Ruler


# Germain Honda of College Hills

## INSTALLATION

1. Fully open the left and right rear windows.
2. Attach masking tape.

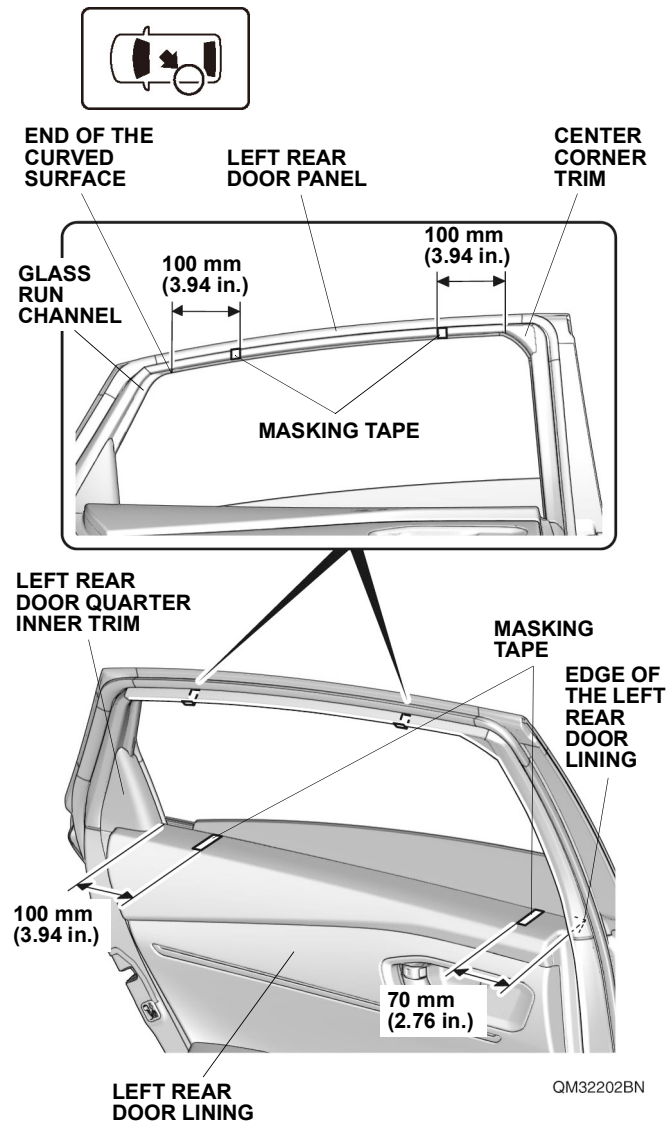

3. Attach masking tape.

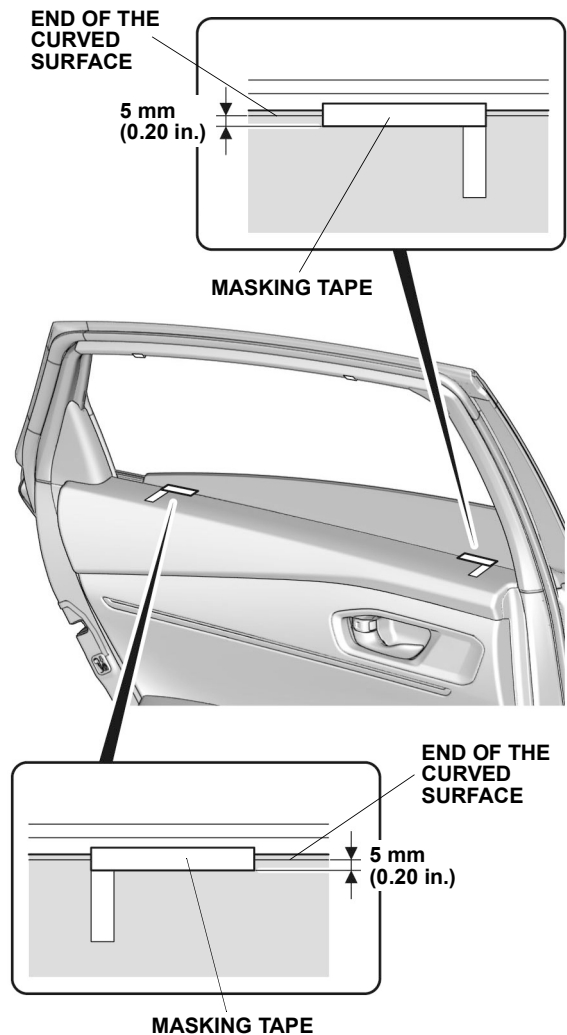

# Germain Honda of College Hills

4. Choose one of these options.


- Rear door lining: synthetic leather type

Go to step 5

- Rear door lining: other types

Go to step 12


5. Line up the clip.

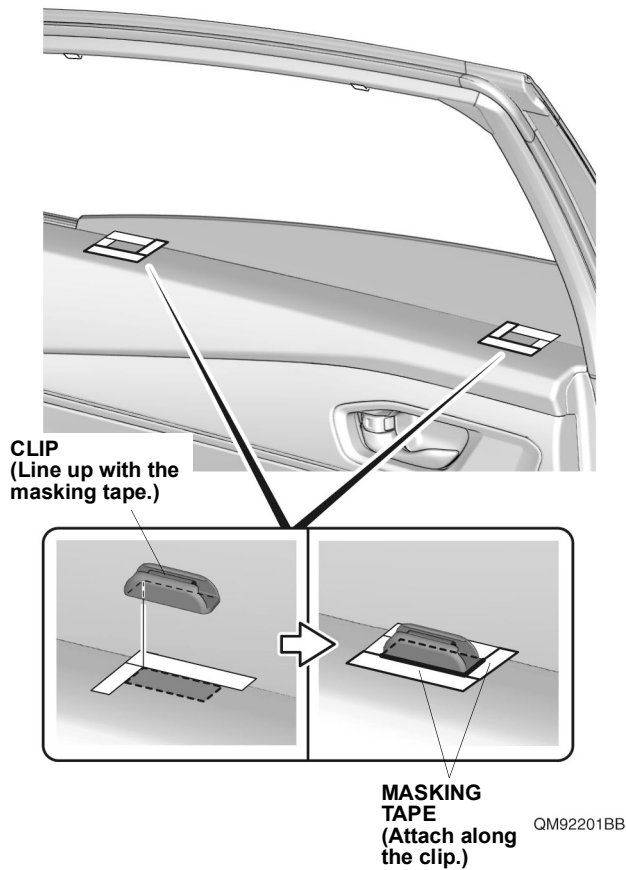

6. Attach masking tape.

7. Remove the clip.

8. Attach masking tape.

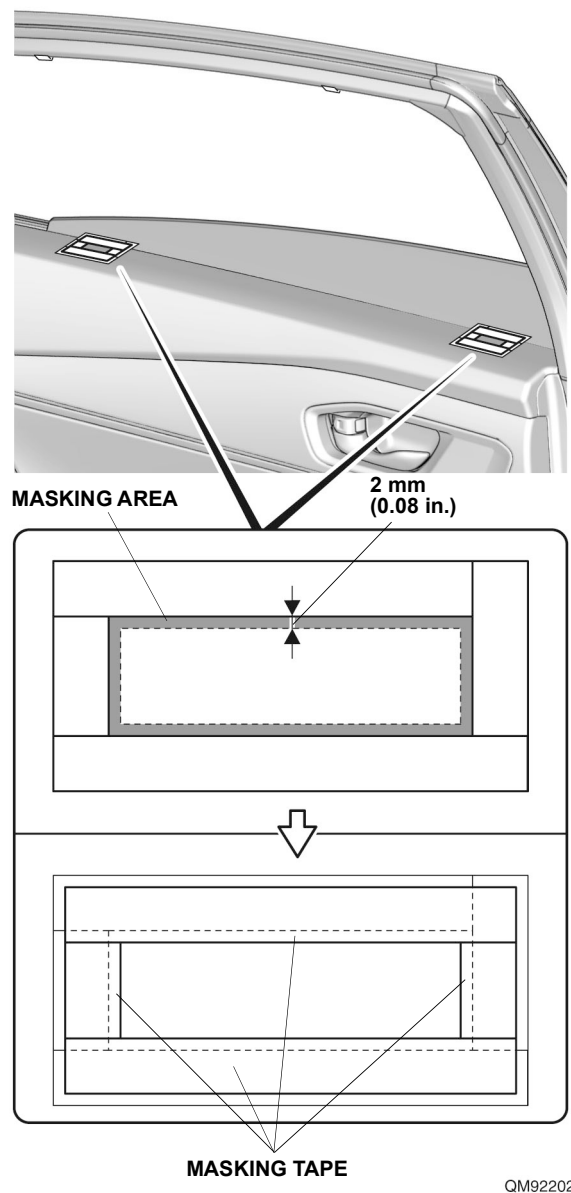


# Germain Honda of College Hills

9. Clean the attaching areas.

## NOTE

Allow to dry thoroughly.

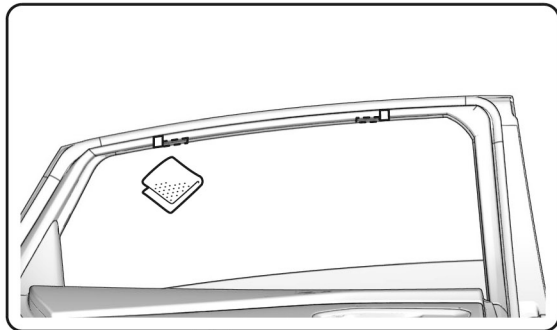


ALCOHOL WIPE

QM92203BB

10. Apply the primer.

## NOTE

- Apply the primer evenly.
- Be careful not to apply the primer anywhere except the indicated area.
- Do not apply additional primer.
- Attach the accessory within 24 hours after applying the primer.
- Do not use an expired primer.

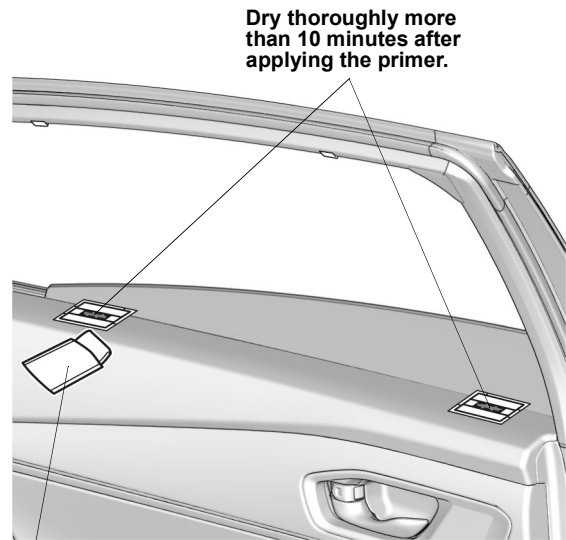

PRIMER

QM92204BB

11. Remove the masking tape attached in step 8.



Go to step 13

# Germain Honda of College Hills

12. Clean the attaching areas.

## NOTE

Allow to dry thoroughly.

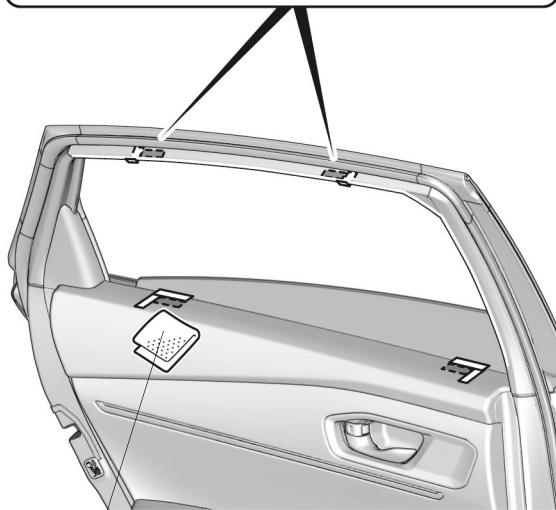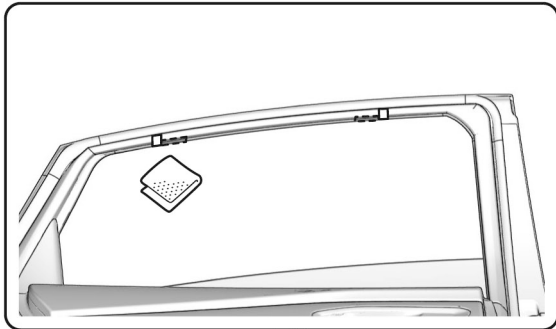


ALCOHOL WIPE

QM32204BN

13. Attach the clips.

## NOTE

- Check the position of the double-sided adhesive tapes and make sure to press firmly.
- Make sure to install the clips in the correct orientation.
- Press and hold each clip in place for 30 seconds to set the adhesive.

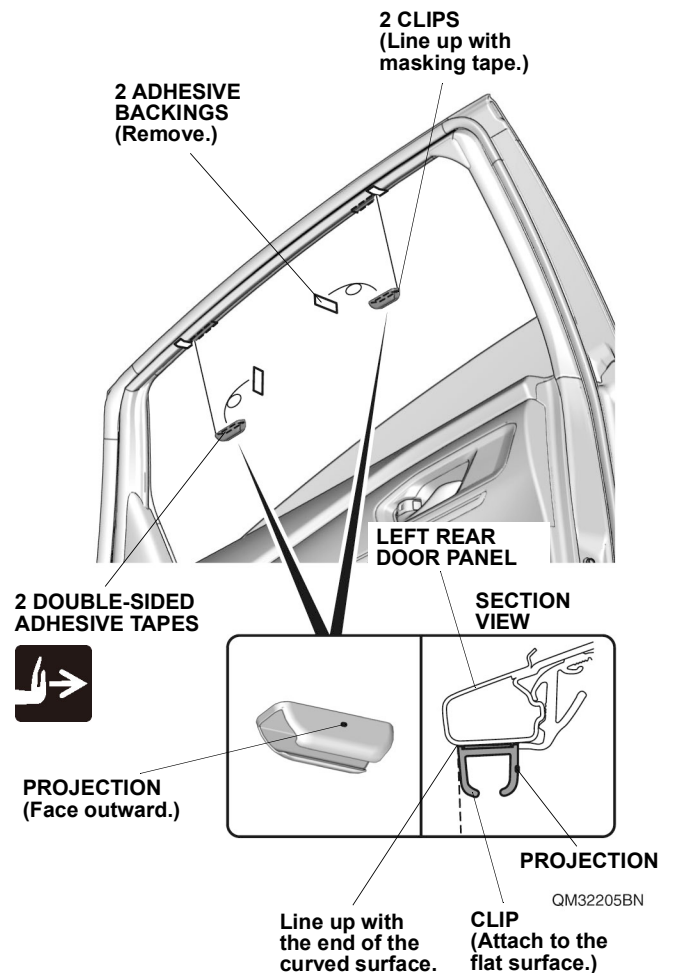


# Germain Honda of College Hills

14. Attach the clips.


## NOTE

- Check the position of the double-sided adhesive tapes and make sure to press firmly.
- Make sure to install the clips in the correct orientation.
- Press and hold each clip in place for 30 seconds to set the adhesive.

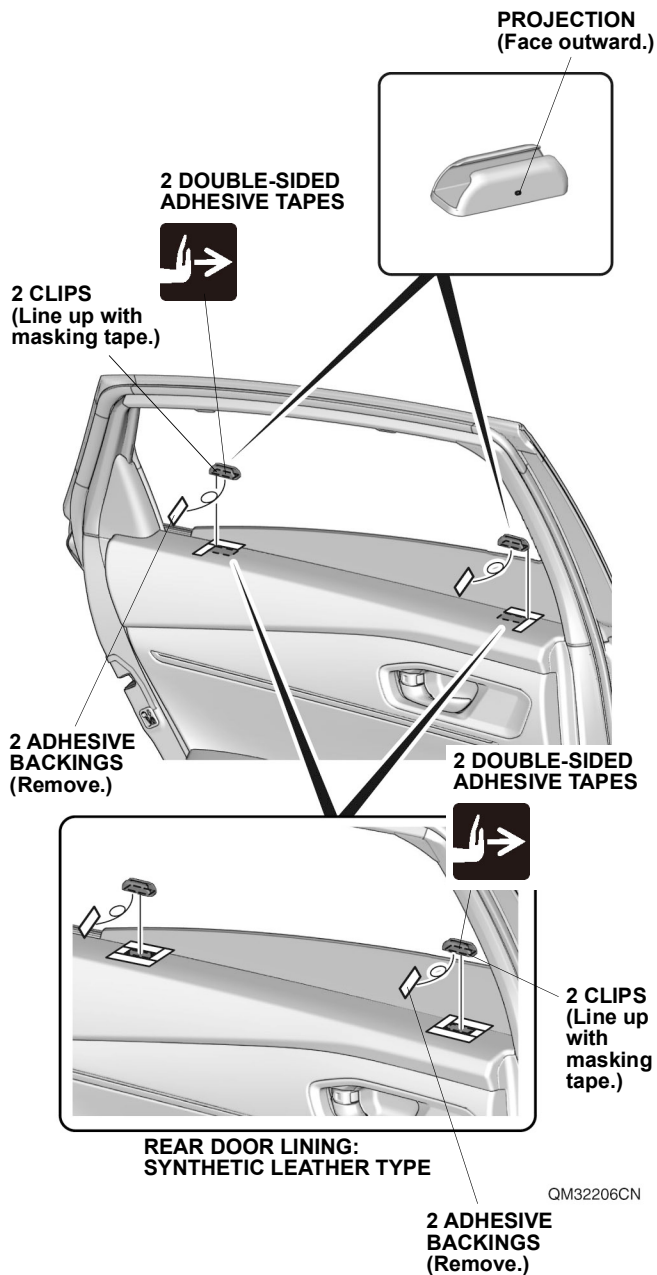


15. Remove the masking tape.

16. Install the window shade.

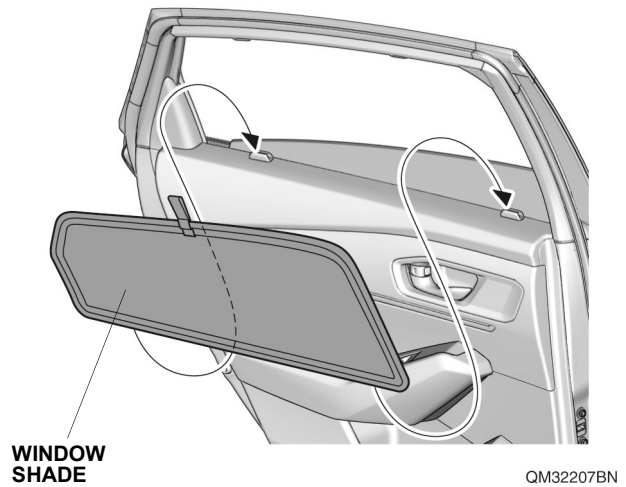


17. Install the window shade.

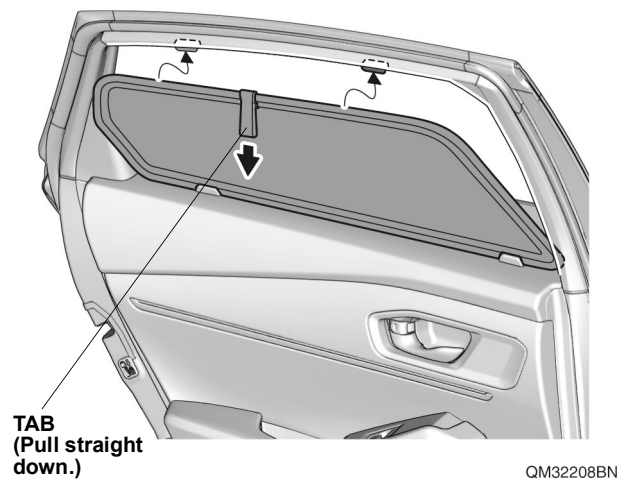



# Germain Honda of College Hills

18. Repeat the same procedures on the other side.

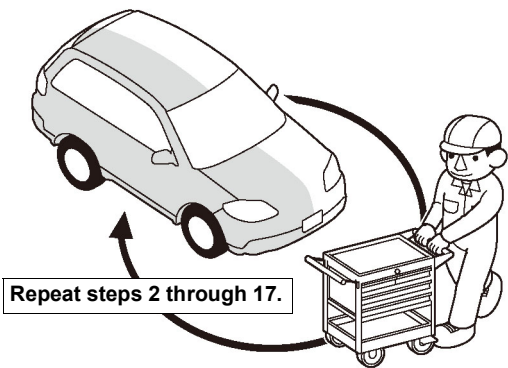

Q9D1014AM

19. Check that all parts are installed properly.  
20. Give the storage bag and Accessory User's Information Manual to the customer.