

Germain Honda of College Hills



INSTALLATION INSTRUCTIONS

Accessory

WIRELESS CHARGER

Application

2023 ACCORD MODEL SERIES


Publications No.

VERSION 1

Issue Date

DEC 2022

GENERAL VIEW

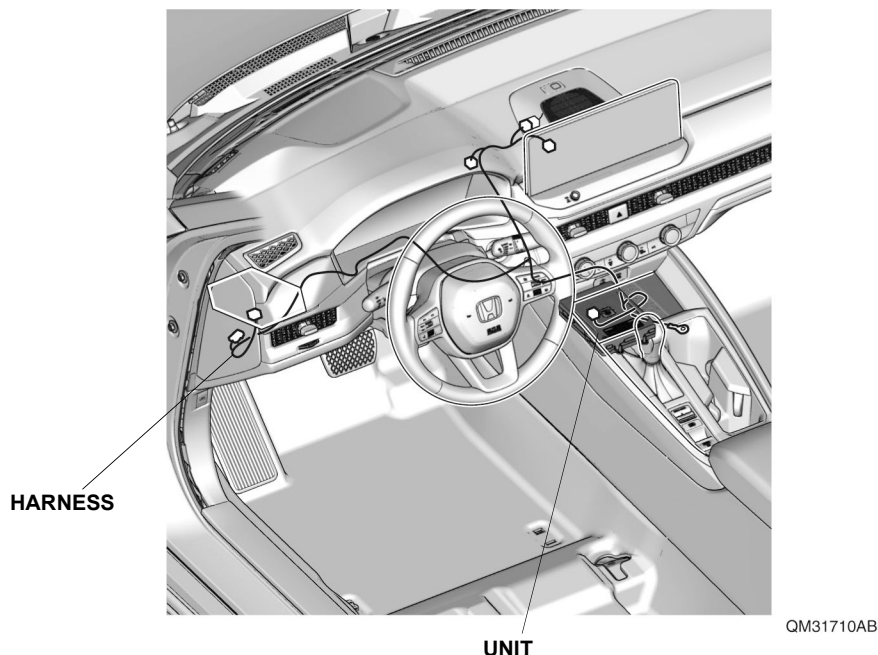

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.

Germain Honda of College Hills


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

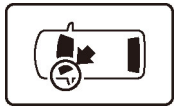

The location on the vehicle.

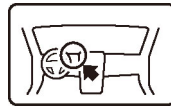

The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.
(Do not reuse.)


Wire Harness Routing Precaution

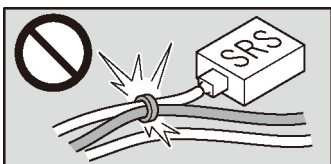


Do not secure the
accessory harness to the
SRS harness.
(except for instruction
cases.)

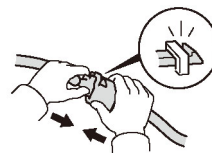


Push the connectors and
terminals together until
they lock.

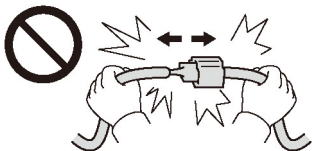

Do not pull the harness to
unplug the connectors.

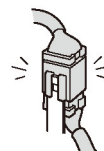

Install removed
connectors in their original
location.

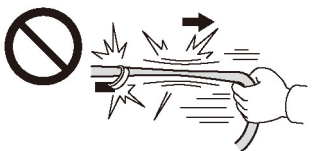


Do not pull the harness.



Secure the accessory
harness as shown.



Do not pinch the harness.

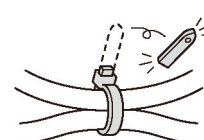

Cut off the excess wire tie.

Germain Honda of College Hills

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts

Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle or moisten it for 24 hours to allow the adhesive to cure.


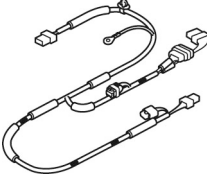
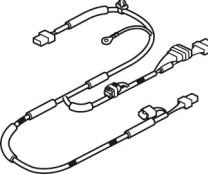
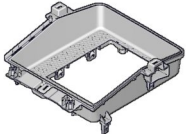




PARTS LIST

Wireless Charger Kit


(P/N 08U58-30A-100A)

(P/N 08U58-30A-100B)

(*: The part differs depending on the kit.)

Unit	*Harness (P/N 08U58-30A-100A)	*Harness (P/N 08U58-30A-100B)	Tray
			
Wire ties (11)	Wire tie with clip	Self-tapping screws (4)	Washer-bolts (2)
			

Germain Honda of College Hills

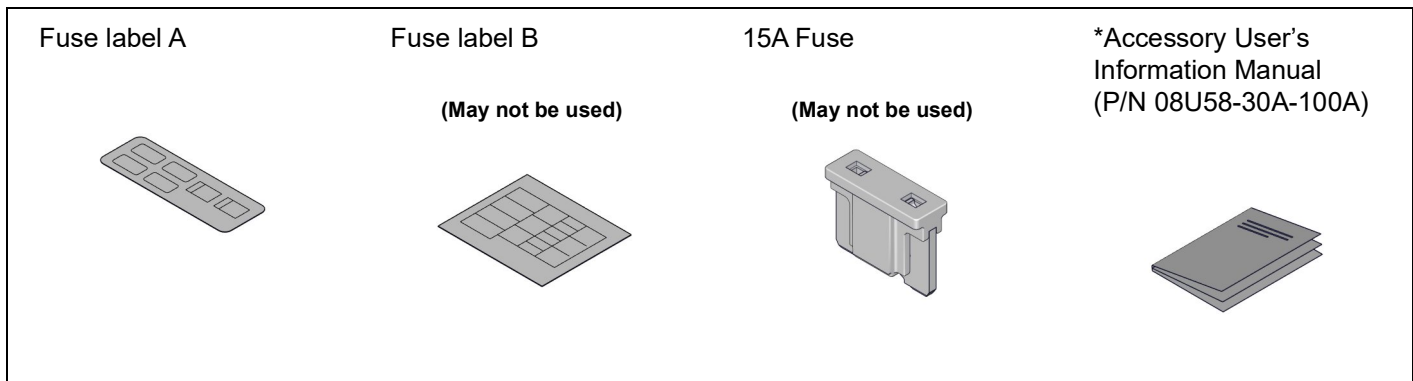

REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- Phillips screwdriver
- Ratchet
- Isopropyl alcohol
- Diagonal cutters
- 10 mm Socket
- Shop towel
- Masking tape
- Torque wrench


The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)


Germain Honda of College Hills

INSTALLATION


1. Lower and pull out the steering wheel as shown.



STEERING
WHEEL

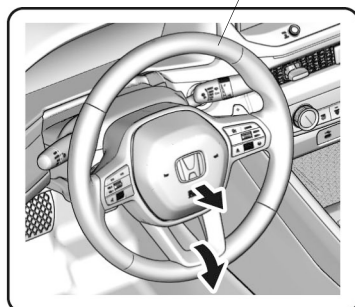

STEERING COLUMN
UPPER COVER

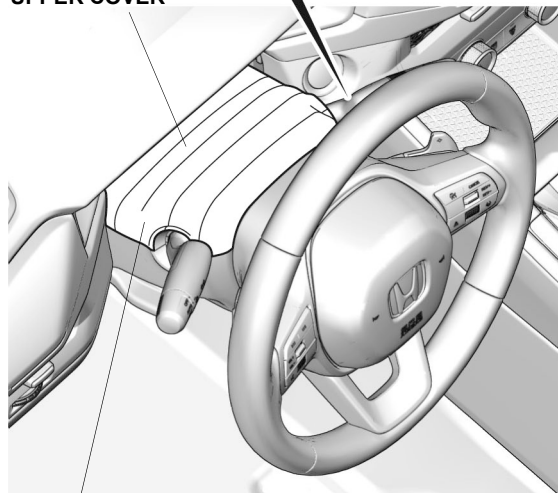

MASKING TAPE



QM31105AB

2. Attach masking tape to protect the vehicle.

NOTE

Do not remove the masking tape until after the parts are installed.

3. Turn the steering wheel 90° counterclockwise.

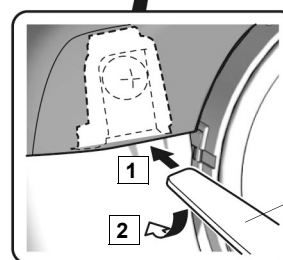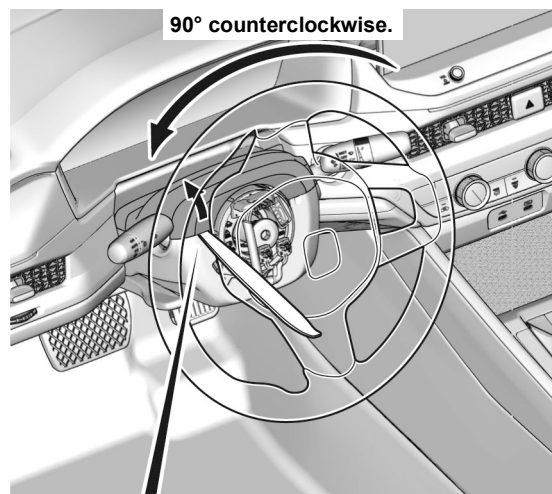

PLASTIC
TRIM TOOL

QM31106AB



4. Release the left side of the steering column upper cover.

NOTE

Release in the order shown.

Germain Honda of College Hills

5. Turn the steering wheel 180° clockwise.

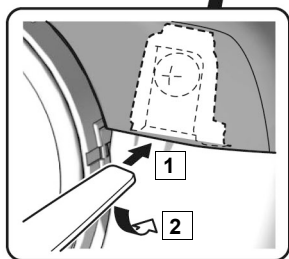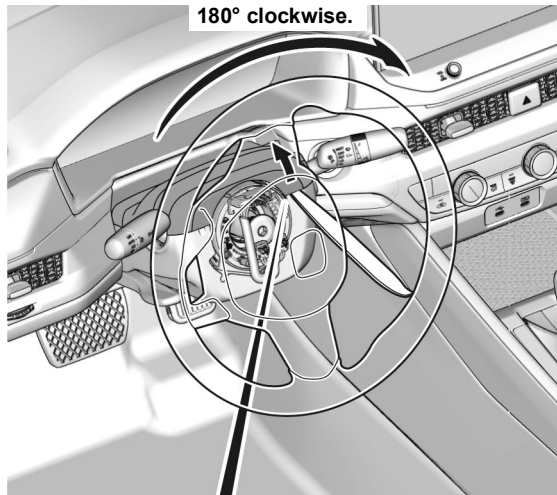


QM31107AB

6. Release the right side of the steering column upper cover.

NOTE

Release in the order shown.


7. Release the steering column upper cover.

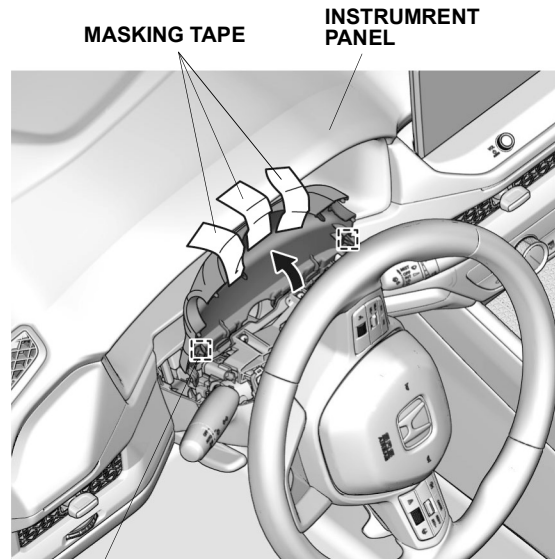

QM31108AB

2 RETAINING
TABS

8. Secure the steering column upper cover.
9. Remove the self-tapping screw.

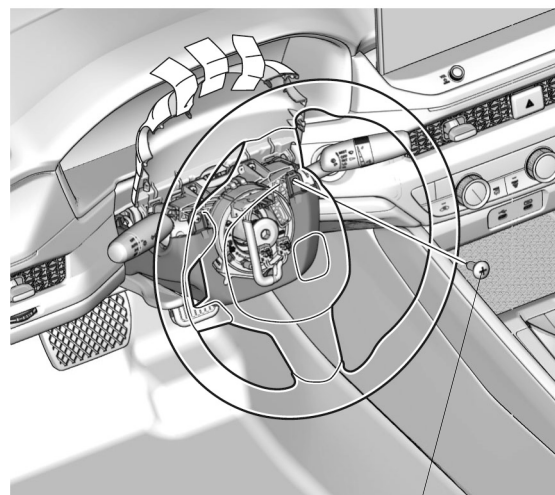


QM31109AB

SELF-TAPPING
SCREW

Germain Honda of College Hills




10. Turn the steering wheel 180° counterclockwise.

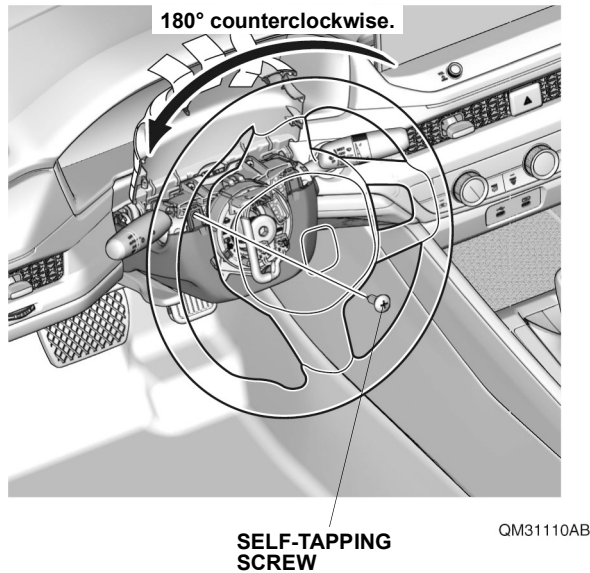

11. Remove the self-tapping screw.
12. Disconnect the negative cable from the battery.


NOTE

With the driver's door open, turn the vehicle to the OFF (Lock) mode, then wait at least 3 minutes before disconnecting the 12 volt negative battery cable.

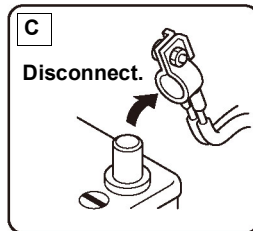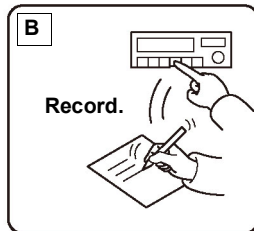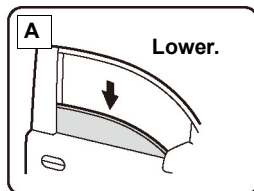

QCD0502BM

13. Move the select knob to the "D" position.

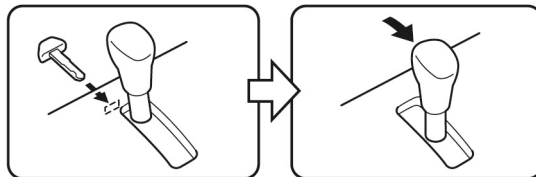


QM22301AB

14. Attach masking tape to protect the vehicle.


NOTE

Do not remove the masking tape until after the parts are installed.



METER VISOR

OPPOSITE SIDE VIEW

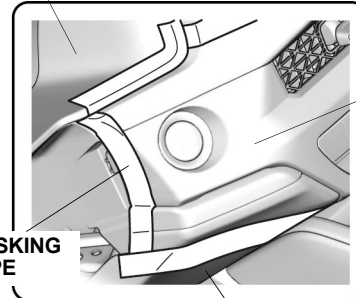


DASHBOARD CENTER TRIM

MASKING TAPE

INSTRUMENT PANEL


MASKING TAPE

DRIVER'S INSIDE LOWER COVER

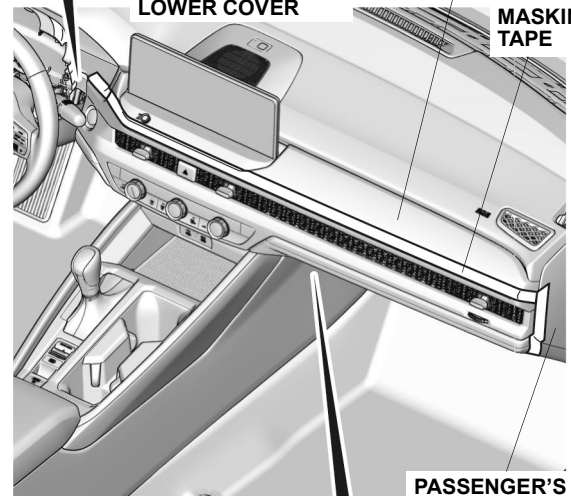

PASSENGER'S DASHBOARD SIDE LID

OPPOSITE SIDE VIEW

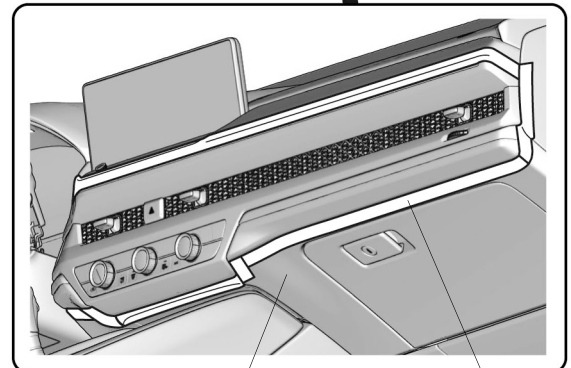


INSTRUMENT PANEL


MASKING TAPE
QM31111AB

Germain Honda of College Hills

15. Remove the dashboard center trim.

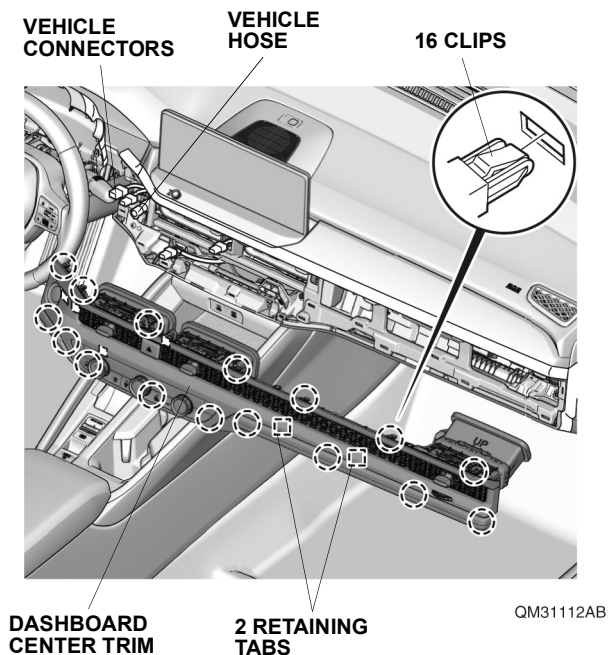

16. Remove the center lid.

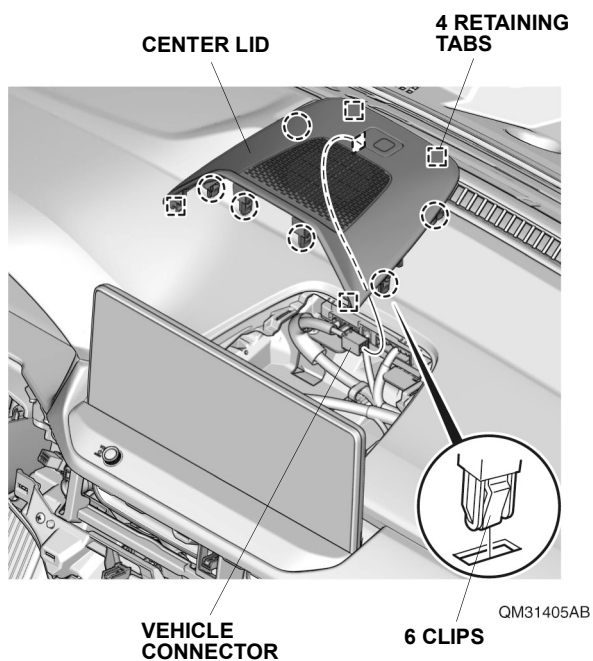

17. Attach masking tape to protect the vehicle.


NOTE

Do not remove the masking tape until after the parts are installed.




MASKING TAPE

SELECT KNOB

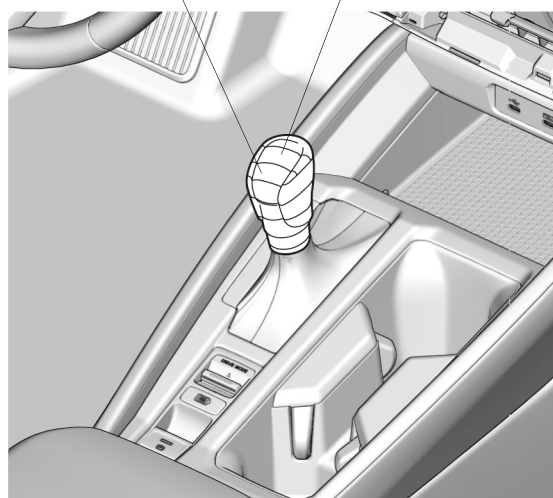


18. Release the boot.

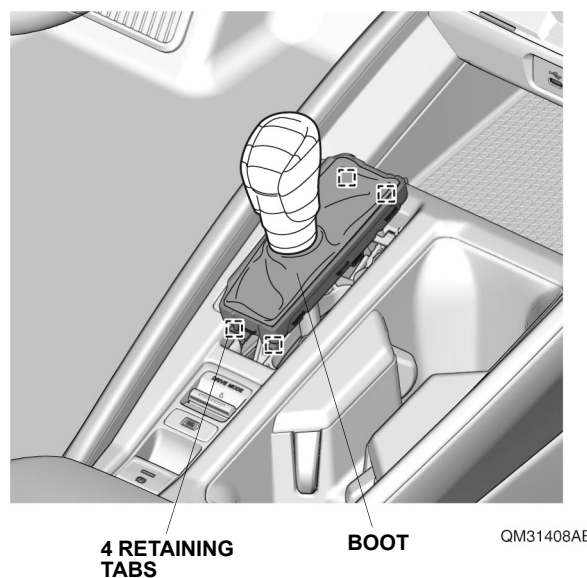

Germain Honda of College Hills


19. Open the armrest.
20. Remove the console panel.

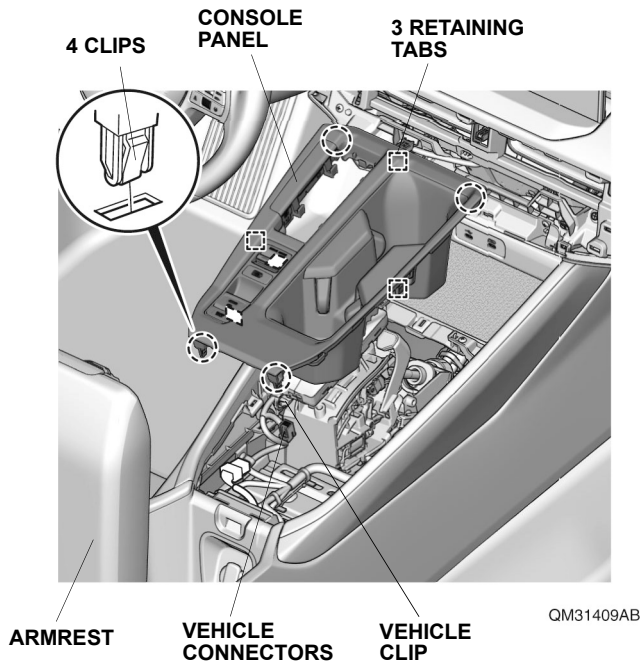

21. Attach masking tape to protect the vehicle.

NOTE



Do not remove the masking tape until after the parts are installed.

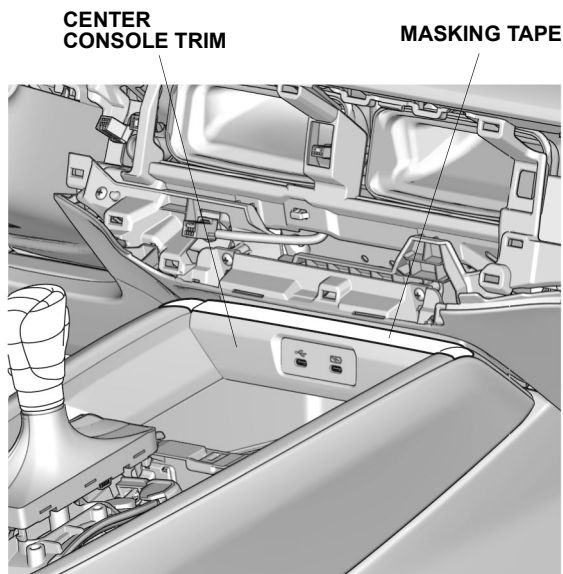

22. Remove the center console trim.


NOTE

Remove in the order shown.

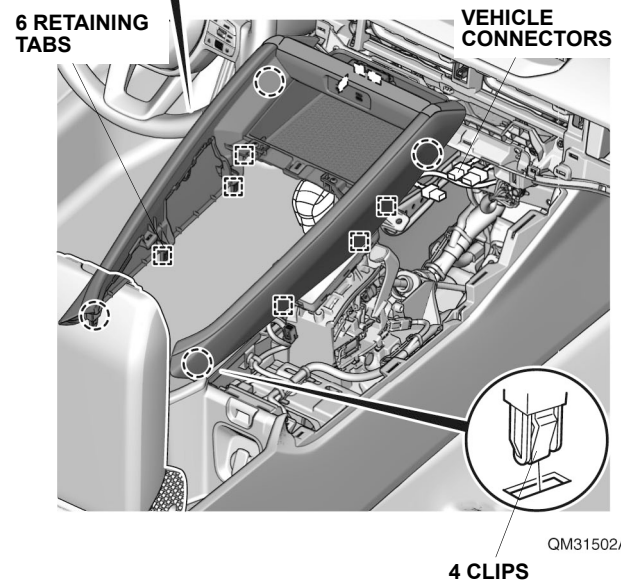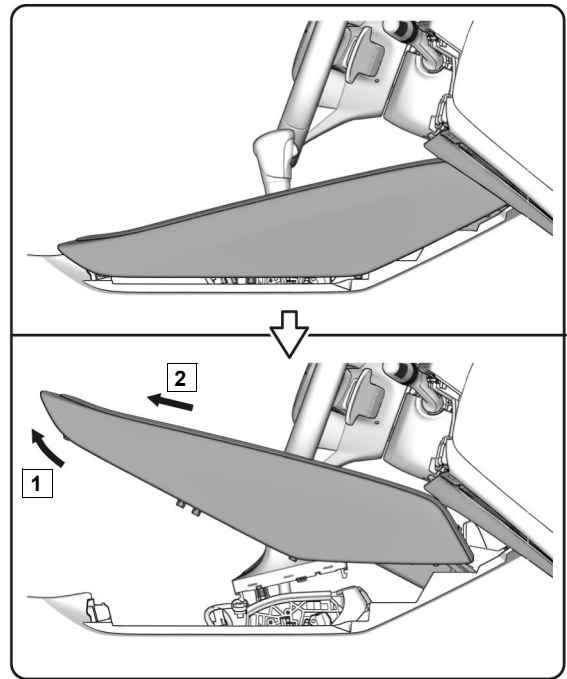


Germain Honda of College Hills

23. Remove the driver's outside lower cover.

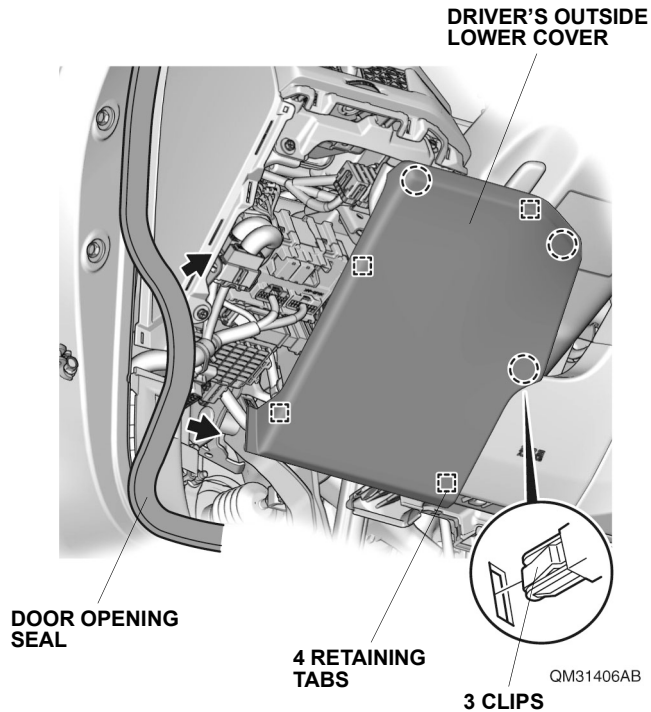

24. Remove the driver's inside lower cover.


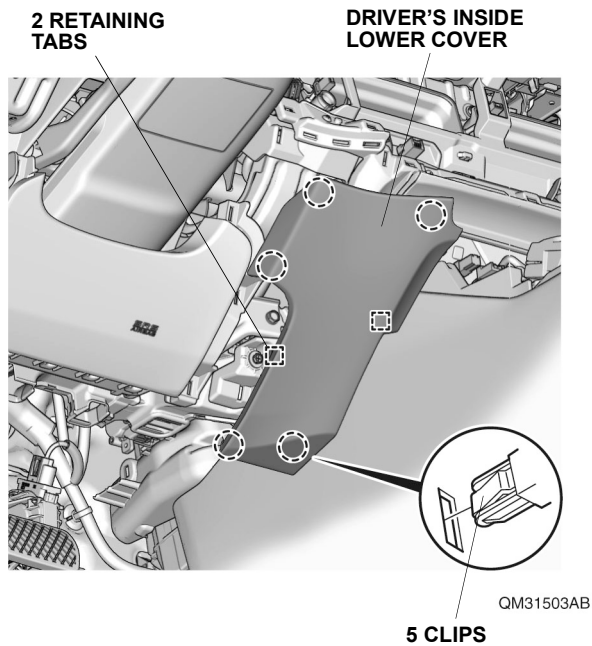


25. Remove the driver's knee airbag.


NOTICE

- Do not drop the removed airbag or hit it on an object.
- Place the removed airbag in a safe place with the padded surface (top) facing upward.

VEHICLE CONNECTOR
2 LOCKING TABS
(Pull up.)

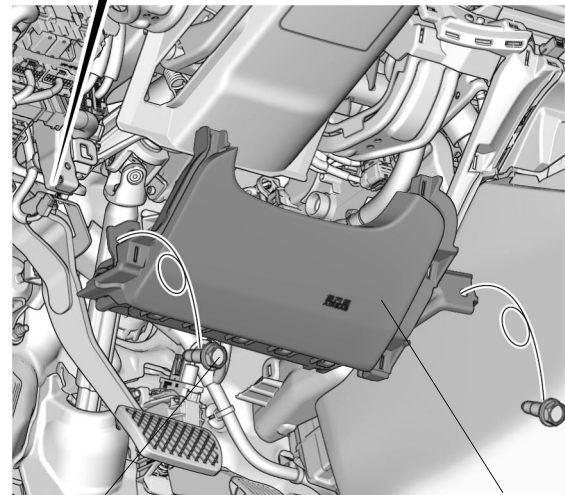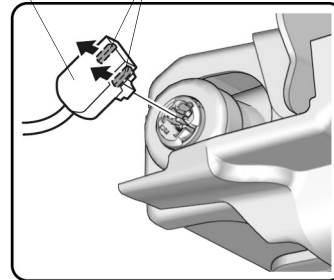

2 BOLTS
(Do not reuse.)

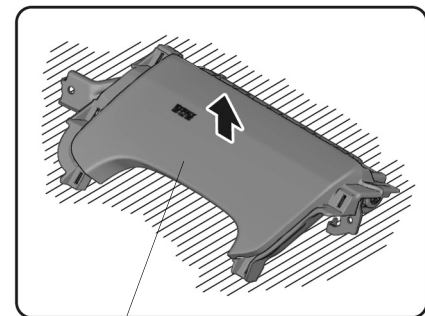


PADDED SURFACE
(Facing upward.)


QM31504AB

Germain Honda of College Hills


26. Remove the steering column lower cover.

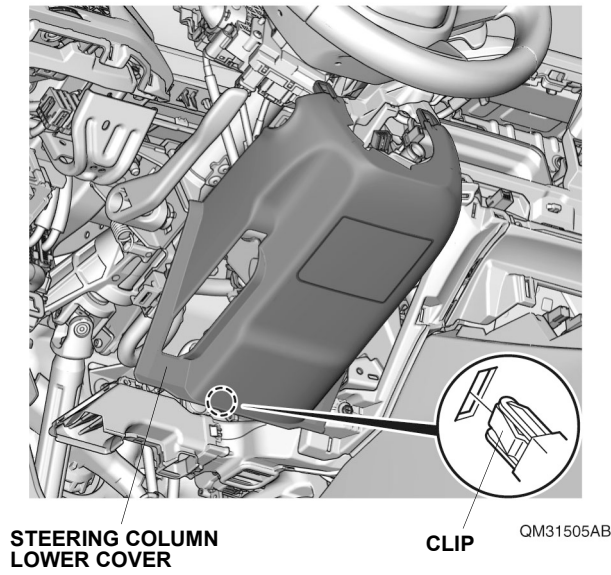

27. Remove the driver's outlet.

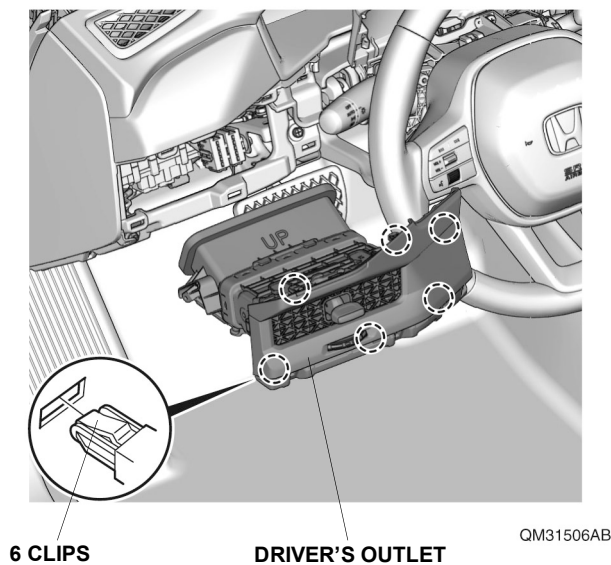

28. Remove the masking tape.

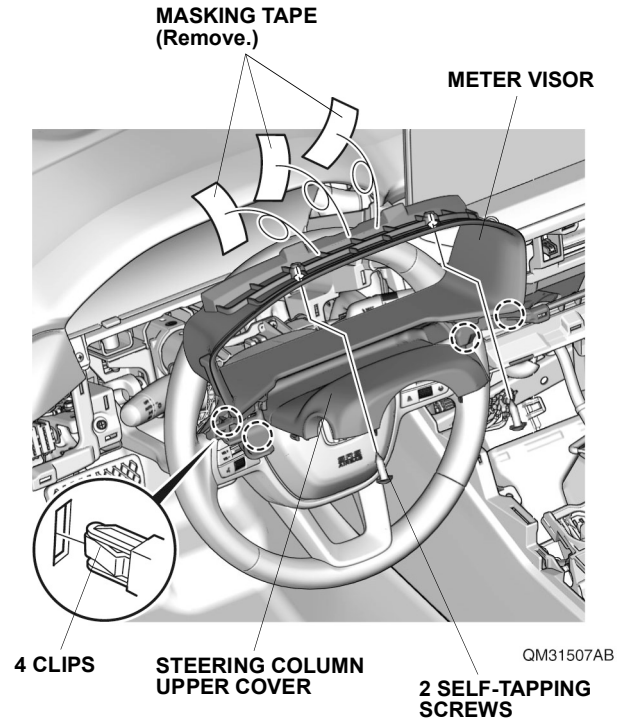


29. Remove the meter visor and steering column upper cover.

Germain Honda of College Hills


30. Remove the meter.

NOTE

Place the meter in a safe place with the screen facing upward.


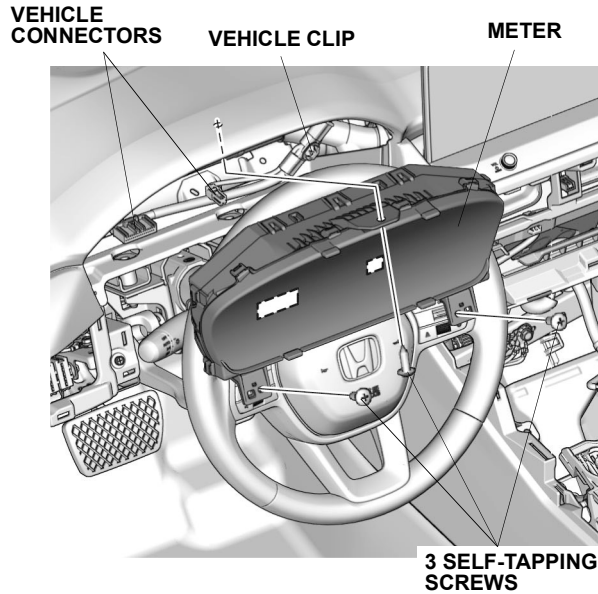


31. Attach the fuse label A.

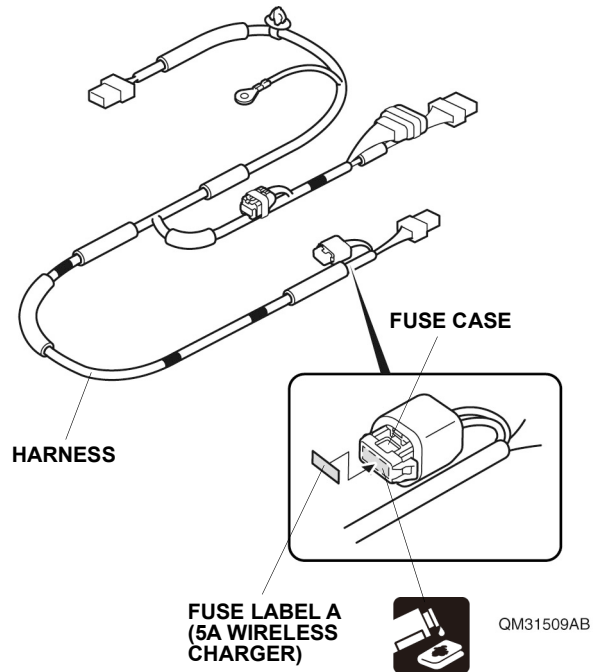


Germain Honda of College Hills


32. Route the harness.

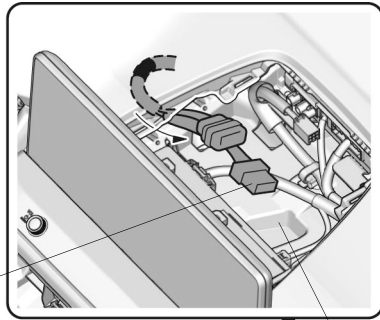

**HARNESS 24-PIN
CONNECTOR OR
HARNESS 28-PIN
CONNECTOR**

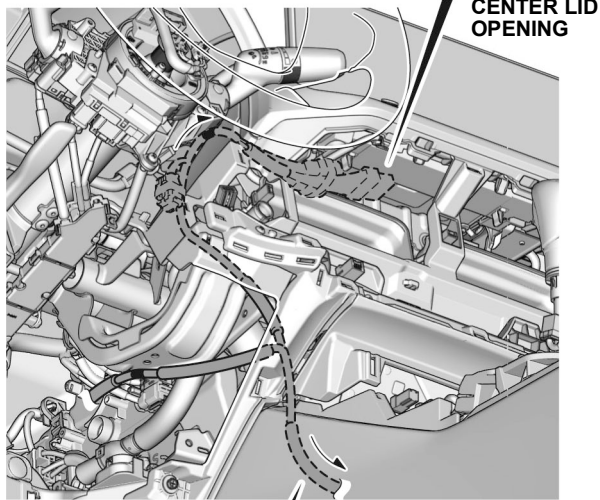

**CENTER LID
OPENING**

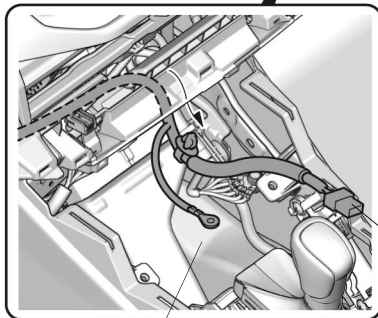


**HARNESS 7-PIN
CONNECTOR**

**CENTER CONSOLE
TRIM OPENING**

QM31510AB


33. Secure the harness.



**VEHICLE
HARNESS**

2 WIRE TIES

GREEN TAPE

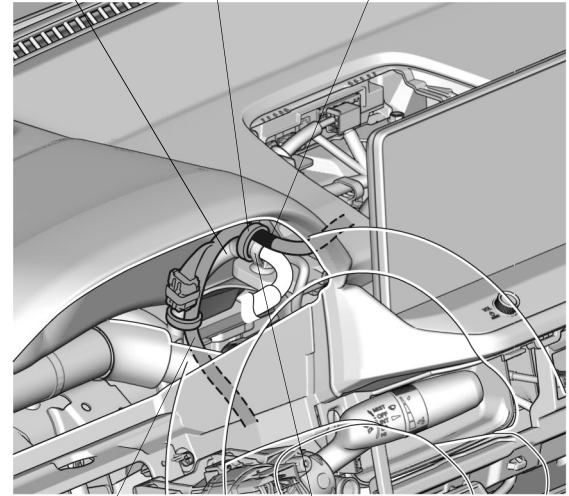

HARNESS

VEHICLE CLIP

QM31511AB

Germain Honda of College Hills

34. Choose one of these options.




- With 12.3 inch display audio

Go to step 35

- With 7 inch screen audio

Go to step 36




35. Plug-in the harness connector.

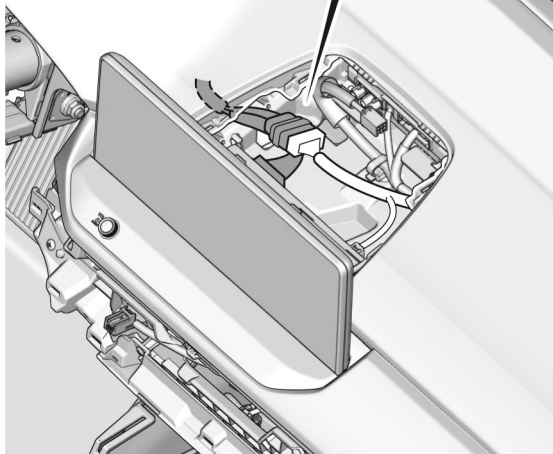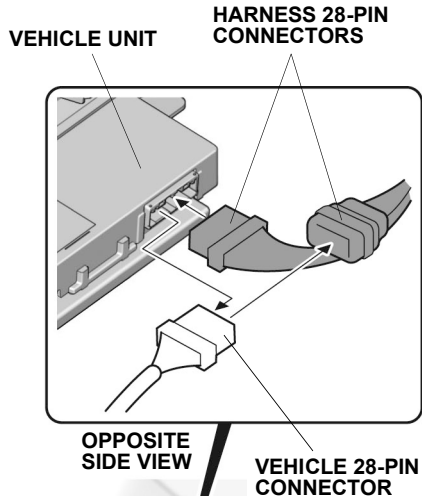

QM31601AB

Go to step 37

36. Plug-in the harness connector.

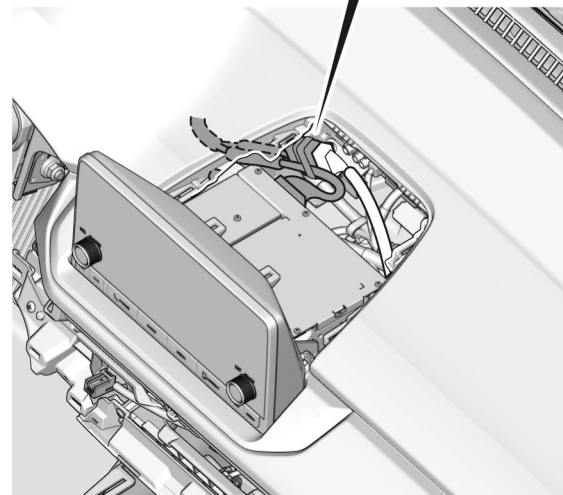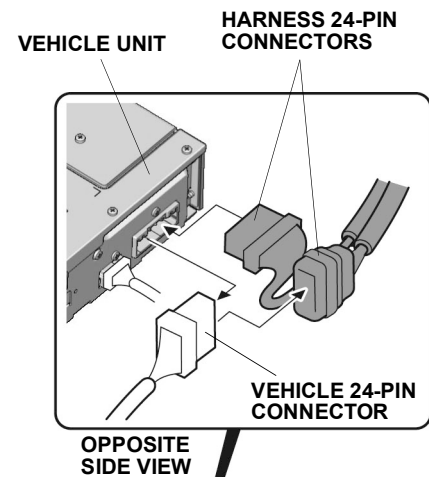


QM31602AB

Germain Honda of College Hills

37. Secure the harness.


NOTE

Be careful not to damage the harness.




WIRE TIE WITH CLIP

HARNESS

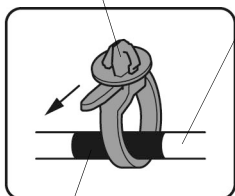


GREEN TAPE

Not used.

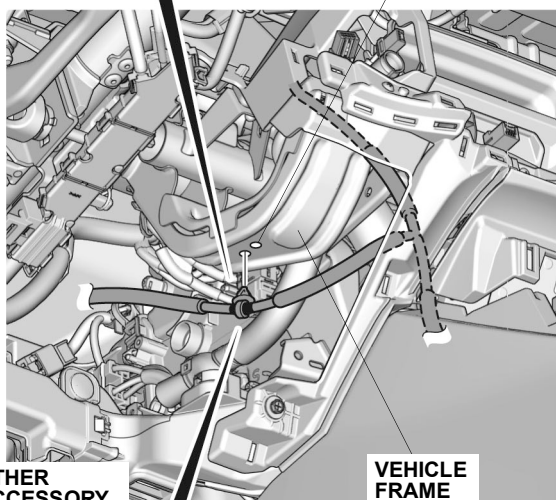

OTHER ACCESSORY HARNESS

VEHICLE FRAME

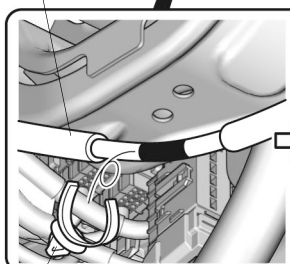

WIRE TIE WITH CLIP

WIRE TIE WITH CLIP

GREEN TAPE

HARNESS


WITH OTHER ACCESSORY HARNESS

GREEN TAPE

QM31603BB

38. Secure the harness.

VEHICLE HARNESS

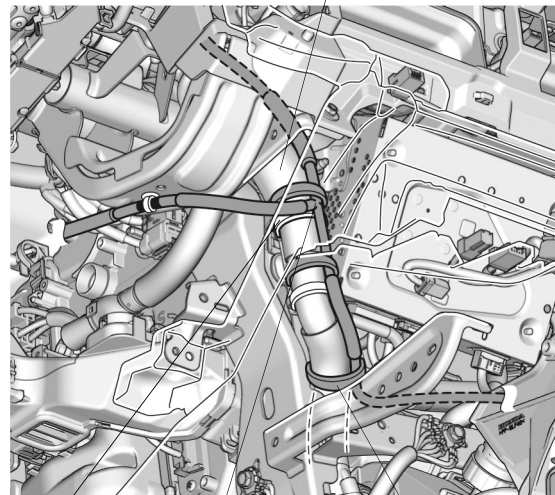

VEHICLE CLIP

HARNESS BRANCH SECTION

3 WIRE TIES


QM31604BB

39. Secure the harness.




HARNESS CLIP

VEHICLE PANEL

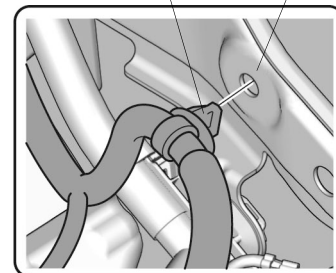

VEHICLE HARNESS

HARNESS

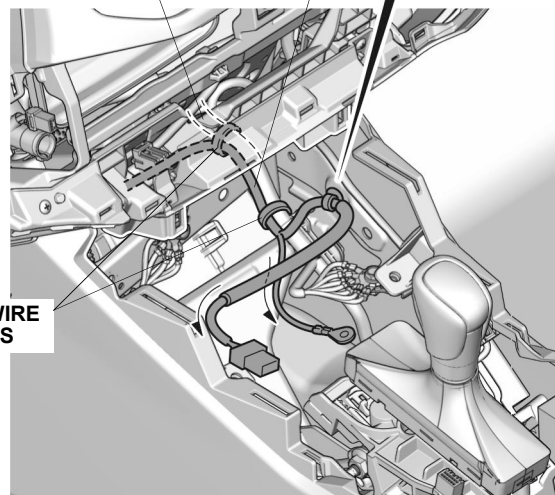

2 WIRE TIES


QM31605AB

Germain Honda of College Hills


40. Secure the harness ground terminal.

NOTE

Do not put the ground terminal crimping on top of one another.


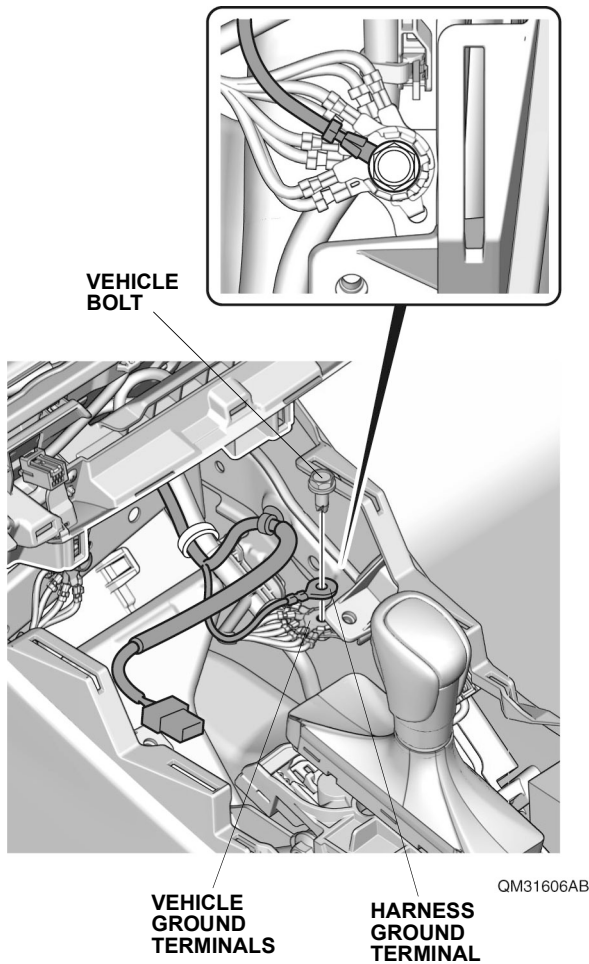


41. Secure the harness.

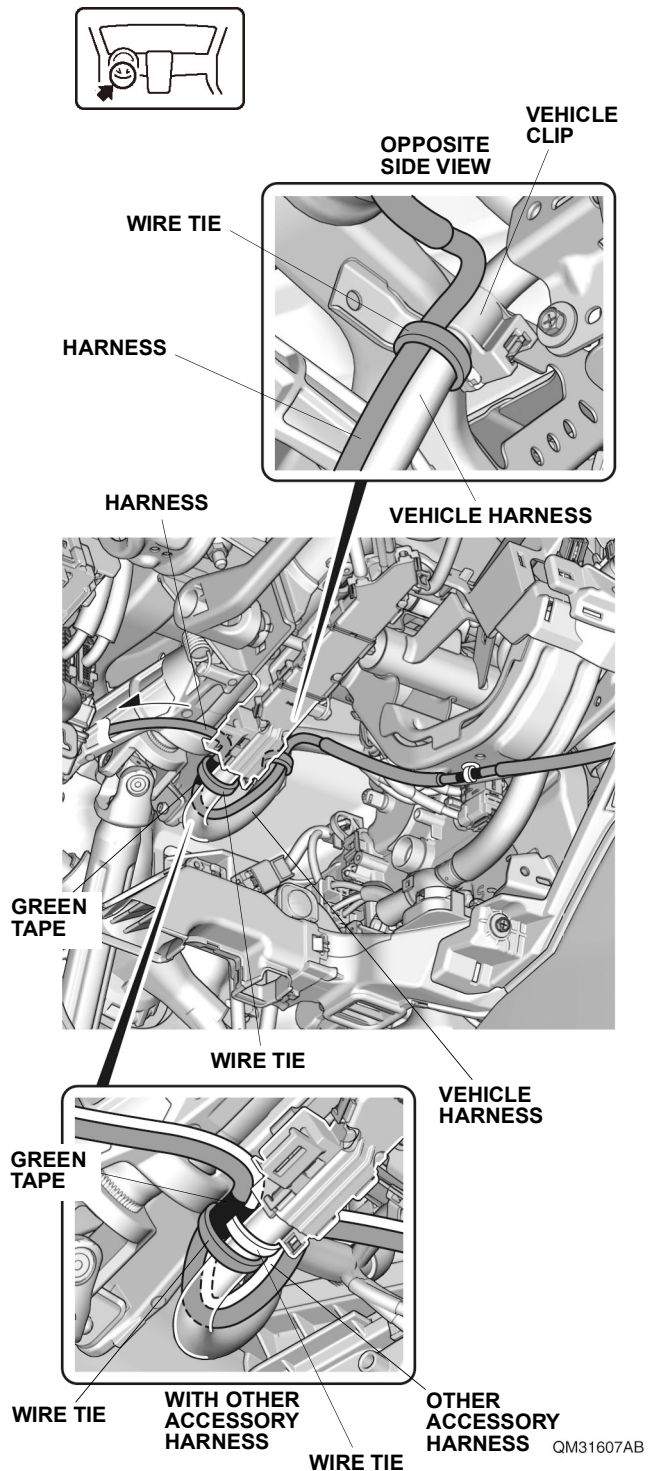


Germain Honda of College Hills

42. Secure the harness.

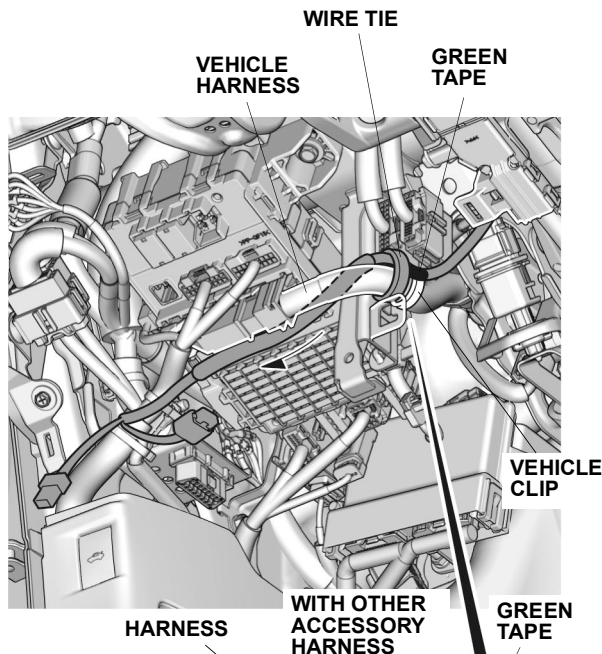


OTHER ACCESSORY HARNESS

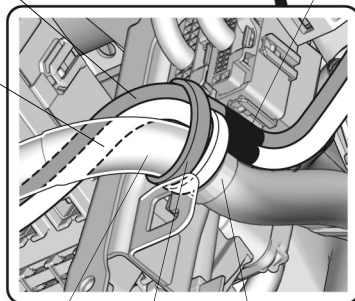


QM31608AB

43. Plug-in the harness connector.




PLUG-IN POSITION


FUSE BOX

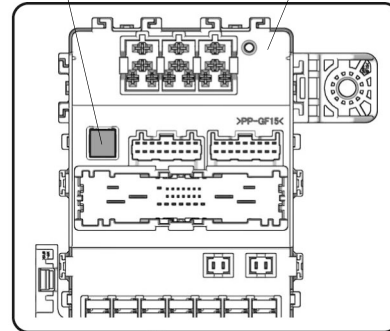

HARNESS 6-PIN CONNECTOR

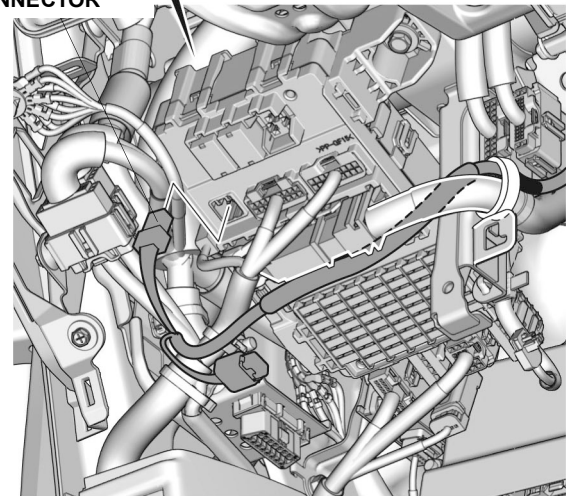


WITH OTHER ACCESSORY HARNESS
If the dummy connector is plugged, unplug it.

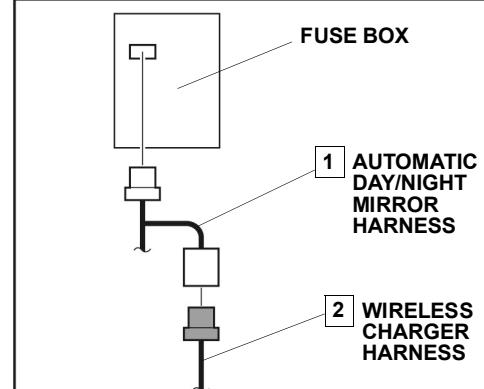


QM31701AB

Germain Honda of College Hills


44. Secure the harness and fuse case.

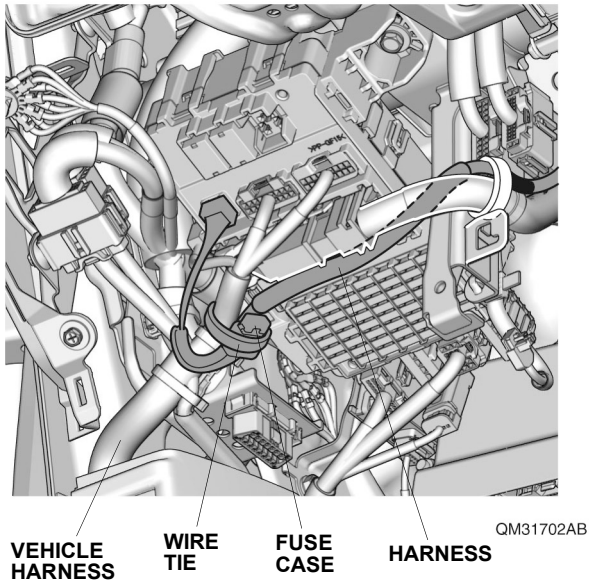


45. Remove the tray.

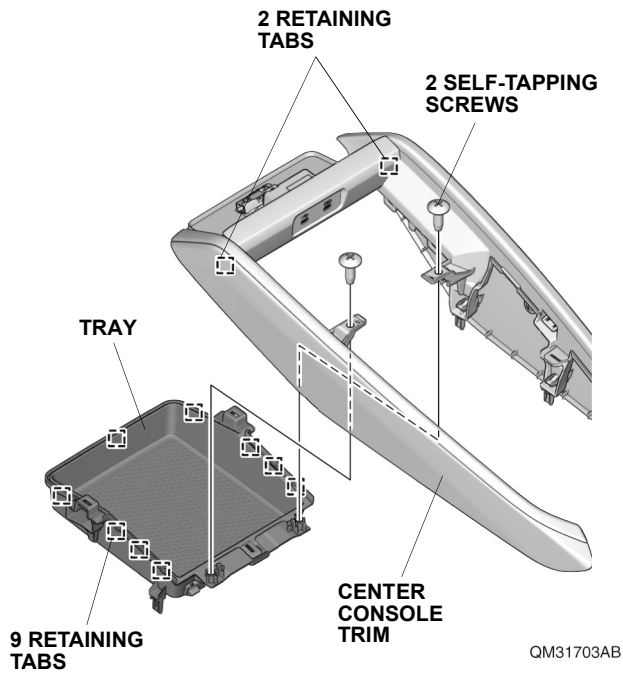

46. Remove the cap.

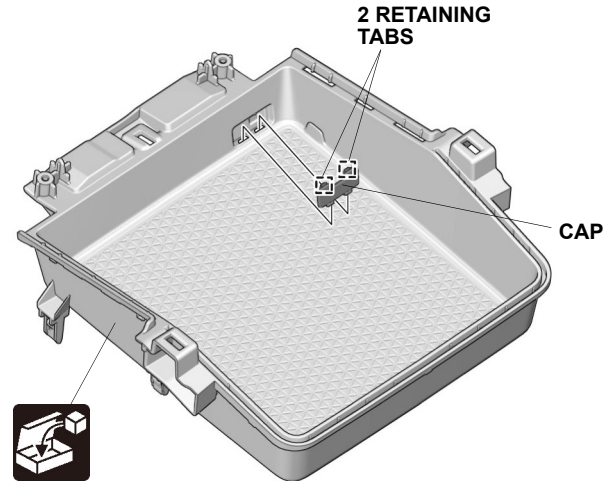


47. Install the cap.

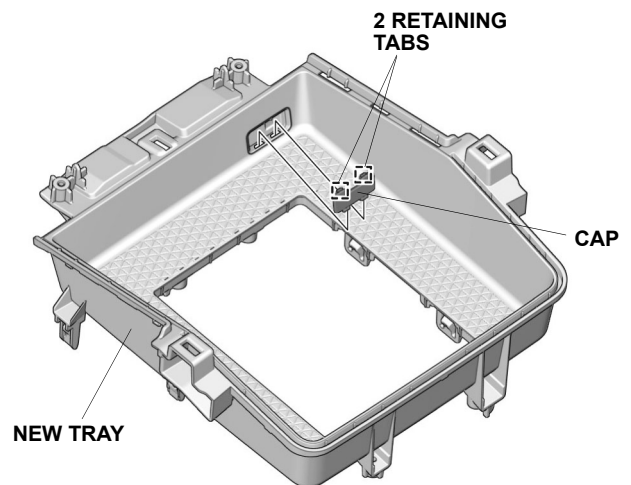


Germain Honda of College Hills


48. Install the unit.

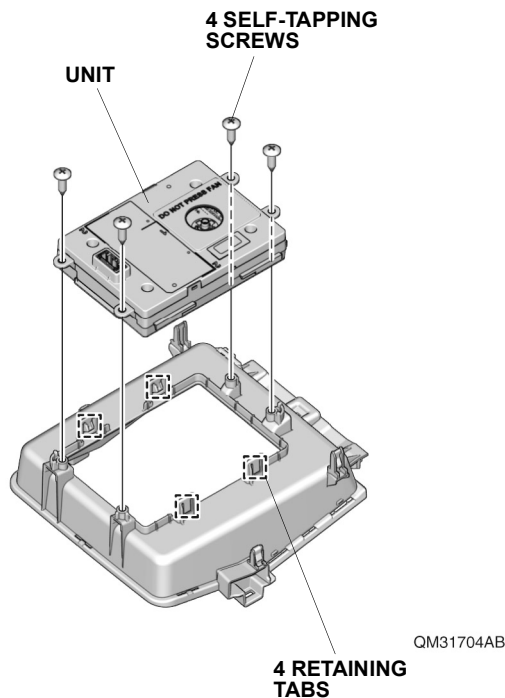

49. Install the new tray.

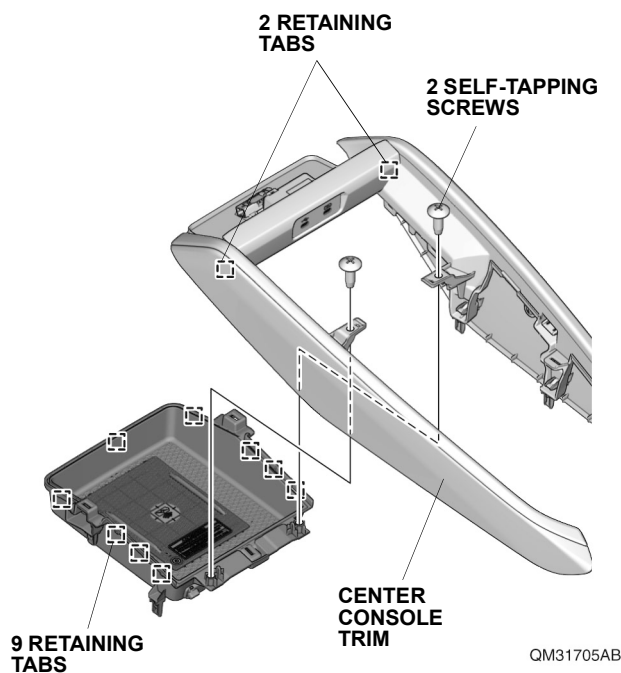

50. Plug-in the harness connector.

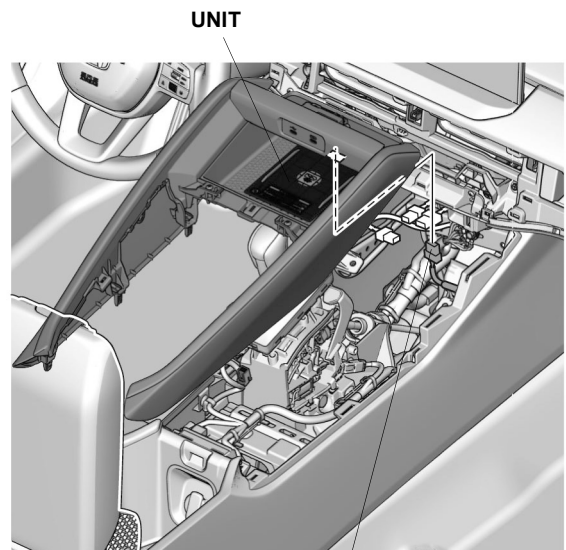



QM31706AB

51. Install the center console trim.

52. Install the 15A fuse.

NOTE

If the 15A fuse is already installed, do not install the fuse.

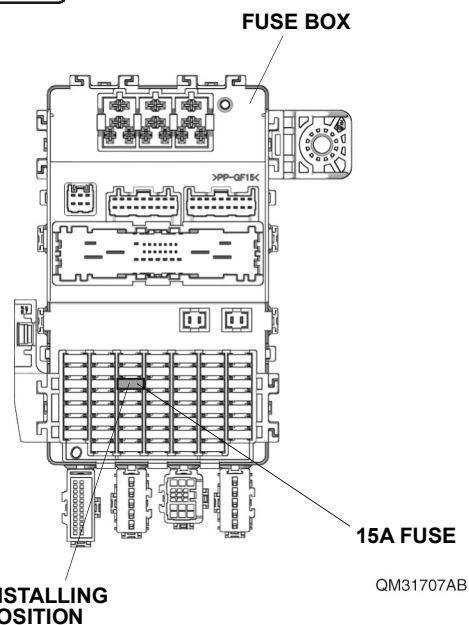


QM31707AB

Germain Honda of College Hills

53. Attach the fuse label B.

NOTE

If the fuse label (15A) is already attached, do not attach the fuse label.

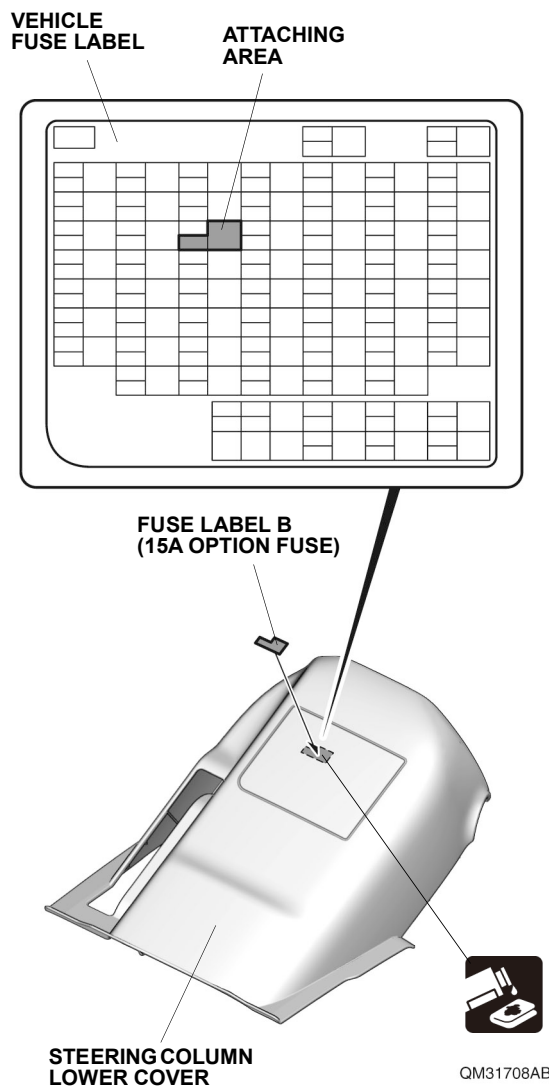

54. Check that all parts are installed and properly routed.

NOTE

- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.


55. Install all removed parts except for the self-tapping screws removed in steps 9 and 11 and the steering column upper cover.

<Installing the Driver's Knee Airbag>



56. Install the driver's knee airbag.

NOTE

Make sure to replace with the washer-bolts included in this kit.



VEHICLE CONNECTOR

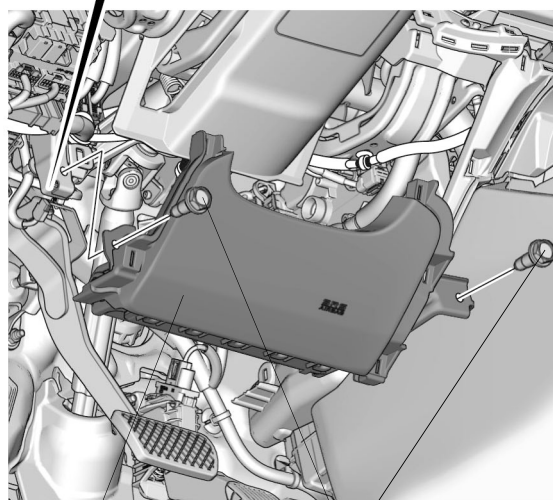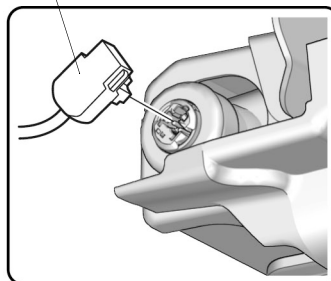

DRIVER'S KNEE AIRBAG

2 WASHER-BOLTS (supplied)




5.1-11 lb-ft
(6.9-14.4 N·m)

QM31709AB

Germain Honda of College Hills

57. Connect the negative cable to the battery.

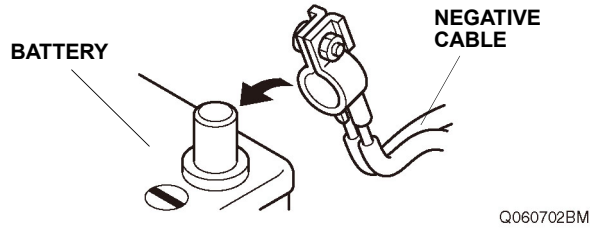

58. Install the self-tapping screws removed in steps 9 and 11 and the steering column upper cover.
59. Turn the ENGINE START/STOP button (POWER button) to ON; the SRS indicator should come on for about 6 seconds and then go off.
60. Make sure the accessory operates as described in the Accessory User's Information Manual (petrol models) or vehicle owner's manual (hybrid models).
61. Make sure all accessories and systems operate properly.
62. If necessary, restore the systems back to normal operation as described in the service information.
63. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
64. Give the Accessory User's Information Manual to the customer (petrol models).